



AIRCRAFT COMPANY

PAWNEE DIVISION

Wichita, Kansas

**WHERE THIS CATALOG REFERS TO A
SPECIFIC MODEL IT IS NOTED AS FOLLOWS;
'172' FOR THE 172 & SKYHAWK MODELS
'F172' FOR THE FRENCH MANUFACTURED 172**

**THIS CATALOG SUPERSEDES THE 172 & F172
PARTS CATALOG DATED: 1 JULY 1974.**

===== **15 JUNE 1975** =====

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:

Original . . . 0 . . . 15 June 1975

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 302 CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No.
Title	0	150 thru 174 . . .	0
A	0	175 blank	0
i thru iv	0	176 thru 192	0
iva	0	193 blank	0
ivb blank	0	194	0
v thru x	0	195	0
xa	0	195A	0
xb blank	0	195B	0
xi thru xxi	0	196 thru 204	0
xxii blank	0	205 blank	0
1 thru 20	0	206 thru 216	0
21 blank	0	217 blank	0
22 thru 31	0	218 thru 222	0
32 blank	0	223 blank	0
33 thru 46	0	224 thru 228	0
47 blank	0	229 blank	0
48 thru 64	0	230 thru 260	0
65 blank	0		
66 thru 76	0		
77 blank	0		
78 thru 92	0		
93 blank	0		
94 thru 106	0		
107 blank	0		
108 thru 118	0		
118A	0		
118B blank	0		
119 thru 127	0		
127A	0		
127B blank	0		
128 thru 137	0		
137A thru 137F	0		
138 thru 147	0		
147A	0		
147B	0		
148	0		
149 blank	0		

Upon receipt of the second and subsequent changes to this book, personnel responsible for maintaining this publication in current status should ascertain that all previous changes have been received and incorporated.

* The asterisk indicates pages changed, added, or deleted by the current change.

INTRODUCTION.

This illustrated parts catalog has been prepared to aid you in easily and quickly identifying parts of the models covered herein.

This catalog features an index system consisting of:

1. An alphabetical index located in the front of the catalog.
2. A numerical index located in the back of the catalog, which lists all parts and figures in which they appear.

STANDARD PARTS.

Many parts having standard usage have been incorporated into the Cessna Standard System. Parts in this group are designated with the part number prefix "S".

For standard hardware items such as Tinnerman nuts, clamps, etc., "AN" and "NAS" numbers have been used.

USABLE ON CODES.... Serial listings in this catalog are noted by a letter code located in the usable on code column which is the extreme right hand column of the parts list page. Usable on codes are applicable only to the figure on which they appear. The code letters and the serials to which they apply are listed at the end of the figure.

If no usable on code appears opposite a first column listing of the figure, the usage is applicable to all models and serials covered by this catalog. If no usable on code appears opposite any indented listing, the usage is applicable to all models and serials covered by the figure on which it appears.

Bold face type serials appearing on certain figures are for quick reference to large blocks of airplanes.

F172 serial usage is listed together with the United States serial usage immediately following the parts listing on each individual figure where applicable.

NON-INTERCHANGEABLE PARTS.... When parts are not interchangeable with earlier models, all parts applicable to the particular usage are listed. The letter code for the individual part usage is listed in the usable on column opposite each part. Care should be exercised in determining proper serial when ordering to insure receipt of correct part.

INTERCHANGEABLE PARTS.... When a later design part is completely interchangeable with the part it replaces, both parts will be serialized and the notation "when exhausted use _____", or the abbreviation, "WEU _____" will be entered following the listing of the earlier design part. This means that the earlier design part should be used on airplanes to which they apply until the supply of these parts is exhausted---after which time the later design part must be used. This is done to simplify stocking of parts by our distributors and dealers. The earlier part is as good, physically and functionally, as the later design part---the difference

being the later design part can be used on more than one block of airplane serials.

SYMBOLS & PART NUMBER TERMS.

NP - The symbol "NP" appearing in the units per assembly column denotes that the item it appears opposite is not procurable.

AR - The symbol "AR" appearing in the units per assembly column denotes "As Required" and is used to indicate bulk quantity where an indefinite amount is used.

The following is a list of abbreviations that may appear in the description nomenclature:

ALT	- Alternate part	INSTL	- Installation
ASSY	- Assembly	LH	- Left hand
BKI	- Bulk item	RH	- Right hand
FSO	- For spares order	WEU	- When exhausted use

Other key letter symbols spaced apart from and following the part nomenclature are for cataloging and manufacturing purposes only and are not to be considered by the customer.

A blank entry in the part number column appears before an unprocurable part or installation which is also denoted in the "Units Per Assembly" column by the use of the symbol NP.

GROUP ASSEMBLY PARTS LIST ARRANGEMENT.

This section lists all replaceable items in the airplane and these items are detailed on illustrations throughout the section. The index numbers on the illustration are keyed to each accompanying parts list. The purpose of the index numbers is to provide complete and positive identification of the article, but should not be used for procurement purposes.

- a. The figure and index number column of the parts list shows the figure number once at the beginning of the list. The figure number is followed by a dash and the indexed number. The remaining index numbers are preceded by dash only.
- b. The part number column identifies the item by part number.
- c. In the description column, relationship of items covered is shown by the degree of indentation of each item, for example: The wing assembly (Figure 3) is listed in column (1) of the description column. The wing structure, is the next lower assembly and is therefore listed in column (2).
- d. If two or more assemblies contain a majority of identical parts or the assemblies are left or right hand, the assemblies are listed together and the next lower assemblies or detail parts are listed as common for both assemblies, with the differing parts coded for usage on the correct major assembly.

Illustrated parts catalog

- e. Attaching parts are listed immediately beneath the item to be attached and preceding any detail parts of the item. They are listed in the same column as the item they attach and are preceded by the caption "Attaching Parts." The end of the attaching parts listing is followed by a separating symbol ---*---.
- f. The quantity listed in the "Units Per Assembly" column for attaching parts denotes the quantity necessary to attach only one part. Total quantity necessary to attach more than one part is obtained by multiplying the attaching parts quantity by the number of parts attached.
- g. Component parts of the complete airplane which are not included in any assembly, but which are used in conjunction with, or attach to certain assemblies, are listed either preceding the first detail or following the last detail of the assembly or installation, and in the same column as the major assembly or installation.
- h. The quantities listed in the "Units Per Assembly" column are the quantity used per figure.

ACCESSORY KITS.

For accessory kit listings, refer to separate Accessory Kit Catalog.

BULK ITEMS.

Certain items such as flexible air hose, rubber mouldings and channels, windshield sealing strips etc., are noted in the catalog listings as bulk items. These listings also note the cut length of these materials for one installation. When an item is listed as a bulk item, it will be supplied to the dealer in the most convenient bulk length or quantity. Reference to the cut length or quantity per installation provides for the most satisfactory disbursement to the customer.

HOW TO ORDER.

USE YOUR CATALOG TO ORDER PARTS. Use parts and Accessories Order Form, which will be supplied by Cessna on request. Give complete information on addresses and make sure the part number and part name are as shown in the catalog. Be sure to specify quantities. Specify how the order is to be shipped, otherwise it will be sent out in the manner that seems best to the shipper.

SERIAL, COLOR, & CORROSION PROOFING.

Be sure to indicate model and serial number of the airplane. Serial number is very important to properly identify parts used on each airplane. When color is involved refer to "Upholstery & Interior Trim" section for example. If corrosion proofing is desired add the letters "CP" following the part number.

DISTRIBUTOR ORDERS.

Distributors will send all orders to the factory with instructions as to the shipping destination. The factory

prefers not to make C.O.D. shipments for the distributor and all billing will be made to the distributor in the case of direct shipments.

DEALER ORDERS.

Dealers will place all of their parts order requirements with their distributor. The factory will not honor orders received directly from a dealer. It will be necessary for us to forward it to the distributor for his action. Therefore, dealer orders sent direct to the distributor will result in much faster delivery on any parts that are required.

RETAIL ORDERS.

Retail orders will not be honored by the factory. They are to be placed with the dealer or distributor in the owner's territory and when received directly by the factory will be forwarded to the distributor from whose territory it was received. Considerable saving in time will result to the owner if his orders are placed with his dealer or distributor.



Cessna Aircraft Company reserves the right to cancel, add or change the parts and assemblies described in this catalog without notice.



"All aircraft, regardless of manufacturer, are certificated under model number designations. However, popular names are often used for marketing purposes. To provide a consistent method of referring to the various aircraft, model numbers will be used in this publication unless names are required to differentiate between versions of the same basic model. The following table provides a cross reference listing of popular name vs. model numbers."

NAME	MODEL YEAR	MODEL	SERIALS	
			BEGINNING	ENDING
172, SKYHAWK OR SKYHAWK II	1975	172M	17263459	17264684
SKYHAWK OR SKYHAWK II	1976	172M	17264685	
REIMS/CESSNA F172 SKYHAWK OR F172 SKYHAWK II	1975 1976	F172M F172M	F17201235 F17201385	F17201384

FINISH & TRIM PLATE


The "FINISH AND TRIM" plate is located on the left side of the airplane on the lower door jamb directly below the aircraft identification nameplate.

This plate indicates model year, interior color scheme and the exterior color combination.

Interpretation of information stamped on the Finish and Trim Plate is obtained by use of the Color Code Chart for the respective year.

Color Code Charts for yearly models appear on pages immediately following this page.

The Finish and Trim Plate is explained below. Explanatory remarks are keyed to the illustrated example.

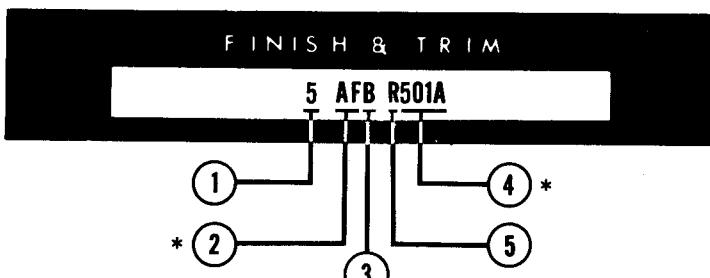

- ① First column number indicates year.
 - ② Second column letter or letters indicate interior color code of aircraft. Refer to Color Code Chart for respective year to obtain color.
 - ③ The letter "B" following the interior code indicates optional black carpet.
 - ④ Third column number or numbers indicate exterior trim. The basic number is found on the Color Code Chart and indicates colors and type paint used on the aircraft.
 - ⑤ Standardized arctic color reversal is designated by the prefix "R" on the exterior color combination code.
- * The special exterior and/or interior is denoted by the letters "SP" in lieu of the standard codes.

Interpretation of the example Finish and Trim Code 5-AFB-R501A that is obtained from 1975 Color Code Chart is:

5 = 1975 model year
 AF = Chestnut Brown Interior Scheme
 B = Black carpet (optional)
 501A = Vestal White & Flag Red exterior
 R501A = Vestal White & Flag Red exterior (color reversal)

PAINT CODE CHART**MODELS 172 & F172**

YEAR	INTERIOR COLOR		INTERIOR PAINT					SERIAL LISTING	EXTERIOR PAINT								
	CODE	CODE	COLOR	INTERIOR COLOR CODE					CODE	COLOR COMBINATIONS							
				AF	BF	CF	DF			501	VESTAL WHITE CES1054-802 (ACRYLIC)	FLAG RED CES1054-A93 (ACRYLIC)					
1 9 7 5	AF		Chestnut Brown Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	501	VESTAL WHITE CES1054-802 (ACRYLIC)	FLAG RED CES1054-A93 (ACRYLIC)										
				DULL BLACK (LACQUER) CES1054-193		502	VESTAL WHITE CES1054-802 (ACRYLIC)	SUMMER GOLD CES1054-B48 (ACRYLIC)									
	BF		Open Blue Fabric	CLOUD GRAY (LACQUER) CES1054-531	503	VESTAL WHITE CES1054-802 (ACRYLIC)	TROPICAL ORANGE CES1054-774 (ACRYLIC)										
				CLOUD GRAY (VINYL) CES1054-533		504	VESTAL WHITE CES1054-802 (ACRYLIC)	EMPEROR BLUE CES1054-B32 (ACRYLIC)									
	CF		Olive Green Fabric	CLOUD GRAY (LACQUER) CES1054-531	505	VESTAL WHITE CES1054-802 (ACRYLIC)	SATIN BLUE CES1054-B62 (ACRYLIC)										
				CLOUD GRAY (VINYL) CES1054-533		506	VESTAL WHITE CES1054-802 (ACRYLIC)	SPRING GREEN CES1054-B64 (ACRYLIC)									
	DF		Sunset Red Fabric	CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25	516	VESTAL WHITE CES1054-802 (ACRYLIC)	NUTMEG CES1054-A95 (ACRYLIC)						
				CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25		517	VESTAL WHITE CES1054-802 (ACRYLIC)	FLAG RED CES1054-A93 (ACRYLIC)					
	GF		Old Gold Fabric	INTERIOR PAINT					518	VESTAL WHITE CES1054-802 (ACRYLIC)	SUMMER GOLD CES1054-B48 (ACRYLIC)						
				INTERIOR PAINT						519	VESTAL WHITE CES1054-802 (ACRYLIC)	CARNIVAL YELLOW CES1054-A15 (ACRYLIC)					
1 9 7 5	AV		Chestnut Brown Vinyl	BLACK SEMI-GLOSS (LACQUER) CES1054-156	520	VESTAL WHITE CES1054-802 (ACRYLIC)	SATIN BLUE CES1054-B62 (ACRYLIC)										
				DULL BLACK (LACQUER) CES1054-193		521	VESTAL WHITE CES1054-802 (ACRYLIC)	EMPEROR BLUE CES1054-B32 (ACRYLIC)									
	BV		Open Blue Vinyl	CLOUD GRAY (LACQUER) CES1054-531	522	VESTAL WHITE CES1054-802 (ACRYLIC)	Meadow Green CES1054-B65 (ACRYLIC)										
				CLOUD GRAY (VINYL) CES1054-533		523	VESTAL WHITE CES1054-802 (ACRYLIC)	SPRING GREEN CES1054-B64 (ACRYLIC)									
	CV		Olive Green Vinyl	CLOUD GRAY (LACQUER) CES1054-531	524	VESTAL WHITE CES1054-398 (LACQUER)	NUTMEG CES1054-B17 (LACQUER)										
				CLOUD GRAY (VINYL) CES1054-533		525	VESTAL WHITE CES1054-398 (LACQUER)	FLAG RED CES1054-B03 (LACQUER)									
	DV		Old Gold Vinyl	CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25	526	VESTAL WHITE CES1054-398 (LACQUER)	SUMMER GOLD CES1054-B48 (LACQUER)						
				CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25		527	VESTAL WHITE CES1054-398 (LACQUER)	CARNIVAL YELLOW CES1054-A34 (LACQUER)					
	GV		Sunset Red Vinyl	INTERIOR PAINT					528	VESTAL WHITE CES1054-398 (LACQUER)	SATIN BLUE CES1054-B66 (LACQUER)						
				INTERIOR PAINT						528A	VESTAL WHITE CES1054-398 (LACQUER)	Meadow Green CES1054-B69 (LACQUER)					
1 9 7 5	AL		Chestnut Brown Leather	BLACK SEMI-GLOSS (LACQUER) CES1054-156	530	VESTAL WHITE CES1054-398 (LACQUER)	SPRING GREEN CES1054-B68 (LACQUER)										
				DULL BLACK (LACQUER) CES1054-193		531	VESTAL WHITE CES1054-398 (LACQUER)	VELVET BLACK CES1054-B07 (ACRYLIC)									
	EL		Cloud Gray Leather	CLOUD GRAY (LACQUER) CES1054-531	532	VESTAL WHITE CES1054-398 (LACQUER)	NUTMEG CES1054-B17 (LACQUER)										
				CLOUD GRAY (VINYL) CES1054-533		533	VESTAL WHITE CES1054-398 (LACQUER)	TROPICAL ORANGE CES1054-774 (ACRYLIC)									
	FL		Ebony Black Leather	CLOUD GRAY (LACQUER) CES1054-531	534	VESTAL WHITE CES1054-398 (LACQUER)	SUMMER GOLD CES1054-B48 (LACQUER)										
				CLOUD GRAY (VINYL) CES1054-533		535	VESTAL WHITE CES1054-398 (LACQUER)	SADDLE BROWN CES1054-B65 (ACRYLIC)									
	GL		Old Gold Leather	CHESTNUT BROWN (LACQUER) CES1054-B41		BLACK HI-GLOSS (LACQUER) CES1054-151	OLD GOLD (LACQUER) CES1054-B25		536	VESTAL WHITE CES1054-398 (LACQUER)	SUMMER GOLD CES1054-B48 (LACQUER)						
				CHESTNUT BROWN (LACQUER) CES1054-B41		BLACK HI-GLOSS (LACQUER) CES1054-151	OLD GOLD (LACQUER) CES1054-B25			537	VESTAL WHITE CES1054-398 (LACQUER)	VELVET BLACK CES1054-B07 (ACRYLIC)					
1 9 7 5	17263459		THRU						538	VESTAL WHITE CES1054-398 (LACQUER)	SPRING GREEN CES1054-B68 (LACQUER)						
										539	VESTAL WHITE CES1054-398 (LACQUER)	MEADOW GREEN CES1054-B69 (LACQUER)					
1 9 7 5	17265684		F17201235						540	VESTAL WHITE CES1054-398 (LACQUER)	VELVET BLACK CES1054-B07 (ACRYLIC)						
										540	VESTAL WHITE CES1054-398 (LACQUER)	VELVET BLACK CES1054-B07 (ACRYLIC)					
NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-802																	
*LACQUER PAINT USED ON FRENCH AIRCRAFT ONLY.																	

MODELS I72 & F172			PAINT CODE CHART					MODELS I72 & F172		
YEAR	INTERIOR COLOR	CODE	INTERIOR PAINT				SERIAL LISTING	EXTERIOR PAINT		
			AF	BF	CF	DF		CODE	COLOR COMBINATIONS	
1 9 6 7 6	AF	Chestnut Brown Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	601	VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	FLAG RED CES1054-893(ACRYLIC) CES1054-B03(LA CQUER)				
		Sapphire Blue Fabric	DULL BLACK (LACQUER) CES1054-193 (EPOXY) CES1054-482		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	LATIGO CES1054-B88(ACRYLIC) CES1054-B92(LA CQUER)				
	CF	Oro Green Fabric	CLOUD GRAY (VINYL) CES1054-531		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SPANISH BRONZE CES1054-B90(ACRYLIC) CES1054-B94(LA CQUER)				
		Ruby Red Fabric	CLOUD GRAY (VINYL) CES1054-533		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	EMPEROR BLUE CES1054-832(ACRYLIC) CES1054-894(LA CQUER)				
	DF	Topaz Gold Fabric	CHESTNUT BROWN (LACQUER) CES1054-B41	SAPPHIRE BLUE (LACQUER) CES1054-B73	ORO GREEN (LACQUER) CES1054-B77	RUBY RED (LACQUER) CES1054-B81		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SATIN BLUE CES1054-B62(ACRYLIC) CES1054-B66(LA CQUER)	
		Topaz Gold Vinyl	CHESTNUT BROWN (VINYL) CES1054-B42	SAPPHIRE BLUE (VINYL) CES1054-B74	ORO GREEN (VINYL) CES1054-B78	RUBY RED (VINYL) CES1054-B82		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	GRANADA GREEN CES1054-A97(ACRYLIC) CES1054-B04(LA CQUER)	
	GV	Chestnut Brown Vinyl	BLACK SEMI-GLOSS (LACQUER) CES1054-156		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)				
		Sapphire Blue Vinyl	DULL BLACK (LACQUER) CES1054-193 (EPOXY) CES1054-482		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)				
	CV	Oro Green Vinyl	CLOUD GRAY (LACQUER) CES1054-531		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	FLAG RED CES1054-893(ACRYLIC) CES1054-B03(LA CQUER)	SATIN BLUE CES1054-B62(ACRYLIC) CES1054-B66(LA CQUER)			
		Ruby Red Vinyl	CLOUD GRAY (VINYL) CES1054-533		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	LATIGO CES1054-B88(ACRYLIC) CES1054-B92(LA CQUER)	COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)			
	DV	Topaz Gold Vinyl	CHESTNUT BROWN (LACQUER) CES1054-B41	SAPPHIRE BLUE (LACQUER) CES1054-B73	ORO GREEN (LACQUER) CES1054-B77	RUBY RED (LACQUER) CES1054-B81		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)	VELVET BLACK CES1054-B51(LA CQUER)
		Topaz Gold Vinyl	CHESTNUT BROWN (VINYL) CES1054-B42	SAPPHIRE BLUE (VINYL) CES1054-B74	ORO GREEN (VINYL) CES1054-B78	RUBY RED (VINYL) CES1054-B82		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SPANISH BRONZE CES1054-B90(ACRYLIC) CES1054-B94(LA CQUER)	COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)
1 9 6 7 6	GV	Cloud Gray Leather	CLOUD GRAY (VINYL) CES1054-531	17265685 & ON F17201385 & ON	VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SPANISH BRONZE CES1054-B90(ACRYLIC) CES1054-B94(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)			
		Ebony Black Leather	CHESTNUT BROWN (LACQUER) CES1054-B41	RUBY RED (LACQUER) CES1054-B81		BLACK HI-GLOSS (LACQUER) CES1054-151		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	EMPEROR BLUE CES1054-832(ACRYLIC) CES1054-894(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)
	AL	Chestnut Brown Leather	BLACK SEMI-GLOSS (LACQUER) CES1054-156		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	FLAG RED CES1054-893(ACRYLIC) CES1054-B03(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)			
		Ruby Red Leather	DULL BLACK (LACQUER) CES1054-193 (EPOXY) CES1054-482		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	EMPEROR BLUE CES1054-832(ACRYLIC) CES1054-894(LA CQUER)	SATIN BLUE CES1054-B62(ACRYLIC) CES1054-B66(LA CQUER)			
	DL	Cloud Gray Leather	CLOUD GRAY (LACQUER) CES1054-531		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	LATIGO CES1054-B88(ACRYLIC) CES1054-B92(LA CQUER)	COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)			
		Ebony Black Leather	CLOUD GRAY (VINYL) CES1054-531		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SPANISH BRONZE CES1054-B90(ACRYLIC) CES1054-B94(LA CQUER)	COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)			
	EL	Cloud Gray Leather	CLOUD GRAY (VINYL) CES1054-533		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	SPANISH BRONZE CES1054-B90(ACRYLIC) CES1054-B94(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)			
		Ebony Black Leather	CHESTNUT BROWN (LACQUER) CES1054-B41	RUBY RED (LACQUER) CES1054-B81		BLACK HI-GLOSS (LACQUER) CES1054-151		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	EMPEROR BLUE CES1054-832(ACRYLIC) CES1054-894(LA CQUER)	VELVET BLACK CES1054-B07(ACRYLIC) CES1054-151(LA CQUER)
	FL	Ebony Black Leather	CHESTNUT BROWN (VINYL) CES1054-B42	RUBY RED (VINYL) CES1054-B82		BLACK SEMI-GLOSS (VINYL) CES1054-752		VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	VESTAL WHITE CES1054-802(ACRYLIC) CES1054-398(LA CQUER)	GRANADA GREEN CES1054-A97(ACRYLIC) CES1054-B04(LA CQUER)
							*LA CQUER PAINT USED ON FRENCH AIRCRAFT ONLY.			COOPER BROWN CES1054-B45(ACRYLIC) CES1054-B99(LA CQUER)

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-802

This page intentionally left blank.



Cessna

illustrated parts catalog

MODEL 172 & F172

U
PHOLSTERY

&


I
NTERIOR T
RIM

UPHOLSTERED PARTS - HOW TO ORDER

PARTS MARKED WITH A # FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR COLOR & MATERIAL
 (SPECIFY SERIAL NUMBER OF AIRCRAFT WHEN ORDERING)

HOW TO DETERMINE 2nd DASH NUMBER

1. Find part number of desired part in catalog.
2. Refer to "FINISH & TRIM" plate, in the airplane, for your "Year Code" and "Interior Color Code."

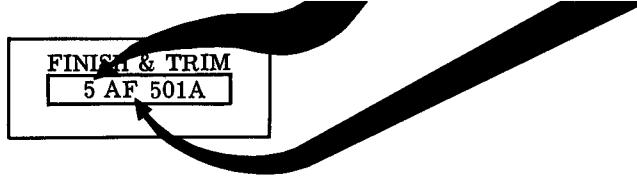

3. Add the "Year Code" and "Interior Color Code," to the part number from catalog.

EXAMPLE OF COMPLETE NUMBER

0515005-17 -5 AF

Part Number _____ From Catalog

 |

 | Interior Color Code
 From Finish & Trim Plate

 |

 | Year Code
 From Finish & Trim Plate

0515016-3 -5 AFB —(Black Carpet)

Part Number _____ From Catalog

 |

 | Interior Color Code
 From Finish & Trim Plate

 |

 | Year Code
 From Finish & Trim Plate

INTERIOR PAINTED OR PLASTIC PARTS HOW TO ORDER

PARTS MARKED WITH A □ FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR PROPER COLOR.
(SPECIFY SERIAL NUMBER OF AIRCRAFT WHEN ORDERING)

To obtain second dash number use of correct table, for your model year, is required.

To use table,

1. Find part number of desired part in catalog.
2. Refer to the "Finish and Trim" plate, in the airplane, for your "Interior Color Code."



3. Locate part number from catalog in table.
4. Add dash number for color that appears under your "Interior Color Code."

INTERIOR PAINTED OR PLASTIC PARTS 1975 MODEL YEAR		COLOR CODE (from Finish and Trim Plate)							
PART NAME	PART NUMBER	17201235 & ON							
		AF	AV	BV	BF	CF	DF	GV	GF
SHIELD ASSY - LH DOORPOST	0413484-18	532	532	532	532	532	532	532	532
SHIELD ASSY - FW DOORPOST	0413484-19	532	532	532	532	532	532	532	532
COVER - RADIO	0413521-31	A59	A59	A59	A59	A59	A59	A59	A59
SHIELD	0414013-12	532	532	532	532	532	532	532	532
COVER ASSY	0414013-13	532	532	532	532	532	532	532	532
COVER - CENTER POST	0500210-44	532	532	532	532	532	532	532	532
COVER - BAGGAGE DOOR FRAME FWD	0500210-95	B40	B28	B32	B30	B34	B32	279	
PANEL - BAGGAGE COMPARTMENT RH	0500210-97								
COVER - COW. DECK	0500210-108	825	825	825	825	825	825	825	825
MOULDING - REAR WINDOW LWR	0500210-135	532	532	532	532	532	532	532	532
COVER - CONSOLE	0500233-14	B40	B28	B32	B30	B34	B32	279	
COVER - CONTROL YOKE	0500403-1	B40	B28	B32	B36	B34	B32	279	

EXAMPLES OF COMPLETE NUMBER


0500210-95 -B40

STEP "3"

Part Number _____
From Catalog

2nd Dash Number
From Table
(Interior Color Code AF)

STEP "4"

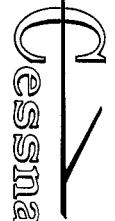

**INTERIOR PAINTED OR PLASTIC PARTS
1975 MODEL YEAR**

17263459 THRU 17265684

F17201235 THRU F17201384

PART NAME	PART NUMBER	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		AF AL	AV BV	BF CV	CF	DF DV	GF GL	GV EL	FL
0413484-18	SHIELD ASSY - LH DOORPOST	532	532	532	532	532	532	532	532
0413484-19	SHIELD ASSY - FWD DOORPOST	532	532	532	532	532	532	532	532
0413531-59	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59	A59
0414013-12	SHIELD	532	532	532	532	532	532	532	532
0414013-13	COVER ASSY	532	532	532	532	532	532	532	532
0500210-44	COVER - CENTER POST	532	532	532	532	532	532	532	532
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	B40	B28	B32	B36	B24	532	279	
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	B40	B28	B32	B36	B24	532	279	
0500210-108	COVER - COWL DECK	825	825	825	825	825	825	825	
0500210-135	MOULDING - REAR WINDOW LWR	532	532	532	532	532	532	532	
0500233-14	COVER - CONSOLE	B40	B28	B32	B36	B24	532	279	
0500403-1	COVER - CONTROL YOKE	B40	B28	B32	B36	B24	532	279	
0513076-43	COVER ASSY - SWITCH PANEL	B40	B28	B32	B36	B24	532	279	
0513077-31	COVER - LWR LH	B40	B28	B32	B36	B24	532	279	
0513438-1	DOOR ASSY - MAP CASE	B40	B28	B32	B36	B24	532	279	
0513445-13	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59	A59
0513445-23	PLATE - SPLICE	A59	A59	A59	A59	A59	A59	A59	A59
0513445-24	PLATE - SPLICE	A59	A59	A59	A59	A59	A59	A59	A59
0513445-36	COVER ASSY - RH	A59	A59	A59	A59	A59	A59	A59	A59
0513446-2	PANEL COVER - RADIO SWITCH	A59	A59	A59	A59	A59	A59	A59	A59
0513446-5	PANEL COVER - RADIO SWITCH	A59	A59	A59	A59	A59	A59	A59	A59
0514064-1	RETAINER - SKYLIGHT	532	532	532	532	532	532	532	532
0514068-2	COVER ASSY - SPEAKER	532	532	532	532	532	532	532	532
0514108-1	TRIM ASSY - BACK PANEL LH	532	532	532	532	532	532	532	532
0514108-2	TRIM ASSY - BACK PANEL RH	532	532	532	532	532	532	532	532
0514109-1	TRIM ASSY	532	532	532	532	532	532	532	532
0514112-2	TRIM - SEAT BACK	532	532	532	532	532	532	532	532
0514113-1	TIARA ASSY	532	532	532	532	532	532	532	532
0514120-1	SPLICE - AFT	532	532	532	532	532	532	532	532
0515009-1	COVER ASSY - EMERGENCY LOCATOR TRANSMITTER	B40	B28	B32	B36	B24	532	279	
0515010-10	TRAY - SHOULDER HARNESS	532	532	532	532	532	532	532	
0515012-1	PANEL - BAGGAGE COMPARTMENT LWR FWD	B40	B28	B32	B36	B24	532	279	
0515012-2	MOULDING - BAGGAGE COMPARTMENT	B40	B28	B32	B36	B24	532	279	
0515014-1	MOULDING - REAR WINDOW UPR	532	532	532	532	532	532	532	
0515015-1	PANEL ASSY - BAGGAGE COMPARTMENT UPR	B40	B28	B32	B36	B24	532	279	
0515018-1	COVER - BAGGAGE DOOR AFT	B40	B28	B32	B36	B24	532	279	
0515019-3	PANEL ASSY - BAGGAGE COMPARTMENT	B40	B28	B32	B36	B24	532	279	

**INTERIOR PAINTED OR PLASTIC PARTS
1975 MODEL YEAR**

17263459 THRU 17265684

F17201235 THRU F17201384


**INTERIOR COLOR CODE
(From Finish and Trim Plate)**

AF	BF	CF	DF	GF
AV	BV	CV	DV	GV
AL	BL	CL	DL	EL
532	532	532	532	532
532	532	532	532	532
532	532	532	532	532
B40	B28	B32	B36	B24
B40	B28	B32	B36	B24
532	532	532	532	532
193	193	193	193	193
532	532	532	532	532
532	532	532	532	532
532	532	532	532	532
B40	B28	B32	B36	B24
532	532	532	532	532
193	193	193	193	193

PART NAME	PART NUMBER
0515026-6	SHIELD ASSY - RH DOORPOST
0515027-1	MOULDING - WINDOW LH
0515027-2	MOULDING - WINDOW RH
0515028-1	COVER - AFT DOORPOST LH
0515028-2	COVER - AFT DOORPOST RH
0515030-1	COVER - INERTIA REEL
0700148-1	HOOD - MAPLIGHT
0714010-1	TRIM - LH
0714010-2	TRIM - RH
0715049-2	SPLICE - FWD
0717000-12	PANEL - BAGGAGE COMPARTMENT
1214098-1	TRIM - SEAT BACK
1470089-14	MAPLIGHT ASSY



INTERIOR PAINTED OR PLASTIC PARTS 1976 MODEL YEAR		INTERIOR COLOR CODE (From Finish and Trim Plate)						
PART NAME	PART NUMBER	AF AL	BF BV	CF CV	DF DL	GF GV	EL	FL
0413484-22	SHIELD ASSY - LH DOORPOST	532	532	532	532	532	532	532
0413484-23	SHIELD ASSY - FWD DOORPOST	532	532	532	532	532	532	532
0413531-59	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0414013-15	SHIELD	532	532	532	532	532	532	532
0414013-19	COVER ASSY	532	532	532	532	532	532	532
0415023-1	ESCUTCHEON ASSY - RH	532	532	532	532	532	532	532
0415023-3	ESCUTCHEON	532	532	532	532	532	532	532
0500210-44	COVER - CENTER POST	532	532	532	532	532	532	532
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	B40	B72	B76	B80	B84	532	279
0500210-108	COVER - COWL DECK	825	825	825	825	825	825	825
0500210-135	MOULDING - REAR WINDOW LWR	532	532	532	532	532	532	532
0500233-14	COVER - CONSOLE	B40	B72	B76	B80	B84	532	279
0513085-1	MAPCASE	A69	A69	A69	A69	A69	A69	A69
0513085-2	DOOR ASSY - MAPCASE	B40	B72	B76	B80	B84	532	279
0513090-1	COVER - SWITCH PANEL	B40	B72	B76	B80	B84	532	279
0513093-1	COVER ASSY - RH PANEL	A59	A59	A59	A59	A59	A59	A59
0513093-2	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59
0513093-5	COVER - CONTROL WHEEL CUTOUT	A59	A59	A59	A59	A59	A59	A59
0513094-3	COVER ASSY - LH POST LIGHTED	A59	A59	A59	A59	A59	A59	A59
0513094-5	COVER ASSY - RH POST LIGHTED	A59	A59	A59	A59	A59	A59	A59
0513095-1	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0513095-3	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0513095-5	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0513095-7	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0513095-9	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0513095-15	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0514064-1	RETAINER - SKYLIGHT	532	532	532	532	532	532	532
0514068-2	COVER ASSY - SPEAKER	532	532	532	532	532	532	532
0514108-1	TRIM ASSY - BACK PANEL LH	532	532	532	532	532	532	532
0514108-2	TRIM ASSY - BACK PANEL RH	532	532	532	532	532	532	532
0514109-1	TRIM ASSY	532	532	532	532	532	532	532
0514112-2	TRIM - SEAT BACK	532	532	532	532	532	532	532
0514113-1	TIARA ASSY	532	532	532	532	532	532	532
0514120-1	SPLICE - AFT	532	532	532	532	532	532	532
0515009-1	COVER ASSY - EMERGENCY LOCATOR TRANSMITTER	B40	B72	B76	B80	B84	532	279
0515010-10	TRAY - SHOULDER HARNESS	532	532	532	532	532	532	532
0515012-1	PANEL - BAGGAGE COMPARTMENT LWR FWD	B40	B72	B76	B80	B84	532	279
0515012-2	MOULDING - BAGGAGE COMPARTMENT	B40	B72	B76	B80	B84	532	279
0515014-1	MOULDING - REAR WINDOW UPR	532	532	532	532	532	532	532
0515015-1	PANEL ASSY - BAGGAGE COMPARTMENT UPR	B40	B72	B76	B80	B84	532	279

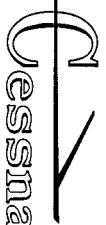

illustrated parts catalog

MODEL 172 & F172

INTERIOR PAINTED OR PLASTIC PARTS 1976 MODEL YEAR		INTERIOR COLOR CODE (From Finish and Trim Plate)							
PART NAME	PART NUMBER	AF AV AL	BF BV	CF CV	DF DV DL	GF GV	EL	FL	
0515018-1	COVER - BAGGAGE DOOR AFT	B40	B72	B76	B80	B84	532	279	
0515019-3	PANEL ASSY - BAGGAGE COMPARTMENT	B40	B72	B76	B80	B84	532	279	
0515026-8	SHIELD ASSY - RH DOORPOST	532	532	532	532	532	532	532	
0515027-1	MOULDING - WINDOW LH	532	532	532	532	532	532	532	
0515027-2	MOULDING - WINDOW RH	532	532	532	532	532	532	532	
0515028-1	COVER - AFT DOORPOST LH	B40	B72	B76	B80	B84	532	279	
0515028-2	COVER - AFT DOORPOST RH	B40	B72	B76	B80	B84	532	279	
0515030-1	COVER - INERTIA REEL	532	532	532	532	532	532	532	
0515036-1	COVER - BAGGAGE DOOR FRAME FWD	B40	B72	B76	B80	B84	532	279	
0700148-1	HOOD - MAPLIGHT	193	193	193	193	193	193	193	
0715049-2	SPLICE - FWD	532	532	532	532	532	532	532	
0717000-18	PANEL - BAGGAGE COMPARTMENT	B40	B72	B76	B80	B84	532	279	
1470089-14	MAPLIGHT ASSY	193	193	193	193	193	193	193	

This page intentionally left blank.



Cessna illustrated parts catalog

MODEL 172 & F172

ALPHABETICAL INDEX

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE	
A			B (Cont)	
ACCESSORY KITS-SEE ACCESSORY KIT CATALOG		BAGGAGE DOOR	32	
ADAPTER FUEL FILLER.	4	BAGGAGE DOOR	49	
ADAPTER OIL FILTER	86	BAGGAGE DOOR HANDLE.	51	
ADAPTOR OIL TEMPERATURE.	68	BAGGAGE DOOR JAMB.	32	
ADHESIVE GASKET.	1	BAGGAGE DOOR LATCH	49	
AFT CARPET	51	BAGGAGE DOOR LATCH PLATE	49	
AFT SECTION FUSELAGE	32	BAGGAGE DOOR STOP.	32	
AFT SECTION SKIN	35	BAGGAGE NET.	51	
AILERON.	13	BAGGAGE PLACARD.	2	
AILERON BALANCE WEIGHT	13	BARREL SHIMMY DAMPENER	41	
AILERON BELLCRANK.	13	BARREL TURNBUCKLE.	79	
AILERON BELLCRANK.	79	BATTERY BOX.	36	
AILERON CABLE.	79	BATTERY BOX LID.	36	
AILERON CONTROL SYSTEM	79	BATTERY CABLE.	96	
AILERON HINGE.	13	BATTERY CONTACTOR.	96	
AILERON PULLEY BRACKET	30	BATTERY GROUND STRAP	96	
AILERON PUSH PULL ROD.	13	BATTERY KIT.	96	
AILERON PUSH PULL ROD.	79	BEACON LIGHT FLASHER	101	
AILERON RIB.	13	BEACON LIGHT FLASHING.	101	
AIR FILTER	68	BELLCRANK AILERON.	13	
AIR FILTER	91	BELLCRANK AILERON.	79	
AIR SCOOP.	7	BELLCRANK ELEVATOR	24	
AIR SCOOP.	65	BELLCRANK ELEVATOR	80	
AIR SCOOP.	66	BELT ALTERNATOR.	68	
AIR SCOOP.	67	BELT ALTERNATOR.	96	
AIR TEMPERATURE GAGE CARBURETOR.	92	BELT EXTENSION	62	
AIR VENT	73	BELT FRONT SEAT.	61	
AIR VENT OUTSIDE	73	BELT REAR SEAT	61	
AIRBOX	68	BELT SEAT.	61	
AIRSPEED INDICATOR	58	BLOCK FUSELAGE SPAR	24	
AIRSPEED INDICATOR	58A	BOARD DIODE.	104	
AIRSPEED INDICATOR	84	BONDING STRAP.	63A	
AIRSPEED INDICATOR TRUE.	58	BOOT STEERING.	23	
ALTERNATOR	69	BOTTOM REAR SEAT	55	
ALTERNATOR	96	BOWL FUEL STRAINER	88	
ALTERNATOR BELT.	68	BOX BATTERY.	36	
ALTERNATOR BELT.	96	BRAKE.	43	
ALTIMETER.	84	BRAKE.	44	
ALTIMETER DUAL	84	BRAKE & RUDDER PEDAL	76	
AMMETER.	58	BRAKE CYLINDER	76	
AMMETER.	58A	BRAKE DISC	43	
ARMREST.	45	BRAKE FAIRING.	42	
ARMREST.	46	BRAKE HOUSING.	75	
ARMREST.	47	BRAKE LINE	42	
ARMREST.	51	BRAKE LINE	75	
ASH TRAY	51	BRAKE LINING	44	
ASSIST HANDLE.	45	BRAKE PARKING.	75	
ASSIST HANDLE.	46	BRAKE PEDAL.	76	
ASSIST HANDLE.	47	BRAKE SYSTEM	75	
ASSIST HANDLE.	63	BREAKER CIGAR LIGHTER CIRCUIT.	58	
ASSIST STRAP	45	BREATHER TUBE INSULATION	68	
ASSIST STRAP	46	BREATHER TUBE INSULATION	72	
ASSIST STRAP	47	BULB	3	
AUTO PILOT-NAVOMATIC SEE ELECTRONICS MANUAL.		BULB ALSO SEE LIGHTS.		
AUXILIARY SEAT	57	BULB COURTESY LIGHT.	100	
AXLE	42	BULB FLASHING BEACON.	101	
AXLE BOLT FERRULE.	37	BULB INSTRUMENT CLUSTER.	58B	
AXLE MAIN LANDING GEAR	42	BULB INSTRUMENT PANEL.	97	
AXLE NOSE WHEEL SPACER	37	BULB INSTRUMENT PANEL LIGHT.	97	
AXLE SPACER.	37	BULB MAP LIGHT	102	
BAFFLE SEAL.	71	BULB OVERHEAD CONSOLE.	97	
BAFFLES ENGINE	71	BULB POST LIGHT.	58B	
BAGGAGE COMPARTMENT PANEL	51	BULB WING POSITION LIGHT	3	
		BULK ITEMS-LIST OF	1	
		BULKHEAD FRONT DOORPOST.	24	
		BULKHEAD LANDING GEAR.	30	
		BULKHEAD REAR DOORPOST	29	
		BUTTON STATIC SOURCE	23	

B

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
C		C (Cont)	
CABIN AIR CONTROL	58	CLUSTER INSTRUMENT	58
CABIN AIR CONTROL	58A	CLUSTER INSTRUMENT	58A
CABIN AIR VENT ELBOW	73	CLUTCH ROTARY	32
CABIN DOOR HANDLE	45	COLOR CHART-PAINT SEE PAGE IV	
CABIN DOOR HANDLE	46	COMPASS	60
CABIN DOOR HANDLE	47	COMPASS BRACKET	23
CABIN DOOR LATCH	48	COMPASS CORRECTION PLACARD	2
CABIN DOOR LH.	45	COMPASS CORRECTION PLACARD	58
CABIN DOOR RH.	46	COMPONENTS ENGINE	69
CABIN DOOR RH.	47	COMPONENTS FRONT SECTION TUNNEL	25
CABIN DOOR STRUCTURE	45	CONSOLE COVER	51
CABIN DOOR STRUCTURE	46	CONSOLE STRUCTURE	26
CABIN DOOR STRUCTURE	47	CONTACTOR BATTERY	96
CABIN HEAT CONTROL	58	CONTACTOR EXTERNAL POWER	96
CABIN HEAT CONTROL	58A	CONTACTOR STARTER	96
CABIN HEAT CONTROL	74	CONTROL CABLES-SEE INDIVIDUAL SYSTEM	
CABIN HEATING	74	CONTROL SYSTEMS-SEE INDIVIDUAL SYSTEMS	
CABIN HEATING & DEFROSTING SYSTEM	74	CONTROL WHEEL SEE WHEEL-CONTROL	
CABIN TOP	22	CONTROL-PUSHPULL-SEE ENGINE INSTL	
CABIN TOP & FIREWALL UPHOLSTERY	50	CONTROL-PUSHPULL-SEE INSTRUMENT PANEL	
CABIN TOP UPHOLSTERY	50	COOLER OIL	68
CABIN UPHOLSTERY	51	CORD TOW HOOK	60
CABIN VENTILATION SYSTEM	73	COURTESY LIGHT	100
CABLES-CONTROL-SEE APPLICABLE SYSTEM		COURTESY LIGHT BULB	100
CAM SEAT BACK	55	COURTESY LIGHT SHIELD	100
CAP FUEL	4	COWL DECK COVER	50
CAP FUEL TANK	10	COWL ENGINE	65
CAP FUEL TANK	11	COWL ENGINE	66
CAP HUB	37	CUP FUEL SAMPLER	12
CAP NOSE	65	CUP HOLDER	60
CAP NOSE	66	CYLINDER BRAKE	76
CAP NOSE	67	CYLINDER MASTER BRAKE	77
CAP NOSE GEAR HUB	37		
CARBURETOR	69		
CARBURETOR	92		
CARBURETOR AIR FILTER SEAL	68		
CARBURETOR AIR TEMPERATURE GAGE	58		
CARBURETOR AIR TEMPERATURE GAGE	92		
CARBURETOR HEAT CONTROL	58		
CARBURETOR HEAT CONTROL	58A		
CARGO TIE DOWN EYEBOLT	60		
CARGO TIE DOWN SLIDE	60		
CARPET	51		
CARPET AFT	51		
CARPET TUNNEL	51		
CASE MAP	59		
CATALOG-HOW TO USE SEE INTRODUCTION		DAMPENER SHIMMY	41
CATCH MAGNETIC	59	DEADENER SOUND	1
CENTER SECTION FLOORBOARD	22	DECALS-SEE PLACARDS	
CENTER SECTION SPAR	29	DECK SKIN	23
CHAIN TAB CONTROL	81	DEFROSTER NOZZLE	74
CHECK LIST PILOTS	2	DETECTOR NAV LIGHT	3
CHILDS SEAT	57	DIMMING TRANSISTORIZED LIGHT	96
CIGAR LIGHTER	58	DIODE	96
CIGAR LIGHTER	58A	DIODE BOARD	104
CIGAR LIGHTER KNOB	58	DIRECTIONAL GYRO	58
CIGAR LIGHTER KNOB	58A	DIRECTIONAL GYRO	58A
CIRCUIT BREAKER	58	DIRECTIONAL GYRO	91
CIRCUIT BREAKER	58A	DISC BRAKE	43
CIRCUIT BREAKER	84	DISCHARGER STATIC	63A
CIRCUIT BREAKER	101	DOME FLASHING BEACON	101
CIRCUIT BREAKER CIGAR LIGHTER	58	DOME LIGHT SWITCH	97
CLIP UPHOLSTERY	45	DOOR BAGGAGE	32
CLIP UPHOLSTERY	46	DOOR BAGGAGE	49
CLIP UPHOLSTERY	47	DOOR FRAME	22
CLOCK	58A	DOOR GROUND SERVICE PLUG	104
CLOCK ELECTRIC	58	DOOR HANDLE ESCUTCHEON	45
CLOCK FUSE	96	DOOR HANDLE ESCUTCHEON	46
		DOOR HANDLE ESCUTCHEON	47
		DOOR LATCH	37
		DOOR LATCH	42
		DOOR LATCH	45
		DOOR LATCH	65
		DOOR LATCH	67
		DOOR LATCH HANDLE	48

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
D (Cont)			
DOOR LH CABIN	45	EYEBOLT MOORING	23
DOOR LOCK	49	EYEBOLT MOORING	35
DOOR MAP CASE	59	EYEBROW INSTRUMENT PANEL	58
DOOR OUTSIDE AIR	23		
DOOR RH CABIN	46		
DOOR RH CABIN	47		
DOOR SIDE AIR VENT	73		
DOOR SILL	22		
DOORPOST	24		
DORSAL FAIRING	32		
DORSAL FIN	33		
DUAL ALTIMETER	84		
DUAL BRAKE HUB	76		
DUCT HEATER	27		
DUCT HEATER	74		
E			
ELBOW CABIN AIR VENT	73	FAIRING BRAKE	42
ELECTRIC CLOCK	58	FAIRING DORSAL	32
ELECTRICAL EQUIPMENT	96	FAIRING NOSE GEAR SPEED	37
ELECTRONIC EQUIPMENT-SEE ELECTRONICS MANUAL		FAIRING SCRAPER	42
ELEMENT KIT FILTER	86	FAIRING SPEED	37
ELEVATOR	20	FAIRING TAILCONE	35
ELEVATOR BALANCE WEIGHT	20	FAIRING WHEEL	42
ELEVATOR BELLCRANK	24	FAIRING WING	3
ELEVATOR BELLCRANK	80	FELT GREASE SEAL	43
ELEVATOR CABLE	80	FERRULE AXLE BOLT	37
ELEVATOR CONTROL SYSTEM	80	FILLET WING	21
ELEVATOR TAB STOP BLOCK	81	FILTER AIR	68
ELEVATOR TIP	20	FILTER ELEMENT KIT	91
ELEVATOR TRIM CONTROL	81	FILTER FUEL STRAINER	86
ELEVATOR TRIM CONTROL SYSTEM	81	FILTER NOISE	96
ELEVATOR TRIM INDICATOR	81	FILTER OIL	86
ELEVATOR TRIM SUPPORT	26	FILTER RELIEF VALVE	91
ELEVATOR TRIM TAB	19	FIN	16
ELEVATOR TRIM TAB ACTUATOR	19	FIN DORSAL	33
EMBLEM CONTROL WHEEL	2	FIN TIP	101
ENGINE	68	FINISH & TRIM PLACARD	2
ENGINE BAFFLES	71	FINISH & TRIM PLACARD	21
ENGINE COMPONENTS	69	FINISH & TRIM PLATE-HOW TO READ SEE PAGE III	
ENGINE COWL	65	FIRE EXTINGUISHER	60
ENGINE COWL	66	FIRE EXTINGUISHER BRACKET	60
ENGINE COWL	67	FIREWALL	27
ENGINE MOUNT	68	FIREWALL	95
ENGINE MOUNT BRACKET	95	FIREWALL GROMMETS	28
ENGINE MOUNT STRINGER	23	FITTINGS FLOATPLANE	93
ENGINE OIL PLACARD	2	FLAP	14
EQUIPMENT ELECTRICAL	96	FLAP ACTUATOR MOTOR	82
EQUIPMENT FUSELAGE	60	FLAP ATTACHMENT ROLLER	14
EQUIPMENT WINTERIZATION	72	FLAP ATTACHMENT ROLLER BUSHING	14
ESCUCHEON DOOR HANDLE	45	FLAP CABLE	82
ESCUCHEON DOOR HANDLE	46	FLAP CONTROL BRACKET	14
ESCUCHEON DOOR HANDLE	47	FLAP CONTROL SYSTEM	82
ESCUCHEON SILENCER	73	FLAP INDICATOR	58
EXHAUST SYSTEM	70	FLAP INDICATOR	58A
EXTENSION BELT	62	FLAP INDICATOR	82
EXTENSION VALVE	37	FLAP KNOB	58
EXTENSION VALVE	42	FLAP KNOB	58A
EXTERNAL POWER CONTACTOR	96	FLAP MOTOR HINGE	82
EXTERNAL POWER FUSE	96	FLAP POSITION TRANSMITTER ARM	82
EXTINGUISHER FIRE	60	FLAP PUSH PULL ROD	14
EYEBOLT	51	FLAP PUSH ROD	14
EYEBOLT	60	FLAP RETRACT CABLE	82
EYEBOLT CARGO TIE DOWN	60	FLAP SWITCH	58
EYEBOLT HOISTING	60	FLAP SWITCH	82
		FLASHER BEACON LIGHT	101
		FLASHING BEACON BULB	101
		FLASHING BEACON DOME	101
		FLASHING BEACON LIGHT	101
		FLOATPLANE FITTINGS	93
		FLOORBOARD	22
		FLOORBOARD	23
		FLOORBOARD	32
		FLOORBOARD CENTER SECTION	22
		FLOORBOARD FRONT	24
		FLOORBOARD FUSELAGE CENTER SECTION	22

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
F (Cont)			G
FLUSH VALVE	12	GAGE-SEE INDIVIDUAL LISTING	
FRAME DOOR	22	GAS CAP-SEE FUEL CAP	
FRESH AIR SILENCER	73	GAS GAGE-SEE INSTRUMENT PANEL	
FRESH AIR VENT SILENCER.	73	GAS LINES-SEE FUEL SYSTEM.	
FRONT & CENTER SECTION FUSELAGE.	22	GASKET ADHESIVE.	
FRONT DOORPOST BULKHEAD.	24	GLARESHIELD.	1
FRONT FLOORBOARD	24	GLASS WINDOW	58B
FRONT SEAT	54	GLASS WINDOW	45
FRONT SEAT BELT.	61	GLASS WINDOW	46
FRONT SPAR	18	GLASS WINDOW	47
FRONT SPAR SHIELD.	50	GREASE SEAL FELT	39
FUEL CAP	4	GREASE SEAL FELT	40
FUEL FILLER ADAPTER.	4	GREASE SEAL FELT	43
FUEL GAGE TRANSMITTER.	10	GRILL VENT	44
FUEL GAGE TRANSMITTER.	11	GROMMETS FIREWALL.	50
FUEL HOSE.	1	GROUND SERVICE PLUG.	28
FUEL JET	90	GROUND SERVICE PLUG DOOR	104
FUEL LINE.	87	GROUND SERVICE PLUG RECEPTACLE	104
FUEL LINES-SEE FUEL SYSTEM		GROUND STRAP	10
FUEL PRIMER.	90	GROUND STRAP	11
FUEL PRIMER THREE CYLINDER	90	GROUND STRAP	58
FUEL PUMP.	69	GROUND STRAP	58A
FUEL SAMPLER CUP	12	GYRO DIRECTIONAL	104
FUEL SELECTOR HANDLE	87	GYRO DIRECTIONAL	58
FUEL SELECTOR PLACARD.	2	GYRO DIRECTIONAL	58A
FUEL SELECTOR SHAFT.	87	GYRO HORIZON	91
FUEL SELECTOR VALVE.	89	GYRO HORIZON	58
FUEL SELECTOR VALVE BRACKET.	87	GYRO HORIZON	58A
FUEL STRAINER.	88	GYRO HORIZON	91
FUEL STRAINER BOWL	88		
FUEL STRAINER BRACKET.	87		
FUEL STRAINER FILTER	88		
FUEL STRAINER TOP.	88		
FUEL SYSTEM.	87		
FUEL TANK.	4		
FUEL TANK.	10		
FUEL TANK.	11		
FUEL TANK.	12		
FUEL TANK CAP.	10		
FUEL TANK CAP.	11		
FUEL TANK DRAIN VALVE.	12		
FUEL TANK SPACER	8		
FUEL TANK STRAINER	87		
FUEL TANK STRAP.	5		
FUEL TANK STRAP.	6		
FUEL TANK STRAP.	10		
FUEL TANK STRAP.	11		
FUEL TANK VENT VALVE	10		
FUEL TANK VENT VALVE	11		
FUEL VALVE	10		
FUEL VALVE	11		
FUSE	103		
FUSE CLOCK	96		
FUSE EXTERNAL POWER.	96		
FUSE HOLDER.	96		
FUSE HOLDER CLOCK.	96		
FUSE HOLDER EXTERNAL POWER	96		
FUSELAGE	21		
FUSELAGE AFT SECTION	32		
FUSELAGE CENTER SECTION FLOORBOARD	22		
FUSELAGE EQUIPMENT	60		
FUSELAGE FRONT SECTION STRUCTURE	23		
FUSELAGE SOUNDPROOFING	52		
FUSELAGE SOUNDPROOFING	52A		
FUSELAGE SPAR BLOCK.	24		
FUSELAGE TAILCONE.	35		
H			
HANDLE ASSIST.	45		
HANDLE ASSIST.	46		
HANDLE ASSIST.	47		
HANDLE ASSIST.	63		
HANDLE BAGGAGE DOOR.			
HANDLE CABIN DOOR.	51		
HANDLE CABIN DOOR.	45		
HANDLE CABIN DOOR.	46		
HANDLE DOOR LATCH.	47		
HANDLE FUEL SELECTOR	48		
HANDLE PARKING BRAKE	87		
HANDLE SEAT.	75		
HANDLE SEAT ADJUST	54		
HANDLE SEAT ADJUST	53		
HANDLE WINDOW.	45		
HANDLE WINDOW.	47		
Harness Shoulder	61		
HEADLINER.	50		
HEADLINER RETAINER	50		
HEADREST	53		
HEADREST	54		
HEADREST	55		
HEADREST	56		
HEATER	84		
HEATER DUCT.	27		
HEATER DUCT.	74		
HEATING & DEFROSTING SYSTEM CABIN.	74		
HEATING CABIN.	74		
HINGE AILERON.	13		
HINGE FLAP MOTOR	82		
HINGE STABILIZER	18		
HINGE WINDOW	45		
HINGE WINDOW	47		
HOISTING EYEBOLT	60		

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
H (Cont)			K (Cont)
HOISTING PROVISIONS			KNOB FLAP
HOLDER CLOCK FUSE.			96 58
HOLDER CUP			60 58A
HOLDER EXTERNAL POWER FUSE			96 56
HOLDER FUSE.			96 73
HOOK GLIDER TOW.			60
HORIZON GYRO			58
HORIZON GYRO			58A
HORIZON GYRO			91
HORN STALL WARNING			85
HOSE FUEL.			1
HOSE MASTER CYLINDER			75
HOSE OIL PRESSURE.			68
HOSES-SEE APPLICABLE SYSTEM.			
HOURMETER.			58
HOURMETER.			58A
HOW TO ORDER PAINTED PARTS SEE PAGE VII			
HOW TO ORDER PARTS-SEE INTRODUCTION.			
HOW TO ORDER UPHOLSTERED PARTS-SEE PAGE VI			
HOW TO READ FINISH & TRIM PLATE-SEE PAGE III			
HOW TO USE PARTS CATALOG-SEE PAGE I			
HUB CAP.			37
HUB CAP NOSE GEAR.			37
HUB DUAL BRAKE			76
I			
IGNITION SWITCH KIT.			58
IGNITION SWITCH KIT.			58A
INDICATOR-SEE INSTRUMENT PANEL			
INSTRUMENT CLUSTER			58
INSTRUMENT CLUSTER			58A
INSTRUMENT CLUSTER BULB.			58B
INSTRUMENT LIGHT			58B
INSTRUMENT LIGHT LENS.			97
INSTRUMENT PANEL BULB.			97
INSTRUMENT PANEL EQUIPMENT			58
INSTRUMENT PANEL EQUIPMENT			58A
INSTRUMENT PANEL EYEBROW			58
INSTRUMENT PANEL LIGHT			97
INSTRUMENT PANEL LIGHT BULB.			97
INSTRUMENT-SEE INDIVIDUAL LISTINGS			
INSULATION BREather TUBE			68
INSULATION BREather TUBE			72
J			
JACK-HEADSET-SEE CESSNA ELECTRONICS MANUAL			
JACK-MICROPHONE-SEE CESSNA ELECTRONICS MANUAL			
JAMB BAGGAGE DOOR.			32
JOINT UNIVERSAL.			78
K			
KIT BATTERY.			96
KIT IGNITION SWITCH.			58
KIT IGNITION SWITCH.			58A
KIT SEAT ROLLER.			53
KIT SHOCK MOUNT.			68
KITS-SEE ACCESSORY KIT CATALOG			
KNOB CIGAR LIGHTER			58
KNOB CIGAR LIGHTER			58A
L			
LAMP			98
LAMP			99
LAMP TAIL LIGHT			17
LAMPS-SEE BULBS.			
LAMPS-SEE LIGHTS			
LANDING GEAR BULKHEAD			30
LANDING GEAR BULKHEAD SKIN			22
LANDING GEAR MAIN.			42
LANDING LIGHT			98
LANDING LIGHT BRACKET.			98
LANDING LIGHT DUAL			99
LATCH.			61
LATCH BAGGAGE DOOR			49
LATCH CABIN DOOR			48
LATCH DOOR			37
LATCH DOOR			42
LATCH DOOR			45
LATCH DOOR			65
LATCH DOOR			66
LATCH DOOR			67
LEADING EDGE SKIN.			18
LEADING EDGE WING.			7
LEFT WING STRUCTURE.			5
LEFT WING STRUCTURE.			6
LENS INSTRUMENT LIGHT.			97
LENS STROBE LIGHT.			3
LENS TAIL LIGHT.			17
LENS TAIL LIGHT CLEAR.			17
LID BATTERY BOX.			36
LIGHT CONTROL WHEEL MAP.			103
LIGHT COURTESY			100
LIGHT DUAL LANDING			99
LIGHT FLASHING BEACON.			101
LIGHT INSTRUMENT			58B
LIGHT LANDING.			98
LIGHT MAP.			102
LIGHT MAP.			103
LIGHT OVERVOLTAGE.			58
LIGHT POST			58B
LIGHT RUDDER			17
LIGHT STROBE			3
LIGHTED INSTRUMENT PANEL COVERS POST			58B
LIGHTER CIGAR.			58
LIGHTER CIGAR.			58A
LIMIT SWITCHES-SEE SWITCHES			
LINES-SEE INDIVIDUAL SYSTEM			
LINING BRAKE			44
LINK LOWER TORQUE.			38
LINK UPPER TORQUE.			38
LOCK CONTROL			60
LOCK DOOR.			49
LUBRICATION FITTING.			38
M			
MAGNETIC CATCH			59

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
M (Cont)		O (Cont)	
MAGNETO	69	OIL FILTER PLACARD	86
MAIN GEAR WHEEL	43	OIL GAGE	58A
MAIN GEAR WHEEL	44	OIL GAGE	69
MAIN LANDING GEAR	42	OIL PRESSURE GAGE	58
MAIN LANDING GEAR AXLE	42	OIL PRESSURE HOSE	68
MAP CASE	59	OIL PRESSURE LINE	68
MAP CASE DOOR	59	OIL PRESSURE SWITCH	68
MAP COMPARTMENT	59	OIL QUICK DRAIN VALVE	68
MAP LIGHT	102	OIL TEMP GAGE	58
MAP LIGHT	103	OIL TEMP GAGE	58A
MAP LIGHT BULB	102	OIL TEMPERATURE ADAPTOR	68
MAP LIGHT CONTROL WHEEL	103	OPERATIONAL LIMITATIONS PLACARD	2
MAPLIGHT	102	OUTSIDE AIR DOOR	23
MARKER BEACON PLACARD	58	OUTSIDE AIR TEMPERATURE GAGE	60
MASTER BRAKE CYLINDER	77	OUTSIDE AIR VENT	73
MASTER SWITCH	58	OVERHEAD CONSOLE BULB	97
MASTER SWITCH	58A	OVERVOLTAGE LIGHT	58
MIKE SWITCH	78	OVERVOLTAGE SENSOR	96
MIRROR & COVER	60		
MIXTURE CONTROL	27		
MIXTURE CONTROL	58		
MIXTURE CONTROL	58A		
MIXTURE CONTROL	68		
MOORING EYEBOLT	23		
MOORING EYEBOLT	35		
MOORING RING	15		
MOTOR FLAP ACTUATOR	82		
MOULDING REAR WINDOW	50		
MOULDING STABILIZER	18		
MOULDING WINDOW	50		
MOUNT ENGINE	68		
MOUNT SHOCK	27		
MOUNT TAIL LIGHT	17		
MUFFLER	70		
N		P	
NAMEPLATES	2	PAD CONTROL WHEEL	78
NAMEPLATES & EXTERIOR MARKINGS	2	PAINT-SEE FINISH & TRIM PLATE	SEE PAGE III
NAV LIGHT DETECTOR	3	PAINTED PARTS-HOW TO ORDER	SEE PAGE VII
NAV LIGHT SWITCH	58A	PANEL BAGGAGE COMPARTMENT	51
NAVOMATIC AUTO PILOT-SEE ELECTRONICS MANUAL		PANEL EQUIPMENT INSTRUMENT	58
NET BAGGAGE	51	PANEL EQUIPMENT INSTRUMENT	58A
NOISE FILTER	96	PANEL LIGHT INSTRUMENT	97
NOSE CAP	65	PANEL REMOVABLE	58
NOSE CAP	66	PANEL SHOCK	58
NOSE CAP	67	PANEL SOUNDPROOFING	52
NOSE GEAR	37	PANEL SOUNDPROOFING	52A
NOSE GEAR FITTING	23	PANEL STATIONARY	58
NOSE GEAR SHOCK STRUT PLACARD	2	PANEL STATIONARY	58A
NOSE GEAR STEERING ARM	38	PANEL UPHOLSTERY	45
NOSE GEAR UPPER FITTING	23	PANEL UPHOLSTERY	46
NOSE GEAR WHEEL	39	PARKING BRAKE	75
NOSE GEAR WHEEL	40	PARKING BRAKE HANDLE	75
NOSECAP	65	PAWL SEAT BACK	53
NOZZLE DEFROSTER	74	PAWL SEAT BACK	56
NUMERICAL INDEX-SEE LAST SECTION IN CATALOG		PEDAL BRAKE	76
O		PEDAL BRAKE & RUDDER	76
OIL COOLER	68	PEDAL RUDDER	76
OIL FILTER	86	PEDESTAL	54
OIL FILTER ADAPTER	86	PILOT & CO PILOT SEAT	53
OIL FILTER PLACARD	2	PILOT SEAT	53

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
P (Cont)			
PORTABLE STRETCHER			62
POSITION TRANSMITTER FLAP	82		
POST LIGHT	58B		
POST LIGHT BULB	58B		
POST LIGHTED INSTRUMENT PANEL COVERS	58B		
POWER SUPPLY STROBE LIGHT	96		
PRESSURE PLATE	43		
PRESSURE PLATE	44		
PRIMER	1		
PRIMER FUEL	90		
PRIMER LINE	87		
PRIMER THREE CYLINDER FUEL	90		
PRIMER ZINC CHROMATE	1		
PROPELLER	64		
PROVISIONS HOISTING	93		
PULLEYS-SEE APPLICABLE SYSTEM			
PUMP FUEL	69		
PUMP VACUUM	69		
PUMP VACUUM	91		
R			
RADIO COVER	58		
RADIO COVER	58A		
RADIO SHELF	32		
RADIOS-SEE CESSNA ELECTRONICS MANUAL			
REAR ARM REST SUPPORT	32		
REAR DOORPOST BULKHEAD	29		
REAR SEAT	55		
REAR SEAT	56		
REAR SEAT BACK	55		
REAR SEAT BOTTOM	55		
REAR SPAR	18		
REAR VIEW MIRROR	60		
REAR WINDOW	32		
REAR WINDOW MOULDING	50		
REAR WINDOW RETAINER	32		
REAR WINDOW SEALER	32		
RECEPTACLE GROUND SERVICE PLUG	104		
RECLINING ADJUSTMENT HANDLE	53		
REFLECTOR	97		
REGULATOR VOLTAGE	69		
REGULATOR VOLTAGE	96		
RELAY SPLIT BUS BAR	96		
RELIEF VALVE	91		
RELIEF VALVE FILTER	91		
REMOVABLE PANEL	58		
RESISTOR	58		
RESISTOR	58A		
RESISTOR	101		
RETAINER HEADLINER	50		
RETAINER REAR WINDOW	32		
RETAINER WINDOW	46		
RETAINER WINDSHIELD	24		
RETAINER WINDSHIELD TOP	22		
RETAINER WINDSHIELD TOP	31		
RIBS-SEE APPLICABLE STRUCTURE			
RIGHT WING STRUCTURE	5		
RIGHT WING STRUCTURE	6		
RING MOORING	15		
RING TRUE AIRSPEED	58		
RIVET SET KIT	44		
ROD AILERON PUSH PULL	13		
ROD AILERON PUSH PULL	79		
ROD FLAP PUSH	14		
ROD FLAP PUSH PULL	14		
R (Cont)			
ROLLER FLAP ATTACHMENT	14		
ROTARY CLUTCH	32		
RUDDER	17		
RUDDER	94		
RUDDER BAR SHIELD	51		
RUDDER CONTROL SYSTEM	83		
RUDDER CONTROL SYSTEM	83A		
RUDDER LIGHT	17		
RUDDER PEDAL	76		
RUDDER TIP	17		
RUDDER WEIGHT	17		
S			
SAFETY BELT-ALSO SEE SEAT BELTS			
SCOOP AIR	7		
SCOOP AIR	65		
SCOOP AIR	66		
SCOOP AIR	67		
SCRAPER FAIRING	42		
SCUFF PLATE	49		
SEAL BAFFLE	71		
SEAL CARBURETOR AIR FILTER	68		
SEAL FELT GREASE	39		
SEAL FELT GREASE	40		
SEAL FELT GREASE	44		
SEAL WINDOW	32		
SEAL WINDOW	45		
SEAL WINDOW	47		
SEALANT	1		
SEALER REAR WINDOW	32		
SEAT AUXILIARY	57		
SEAT BACK CAM	55		
SEAT BACK COVERS-SEE APPLICABLE SEAT			
SEAT BACK CUSHION-SEE APPLICABLE SEAT			
SEAT BACK PAWL	53		
SEAT BACK PAWL	56		
SEAT BACK-SEE INDIVIDUAL SEAT			
SEAT BELT	61		
SEAT BELT FITTING	61		
SEAT BELT REAR	61		
SEAT BOTTOM-SEE INDIVIDUAL SEAT			
SEAT CHILDS	57		
SEAT FRONT	54		
SEAT PILOT	53		
SEAT PILOT & CO PILOT	53		
SEAT REAR	55		
SEAT REAR	56		
SEAT ROLLER KIT	53		
SEAT STOP	53		
SEAT STOP	54		
SEAT STOP-SEE INDIVIDUAL SEAT INSTALLATION			
SENSOR OVERVOLTAGE	96		
SERVICE PLUG GROUND	104		
SET KIT RIVET	44		
SHAFT FUEL SELECTOR	87		
SHAFT TACHOMETER	68		
SHAFT TACHOMETER DRIVE	58		
SHAFT TACHOMETER DRIVE	58A		
SHELF RADIO	32		
SHIELD COURTESY LIGHT	100		
SHIMMY DAMPENER	41		
SHOCK MOUNT	27		
SHOCK MOUNT KIT	68		
SHOCK PANEL	58		
SHOCK PANEL	58A		

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
S (Cont)			S (Cont)
SHOCK PANEL COVER	58	STRAP BATTERY GROUND	96
SHOCK PANEL COVER	58A	STRAP BONDING	63A
SHOCK STRUT LOWER	38	STRAP FUEL TANK	5
SHOCK STRUT NOSE GEAR	38	STRAP FUEL TANK	6
SHOULDER HARNESS	61	STRAP FUEL TANK	10
SHROUD	68	STRAP FUEL TANK	11
SHROUD	70	STRAP GROUND	10
SHROUD	74	STRAP GROUND	11
SIDE AIR VENT DOOR	73	STRAP GROUND	58
SIDE WINDOW	32	STRAP GROUND	58A
SILENCER ESCUTCHEON	73	STRETCHER PORTABLE	62
SILENCER FRESH AIR	73	STRIKE PLATE	32
SILENCER FRESH AIR VENT	73	STRIKER PLATE	45
SILENCER KNOB	73	STROBE LIGHT	3
SILL DOOR	22	STROBE LIGHT SWITCH	58A
SKINS & STRINGERS	9	STRUT	15
SKINS-SEE APPLICABLE STRUCTURE		STRUT FITTING	8
SKYLIGHT WINDOW	22	STRUT FITTING	15
SLIDE CARGO TIE DOWN	60	STRUT LOWER SHOCK	38
SOUND DEADENER	1	STRUT NOSE GEAR SHOCK	38
SOUNDPROOFING FUSELAGE	52	STRUT STEP	63
SOUNDPROOFING FUSELAGE	52A	SUCTION GAGE	58
SOUNDPROOFING PANEL	52	SUCTION GAGE	58A
SOUNDPROOFING PANEL	52A	SUN VISOR	91
SPACER AXLE	37	SWITCH COVER	60
SPACER AXLE NOSE WHEEL	37	SWITCH COVER	58
SPACER FUEL TANK	8	SWITCH DOME LIGHT	97
SPAR CENTER SECTION	29	SWITCH FLAP	58
SPAR FRONT	18	SWITCH FLAP	82
SPAR REAR	18	SWITCH MASTER	58
SPAR WING	8	SWITCH MASTER	58A
SPAR WING REAR	8	SWITCH MIKE	78
SPARK PLUG	69	SWITCH NAV LIGHT	58A
SPEAKER COVER	50	SWITCH OIL PRESSURE	68
SPEAKER-RADIO-SEE CESSNA ELECTRONICS MANUAL		SWITCH PANEL COVER	58
SPEED FAIRING	37	SWITCH PITOT HEAT	58
SPEED FAIRING NOSE GEAR	37	SWITCH PITOT HEAT	58A
SPINNER	64	SWITCH STROBE LIGHT	58A
SPLIT BUS BAR RELAY	96	SWITCHES-SEE INSTRUMENT PANEL	
STABILIZER	18	SYSTEMS-SEE INDIVIDUAL LISTINGS	
STABILIZER HINGE	18		
STABILIZER MOULDING	18		
STABILIZER TIP	18		
STAINLESS STEEL CABLES-SEE SPECIFIC SYSTEM			
STALL WARNING HORN	85		
STARTER	69		
STARTER CONTACTOR	96		
STARTER CONTACTOR CABLE	96		
STATIC DISCHARGER	63A		
STATIC SOURCE	84		
STATIC SOURCE BUTTON	23		
STATIONARY PANEL	58		
STATIONARY PANEL	58A		
STEERING BOOT	23		
STEP	42		
STEP	63		
STEP & HANDLE REFUELING	63		
STEP STRUT	63		
STOP BAGGAGE DOOR	32		
STOP SEAT	53		
STOP SEAT	54		
STRAINER DRAIN CONTROL	88		
STRAINER DRAIN LINE	87		
STRAINER FUEL	88		
STRAINER FUEL TANK	87		
STRAP ASSIST	45		
STRAP ASSIST	46		
STRAP ASSIST	47		

T

TAB CONTROL CHAIN	81
TAB CONTROL WHEEL	81
TAB ELEVATOR TRIM	20
TAB RUDDER TRIM	17
TAB WHEEL CABLE	81
TACHOMETER	58
TACHOMETER	58A
TACHOMETER DRIVE SHAFT	58
TACHOMETER DRIVE SHAFT	58A
TACHOMETER SHAFT	68
TAIL LIGHT LAMP	17
TAILCONE FAIRING	35
TAILCONE FUSELAGE	35
TANK DRAIN VALVE FUEL	12
TANK FUEL	4
TANK FUEL	10
TANK FUEL	11
TANK FUEL	12
THROTTLE CONTROL	58
THROTTLE CONTROL	58A

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
T (Cont)			V (Cont)
THROTTLE CONTROL	68	VACUUM PUMP	91
TIARA	50	VACUUM SYSTEM	91
TIP ELEVATOR	20	VALVE EXTENSION	37
TIP FIN	101	VALVE EXTENSION	42
TIP RUDDER	17	VALVE FLUSH	12
TIP STABILIZER	18	VALVE FUEL	10
TIP VERTICAL FIN	16	VALVE FUEL	11
TIP WING	5	VALVE FUEL SELECTOR	89
TIP WING	6	VALVE FUEL TANK VENT	10
TIRE	39	VALVE FUEL TANK VENT	11
TIRE	40	VALVE OIL QUICK DRAIN	68
TIRE	43	VALVE RELIEF	91
TIRE	44	VALVE WARM AIR	74
TOP CABIN	22	VENT AIR	73
TOP FUEL STRAINER	88	VENT GRILL	50
TORQUE LINK LOWER	38	VENT LINE	10
TORQUE LINK UPPER	38	VENT LINE	11
TORQUE TUBE BELLCRANK	54	VENT LINE	87
TORQUE TUBE ELEVATOR	20	VENTILATION SYSTEM CABIN	73
TOW BAR	60	VERTICAL FIN TIP	16
TOW HOOK CORD	60	VERTICAL SPEED INDICATOR	58
TOW HOOK GLIDER	60	VERTICAL SPEED INDICATOR	58A
TRANSISTORIZED LIGHT DIMMING	96	VERTICAL SPEED INDICATOR	84
TRANSMITTER FLAP POSITION	82	VIEW MIRROR REAR	60
TRANSMITTER FUEL GAGE	10	VISOR SUN	60
TRANSMITTER FUEL GAGE	11	VOLTAGE REGULATOR	69
TRIM CONTROL ELEVATOR	81	VOLTAGE REGULATOR	96
TRIM CONTROL SYSTEM ELEVATOR	81		
TRIM TAB ACTUATOR ELEVATOR	19		
TRIM TAB ELEVATOR	19		
TRIM TAB ELEVATOR	20		
TRIM TAB HORN	20		
TRIM TAB Rudder	17		
TRUE AIRSPEED INDICATOR	58		
TRUE AIRSPEED INDICATOR	58A		
TRUE AIRSPEED RING	58		
TUBE CONTROL	78		
TUBE ELEVATOR TORQUE	20		
TUBE PITOT	7		
TUBE PITOT	84		
TUBE POLYETHYLENE	1		
TUBE POLYETHYLENE	84		
TUBE SHOCK STRUT	38		
TUNNEL CARPET	51		
TUNNEL COMPONENTS FRONT SECTION	25		
TURN & BANK INDICATOR	58		
TURN & BANK INDICATOR	58A		
TURN COORDINATOR INDICATOR	58		
TURN COORDINATOR INDICATOR	58A		
TWIN PACK BEVERAGE	60		
U			W
UNIVERSAL JOINT	78	WARM AIR VALVE	74
UPHOLSTERY CABIN	51	WARNING HORN STALL	85
UPHOLSTERY CABIN TOP	50	WEIGHT AILERON BALANCE	13
UPHOLSTERY CABIN TOP & FIREWALL	50	WEIGHT ELEVATOR BALANCE	20
UPHOLSTERY PANEL	45	WEIGHT RUDDER	17
UPHOLSTERY PANEL	46	WHEEL & BRAKE	43
UPHOLSTERY PANEL	47	WHEEL & BRAKE	44
		WHEEL & BRAKE MAIN LANDING GEAR	43
		WHEEL & BRAKE MAIN LANDING GEAR	44
		WHEEL CONTROL	78
		WHEEL FAIRING	42
		WHEEL MAIN GEAR	43
		WHEEL MAIN GEAR	44
		WHEEL NOSE GEAR	39
		WHEEL NOSE GEAR	40
		WHEEL TAB CONTROL	81
		WINDOW	45
		WINDOW	47
		WINDOW GLASS	45
		WINDOW GLASS	46
		WINDOW GLASS	47
		WINDOW HANDLE	45
		WINDOW HANDLE	47
		WINDOW HINGE	45
		WINDOW HINGE	47
		WINDOW MOULDING	50
		WINDOW REAR	32
		WINDOW SEAL	32
		WINDOW SEAL	45
		WINDOW SEAL	47
		WINDOW SIDE	32
		WINDOW SKYLIGHT	22
		WINDSHIELD	31
		WINDSHIELD RETAINER	24
		WINDSHIELD TOP RETAINER	22
		WINDSHIELD TOP RETAINER	31
V			
VACUUM PUMP	69		

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
W (Cont)			
WING COMPLETE			3
WING FAIRING			3
WING FILLET			21
WING POSITION LIGHT BULB			3
WING REAR SPAR			8
WING SPAR			8
WING TIP			5
WING TIP			6
WINTERIZATION EQUIPMENT			72
WINTERIZATION PLACARD			2
WINTERIZATION PLACARD			58
WINTERIZATION PLACARD			72
Y			
YOKE CONTROL			78

This page intentionally left blank.



Cessna

illustrated parts catalog

MODEL 172 & F172




















PARTS LISTING

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 - - 1	C1-C2	MISCELLANEOUS BULK ITEMS ----- CONLEY-WELD EPOXY BASE ADHESIVE.	CEMENTING ----- PLASTIC TO PLASTIC PLASTIC TO METAL FIBERGLASS TO FIBERGLASS FIBERGLASS TO METAL METAL TO METAL	AR	
- 2	EC880	ADHESIVE-SYNTHETIC RUBBER BASE OIL RESISTANT	CEMENTING ----- RUBBER TO METAL SOUNDPROOFING TO METAL UPHOLSTERY TO METAL		
- 3	1024A-B	CEMENT PARTS A & B	CEMENTING DE-ICER ----- AND ABRASION BOOTS TO WING AND STAB ILIZER LEADING EDGES.		
- 4	1007	PRIMER	USED ONLY FOR PRIMING ----- AREAS WHERE DE-ICER AND ABRASION BOOTS ARE TO BE INSTALLED WITH 1024A-B.		
- 5	576.1	SEALANT-EXTRUDED PERMAGUM	WEATHER SEALING ----- OF METAL LAP JOINTS		
- 6	579.6	SEALANT-EXTRUDED ZINC CHROMATE	WEATHER SEALING ----- OF WINDOWS		
- 7	S1078-1	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .06 THICK .50 WIDE	WINDSHIELD SEALING -----		
- 8	S1078-2	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .12 THICK .50 WIDE	WINDSHIELD SEALING -----		
- 9	S1078-3	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED 2 MIL MYLAR TAPE BACKING. .06 THICK 1.50 WIDE	WINDSHIELD SEALING -----		
-10	EC1239A-B	SEALANT-CATALYTIC	GENERAL PURPOSE ----- FOR FAYING SURFACES FILLET & RIVET SEALS FUEL SEALING AND AREAS WHERE SKYDROL IS PRESENT		
-11	700	SEALANT-FIREWALL	SEALING FIREWALL JOINTS ----- AND OPENINGS. WITHSTANDS 2000 DEGREE TEMP FOR 5 MINUTES.		
-12	EC776	ADHESIVE-GASKET FUEL RESISTANT SYNTHETIC RUBBER BASE.	CEMENTING GASKETS -----		
-13	550	SOUND DEADENER- LIQUID VIBRATION DAMPENER	VIBRATION DAMPENING ----- CAN BE BRUSHED OR SPRAYED.		
-14	MX25A	PRIMER-ZINC CHROMATE- YELLOW	CORROSION PROOFING -----		
-14A	LOCTITE 5381	EPOXY MIXER CUP	URETHANE TO URETHANE ----- URETHANE TO METAL POLYCARBONATE TO METAL ABS TO METAL		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
1 - 14B	EC2216B/A	ADHESIVE PARTS A & B		METAL TO METAL -----					
-14C	LOCTITE 8721	LOCKING & RETAINING COMPOUND		METAL TO METAL -----					
-15	S51-4 S51-6 S51-8 S51-10 S51-12 S51-14 S51-16 S51-18 S51-20 S51-22 S51-24 S51-26 S51-28 S51-30 S51-32	HOSE-FUEL & OIL-1/4 ID HOSE-FUEL & OIL-3/8 ID HOSE-FUEL & OIL-1/2 ID HOSE-FUEL & OIL-5/8 ID HOSE-FUEL & OIL-3/4 ID HOSE-FUEL & OIL-1.00 ID HOSE-FUEL & OIL-2.00 ID	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR
-16	S202R8 S202VW	CHANNEL-EXTRUDED BLACK CHANNEL-EXTRUDED WHITE		AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----					AR
-17	S292-1 S292-2 S292-3 S292-4 S292-5 S292-6 S292-8 S292-11 S292-12 S292-14 S292-16 S292-28	INSULATION SLEEVING-ELEC-.118 ID INSULATION SLEEVING-ELEC-.133 ID INSULATION SLEEVING-ELEC-.148 ID INSULATION SLEEVING-ELEC-.166 ID INSULATION SLEEVING-ELEC-.186 ID INSULATION SLEEVING-ELEC-.208 ID INSULATION SLEEVING-ELEC-.263 ID INSULATION SLEEVING-ELEC-5/16 ID INSULATION SLEEVING-ELEC-3/8 ID INSULATION SLEEVING-ELEC-1/2 ID INSULATION SLEEVING-ELEC-3/4 ID	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR
-18	S1026BG	CLAMP-WRAP TYPE		AVAILABLE IN 100 FOOT ROLL -----					AR
-19	S1053E7T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED	7/8 DIA -----						AR
	S1053E8T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-NEOPRENE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 1.00 DIA -----						AR
	S1053E10T S1053K10T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 1-1/4 DIA -----						AR
	S1053E12T S1053K12T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 1-1 1/2 DIA -----						AR
	S1053E20T S1053K20T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 2-1/2 DIA -----						AR
	S1053E24T S1053K24T S1053K24W	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 2-1/2 DIA ----- 2 PLY 3.00 DIA -----						AR
	S1053E28T S1053K28W	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 3-1/2 DIA ----- 2 PLY 3-1/2 DIA ---						AR
	S1053E32T S1053K32T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED DUCT-FLEXIBLE-SILICONE IMPREGNATED	AVAILABLE IN 10 FOOT LENGTHS ONLY 4.00 DIA -----						AR
	S1047-1 S1047-2	SEAL-SPONGE RUBBER-1/4 THICK SEAL-SPONGE RUBBER-5/16 THICK	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR
-21	S1055-1	CHANNEL-EXTRUDED RUBBER	AVAILABLE BY THE FOOT -----						AR
-22	S1071-1 S1071-3 S1071-4 S1071-5	TUBE-POLYETHYLENE-1/4 DIA TUBE-POLYETHYLENE-3/8 DIA TUBE-POLYETHYLENE-1/2 DIA TUBE-POLYETHYLENE-5/8 DIA	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR
-23	S1084-1	SEAL-EXTRUDED RUBBER	AVAILABLE BY THE FOOT -----						AR
-24	S1110ET	DUCT-OVAL-FLEXIBLE-NEOPRENE IMPREGNATED	AVAILABLE IN 10 FT LENGTHS ONLY						AR
-25	S1346-1	SEAL-SPONGE RUBBER	AVAILABLE IN 12 FT LENGTHS ONLY -----						AR
-26	S1366-1 S1366-2 S1366-3	MOULDING-EXTRUDED PLASTIC-SAND MOULDING-EXTRUDED PLASTIC-FAWN	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR
-27	S1378-1 S1378-2	MOULDING-EXTRUDED PLASTIC-BLACK SEAL-SPONGE RUBBER-BEIGE	AVAILABLE BY THE FOOT ----- AVAILABLE IN 7 FT LENGTHS ONLY -----						AR
-28	S1389-1 S1389-2 S1389-3 S1389-4 S1389-5 S1389-6 S1389-7	SEALER STRIP-FELT-1.00 WIDE SEALER STRIP-FELT-1-1/2 WIDE SEALER STRIP-FELT-2.00 WIDE SEALER STRIP-FELT-1-3/4 WIDE SEALER STRIP-FELT-1-1/4 WIDE SEALER STRIP-FELT-2-1/4 WIDE SEALER STRIP-FELT-1-3/8 WIDE	AVAILABLE BY THE FOOT ----- AVAILABLE BY THE FOOT -----						AR

CONTINUED ON NEXT PAGE

Bulk Items (Cont)

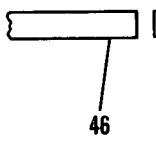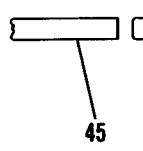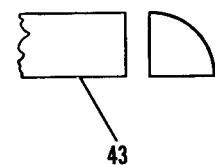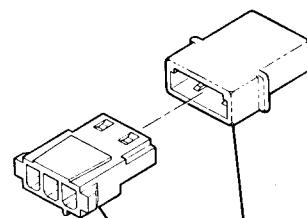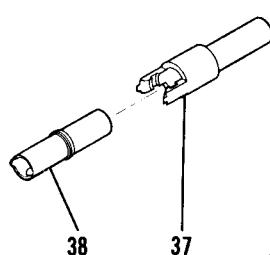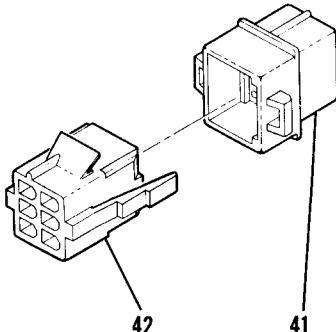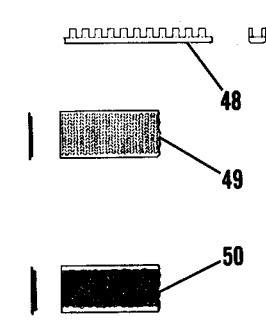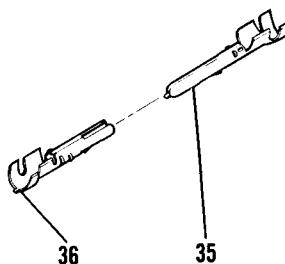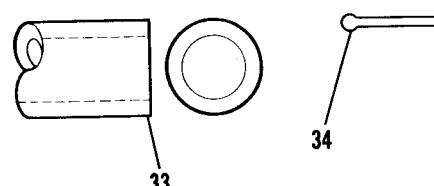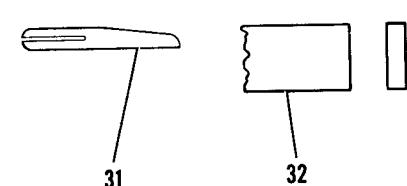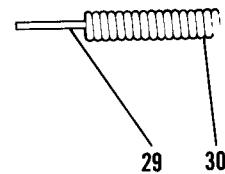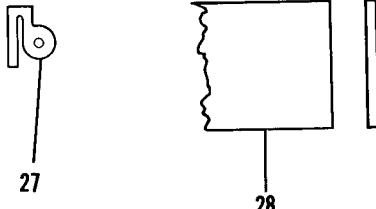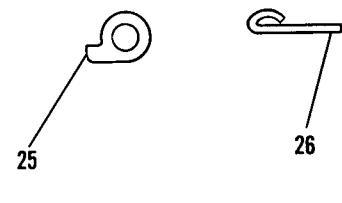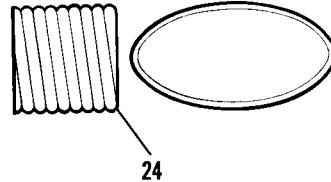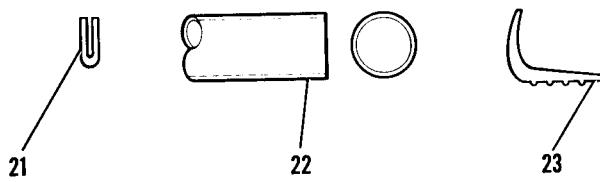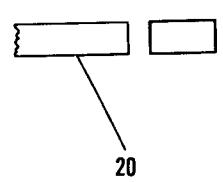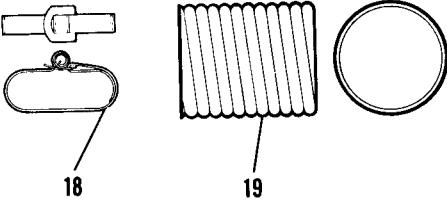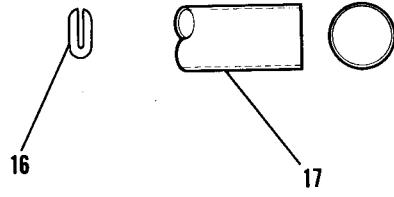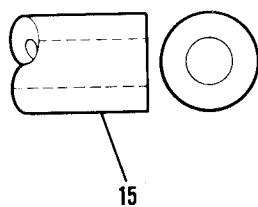

47
— RETURN - SEE —
TEXT *.

Figure 1. Miscellaneous Bulk Items

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
1 -29	S1398-1	CONTROL-PUSH PULL-WIRE	AR						
-30	S1398-2	CONTROL-PUSH PULL-CASING	AR						
-31	S1415-1	MOULDING-EXTRUDED VINYL	AR						
-32	S1441-1	SEAL-SPONGE RUBBER-3/8 WIDE	AR						
	S1441-2	SEAL-SPONGE RUBBER-1/4 WIDE	AR						
	S1441-3	SEAL-SPONGE RUBBER-1/2 WIDE	AR						
-33	S1495-4	HOSE-RUBBER-1/4 ID	AR						
	S1495-6	HOSE-RUBBER-3/8 ID	AR						
	S1495-8	HOSE-RUBBER-1/2 ID	AR						
	S1495-10	HOSE-RUBBER-5/8 ID	AR						
-34	S1611-1	SEAL-EXTRUDED VINYL	AR						
-35	S1635-1	ELECTRICAL PIN	AR						
	S1635-2	ELECTRICAL PIN	AR						
	S1635-3	ELECTRICAL PIN	AR						
-36	S1636-1	ELECTRICAL SOCKET	AR						
	S1636-2	ELECTRICAL SOCKET	AR						
	S1636-3	ELECTRICAL SOCKET	AR						
-37	S1637-1	HOUSING-ELECTRICAL PIN	AR						
-38	S1637-2	HOUSING-ELECTRICAL SOCKET	AR						
-39	S1638-1	HOUSING-ELECTRICAL SOCKET-3 CIRCUIT	AR						
-40	S1638-2	HOUSING-ELECTRICAL PIN-3 CIRCUIT	AR						
-41	S1640-6	HOUSING-ELECTRICAL PIN-6 CAVITY	AR						
	S1640-9	HOUSING-ELECTRICAL PIN-9 CAVITY	AR						
	S1640-12	HOUSING-ELECTRICAL PIN-12 CAVITY	AR						
	S1640-15	HOUSING-ELECTRICAL PIN-15 CAVITY	AR						
-42	S1641-6	HOUSING-ELECTRICAL SOCKET-6 CAVITY	AR						
	S1641-9	HOUSING-ELECTRICAL SOCKET-9 CAVITY	AR						
	S1641-12	HOUSING-ELECTRICAL SOCKET-12 CAVITY	AR						
	S1641-15	HOUSING-ELECTRICAL SOCKET-15 CAVITY	AR						
-43	S1116-1	SEAL-NEOPRENE	AR						
-44	S1356	SEAL-EXTRUDED RUBBER	AR						
-45	S1614	LACING-KOROSEAL	AR						
-46	3690-1/8	FILM-BLACK VINYL-1/8 IN WIDE	AR						
	3690-1/4	FILM-BLACK VINYL-1/4 IN WIDE	AR						
	3690-1/2	FILM-BLACK VINYL-1/2 IN WIDE	AR						
-47	S1948-2-1	*	TRIM-EXTRUDED CLOUD GRAY	AR					
	S1948-2-2	*	TRIM-EXTRUDED EBONY	AR					
	S1948-2-3	*	TRIM-EXTRUDED SILVER TEAL BLUE	AR					
	S1948-2-4	*	TRIM-EXTRUDED MARIGOLD	AR					
	S1948-2-5	*	TRIM-EXTRUDED SUN GOLD	AR					
	S1948-2-6	*	TRIM-EXTRUDED LIGHT OLIVE	AR					
	S1948-2-7	*	TRIM-EXTRUDED CLOVE BROWN	AR					
	S1948-2-8	*	TRIM-EXTRUDED HOLIDAY BLUE	AR					
	S1948-2-9	*	TRIM-EXTRUDED FIESTA RED	AR					
	S1948-2-10	*	TRIM-EXTRUDED PICNIC GREEN	AR					
	S1948-2-11	*	TRIM-EXTRUDED BOGOTA BLUE	AR					
	S1948-2-12	*	TRIM-EXTRUDED TAHITIAN RED	AR					
	S1948-2-13	*	TRIM-EXTRUDED CYPRUS GREEN	AR					
	S1948-2-14	*	TRIM-EXTRUDED PEACOCK BLUE	AR					
	S1948-2-15	*	TRIM-EXTRUDED POPPY RED	AR					
	S1948-2-16	*	TRIM-EXTRUDED GOLDEN OLIVE & OLIVE GREEN	AR					
			AVAILABLE BY THE FOOT						
	S1948-2-17	*	TRIM-EXTRUDED SUNSET RED	AR					
	S1948-2-18	*	TRIM-EXTRUDED COPEX BLUE	AR					
	S1948-2-19	*	TRIM-EXTRUDED CHESTNUT BROWN	AR					
	S1948-2-20	*	TRIM-EXTRUDED OLD GOLD	AR					
-48	S1050-1	GROMMET-CATERPILLAR	AR						
	S1050-2	GROMMET-CATERPILLAR	AR						
	S1050-3	GROMMET-CATERPILLAR	AR						
-49	S2092-1	FABRIC FASTENER-HOOK	AR						
	S2092-3	FABRIC FASTENER-HOOK	AR						
	S2092-31	FABRIC FASTENER-HOOK	AR						
		RIGID VINYL BACKED							
		AVAILABLE BY THE FOOT							
-50	S2092-2	FABRIC FASTENER-PILE	AR						
	S2092-4	FABRIC FASTENER-PILE	AR						
	S2092-30	FABRIC FASTENER-PILE	AR						
		RIGID VINYL BACKED							
		AVAILABLE BY THE FOOT							

NOTE. *PART NUMBER LISTED IN TEXT HAS A
1/2 INCH RETURN. FOR A 7/8 INCH RETURN
CHANGE FIRST DASH NUMBER TO -1.
EXAMPLE-S1948-1-4.

Placards

**A B C D E F G H I J K L M N
O P Q R S T U V W X Y Z
- 1 2 3 4 5 6 7 8 9 0**

**A B C D E F G H I J K L M N
O P Q R S T U V W X Y Z
- 1 2 3 4 5 6 7 8 9 0**

**A B C D E F G H I J K L M N
O P Q R S T U V W X Y Z
- 1 2 3 4 5 6 7 8 9 0**

Figure 2. (Sheet 1 of 4) Placards, Nameplates & Exterior Markings

Placards (Cont)

S1500 TYPE STENCILS *

FOR SLANT GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 10 INCH AND 12 INCH HEIGHTS IN EITHER LEFT HAND OR RIGHT HAND SLANT.

LETTERS AVAILABLE ARE A THRU Z.
NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL AND THE DESIGNATOR L OR R TO INDICATE LEFT OR RIGHT HAND SLANT.

EXAMPLE:

BASIC PART NO.	S1500 - 10 - M L	
		DIRECTION OF SLANT
		LETTER WANTED
	HEIGHT WANTED	

S1600 TYPE STENCILS *

FOR VERTICAL GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 6 INCH, 12 INCH AND 20 INCH HEIGHTS. LETTERS AVAILABLE ARE A THRU Z.
NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL WANTED.

EXAMPLE:

BASIC PART NO.	S1600 - 20 - N	
		LETTER WANTED
		HEIGHT WANTED

* EACH STENCIL PROVIDES FOR EITHER
BACKGROUND OR CENTER MASK.

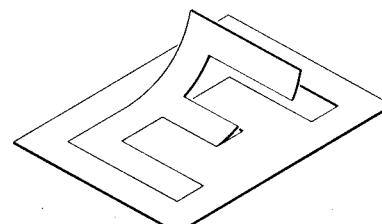


Figure 2. (Sheet 2 of 4) Placards, Nameplates & Exterior Markings

Placards (Cont)


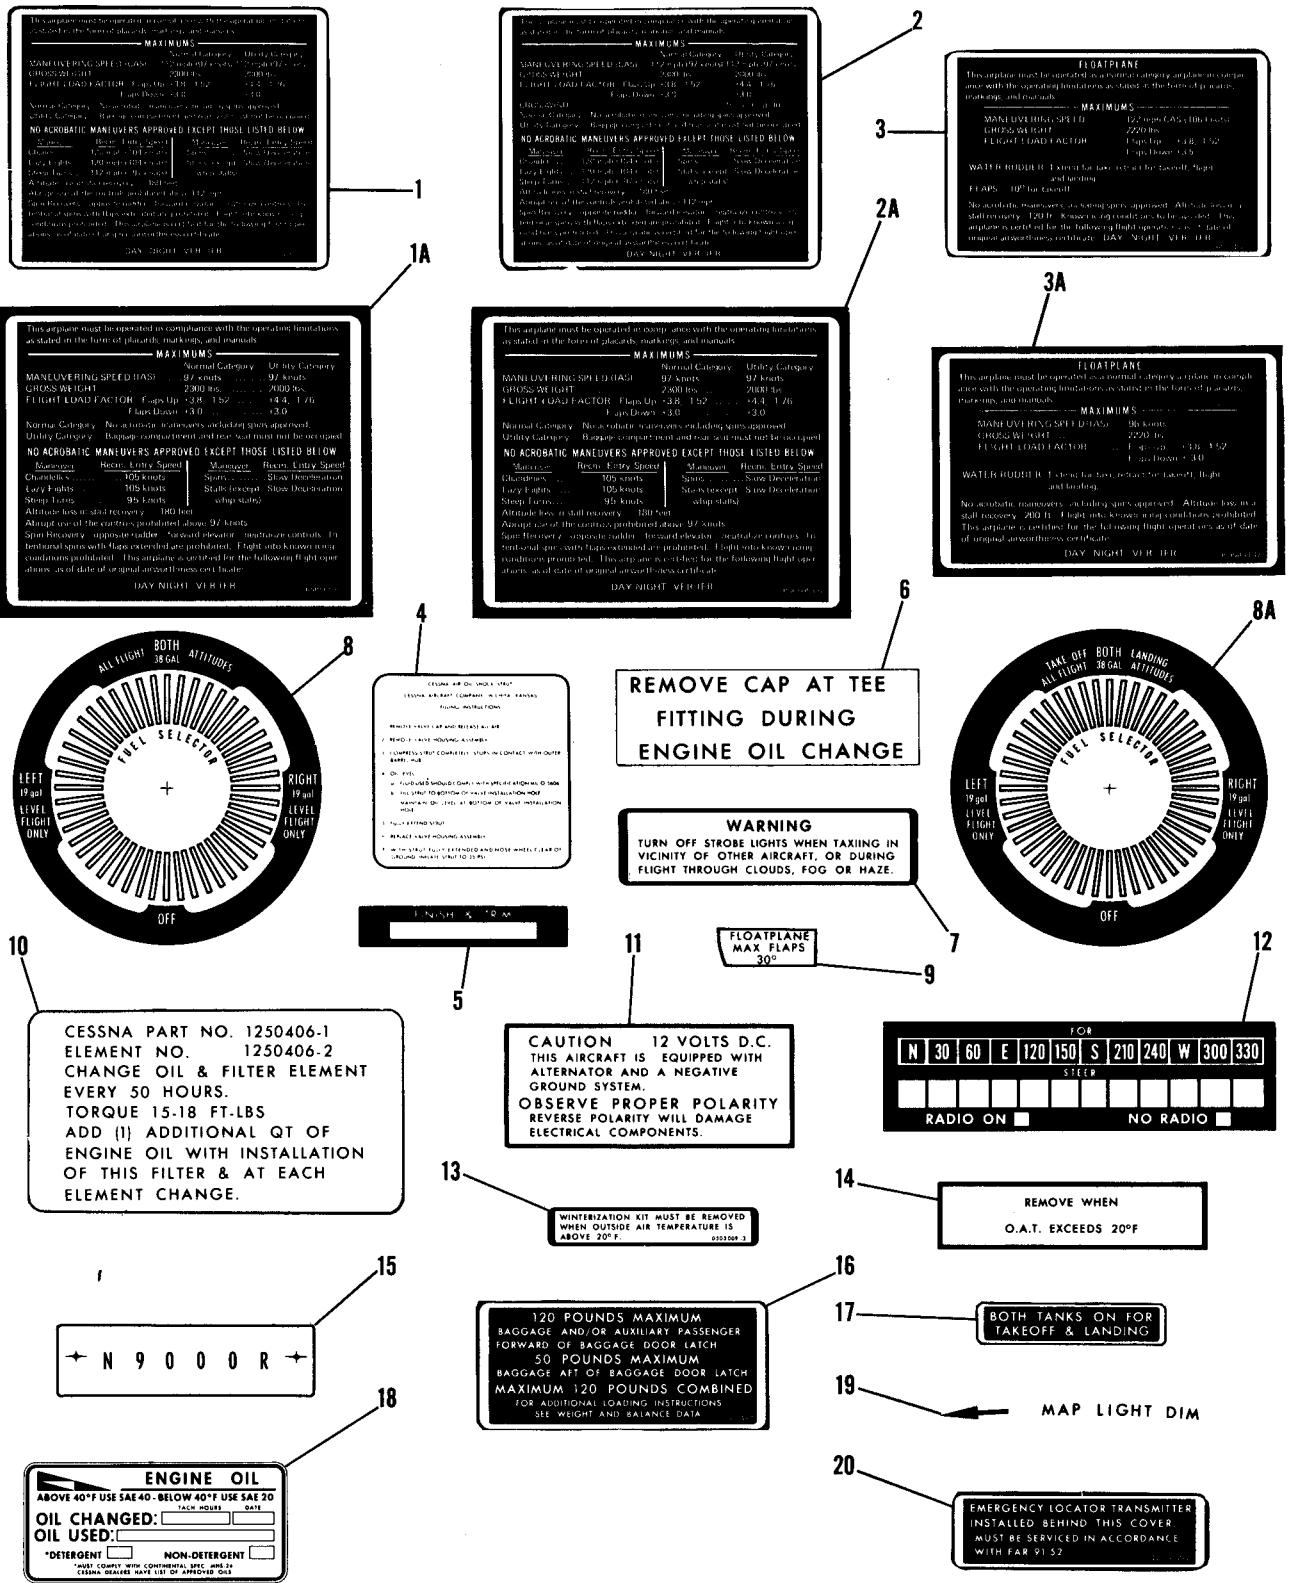



Figure 2. (Sheet 3 of 4) Placards, Nameplates & Exterior Markings

Placards (Cont)


29

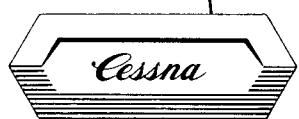


30

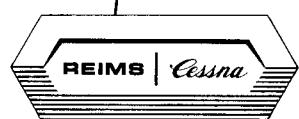


31

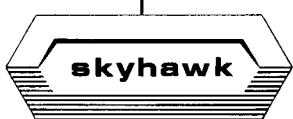

32

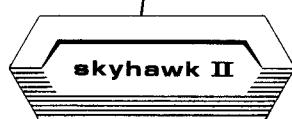

21

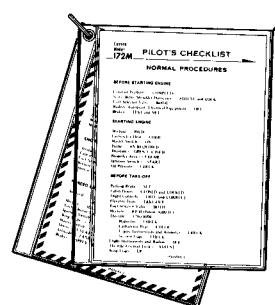

27



28



24



25



22




23



REMOVE OIL COOLER COVER PLATE
FROM AFT BAFFLE WHEN O.A.T.
EXCEEDS 20° F
0552154-1

26

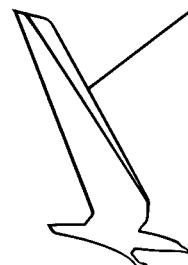

33

REIMS/CESSNA

34

cessna

36

172

skyhawk

skyhawk II

F 172 skyhawk

F 172 skyhawk II

reims/cessna

cessna

Skyhawk

42

Skyhawk II

45

F172 Skyhawk

41

F172 Skyhawk II

43

44

Figure 2. (Sheet 4 of 4) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE				
			1	2	3	4	5	6
2 - - 1	1205001-127	PLACARDS, NAMEPLATES & EXTERIOR MARKINGS -----	NP					
	1205001-128	PLACARD-OPERATIONAL LIMITATIONS 172 & SKYHAWKS ----- DAY-NIGHT-VFR-IFR	1	A				
	1205001-147	PLACARD-OPERATIONAL LIMITATIONS 172 & SKYHAWKS ----- DAY-NIGHT-VFR	1	A				
- 1A	0505053-3	PLACARD-OPERATIONAL LIMITATIONS SKYHAWKS ----- DAY-NIGHT-VFR-IFR	1	B				
	0505053-2	PLACARD-OPERATIONAL LIMITATIONS SKYHAWKS ----- DAY-NIGHT-VFR	1	B				
	0505053-1	PLACARD-OPERATIONAL LIMITATIONS SKYHAWKS ----- DAY-VFR	1	B				
- 2	1205001-129	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR-IFR ENGLISH	1	A				
	1205001-131	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR-IFR FRENCH	1	A				
	1205001-130	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR ENGLISH	1	A				
	1205001-132	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR FRENCH	1	A				
	1205001-148	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-VFR ENGLISH	1	A				
	1205001-149	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-VFR FRENCH	1	A				
- 2A	0505053-6	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR-IFR ENGLISH	1	B				
	0505053-9	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR-IFR FRENCH	1	B				
	0505053-5	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR ENGLISH	1	B				
	0505053-8	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-NIGHT-VFR FRENCH	1	B				
	0505053-4	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-VFR ENGLISH	1	B				
	0505053-7	PLACARD-OPERATIONAL LIMITATIONS F172 ----- DAY-VFR FRENCH	1	B				
- 3	1205001-133	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-NIGHT-VFR-IFR	1	A				
	1205001-134	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-NIGHT-VFR	1	A				
	1205001-156	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-VFR	1	A				
- 3A	0505053-18	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-NIGHT-VFR-IFR	1	B				
	0505053-17	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-NIGHT-VFR	1	B				
	0505053-16	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE ----- DAY-VFR	1	B				
- 4	0543032-2	PLACARD-NOSE GEAR SHOCK STRUT -----	1					
- 5	0713047	PLACARD-FINISH & TRIM -----	1					
- 6	0505011-1	PLACARD-ENGINE OIL -----	1					
- 7	C622003-0105	PLACARD-STROBE LIGHT -----	1					
- 8	0705048-2	PLACARD-FUEL SELECTOR 19 GAL -----	1					
	0705048-3	PLACARD-FUEL SELECTOR 24 GAL LONG RANGE WING -----	1	A				
- 8A	0705048-17	PLACARD-FUEL SELECTOR 19 GAL -----	1	B				
	0705048-18	PLACARD-FUEL SELECTOR 24 GAL -----	1	B				
- 9	1220112-4	PLACARD-FLOATPLANE FLAPS -----	1					
- 10	1250410-3	PLACARD-OIL FILTER -----	1					
- 11	1205024-1	PLACARD-POLARITY -----	1					
- 12	0400210-2	PLACARD-COMPASS CORRECTION FLOATPLANE ONLY -----	1					
- 13	0505009-3	PLACARD-WINTERIZATION -----	1					
- 14	0552110-3	PLACARD-WINTERIZATION -----	2					
- 15		PLACARD-AIRPLANE IDENTIFICATION -----	NP					
- 16	0505043-1	PLACARD-BAGGAGE -----	1					
- 17	0505006-1	PLACARD-TAKE-OFF & LANDING -----	1	A				
- 18	S1397-6	PLACARD-ENGINE OIL CHANGE -----	1					
- 19	1205004-1	PLACARD-MAP LIGHT DIM -----	1					
- 20	1205085-2	PLACARD-EMERGENCY LOCATOR TRANSMITTER -----	1					
- 21	0505049-3	PILOTS CHECK LIST -----	1	A				

CONTINUED ON NEXT PAGE

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
2 -22	2005012-3	PLACARD-BACK COURSE INDICATOR LIGHT -----	1	A					
-23	2005012-4	PLACARD-BACK COURSE INDICATOR LIGHT -----	1	A					
-24	0400213-4	PLACARD-COMPASS CORRECTION -----	1						
-25	0400213-5	PLACARD-COMPASS CORRECTION -----	1						
-26	0552154-1	PLACARD-WINTERIZATION KIT -----	1						
-27	S1714-1	PLACARD-ALLIANCE FOR PROGRESS -----	1						
-28	S1713-1	PLACARD-HANDS OF FRIENDSHIP -----	1						
-29	0405031-1	EMBLEM-CONTROL WHEEL 172 -----	1						
-30	0405031-2	EMBLEM-CONTROL WHEEL F172 -----	1						
-31	0405031-3	EMBLEM-CONTROL WHEEL SKYHAWK -----	1						
-32	0405031-4	EMBLEM-CONTROL WHEEL SKYHAWK II -----	1						
-33	0505044-3	PLACARD-EXTERIOR RH SKYHAWK -----	1						
	0505044-4	PLACARD-EXTERIOR LH SKYHAWK -----	1						
-34	0405037-1	PLACARD-EXTERIOR BLACK CESSNA -----	2	A					
	0405037-2	PLACARD-EXTERIOR WHITE CESSNA -----	2	A					
-35	0405037-3	PLACARD-EXTERIOR LH REIMS CESSNA -----	1	A					
	0405037-4	PLACARD-EXTERIOR RH REIMS CESSNA -----	1	A					
-36	0505051-1	PLACARD-EXTERIOR WHITE 172 -----	2	A					
	0505051-7	PLACARD-EXTERIOR BLACK 172 -----	2	A					
-37	0505051-2	PLACARD-EXTERIOR WHITE SKYHAWK -----	2	A					
	0505051-8	PLACARD-EXTERIOR BLACK SKYHAWK -----	2	A					
-38	0505051-3	PLACARD-EXTERIOR SKYHAWK II -----	2	A					
-39	0505051-4	PLACARD-EXTERIOR F172 SKYHAWK -----	2	A					
-40	0505051-6	PLACARD-EXTERIOR F172 SKYHAWK II -----	2	A					
-41	0505057-2	PLACARD-EXTERIOR WHITE SKYHAWK -----	1	B					
	0505057-8	PLACARD-EXTERIOR BLACK SKYHAWK -----	1	B					
-42	0505057-3	PLACARD-EXTERIOR SKYHAWK II -----	1	B					
-43	0505057-4	PLACARD-EXTERIOR F172 SKYHAWK -----	1	B					
-44	0505057-5	PLACARD-EXTERIOR F172 SKYHAWK II -----	1	B					
-45	0505038-1	PLACARD-EXTERIOR BLACK CESSNA -----	1	B					
	0505038-2	PLACARD-EXTERIOR WHITE CESSNA -----	1	B					
	0505038-3	PLACARD-EXTERIOR REIMS CESSNA -----	1	B					
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

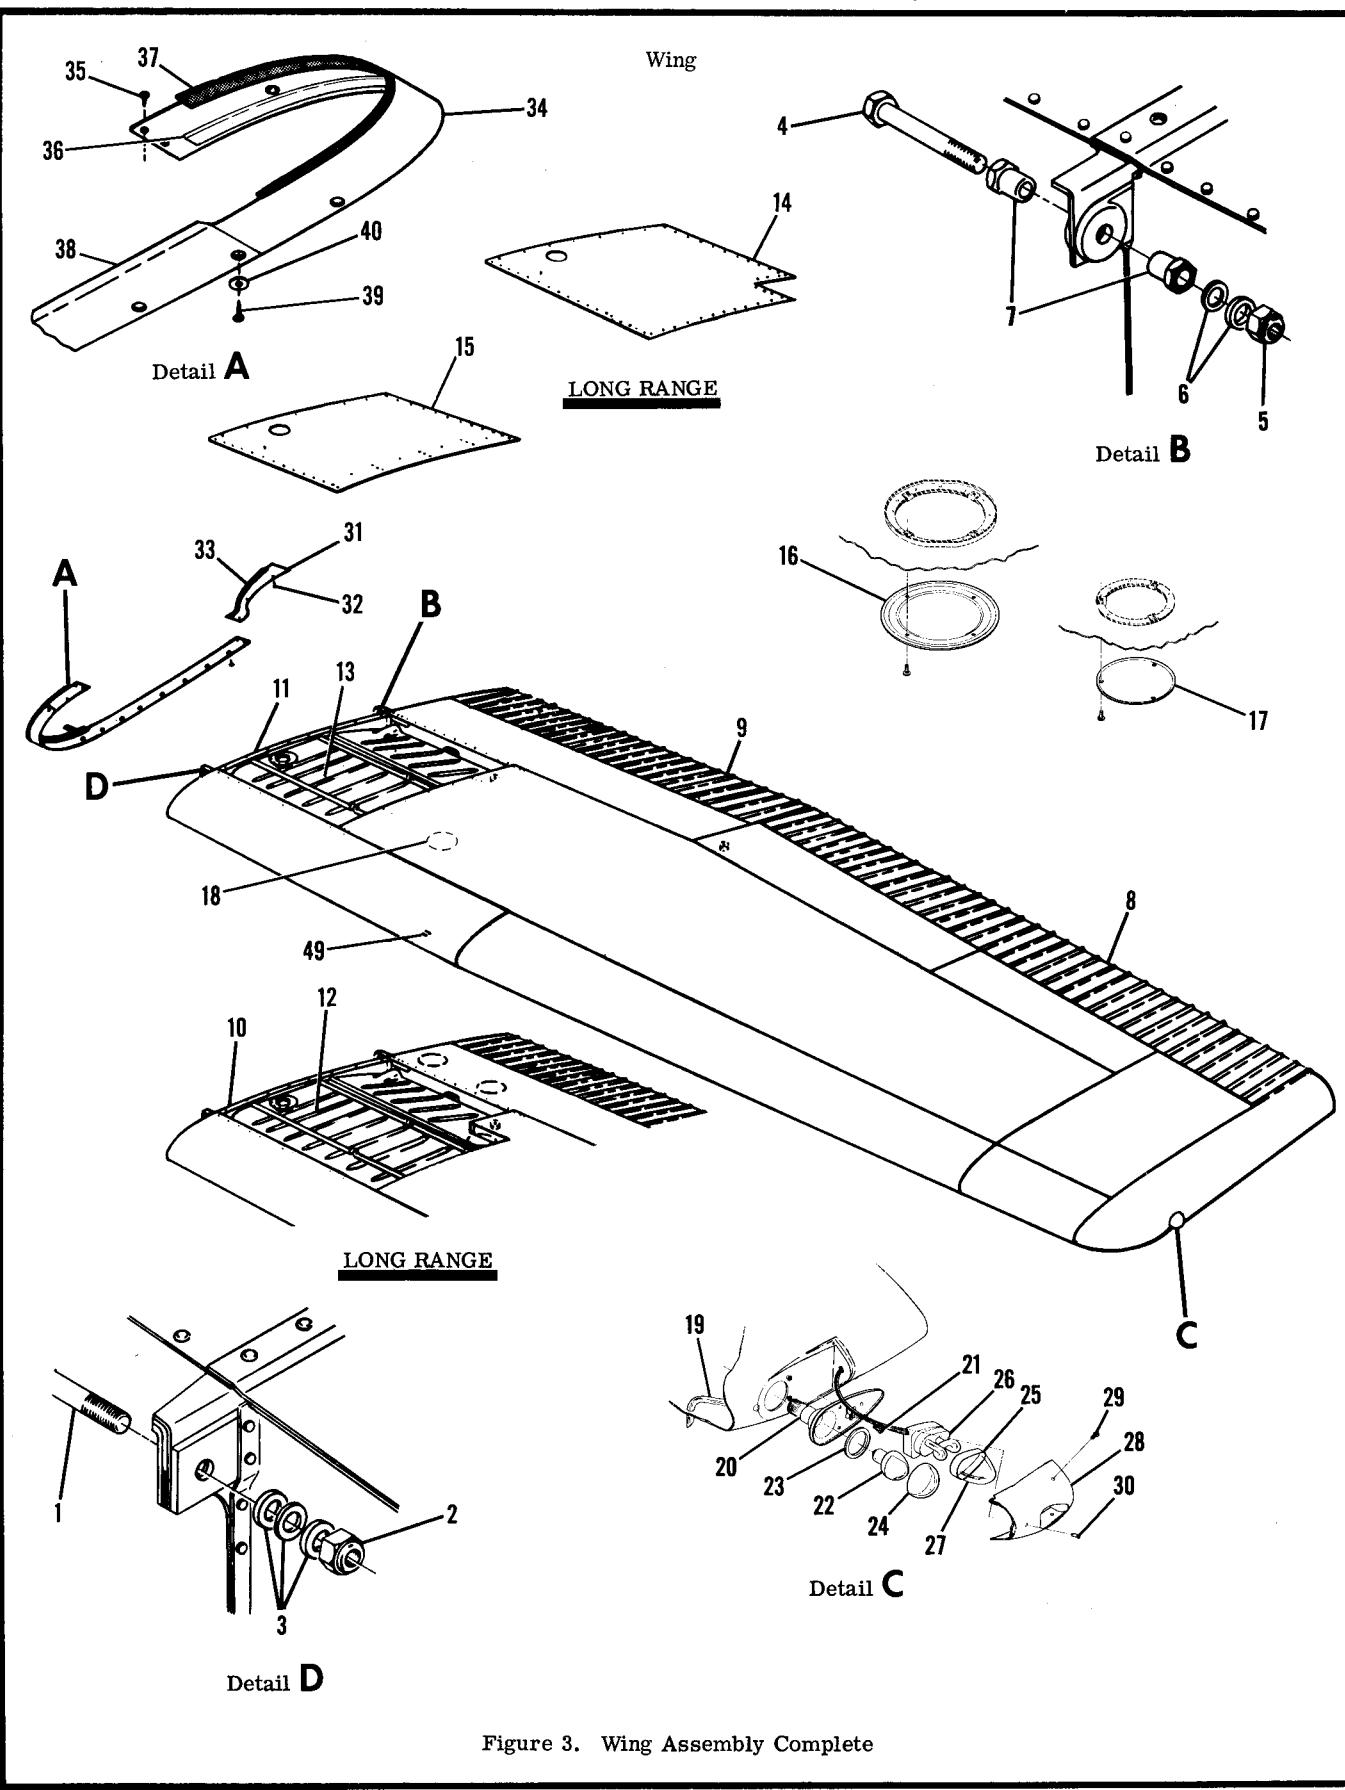


Figure 3. Wing Assembly Complete

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
3 -		WING ASSEMBLY-COMPLETE LH ----- WING ASSEMBLY-COMPLETE RH ----- ATTACHING PARTS							
- 1	AN8-23A	BOLT -----							NP
- 2	MS20365-820C	NUT -----							NP
- 3	AN960-816	WASHER -----							3
- 4	AN7-24A	BOLT -----							1
- 5	MS20365-720C	NUT -----							1
- 6	AN960-716	WASHER -----							2
- 7	0512123	BUSHING ----- -----*							2
- 8	SEE FIG 13	AILERON INSTL -----							1
- 9	SEE FIG 14	FLAP INSTL -----							1
-10	SEE FIG 6	STRUCTURE ASSY-WING LONG RANGE -----							1
-11	SEE FIG 5	STRUCTURE ASSY-WING STD -----							1
-12	SEE FIG 11	TANK INSTL-FUEL LONG RANGE -----							1
-13	SEE FIG 10	TANK INSTL-FUEL STD -----							1
-14	SEE FIG 4	FUEL TANK WELL COVERS INSTL LONG RANGE -----							1
-15	SEE FIG 4	FUEL TANK WELL COVERS INSTL STD -----							1
-16	S329	PLATE-INSPECTION USE WITH 5.82 IN. OPENING ----- ATTACHING PARTS							AR
	S1021Z8-6	SCREW -----							4
-17	S225-1	PLATE-INSPECTION USE WITH 4.00 IN. OPENING ----- ATTACHING PARTS							AR
	S1021Z8-8	SCREW -----							3
-18	SEE FIG 100	COURTESY LIGHT INSTL -----							1
-19	1221201-3	DETECTOR-NAV LIGHT LH -----							1
	1221201-4	DETECTOR-NAV LIGHT RH -----							1
-20	C622001-0201	LIGHT BASE ASSY-WING POSITION ----- ATTACHING PARTS							1
-21	AN507-632R8	SCREW -----							3
-22	A7512-12	BULB-WING POSITION LIGHT GMC -----							2
-23	A1257A	GASKET GMC -----							2
-24	A1280-2	LENS-WING POSITION LH RED GMC -----							1
	A1280-3	LENS-WING POSITION RH GREEN GMC -----							1
	C622006-0101	STROBE & LENS ASSY -----							1
-25	C622006-0105	GASKET-STROBE LIGHT -----							1
-26	C622006-0102	LIGHT-STROBE LIGHT -----							1
-27	C622006-0103	LENS-STROBE LIGHT -----							1
-28	0723201-1	SHIELD-WING POSITION LIGHT LH W/O STROBE LIGHT -----							1
	0723201-2	SHIELD-WING POSITION LIGHT RH W/O STROBE LIGHT -----							1
	0723201-3	SHIELD-WING POSITION LIGHT LH WITH STROBE LIGHT -----							1
	0723201-4	SHIELD-WING POSITION LIGHT RH WITH STROBE LIGHT ----- ATTACHING PARTS							1
-29	AN507-632R8	SCREW -----							2
-30	AN507-632R12	SCREW -----							1
	NAS1329A06K120	NUTPLATE -----							2
-31	0520008	FAIRING ASSY-WING REAR LWR LH -----							1
	0520008-1	FAIRING ASSY-WING REAR LWR RH ----- ATTACHING PARTS							1
-32	S1022Z8-6	SCREW -----							8
-33	S202R8	MOULDING -----							AR
-34	0520015-5	FILLET ASSY -----							1
	0520015-6	FILLET ASSY ----- ATTACHING PARTS							1
-35	S1022Z8-8	SCREW -----							6
	S290D832	WASHER -----							3
-36	0520005-3	RUB STRIP -----							1
-37	S1078-1	SEAL BKI -----							AR
-38	0520016-1	FAIRING-LH -----							1
	0520016-2	FAIRING-RH ----- ATTACHING PARTS							1
-39	S1022Z8-8	SCREW -----							6
-40	S290D832	WASHER -----							6
		-----*							

Wing (Cont)

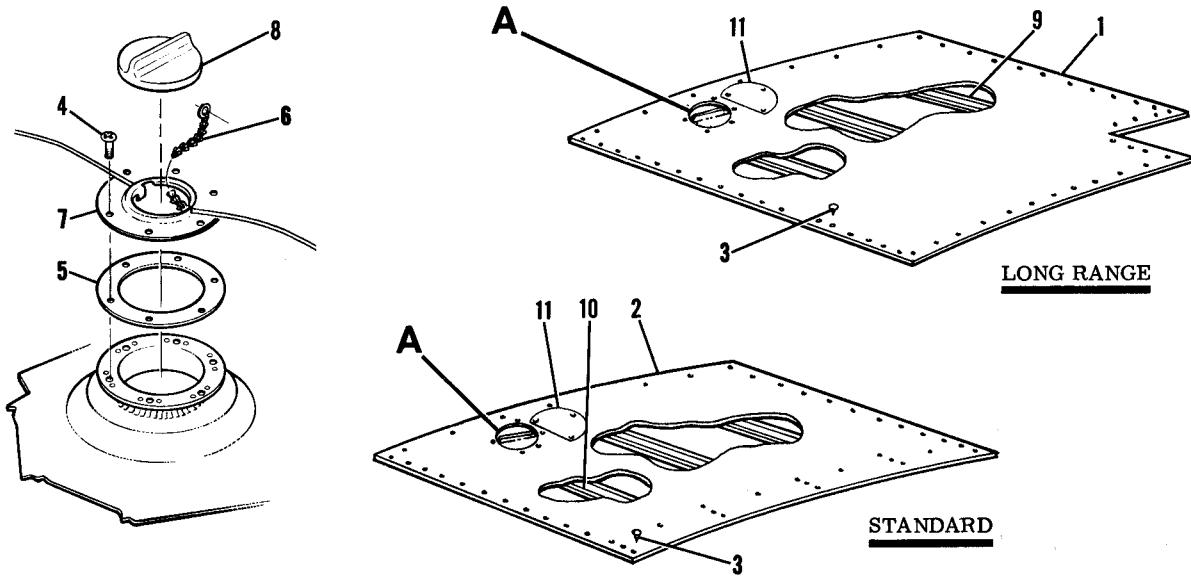
Detail **A**

Figure 4. Fuel Tank Well Covers Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
- 4		FUEL TANK WELL COVERS INSTALLATION -----	NP	
- 1	0522617-15	COVER ASSY-TANK WELL LH LONG RANGE -----	1	
	0522617-16	COVER ASSY-TANK WELL RH LONG RANGE -----	1	
- 2	0523521-27	COVER ASSY-TANK WELL LH STD -----	1	
	0523521-26	COVER ASSY-TANK WELL RH STD -----	1	
ATTACHING PARTS				
- 3	NAS220-12	SCREW LONG RANGE -----	19	
	NAS220-8	SCREW LONG RANGE -----	45	
	NAS220-8	SCREW STD -----	41	
	NAS220-12	SCREW STD -----	14	
- 4	AN520-10R8	SCREW -----	6	
- 5	0426013-2	GASKET -----	1	
-----*				
	0426011-5	FUEL FILLER NECK ASSY -----	1	
- 6	C156001-0104	CHAIN ASSY -----	1	
- 7	0426011-4	ADAPTER-FUEL FILLER NECK CAP -----	1	
- 8	0426011-4	CAP ASSY-FUEL -----	1	
- 9	0523540-2	PAD-NEOPRENE LONG RANGE -----	2	
-10	0523521-6	PAD-NEOPRENE STD -----	1	
-11	0523558-1	COVER -----	1	
ATTACHING PARTS				
	0523619-1	GASKET -----	1	
	S1021Z8-8	SCREW -----	3	
	A1274-8Z-3	NUT TIN -----	1	
-----*				

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
5 -	0523011-1	STRUCTURE ASSEMBLY-LEFT WING -----	1							1	A
	0523011-31	STRUCTURE ASSEMBLY-LEFT WING -----	1							1	B
	0523011-2	STRUCTURE ASSEMBLY-RIGHT WING -----	1							1	A
	0523011-32	STRUCTURE ASSEMBLY-RIGHT WING -----	1							1	B
- 1	SEE FIG 7	LEADING EDGE ASSEMBLY-WING -----	1								
- 2	SEE FIG 8	SPARS ASSEMBLY-WING -----	1								
- 3	SEE FIG 9	SKINS & STRINGERS-WING -----	1								
- 4	0523010-1	RIB ASSEMBLY-LH STA 23.625 -----	1								
	0523010-2	RIB ASSEMBLY-RH STA 23.625 -----	1								
- 5	NAS680A08	NUTPLATE UPPER -----	7								
	S1863-3	NUTPLATE LOWER -----	6								
- 6	MS35489-9	GROMMET -----	1								
- 7	0523023-1	REINFORCEMENT -----	1								
- 8	0523522	STRAP ASSEMBLY-FUEL TANK INBOARD -----	2								
	0523522-5	PAD-NEOPRENE -----	1								
- 9	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD -----	2								
	0523522-7	PAD-NEOPRENE -----	1								
- 10	0523519-15	STIFFENER ASSEMBLY-LH -----	1								
	0523519-16	STIFFENER ASSEMBLY-RH -----	1								
- 11	0523519-14	STIFFENER -----	3								
	0523519-14	STIFFENER -----	4								
- 12	0523025-1	GUSSET -----	1								
- 13	0523232-6	RIB-TRAILING EDGE STA 23.625 -----	1								
	NAS395-14-3	NUT -----	3								
- 14	0523231-13	RIB ASSEMBLY-FLAP TRACK STA 39.00 & STA 85.875 -----	2								

CONTINUED ON NEXT PAGE

Wing (Cont)

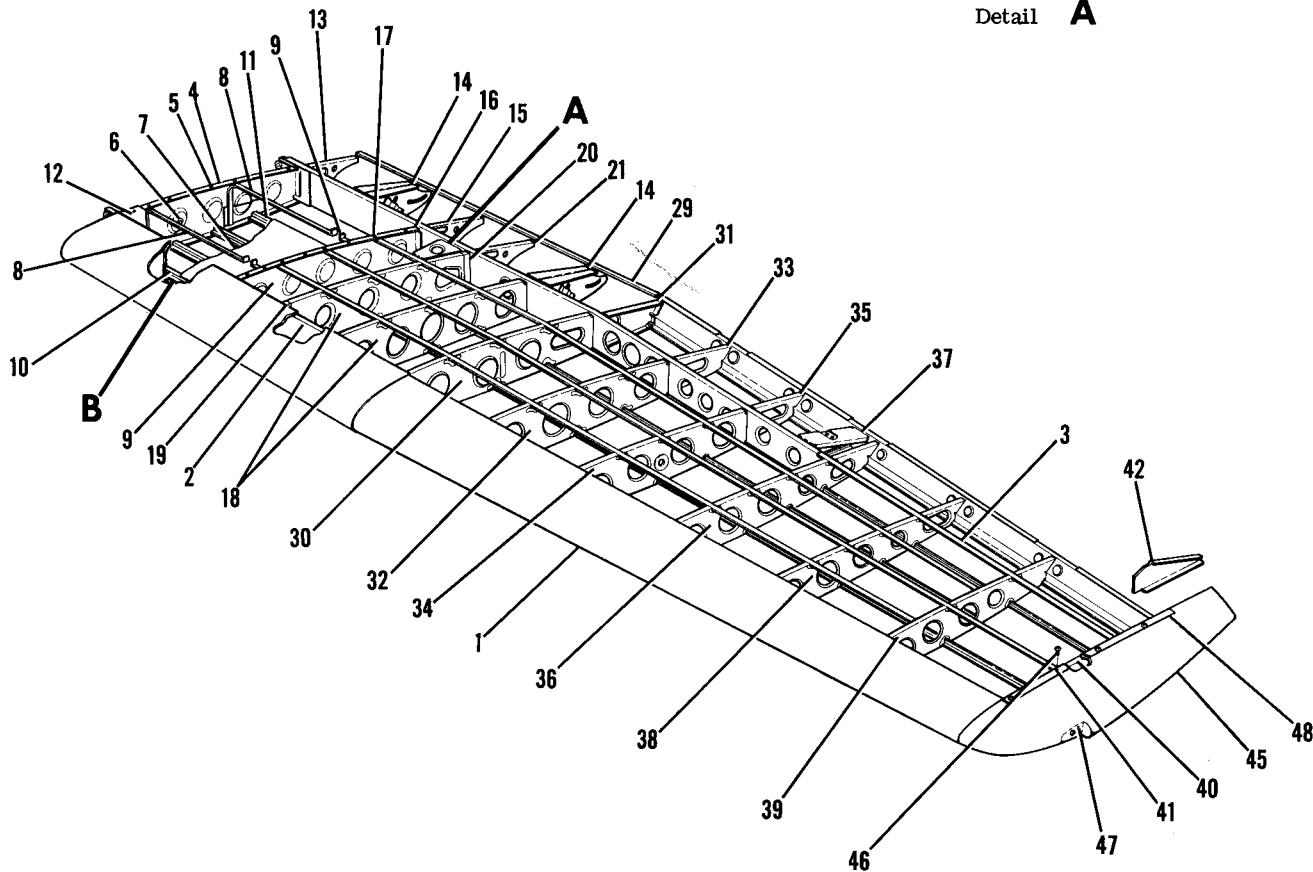
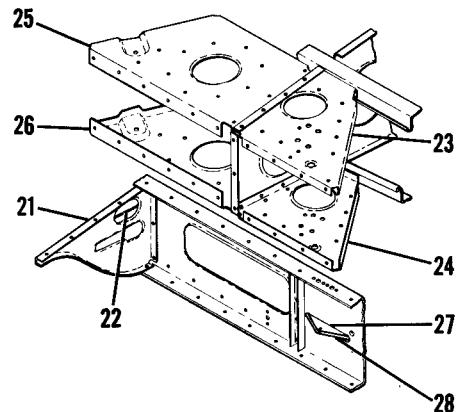
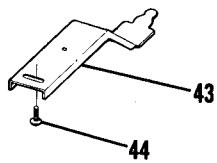


Figure 5. Wing Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
5 -15	0523233-11	RIB-TRAILING EDGE STA 57.125 -----	1						
-16	0523508-37	RIB-LH STA 57.125 -----	1						
	0523508-16	RIB-RH STA 57.125 -----	1						
-17	NAS680A08	NUTPLATE -----	11						
-18	0523509-18	RIB-STA 71.375 & STA 85.625 -----	2						
-19	0523517-4	SPACER -----	1						
-20	0523517-3	SPACER -----	1						
-21	0523233-22	RIB ASSEMBLY-TRAILING EDGE STA 71.375 -----	1						
-22	0523233-3	RUB STRIP -----	1						
-23	0523539-2	BRACKET LH WING -----	1						
	0523539-3	BRACKET RH WING -----	1						
-24	0523539-4	BRACKET LH WING -----	1						
	0523539-5	BRACKET RH WING -----	1						
-25	0522630-3	BRACKET RH WING ONLY -----	1						
-26	0522630-4	BRACKET RH WING ONLY -----	1						
-27	0523407	BRACKET-PULLEY -----	1						
-28	0523407-1	BRACKET-PULLEY -----	1						
-29	0720005-3	STIFFENER -----	1						
-30	0523510-19	RIB ASSEMBLY-LH STA 100.50 -----	1						
	0523510-20	RIB ASSEMBLY-RH STA 100.50 -----	1						
-31	0523230	RIB ASSEMBLY-TRAILING EDGE LH STA 100.50 -----	1						
	0523230-1	RIB ASSEMBLY-TRAILING EDGE RH STA 100.50 -----	1						
	0523230-4	ANGLE-LH -----	1						
	0523230-5	ANGLE-RH -----	1						
-32	0523511-14	RIB-STA 118 -----	1						
-33	0523511-15	RIB-TRAILING EDGE STA 118 -----	1						
-34	0523512-19	RIB-STA 136 -----	1						
-35	0523512-22	RIB-TRAILING EDGE STA 136 -----	1						
-36	0523513-13	RIB-LH STA 154 -----	1						
	0523513-14	RIB-RH STA 154 -----	1						
-37	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH -----	1						
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH -----	1						
	0523219-4	CHANNEL-AILERON BELLCRANK LOWER LH -----	1						
	0523219-5	CHANNEL-AILERON BELLCRANK LOWER RH -----	1						
	CM2692-28-1S	PLUG BUTTON -----	1						
-38	0523514-7	RIB-STA 172 -----	1						
-39	0523515-7	RIB-STA 190 -----	1						
-40	0722200-1	RIB ASSEMBLY STA 208 LH -----	1						
	0722200-2	RIB ASSEMBLY STA 208 RH -----	1						
-41	NAS686A08	NUTPLATE -----	10						
-42	0721107-1	FAIRING-STA 208 LH -----	1						
	0721107-2	FAIRING-STA 208 RH -----	1						
-43	0426209-3	DOOR CATCH -----	1	A					
		ATTACHING PARTS -----							
-44	AN515-6R6	SCREW -----	1	A					
		-----*							
-45	0723200-5	WING TIP ASSEMBLY-LH -----	1						
	0723200-6	WING TIP ASSEMBLY-RH -----	1						
		ATTACHING PARTS -----							
-46	AN515-8R8	SCREW -----	12						
		-----*							
-47	NAS1329A06K120	NUTPLATE -----	2						
-48	0723200-9	STIFFENER-UPPER LH -----	1						
	0723200-10	STIFFENER-UPPER RH -----	1						
	0723200-11	STIFFENER-LOWER LH -----	1						
	0723200-12	STIFFENER-LOWER RH -----	1						
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201234 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							

Wing (Cont)



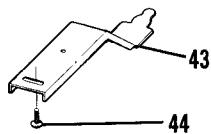
Detail **B**Detail **A**

Figure 6. Wing Structure Assembly - Long Range

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
6 -	0523011-13	STRUCTURE ASSEMBLY-LEFT WING	1	A					
	0523011-35	STRUCTURE ASSEMBLY-LEFT WING	1	B					
	0523011-14	STRUCTURE ASSEMBLY-RIGHT WING	1	A					
	0523011-36	STRUCTURE ASSEMBLY-RIGHT WING	1	B					
- 1	SEE FIG 7	LEADING EDGE ASSY-WING -----	1						
- 2	SEE FIG 8	SPAR ASSY-WING -----	1						
- 3	SEE FIG 9	SKINS & STRINGER-WING -----	1						
- 4	0523010-1	RIB ASSY-LH STA 23.625 -----	1						
	0523010-2	RIB ASSY-RH STA 23.625 -----	1						
- 5	NAS680A08	NUTPLATE UPPER -----	7						
	S1863-3	NUTPLATE LOWER -----	6						
- 6	MS35489-9	GROMMET -----	1						
- 7	0523023-1	REINFORCEMENT -----	1						
- 8	0523522-8	STRAP ASSY-FUEL TANK INBD -----	2						
	0523522-10	PAD-NEOPRENE -----	1						
- 9	0523522-1	STRAP ASSY-FUEL TANK OUTBD -----	2						
	0523522-7	PAD-NEOPRENE -----	1						
- 10	0523519-21	STIFFENER ASSY-LH -----	1						
	0523519-22	STIFFENER ASSY-RH -----	1						
- 11	0523519-19	STIFFENER -----	2						
	0523519-22	STIFFENER -----	3						
	S2127-1	SEAL 46.94 IN LG BKI REF S2127-1-46.94 -----	3						
- 12	0523519-20	STIFFENER -----	1						
	S2127-1	SEAL 31.25 IN LG BKI REF S2127-1-31.25 -----	1						
- 13	0523025-1	GUSSET -----	1						
- 14	0523232-6	RIB ASSY-TRAILING EDGE STA 23.625 -----	1						
	NAS395-14-3	NUT -----	3						
- 15	0523231-13	RIB ASSY-FLAP TRACK STA 39.00 & STA 85.875 -----	2						
- 16	0523233-11	RIB-TRAILING EDGE STA 57.125 -----	1						
- 17	0721111-29	RIB ASSY-LH STA 57.125 -----	1						
	0721111-30	RIB ASSY-RH STA 57.125 -----	1						
	NAS680A08	NUTPLATE -----	2						
	0523560-1	STIFFENER -----	1						
- 18	0523505-5	BULKHEAD ASSY -----	1						
	0523505-6	BULKHEAD ASSY -----	1						
	0721100-5	STIFFENER -----	2						
	NAS680A08	NUTPLATE -----	4						
- 19	0523508-29	RIB ASSY-LH STA 71.375 -----	1						
	0523508-28	RIB ASSY-RH STA 71.375 -----	1						
- 20	0523233-22	RIB ASSY-TRAILING EDGE STA 71.375 -----	1						
- 21	0523233-3	RUB STRIP -----	1						
- 22	0523539-7	BRACKET-LH WING -----	1						
	0523539-8	BRACKET-RH WING -----	1						
- 23	0523539-9	BRACKET-LH WING -----	1						
	0523539-10	BRACKET-RH WING -----	1						
- 24	0522630-3	BRACKET-LH WING ONLY -----	1						
- 25	0522630-4	BRACKET-RH WING ONLY -----	1						
- 26	0523407	BRACKET-PULLEY -----	1						
- 27	0523407-1	BRACKET-PULLEY -----	1						
- 28	0720005-3	STIFFENER -----	1						
- 29	0523509-18	RIB-STA 85.625 -----	1						
- 30	0523510-19	RIB ASSY-LH STA 100.50 -----	1						
	0523510-20	RIB ASSY-RH STA 100.50 -----	1						
- 31	0523230	RIB ASSY-TRAILING EDGE LH STA 100.50 -----	1						
	0523230-1	RIB ASSY-TRAILING EDGE RH STA 100.50 -----	1						
	0523230-4	ANGLE-LH -----	1						
	0523230-5	ANGLE-RH -----	1						
- 32	0523511-14	RIB-STA 118 -----	1						
- 33	0523511-15	RIB-TRAILING EDGE STA 118 -----	1						
- 34	0523512-19	RIB-STA 136 -----	1						
- 35	0523512-22	RIB-TRAILING EDGE STA 136 -----	1						
- 36	0523513-13	RIB-LH STA 154 -----	1						
	0523513-14	RIB-RH STA 154 -----	1						
- 37	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH -----	1						
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH -----	1						
	0523219-4	CHANNEL-AILERON BELLCRANK LWR LH -----	1						
	0523219-5	CHANNEL-AILERON BELLCRANK LWR RH -----	1						
	CM2692-28-1S	PLUG BUTTON -----	1						
- 38	0523514-7	RIB-STA 172 -----	1						
- 39	0523515-7	RIB-STA 190 -----	1						

CONTINUED ON NEXT PAGE

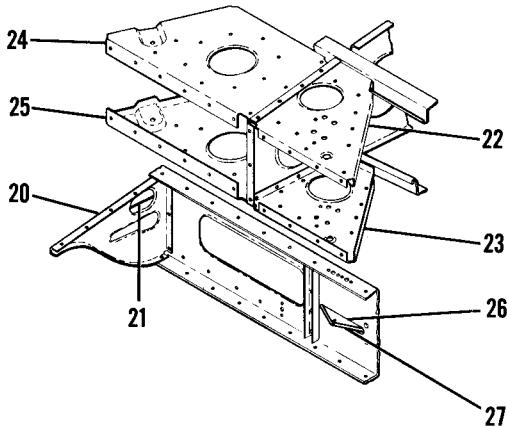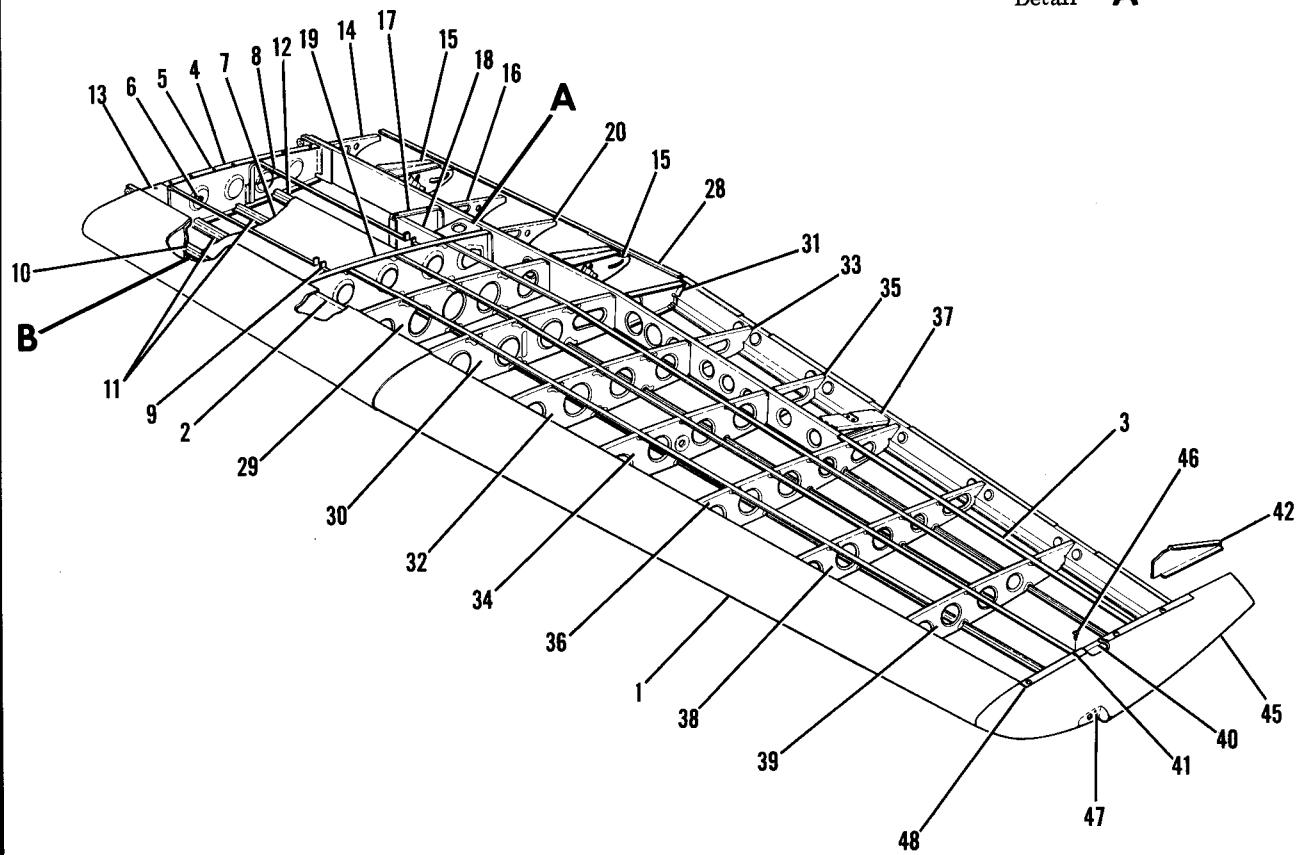

MODEL 172 & F172

illustrated parts catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	1	2	3	4	5	6	7
					1	2	3	4	5	6	7
6 -40	0722200-1	RIB ASSY-LH STA208 -----	1								
	0722200-2	RIB ASSY-RH STA208 -----	1								
-41	NAS680A08	NUTPLATE -----	10								
-42	0721107-1	FAIRING-LH STA 208 -----	1								
	0721107-2	FAIRING-RH STA 208 -----	1								
-43	0426209-3	DOOR CATCH -----	1								A
		ATTACHING PARTS -----									
-44	AN515-6R6	SCREW -----	1								A
		-----*									
-45	0723200-5	WING TIP ASSY-LH -----	1								
	0723200-6	WING TIP ASSY-RH -----	1								
		ATTACHING PARTS -----									
-46	AN515-8R8	SCREW -----	12								
		-----*									
-47	NAS1329A06K120	NUTPLATE -----	5								
-48	0723200-9	STIFFENER-UPPER LH -----	1								
	0723200-10	STIFFENER-UPPER RH -----	1								
	0723200-11	STIFFENER-LWR LH -----	1								
	0723200-12	STIFFENER-LWR RH -----	1								
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

This page intentionally left blank.

Wing (Cont)

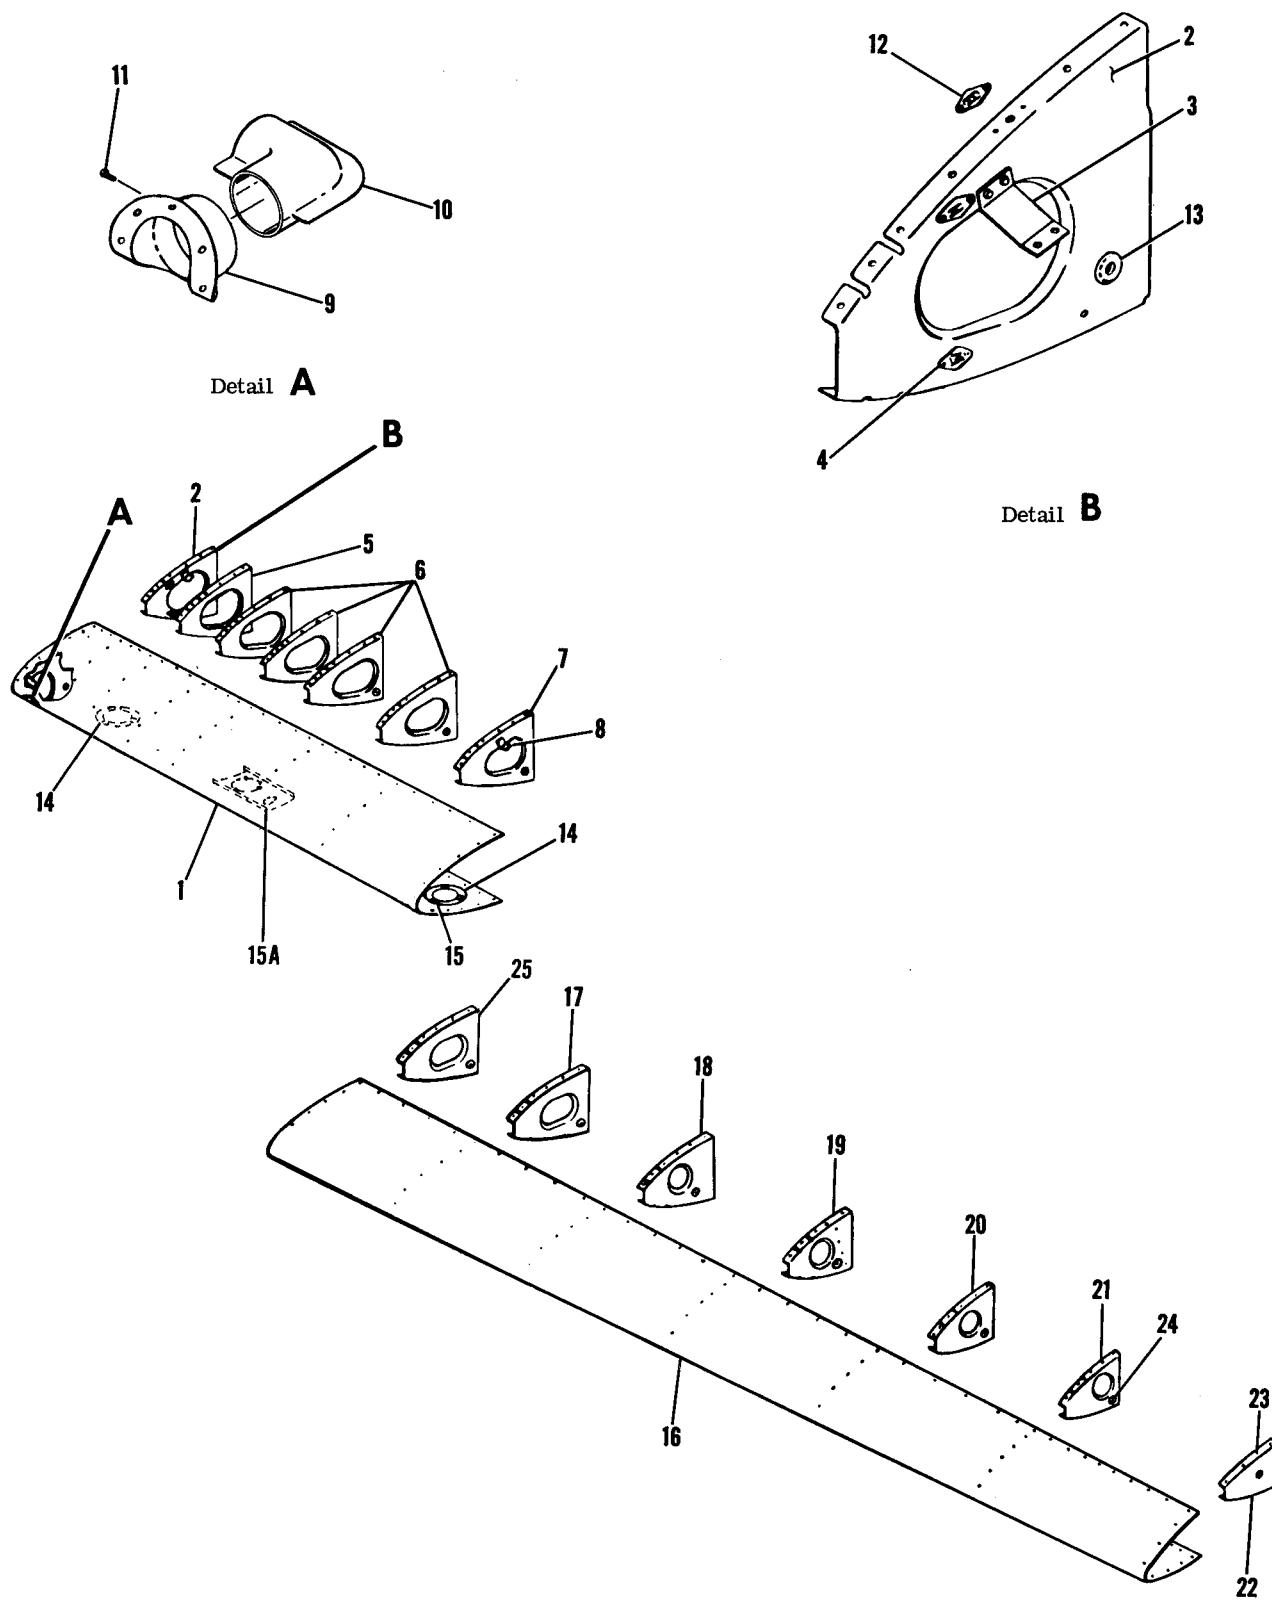


Figure 7. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
7 -	0523028-1	LEADING EDGE ASSEMBLY-WING -----	NP	
	0523028-3	LEADING EDGE ASSY LH-INBOARD -----	1	
	0523028-2	LEADING EDGE ASSY LH-INBOARD LONG RANGE -----	1	
	0523028-4	LEADING EDGE ASSY RH-INBOARD -----	1	
- 1	0523028-5	LEADING EDGE ASSY RH-INBOARD LONG RANGE -----	1	
	0523028-7	SKIN LH -----	1	
	0523028-6	SKIN LH LONG RANGE -----	1	
	0523028-8	SKIN RH -----	1	
- 2	0523026-5	SKIN RH LONG RANGE -----	1	
	0523026-6	RIB ASSY-STA 23.625 LH -----	1	
- 3	0422291	RIB ASSY-STA 23.625 RH -----	1	
- 4	S1863-3	BRACKET -----	1	
- 5	0523027-3	NUTPLATE -----	2	
- 6	0523027-1	RIB-STA 32.750 -----	4	
- 7	0523027-2	RIB-STA 40.125 TO STA 71.125 -----	1	
- 8	0422292	RIB-STA 85.375 -----	2	
- 9	0722202-1	BRACKET-LH ONLY -----	1	
-10	0450314	SCOOP-AIR -----	1	
		FITTING -----	1	
		ATTACHING PARTS -----		
-11	S1021Z8-8	SCREW -----	1	
	NAS446-4-3	NUT -----	1	
		-----*		
-12	S1860-2A	NUTPLATE-UPPER FLANGE -----	1	
	A6204-8Z3	NUTPLATE-LOWER FLANGE -----	1	
	S1862-2	NUTPLATE-LOWER FLANGE -----	1	
-13	S1291-8	GROMMET -----	7	
-14	S237-2	DOUBLER-INSPECTION OPENING LH ONLY -----	3	
	S237-2	DOUBLER-INSPECTION OPENING RH ONLY -----	2	
-15	NAS395-14-3	NUT -----	3	
	0523029-1	LEADING EDGE ASSY LH-OUTBOARD -----	1	
	0523029-2	LEADING EDGE ASSY RH-OUTBOARD -----	1	
-15A	0523048-1	DOUBLER ASSY-PITOT TUBE LH ONLY	1	
	NAS395-14-3	NUT -----	3	
-16	0523029-3	SKIN LH -----	1	
	0523029-4	SKIN RH -----	1	
-17	0523031-1	RIB-LH STA 118.00 -----	1	
	0523031-2	RIB-RH STA 118.00 -----	1	
-18	0523032-1	RIB-LH STA 136.00 -----	1	
	0523032-2	RIB-RH STA 136.00 -----	1	
-19	0523033-1	RIB-LH STA 154.00 -----	1	
	0523033-2	RIB-RH STA 154.00 -----	1	
-20	0523034-1	RIB-LH STA 172.00 -----	1	
	0523034-2	RIB-RH STA 172.00 -----	1	
-21	0523035-1	RIB-LH STA 190.00 -----	1	
	0523035-2	RIB-RH STA 190.00 -----	1	
-22	0523036-1	RIB-LH STA 208.00 -----	1	
	0523036-2	RIB-RH STA 208.00 -----	1	
-23	NAS696A08	NUTPLATE -----	2	
-24	S1291-8	GROMMET -----	6	
-25	0523030-1	RIB-LH STA 100.00 -----	1	
	0523030-2	RIB-RH STA 100.00 -----	1	

Wing (Cont)

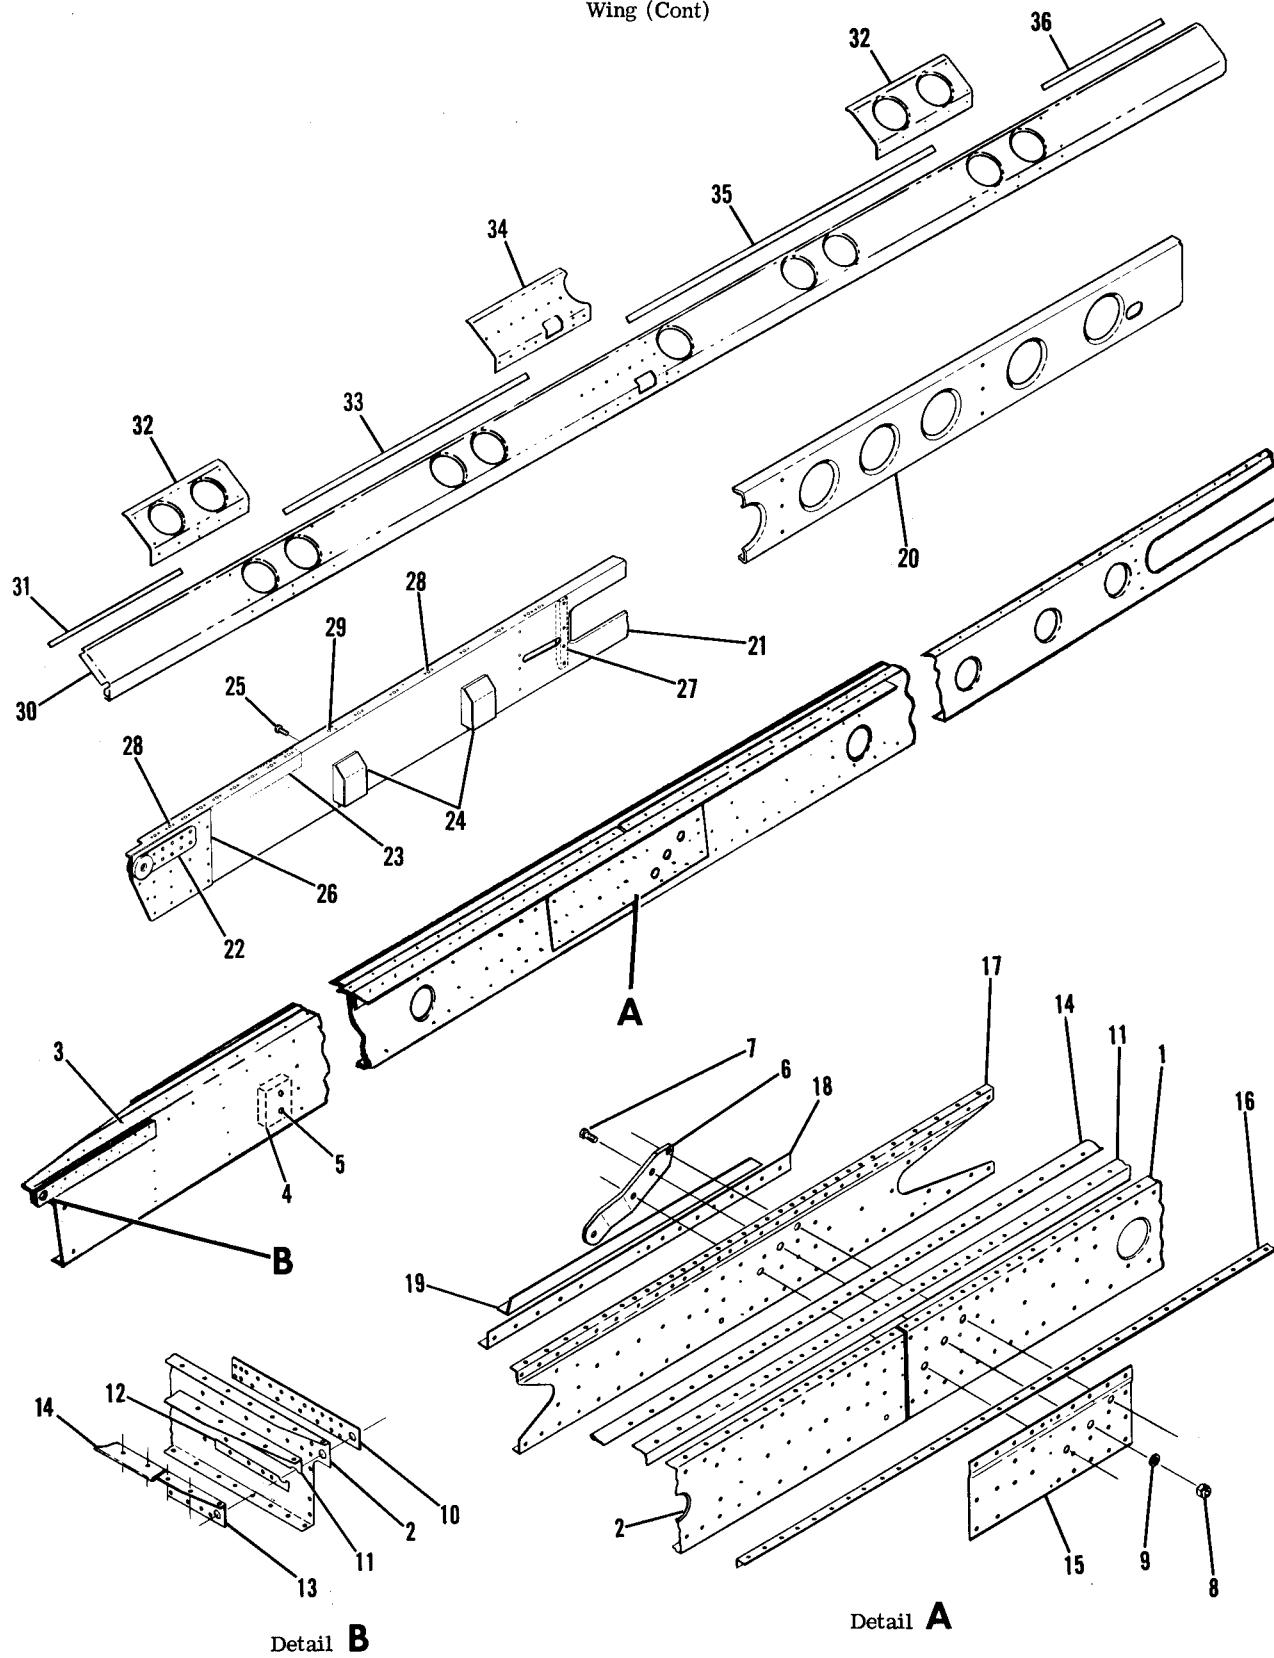


Figure 8. Wing Spar Assemblies

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
8 -	0523018-1	SPAR ASSEMBLIES-WING -----							NP
	0523018-3	SPAR ASSEMBLY-WING FWD LH -----	1						
	0523018-2	SPAR ASSEMBLY-WING FWD LH LONG RANGE -----	1						
	0523018-4	SPAR ASSEMBLY-WING FWD RH -----	1						
- 1	0523015-1	SPAR ASSEMBLY-WING FWD RH LONG RANGE -----	1						
	0523015-2	CHANNEL ASSEMBLY-SPAR OUTBOARD LH -----	1						
- 2	0523014-1	CHANNEL ASSEMBLY-SPAR OUTBOARD RH -----	1						
	0523014-3	CHANNEL ASSEMBLY-SPAR INBOARD LH -----	1						
	0523014-2	CHANNEL ASSEMBLY-SPAR INBOARD LH LONG RANGE -----	1						
	0523014-4	CHANNEL ASSEMBLY-SPAR INBOARD RH -----	1						
- 3	NAS680A08	CHANNEL ASSEMBLY-SPAR INBOARD RH LONG RANGE -----	1						
	NAS680A08	NUTPLATE -----	14						
- 4	0523524	NUTPLATE -----	19						
		SPACER-FUEL TANK ATTACHING PARTS -----	1						
- 5	S1021A10-10	SCREW -----	2						
		-----*							
- 6	0523306	FITTING-STRUT ATTACHMENT ATTACHING PARTS -----	1						
- 7	AN5-6A	BOLT -----	3						
- 8	MS21042L5	NUT -----	3						
- 9	AN960-516	WASHER -----	3						
		-----*							
-10	0523016-1	PLATE -----	1						
-11	0523020-1	SPAR ANGLE LH -----	1						
	0523020-3	SPAR ANGLE LH LONG RANGE -----	1						
	0523020-2	SPAR ANGLE RH -----	1						
	0523020-4	SPAR ANGLE RH LONG RANGE -----	1						
-12	0523019-1	SPACER -----	1						
-13	0523017-1	SPAR ANGLE LH -----	1						
	0523017-2	SPAR ANGLE RH -----	1						
-14	0523021-1	PLATE LH -----	1						
	0523021-3	PLATE LH LONG RANGE -----	1						
	0523021-2	PLATE RH -----	1						
	0523021-4	PLATE RH LONG RANGE -----	1						
-15	0422412-1	PLATE LH -----	1						
	0422412-2	PLATE RH -----	1						
-16	0523022-1	ANGLE LH -----	1						
	0523022-2	ANGLE RH -----	1						
-17	0422414-1	CHANNEL-SPICE LH -----	1						
	0422414-2	CHANNEL-SPICE RH -----	1						
-18	0422411-1	CHANNEL-SPICE LH -----	1						
	0422411-2	CHANNEL-SPICE RH -----	1						
-19	0422406-1	STIFFENER LH -----	1						
	0422406-2	STIFFENER RH -----	1						
	0523041-1	SPAR ASSEMBLY-WING REAR LH -----	1						
	0523041-2	SPAR ASSEMBLY-WING REAR RH -----	1						
-20	0523406-1	CHANNEL-OUTBOARD LH -----	1						
	0523406-2	CHANNEL-OUTBOARD RH -----	1						
-21	0523041-3	CHANNEL-INBOARD LH -----	1						
	0523041-4	CHANNEL-INBOARD RH -----	1						
-22	0422229-16	FITTING -----	2						
-23	0523046-1	STIFFENER-LH -----	1						
	0523046-2	STIFFENER-RH -----	1						
-24	0523524	SPACER -----	2						
		ATTACHING PARTS -----							
-25	S-1021A-10-10	SCREW -----	2						
		-----*							
-26	0523042-1	DOUBLER -----	1						
-27	0523409	CHANNEL -----	1						
-28	NAS680A08	NUTPLATE -----	16						
-29	NAS684A08	NUTPLATE -----	1						
-30	0523040-1	SPAR-AILERON AUXILIARY LH -----	1						
	0523040-2	SPAR-AILERON AUXILIARY RH -----	1						
-31	0523037-4	SPACER -----	1						
-32	0523043-1	REINFORCEMENT LH -----	2						
	0523043-2	REINFORCEMENT RH -----	2						
-33	0523037-3	SPACER -----	1						
-34	0523044-1	REINFORCEMENT LH -----	1						
	0523044-2	REINFORCEMENT RH -----	1						
-35	0523037-2	SPACER -----	1						
-36	0523037-1	SPACER -----	1						

Wing (Cont)

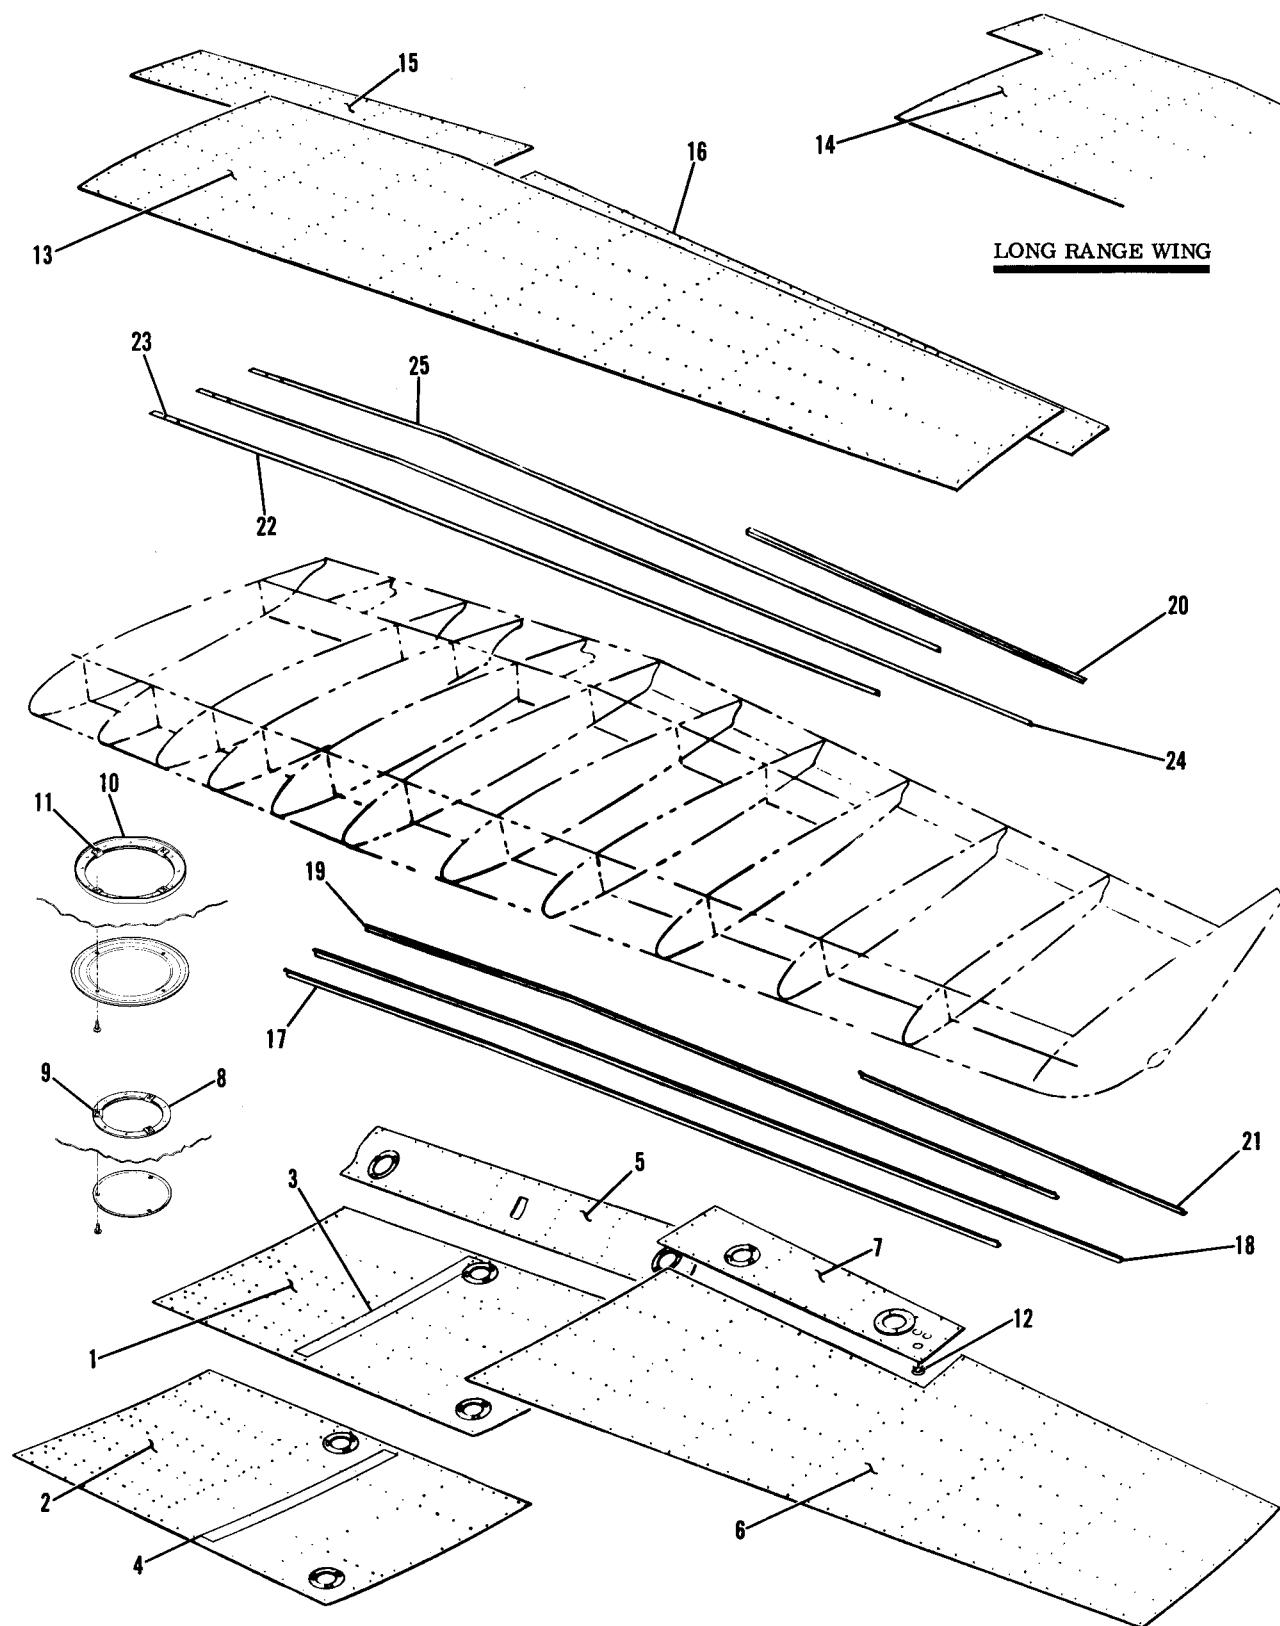


Figure 9. Skins & Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
9 -		SKINS & STRINGERS INSTALLATION							NP	
- 1	0523011-5	SKIN-LWR CTR STA 23.625 TO 100 LH	STD	-----					1	A
	0523011-33	SKIN-LWR CTR STA 23.625 TO 100 LH	STD	-----					1	B
	0523011-6	SKIN-LWR CTR STA 23.625 TO 100 RH	STD	-----					1	A
	0523011-34	SKIN-LWR CTR STA 23.625 TO 100 RH	STD	-----					1	B
- 2	0523011-17	SKIN-LWR CTR STA 23.625 TO 100 LH	LONG RANGE	-----					1	A
	0523011-39	SKIN-LWR CTR STA 23.625 TO 100 LH	LONG RANGE	-----					1	B
	0523011-18	SKIN-LWR CTR STA 23.625 TO 100 RH	LONG RANGE	-----					1	A
	0523011-40	SKIN-LWR CTR STA 23.625 TO 100 RH	LONG RANGE	-----					1	B
- 3	0523039-1	DOUBLER-LWR FUEL BAY	STD	-----					1	
- 4	0523039-2	DOUBLER-LWR FUEL BAY	LONG RANGE	-----					1	
- 5	0523011-9	SKIN-LWR TRAILING EDGE STA 22.875 TO 100.44 LH	-----						1	
	0523011-8	SKIN-LWR TRAILING EDGE STA 22.875 TO 100.44 RH	-----						1	
- 6	0523011-11	SKIN-LWR CTR STA 99.25 TO 208 LH	-----						1	
	0523011-10	SKIN-LWR CTR STA 99.25 TO 208 RH	-----						1	
- 7	0523003-62	SKIN-LWR TRAILING EDGE STA 100 TO 154	-----						1	
- 8	S237-2	DOUBLER ASSY	4.00 IN OPENING	-----					AR	
- 9	NAS395-14-3	NUT	-----						3	
-10	S330-2	DOUBLER ASSY	5.82 IN OPENING	-----					AR	
-11	NAS395-14-3	NUT	-----						4	
-12	CM2692-28-1S	PLUG BUTTON	-----						1	
-13	0523011-3	SKIN-UPR CTR STA 57.125 TO 208 LH	STD	-----					1	
	0523011-4	SKIN-UPR CTR STA 57.125 TO 208 RH	STD	-----					1	
-14	0523011-19	SKIN-UPR CTR STA 57.00 TO 208 LH	LONG RANGE	-----					1	
	0523011-20	SKIN-UPR CTR STA 57.00 TO 208 RH	LONG RANGE	-----					1	
-15	0523011-7	SKIN-UPR TRAILING EDGE STA 22.875 TO 101.25	-----						1	
-16	0523011-12	SKIN-UPR TRAILING EDGE STA 100.50 TO 208	-----						1	
-17	0523038-7	STRINGER-LWR FWD LH	STD	-----					1	
	0523038-8	STRINGER-LWR FWD RH	STD	-----					1	
	0523038-19	STRINGER-LWR FWD LH	LONG RANGE	-----					1	
	0523038-20	STRINGER-LWR FWD RH	LONG RANGE	-----					1	
-18	0523038-9	STRINGER-LWR CTR LH	STD	-----					1	
	0523038-10	STRINGER-LWR CTR RH	STD	-----					1	
	0523038-21	STRINGER-LWR CTR LH	LONG RANGE	-----					1	
	0523038-22	STRINGER-LWR CTR RH	LONG RANGE	-----					1	
-19	0523038-11	STRINGER-LWR AFT LH	STD	-----					1	
	0523038-12	STRINGER-LWR AFT RH	STD	-----					1	
	0523038-23	STRINGER-LWR AFT LH	LONG RANGE	-----					1	
	0523038-24	STRINGER-LWR AFT RH	LONG RANGE	-----					1	
-20	0523045-5	STRINGER-UPR LH	-----						1	
	0523045-6	STRINGER-UPR RH	-----						1	
-21	0523045-1	STRINGER-LWR LH	-----						1	
	0523045-2	STRINGER-LWR RH	-----						1	
-22	0523038-1	STRINGER ASSY-UPR FWD LH	STD	-----					1	
	0523038-2	STRINGER ASSY-UPR FWD RH	STD	-----					1	
	0523038-13	STRINGER ASSY-UPR FWD LH	LONG RANGE	-----					1	
	0523038-14	STRINGER ASSY-UPR FWD RH	LONG RANGE	-----					1	
-23	NAS680A08	NUTPLATE	-----						2	
-24	0523038-3	STRINGER ASSY-UPR CTR LH	STD	-----					1	
	0523038-4	STRINGER ASSY-UPR CTR RH	STD	-----					1	
	0523038-15	STRINGER ASSY-UPR CTR LH	LONG RANGE	-----					1	
	0523038-16	STRINGER ASSY-UPR CTR RH	LONG RANGE	-----					1	
	NAS680A08	NUTPLATE	-----						2	
-25	0523038-5	STRINGER ASSY-UPR AFT LH	STD	-----					1	
	0523038-6	STRINGER ASSY-UPR AFT RH	STD	-----					1	
	0523038-17	STRINGER ASSY-UPR AFT LH	LONG RANGE	-----					1	
	0523038-18	STRINGER ASSY-UPR AFT RH	LONG RANGE	-----					1	
	NAS680A08	NUTPLATE	-----						2	
		A---172 SERIAL 17263459 THRU 17265684								
		F172 SERIAL F17201235 THRU F17201384								
		B---172 SERIAL 17265685 & ON								
		F172 SERIAL F17201385 & ON								

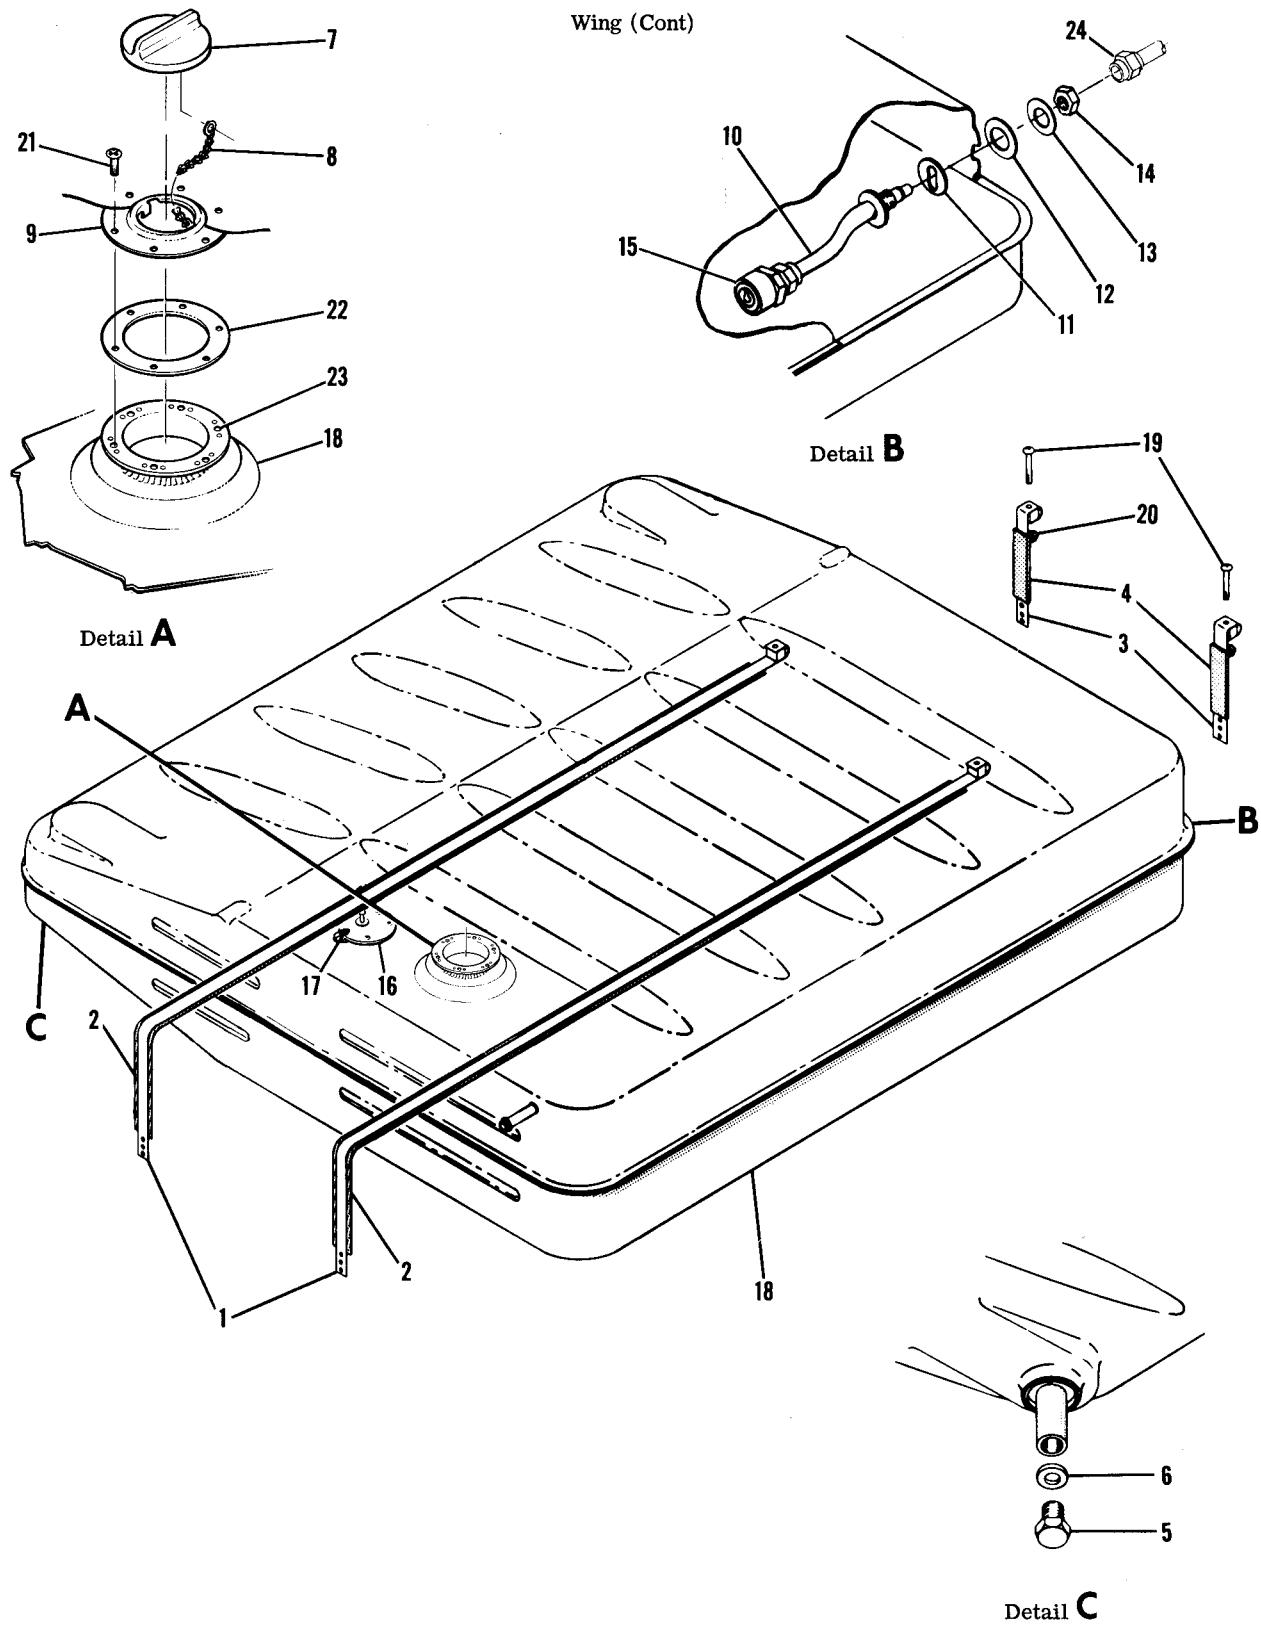


Figure 10. Fuel Tank Installation

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
10 -		TANK INSTALLATION-FUEL LH ----- TANK INSTALLATION-FUEL RH -----		NP					
- 1	0523522	STRAP ASSEMBLY-FUEL TANK INBOARD -----		NP					
- 2	0523522-5	PAD-NEOPRENE -----		2					
- 3	0523522-1	STRAP ASSEMBLY-FUEL TANK INBOARD -----		1					
- 4	0523522-7	PAD-NEOPRENE -----		2					
- 5	SEE FIG 12	VALVE-FUEL DRAIN -----		1					
- 6	MS28778-4	GASKET -----		1					
- 7	0426015-1	CAP ASSEMBLY-FUEL TANK -----		1					
- 8	C156001-0104	CHAIN ASSEMBLY -----		1					
- 9	0426011-4	FUEL FILLER NECK-CAP ADAPTER -----		1					
-10	0523552-2	WELD ASSY-FUEL VENT LH TANK ONLY ----- ATTACHING PARTS		1					
-11	0523554-1	GASKET -----		1					
-12	0523554-2	GASKET -----		1					
-13	0523556-1	WASHER -----		1					
-14	AN924-60	NUT -----		1					
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-15	0716124-9	VALVE ASSEMBLY-FUEL TANK VENT -----		1					
-16	0523557-1	TRANSMITTER-FUEL GAGE ----- ATTACHING PARTS		1					
	AN520-10R10	SCREW -----		5					
	AN960D10L	WASHER -----		5					
	S350	WASHER -----		5					
-17	0413247	STRAP-GROUND -----		1					
	S1588-1	GASKET -----		1					
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-18	0526007-203	TANK ASSEMBLY-FUEL LH -----		1					
	0526007-44	TANK ASSEMBLY-FUEL RH ----- ATTACHING PARTS		1					
-19	AN520-10R36	SCREW -----		2					
-20	MS21044N3	NUT -----		2					
-21	AN520-10R8	SCREW -----		6					
-22	0426013-1	GASKET -----		1					
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-23	NAS697A3	NUTPLATE -----		6					
-24	0523559-12	LINE ASSEMBLY-VENT -----		1					

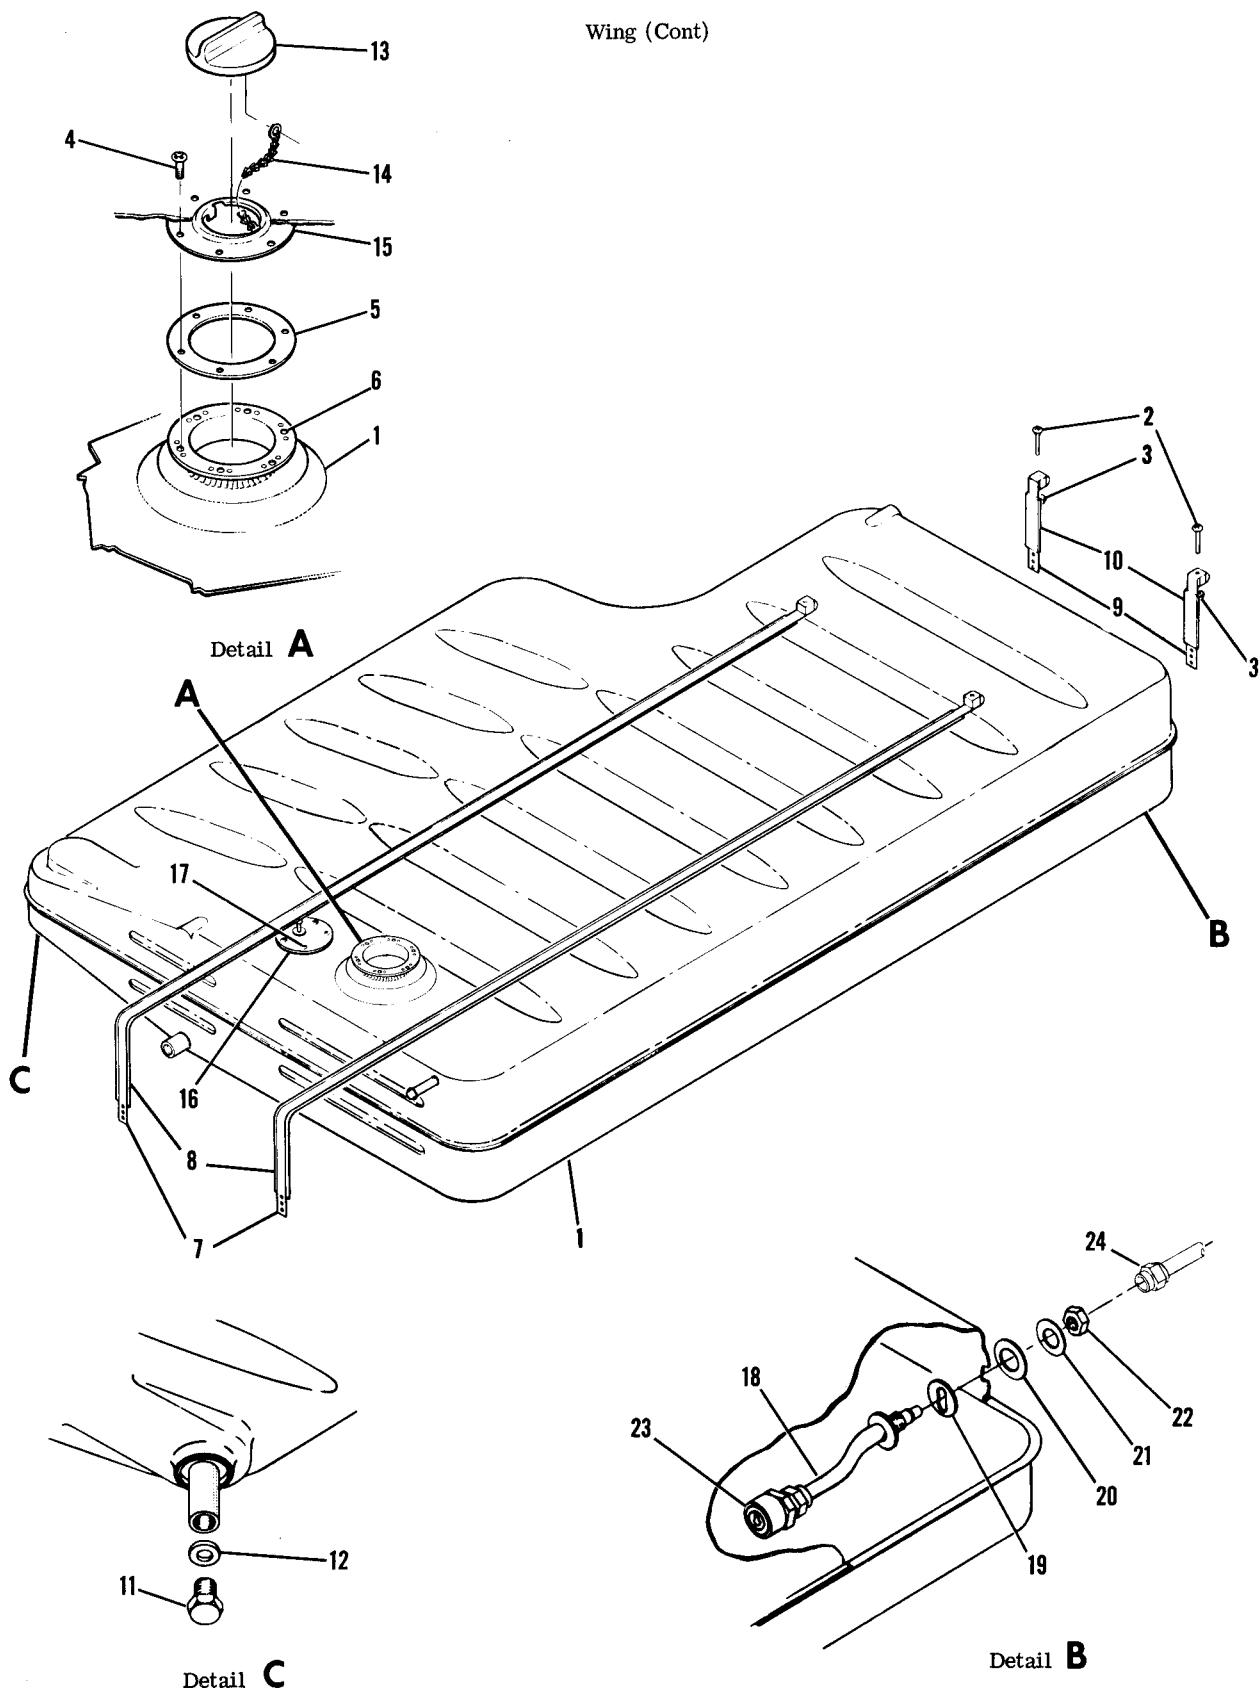


Figure 11. Fuel Tank Installation - Long Range

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
		1 2 3 4 5 6 7		
11 -		TANK INSTALLATION-FUEL LH LONG RANGE ----- TANK INSTALLATION-FUEL RH LONG RANGE -----	NP	
- 1	0526000-19	TANK ASSY-FUEL LH -----	NP	
	0526000-18	TANK ASSY-FUEL RH -----	1	
		ATTACHING PARTS	1	
- 2	AN520-10R36	SCREW -----	2	
- 3	MS21044N3	NUT -----	2	
- 4	AN520-10R8	SCREW -----	6	
- 5	0426013-1	GASKET -----	1	
		-----* -----</td <td></td> <td></td>		
- 6	MS21044N3	NUT -----	6	
- 7	0523522-8	STRAP ASSY-FUEL TANK INBD -----	2	
- 8	0523522-10	PAD-NEOPRENE -----	1	
- 9	0523522-1	STRAP ASSY-FUEL TANK OUTBD -----	2	
- 10	0523522-7	PAD-NEOPRENE -----	1	
- 11	SEE FIG 12	VALVE-FUEL DRAIN -----	1	
- 12	MS28778-4	GASKET-DRAIN PLUG -----	2	
- 13	0426015-1	CAP ASSY-FUEL TANK -----	1	
- 14	C156001-0104	CHAIN ASSY -----	1	
- 15	0426011-4	FUEL FILLER NECK-CAP ADAPTOR -----	2	
- 16	0523557-1	TRANSMITTER-FUEL GAGE -----	1	
		ATTACHING PARTS		
- 17	AN520-10R10	SCREW -----	5	
	S350	WASHER -----	5	
	S1588-1	GASKET -----	1	
	0413247	STRAP-GROUND -----	1	
		-----* -----</td <td></td> <td></td>		
- 18	0523552-2	WELD ASSY-FUEL VENT LH TANK ONLY ----- ATTACHING PARTS	1	
- 19	0523554-1	GASKET -----	1	
- 20	0523554-2	GASKET -----	1	
- 21	0523556-1	WASHER -----	1	
- 22	AN924-6D	NUT -----	1	
		-----* -----</td <td></td> <td></td>		
- 23	071624-9	VALVE ASSY-FUEL TANK VENT -----	1	
- 24	0523559-11	VENT LINE ASSY -----	1	

This page intentionally left blank.

Wing (Cont)

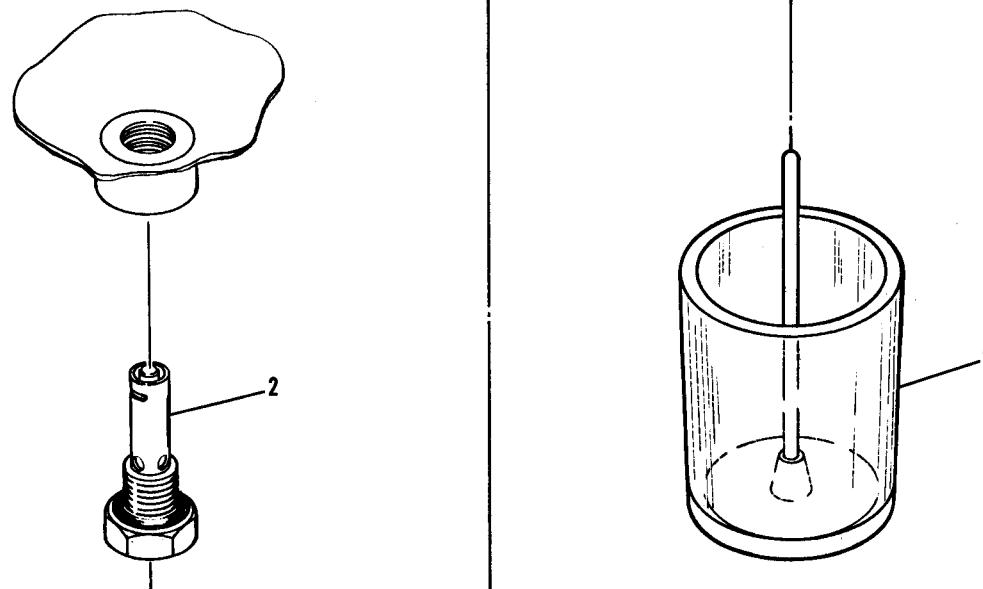


Figure 12. Fuel Tank Drain Valve Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
			1	2	3	4
12 - - 1 - 2	S2107-1 S2106-2	<p>FUEL TANK DRAIN VALVE INSTALLATION ----- CUP-FUEL SAMPLER ----- VALVE FLUSH -----</p> <p>NOTE. *THESE PARTS & INSTALLATION INSTRUCTIONS ARE AVAILABLE AS A KIT & MAY BE ORDERED UNDER PART NUMBER AK150-82.</p>	1 1 1			

Wing (Cont)

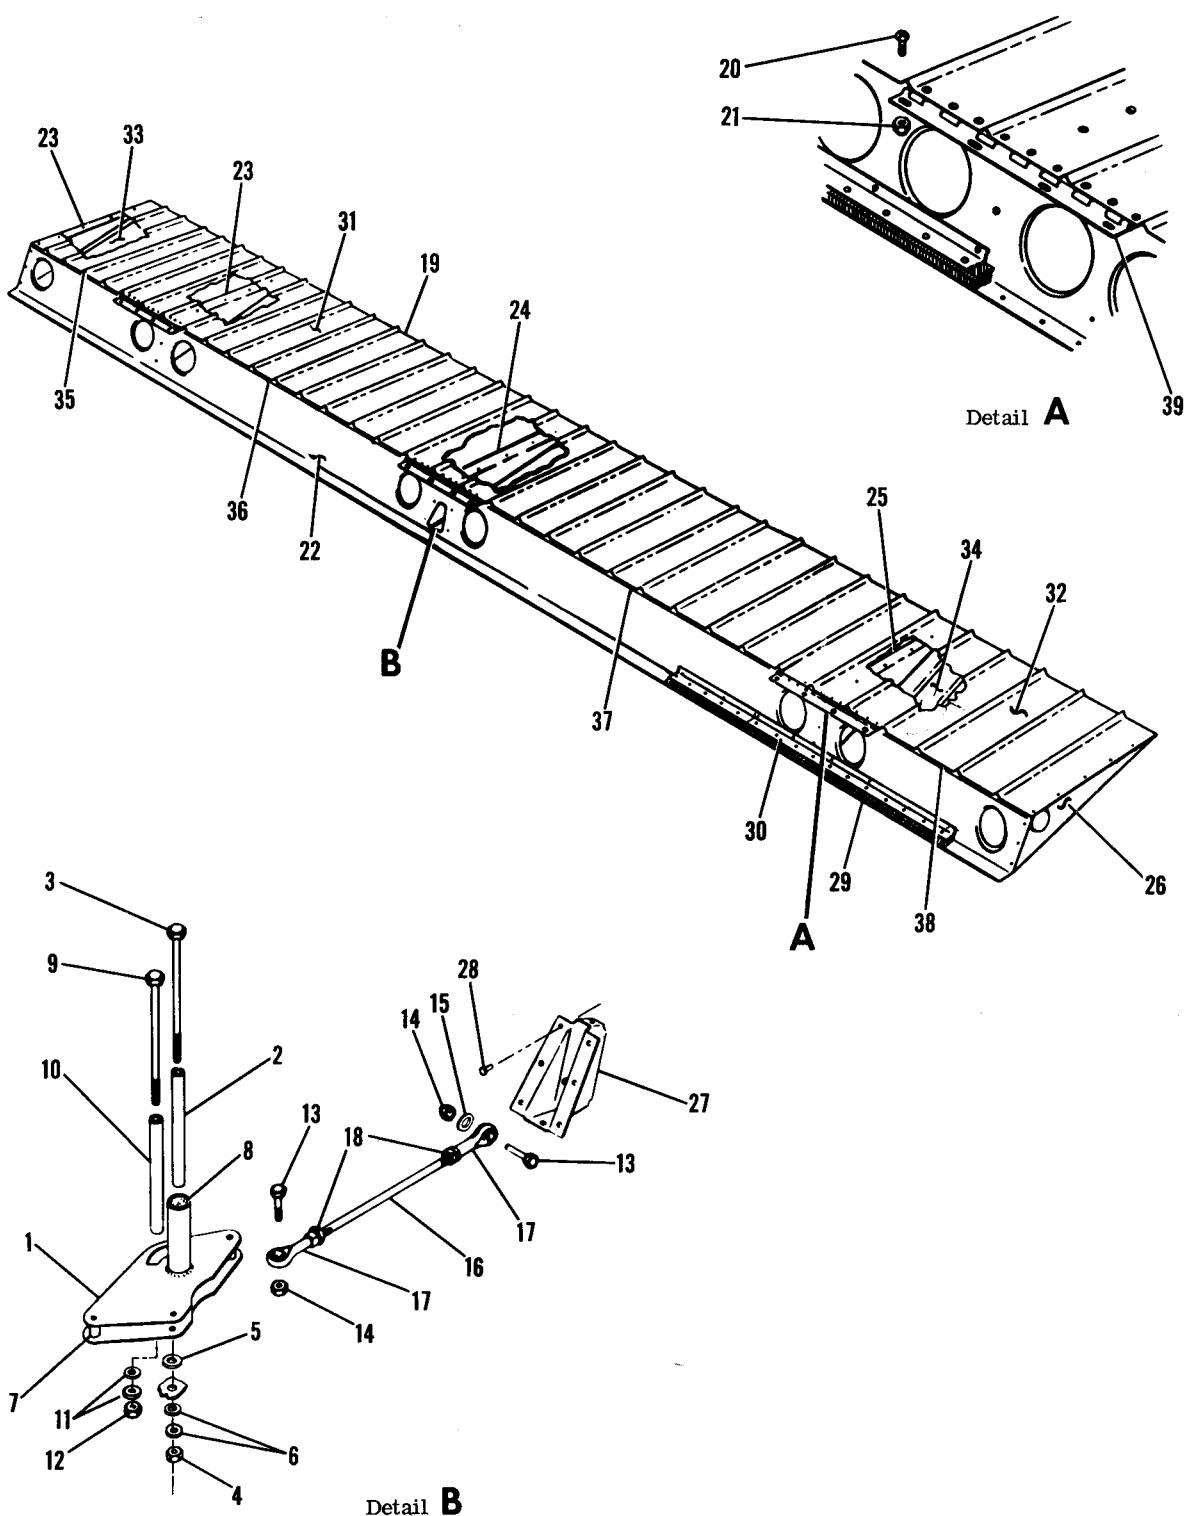


Figure 13. Aileron Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
13 - - 1	0523223 0523223-1	AILERON INSTALLATION -- BELLCRANK ASSEMBLY-AILERON LH -- BELLCRANK ASSEMBLY-AILERON RH -- ATTACHING PARTS		NP					
- 2	0523221	BUSHING --		1					
- 3	AN4-42A	BOLT --		1					
- 4	MS21042L4	NUT --		1					
- 5	0522629-1	WASHER --		1					
- 6	AN960-416	WASHER --	2						
- 7	0422280	-----*							
- 8	B610	BUSHING --		2					
	B610-P	BEARING TOR --		2					
	B610-DH	BEARING TOR ALTERNATE --		2					
- 9	AN4-42A	BOLT-BELLCRANK STOP --		1					
-10	0523222	BUSHING-BELLCRANK STOP --		1					
-11	AN960-416	WASHER --		2					
-12	MS21042L4	NUT-BELLCRANK STOP --		1					
	0523218	ROD ASSEMBLY-AILERON PUSH-PULL -- ATTACHING PARTS		2					
-13	AN3-7A	BOLT --		2					
-14	MS21044N3	NUT --		2					
-15	AN960-10	WASHER --	1						
-16	0523218-2	-----*							
-17	S1106-3	ROD-AILERON PUSH-PULL --		1					
-18	AN316-4R	ROD END --		2					
-19	0523800	NUT-CHECK --		2					
	0523800-1	AILERON ASSEMBLY LEFT WING --		1					
		AILERON ASSEMBLY RIGHT WING --		1					
-20	NAS221-8	ATTACHING PARTS							
-21	MS21044N3	SCREW --		12					
		NUT --		12					
-22	0523806	-----*							
	0523806-1	SPAR-AILERON LH --		1					
-23	0523808	SPAR-AILERON RH --		1					
	0523808-2	RIB NO.1-AILERON LH --		2					
-24	0523809	RIB NO.1-AILERON RH --		1					
	0523809-1	RIB NO.2-AILERON LH --		1					
-25	0523810	RIB NO.2-AILERON RH --		1					
-26	0523811-1	RIB NO.3-AILERON --		1					
	0523811	RIB NO.4-AILERON LH --		1					
-27	0760011-2	RIB NO.4-AILERON RH --		1					
		BRACKET-CONTROL --		1					
		ATTACHING PARTS							
-28	CR163-4-8	RIVET CY --		1					
-29	0724115-2	-----*							
		WEIGHT-AILERON BALANCE --		3					
-30	0523814-6	ATTACHING PARTS							
		BRACKET-AILERON WEIGHT --		1					
-31	0523800-6	-----*							
	0523800-7	SKIN-UPPER INBOARD LH --		1					
-32	0523800-8	SKIN-UPPER INBOARD RH --		1					
	0523800-9	SKIN-UPPER OUTBOARD LH --		1					
-33	0523800-10	SKIN-UPPER OUTBOARD RH --		1					
	0523800-11	SKIN-LOWER INBOARD LH --		1					
-34	0523800-12	SKIN-LOWER INBOARD RH --		1					
	0523800-13	SKIN-LOWER OUTBOARD LH --		1					
-35	0523813-1	SKIN-LOWER OUTBOARD RH --		1					
-36	0523813-8	SPACER --		1					
-37	0523813-6	SPACER --		1					
-38	0523813-7	SPACER --		1					
-39	0523807	HINGE ASSEMBLY-AILERON --	3						

Wing (Cont)



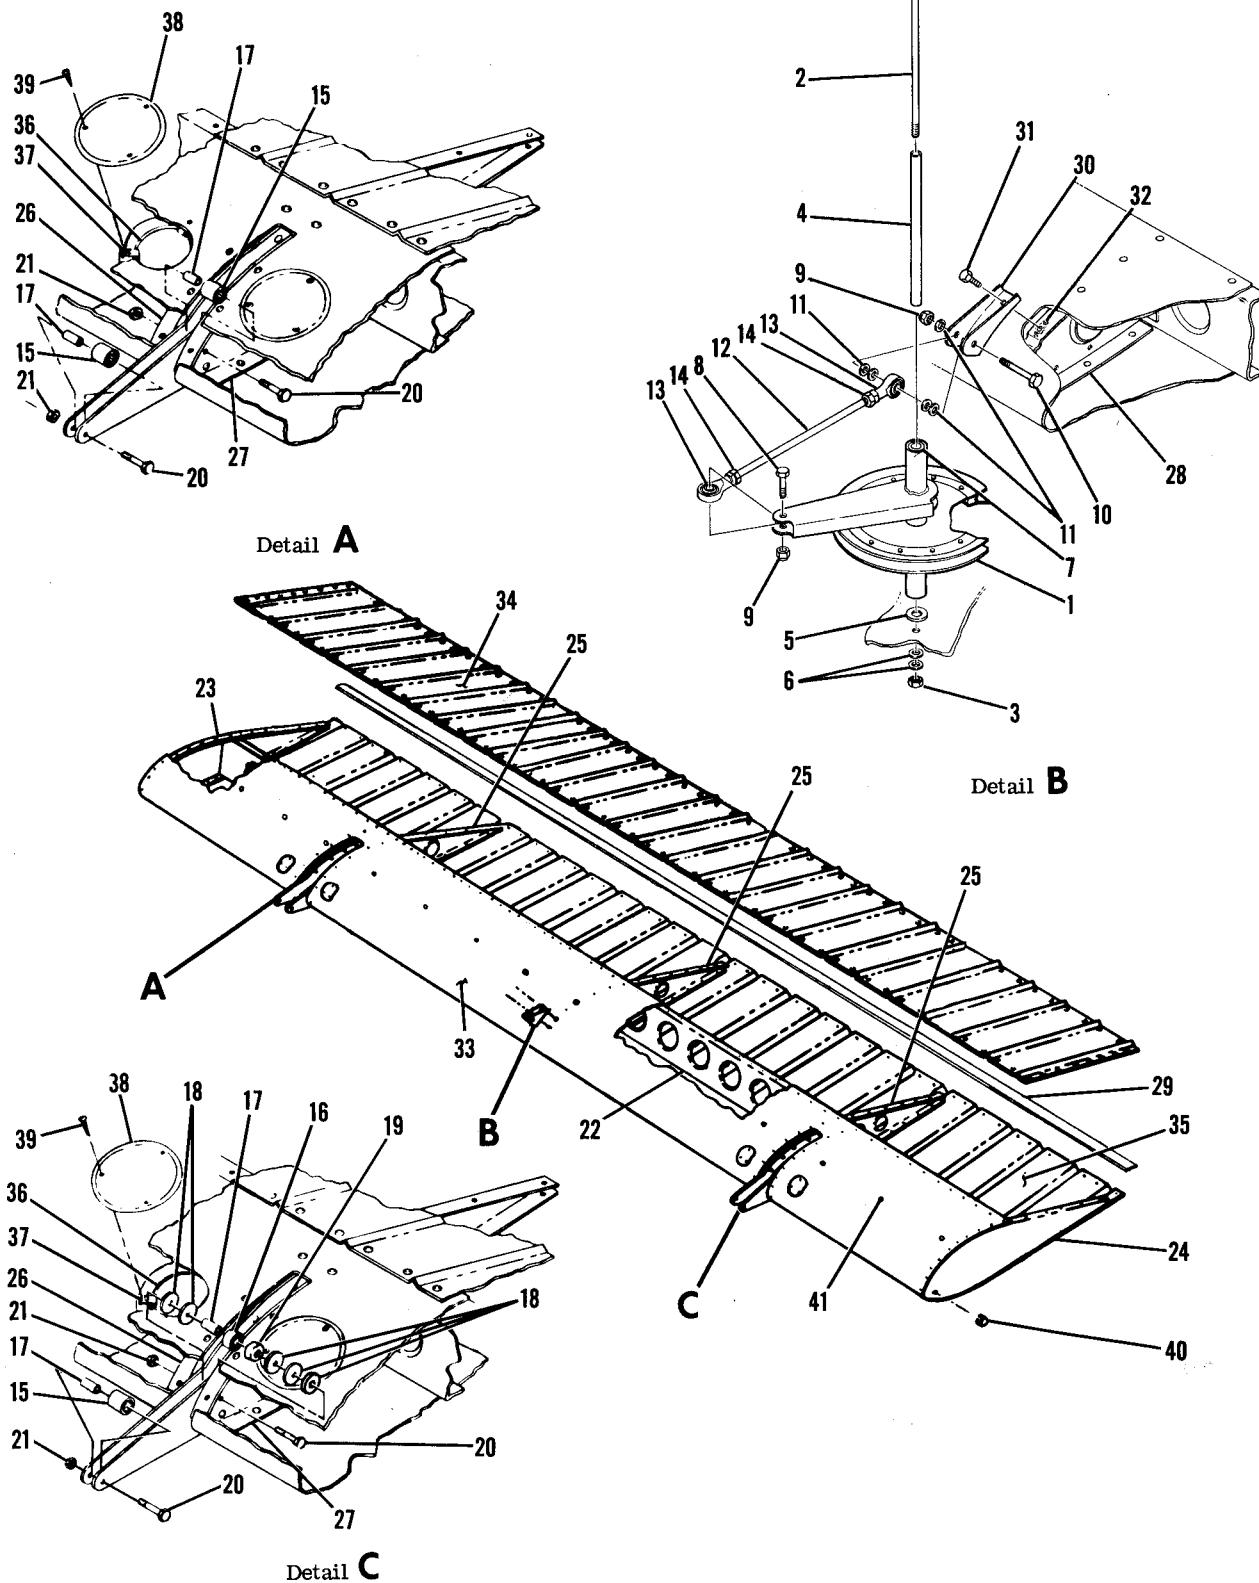


Figure 14. Flap Installation




FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
14 -		FLAP INSTALLATION -----							
- 1	0760612-7	DRIVE PULLEY ASSY-LEFT FLAP -----	1						
	SEE FIG 82	DRIVE PULLEY ASSY-RIGHT FLAP -----	1						
- 2	AN4-60A	ATTACHING PARTS -----							
- 3	MS21042L4	BOLT -----	1						
- 4	0523536	NUT -----	1						
- 5	0522629-1	BUSHING -----	1						
- 6	AN960-416	WASHER -----	1						
		WASHER -----	2						
- 7	B610	-----*							
	0523537	BEARING TOR -----	2						
		ROD ASSEMBLY-FLAP PUSH PULL -----	2						
		ATTACHING PARTS -----							
- 8	AN3-6A	BOLT -----	1						
- 9	MS21044N3	NUT -----	2						
-10	AN3-11A	BOLT -----	1						
-11	AN960-10	WASHER -----	5						
		-----*							
-12	0523537-2	ROD-FLAP PUSH PULL -----	1						
-13	S1106-3	ROD END -----	2						
	S1819-3	ROD END ALTERNATE -----	2						
-14	AN316-4R	NUT-CHECK -----	2						
	0523901-35	* FLAP ASSY-LEFT WING -----	1						
	0523901-38	FLAP ASSY-RIGHT WING -----	1						
		ATTACHING PARTS -----							
-15	0523921	ROLLER ASSY-FLAP ATTACHMENT -----	3						
-16	0523920	ROLLER ASSY-FLAP ATTACHMENT -----	1						
-17	0523919	BUSHING-FLAP ATTACHMENT ROLLER -----	4						
-18	0523922	SPACER-FLAP ATTACHMENT -----							
-19	1220114-2	SPACER OUTBOARD -----							
-20	AN3-10A	BOLT -----	1						
-21	MS21044N3	NUT -----	4						
		-----*							
-22	0523911	SPAR-FLAP LH -----	1						
	0523911-1	SPAR-FLAP RH -----	1						
-23	0523912	RIB-FLAP INBOARD -----	1						
-24	0523912-1	RIB-FLAP OUTBOARD -----	1						
-25	0523923	RIB-FLAP TRAILING EDGE -----	3						
-26	0523901-14	RIB ASSY-FLAP SUPPORT ARM RIGHT -----	2						
-27	0523901-13	RIB ASSY-FLAP SUPPORT ARM LEFT -----	2						
-28	0523914	RIB ASSY-FLAP LEADING EDGE CENTER -----	1						
-29	0523901-37	STRIP-REINFORCEMENT -----	1						
-30	0523918	BRACKET-FLAP CONTROL -----	1						
		ATTACHING PARTS -----							
-31	AN3-4A	BOLT -----	2						
-32	NAS680A3	NUTPLATE -----	2						
		-----*							
-33	0523901-2	SKIN-FLAP LEADING EDGE LH -----	1						
	0523901-3	SKIN-FLAP LEADING EDGE RH -----	1						
-34	0523901-36	SKIN-FLAP UPPER LH -----	1						
	0523901-39	SKIN-FLAP UPPER RH -----	1						
-35	0523901-6	SKIN-FLAP LOWER LH -----	1						
	0523901-7	SKIN-FLAP LOWER RH -----	1						
-36	S237-4	DOUBLER-ACCESS HOLE -----	4						
-37	NAS395-14-3	NUT -----	3						
-38	S225-3	COVER-ACCESS HOLE -----	4						
		ATTACHING PARTS -----							
-39	S1021Z8-8	SCREW -----	3						
		-----*							
-40	CM2692-20-1S	PLUG BUTTON -----	4						
-41	S1093-1	PLUG BUTTON -----	14						

NOTE. WHEN ORDERING PARTS MARKED * ALSO ORDER PART MARKED %.

Strut

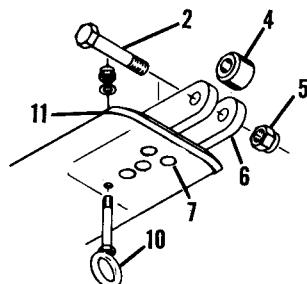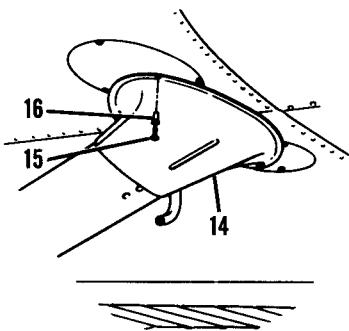

Detail A

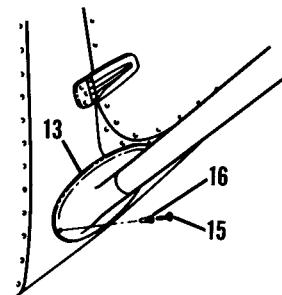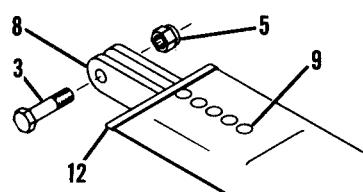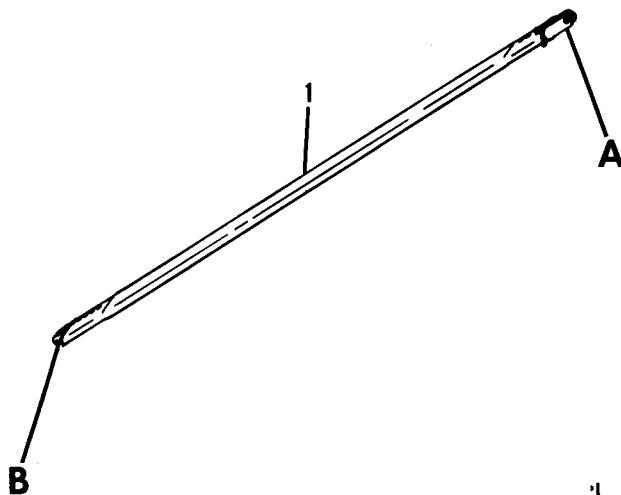

Detail B

Figure 15. Strut Assembly - Wing

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
15 - 1	0523606-17 0523606-18	STRUT ASSEMBLY-LH STRUT ASSEMBLY-RH ATTACHING PARTS	1 1	
- 2	AN8-25A	BOLT	1	
- 3	AN8-17A	BOLT	1	
- 4	0523307	SPACER	1	
- 5	MS20365-820C AN960-816	NUT WASHER	2 2	
		-----* -----</td <td></td> <td></td>		
- 6	0523614-1	FITTING-STRUT UPPER END ATTACHING PARTS	1	
- 7	MS20426AD10-30 0723600-6	RIVET RIVET ALTERNATE	5 5	
		-----* -----</td <td></td> <td></td>		
- 8	0523608-2	FITTING-STRUT LOWER END ATTACHING PARTS	1	
- 9	MS20426AD10 0723600-6	RIVET RIVET ALTERNATE	4 4	
		-----*		
-10	0523613-1	RING-MOORING ATTACHING PARTS	1	
	MS21042L5 AN960-516	NUT WASHER	1 1	
		-----*		
-11	0523606-5	SEAL-UPPER	1	
-12	0523606-4	SEAL-LOWER	1	
-13	0522150-1	FAIRING-LOWER LH	1	
	0522150-2	FAIRING-LOWER RH	1	
-14	0523047-1	FAIRING-UPPER LH	1	
	0523047-2	FAIRING-UPPER RH ATTACHING PARTS	1	
		-----*		
-15	AN515-8R8 AN515-8R8	SCREW LOWER	3	
-16	NAS1329A08-75 NAS1329A08-75	SCREW UPPER RIVNUT LOWER	4 3	
		RIVNUT UPPER	4	
		-----*		

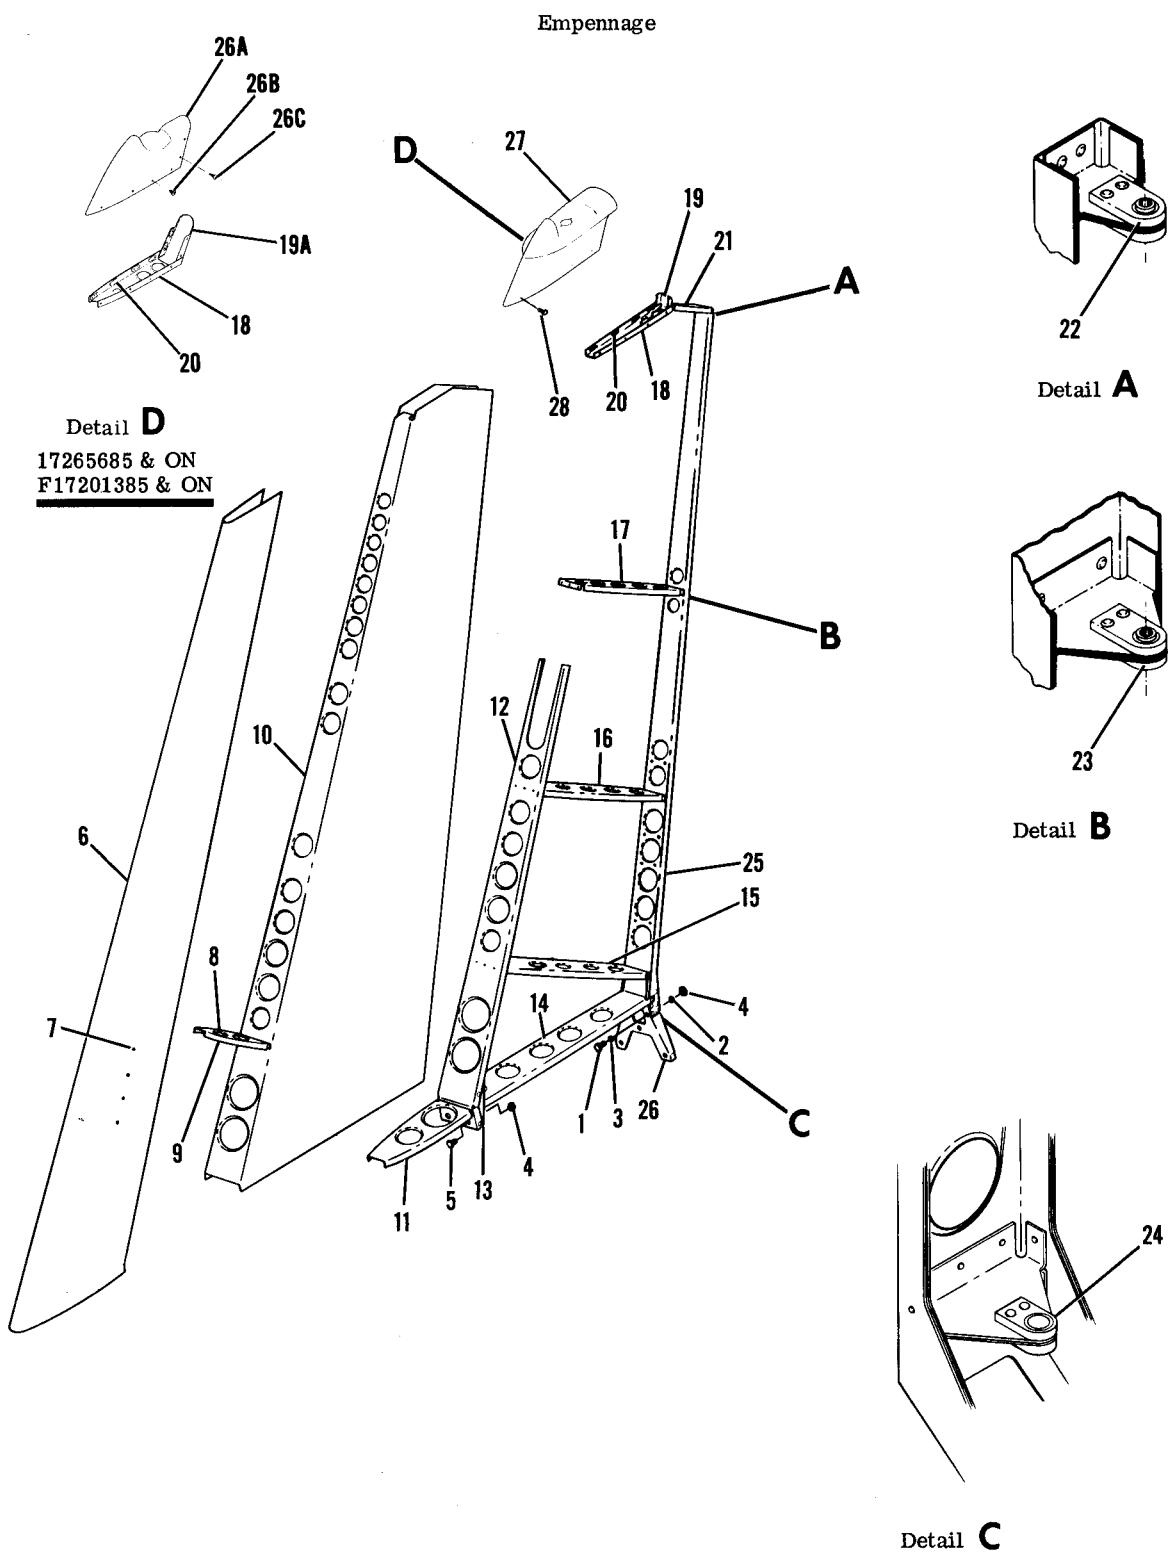


Figure 16. Fin Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
16 -	0531006-203 0531006-110	FIN INSTALLATION FIN ASSY LESS TIP FIN ASSY INCLUDES TIP ATTACHING PARTS	NP 1 1	A B
- 1	AN5-10A	BOLT	2	
- 2	AN960-516	WASHER	2	
- 3	AN960-516L	WASHER	2	
- 4	MS21042L5	NUT	4	
- 5	AN5-5A	BOLT	2	
- 6	0531006-96	SKIN ASSY	1	
- 7	S1863-3	NUTPLATE	6	
- 8	0531006-95	RIB ASSY	1	
- 9	S1863-3	NUTPLATE	2	
-10	0531006-5	SKIN	1	
-11	0531006-16	RIB	1	
-12	0531006-13	REINFORCEMENT ASSY-VERTICAL FIN	1	
-13	0531006-15	GUSSET	1	
-14	0531006-87	RIB	1	
-15	0531006-18	RIB	1	
-16	0531006-19	RIB	1	
-17	0531006-20	RIB	1	
-18	0531006-21	RIB	1	
-19	0531014-1	BULKHEAD-VERTICAL FIN CAP	1	
-19A	0531034-1	RIB-AFT FIN TIP	1	
-20	S1862-1	NUT	8	
-21	0531006-54	RIB	1	
-22	0531006-39	HINGE HALF ASSY-UPPER	1	
-23	0531006-44	HINGE HALF ASSY-MIDDLE	1	
-24	0531006-49	HINGE HALF ASSY-LOWER	1	
-25	0531006-9	SPAR ASSY-VERTICAL FIN	1	
-26	0531006-10	FITTING	1	
-26A	0531033-1	FIN CAP	1	B
		ATTACHING PARTS		
	S1021Z6-4	SCREW	8	B
	S1021Z6-6	SCREW	4	B
-27	0531013-1	-----*		
		TIP ASSY-VERTICAL FIN	1	A
		ATTACHING PARTS		
-28	S1021Z6-4	SCREW	8	A
	S1021Z6-6	SCREW	4	A
	SEE FIG 101	-----*		
		TIP ASSY-VERTICAL FIN FLASHING BEACON	1	
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384		
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

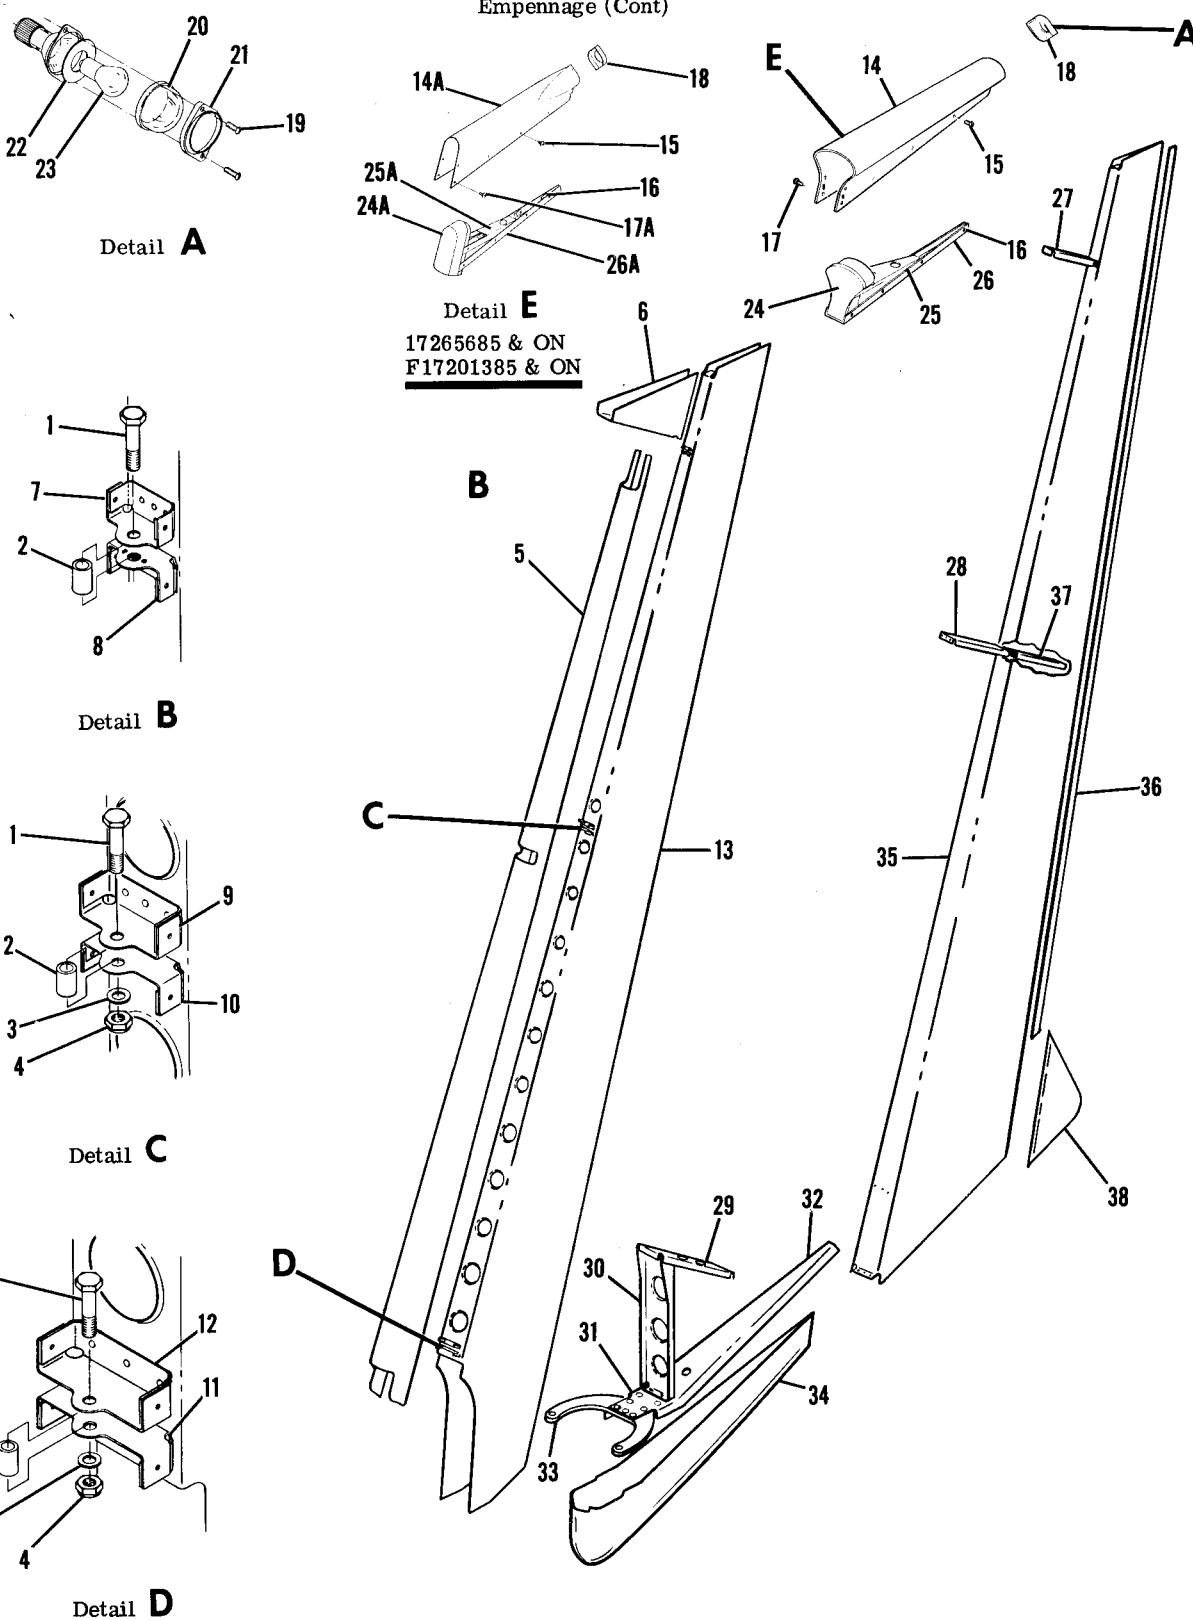


Figure 17. Rudder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
17 -	0531006-81 0531006-108	RUDDER ASSEMBLY RUDDER ASSEMBLY ATTACHING PARTS	1 1	A B
- 1	AN4-11A	BOLT	3	
- 2	0532104	BUSHING	3	
- 3	AN960-416	WASHER LOWER & CENTER HINGE ONLY	2	
- 4	MS21042L4	NUT LOWER & CENTER HINGE ONLY	2	
- 5	0531006-68	-----*		
- 6	0531006-55	SKIN	1	
	0531006-112	SKIN	1	A
- 7	0531018-6	SKIN	1	B
- 8	0531018-7	BRACKET	1	
	NAS698A4	BRACKET	1	
- 9	0531018-4	NUTPLATE	1	
-10	0531018-3	BRACKET	1	
-11	0531018-1	BRACKET	1	
-12	0531018-2	BRACKET	1	
-13	0531006-69	SKIN	1	
-14	0533009-1-791	TIP-RUDDER	1	
-14A	0531006-112	TIP-RUDDER ATTACHING PARTS	1 6	A B
-15	S1021Z6-6	SCREW	6	
-16	S1862-1	NUT	6	
-17	AN520-10R8	SCREW	2	
-17A	AN525-10R7	SCREW	4	A B
-18	0433007 C622001-0401	-----*		
-19	AN515-4R6	MOUNT-TAIL LIGHT LIGHT ASSY-RUDDER ATTACHING PARTS	1 1 2	
-20	A4513-1	SCREW		
-21	A2108A	LENS-TAIL LIGHT CLEAR GMC	1	
-22	A2109-3	LENS-RETAINER GMC	1	
-23	1777	GASKET GMC	1	
-24	0533011-1	LAMP-TAIL LIGHT	1	
-24A	0533134-1	WEIGHT ASSY-RUDDER	1	B
-25	0531006-85	WEIGHT ASSY-RUDDER	1	A
-25A	0531006-107	RIB	1	B
-26	0531006-30	RIB	1	A
-26A	0531006-105	RIB	1	B
-27	0531006-32	RIB	1	A
-28	0531006-29	RIB	1	B
-29	0531006-28	RIB	1	A
-30	0531006-71	RIB	1	B
-31	0531006-24	RIB ASSY	1	A
-32	0531006-25	RIB	1	B
-33	0531008-1	HORN	1	A
-34	0531006-80-791	BUTT-RUDDER	1	B
-35	0531006-70	SKIN	1	A
-36	0531006-79	FILLER-RUDDER	1	B
-37	0531006-58	RIB	1	A
-38	0531001-3	TRIM TAB-RUDDER	1	B
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

Empennage (Cont)

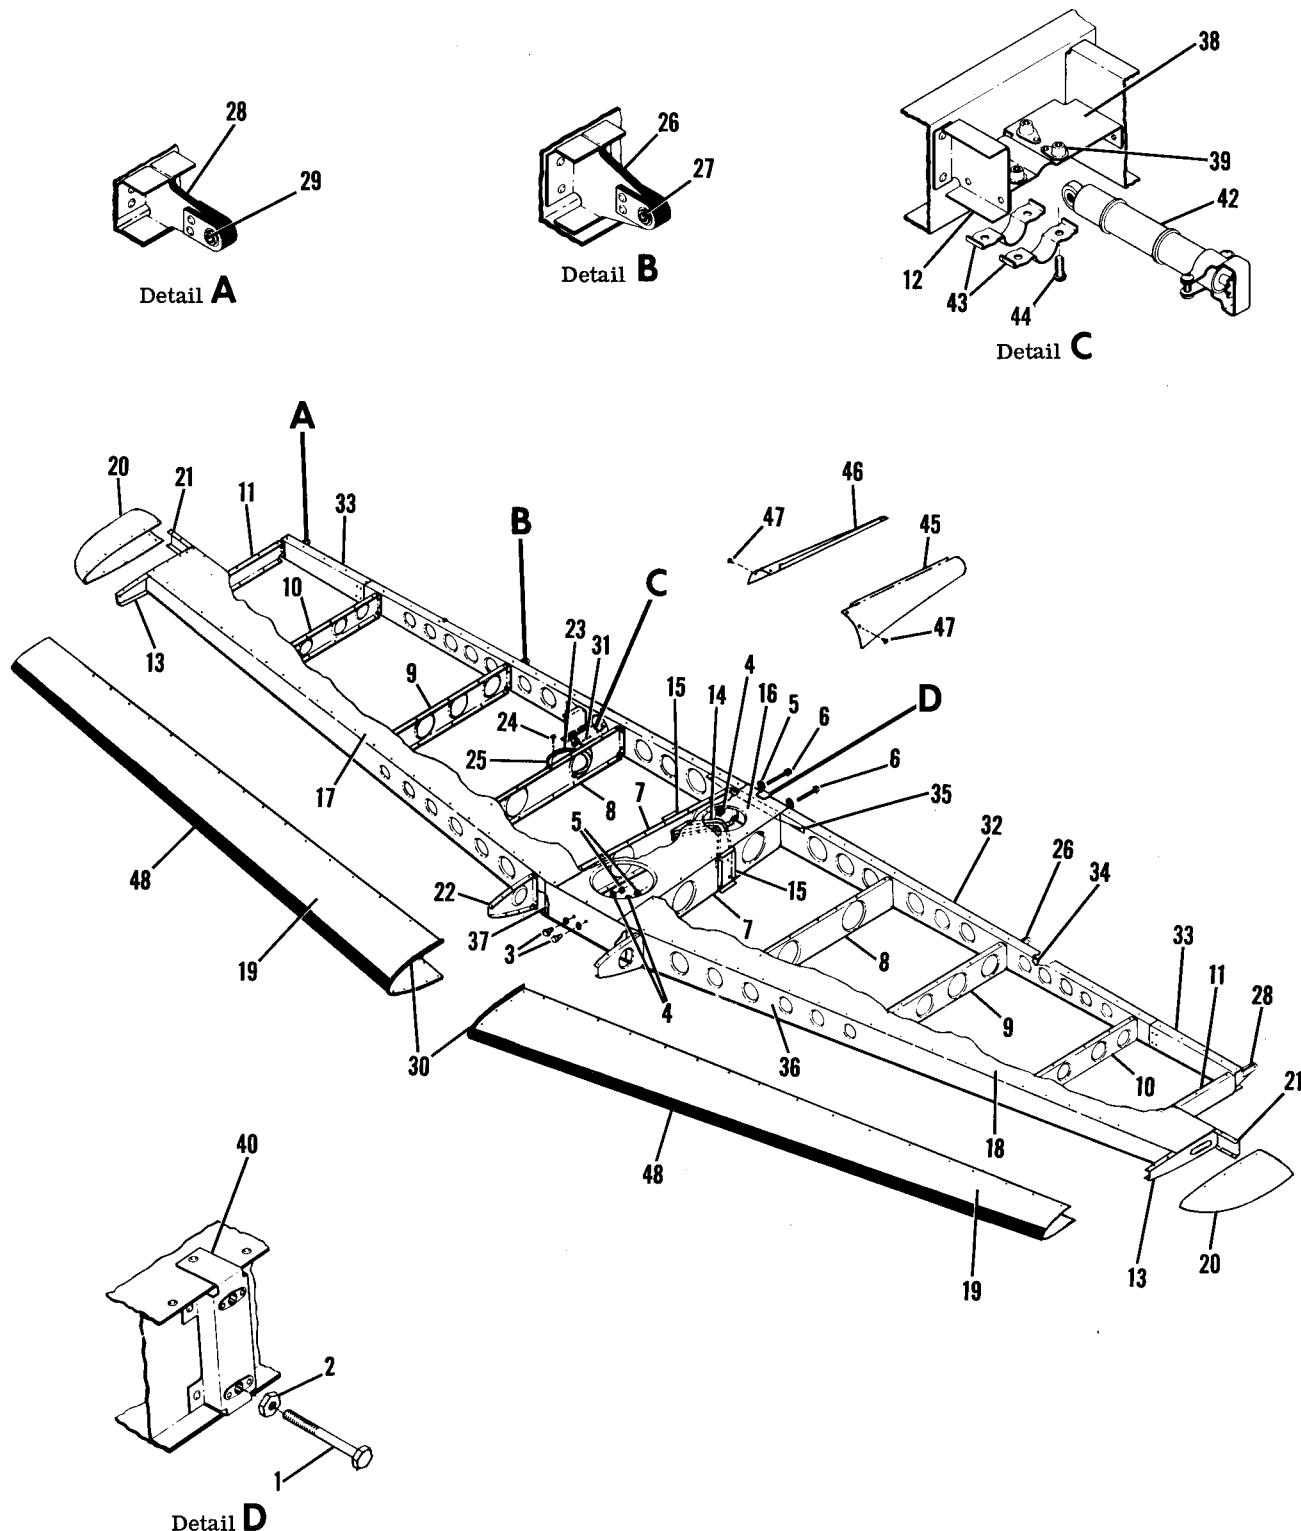


Figure 18. Stabilizer Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
18 -		STABILIZER INSTALLATION -----								NP	
- 1	NAS428H3-16	BOLT-ELEVATOR STOP -----								2	
- 2	AN315-3R	NUT-ELEVATOR STOP -----								2	
	0532001-202	STABILIZER ASSEMBLY ----- ATTACHING PARTS								1	
- 3	AN5-4A	BOLT -----								2	
	AN960-516	WASHER UNDER NUT -----								8	
- 4	MS21042L5	NUT -----								4	
- 5	S1450-5A20-100	WASHER BETWEEN STABILIZER & FITTING -----								AR	
	S1450-5A20-080	WASHER BETWEEN STABILIZER & FITTING -----								AR	
	S1450-5A20-063	WASHER BETWEEN STABILIZER & FITTING -----								AR	
- 6	AN5-23A	BOLT -----								2	
		-----*									
- 7	0532001-99	RIB-STABILIZER -----								2	
- 8	0532001-13	RIB-STABILIZER -----								2	
- 9	0532001-14	RIB-STABILIZER -----								2	
-10	0532001-15	RIB-STABILIZER -----								2	
-11	0532001-16	RIB-STABILIZER -----								2	
-12	0532001-17	STUB RIB-STABILIZER -----								1	
-13	0532001-77	RIB-STABILIZER OUTBOARD -----								2	
-14	0532001-21	BRACKET-PULLEY -----								2	
-15	0532001-22	STIFFENER-STABILIZER -----								2	
-16	0532001-23	SKIN-STABILIZER CENTER -----								1	
-17	0532001-74	SKIN-STABILIZER RH -----								1	
-18	0532001-75	SKIN-STABILIZER LH -----								1	
-19	0532001-76	SKIN-LEADING EDGE -----								2	
-20	0532001-93	TIP-STABILIZER -----								2	
-21	0532001-78	TIP RIB-STABILIZER -----								2	
-22	0532001-50	RIB-STABILIZER NOSE -----								2	
-23	0432155	RETAINER-ACTUATOR COVER PLATE ----- ATTACHING PARTS								1	
-24	S1021Z8-8	SCREW -----								4	
-25	NAS395-14-3	NUT -----								4	
		-----*									
-26	0532105-6	HINGE ASSEMBLY-STABILIZER -----								2	
-27	0532104	BUSHING-STABILIZER -----								1	
	S1003-29A	BEARING-STABILIZER -----								1	
-28	0532105-9	HINGE ASSEMBLY-STABILIZER -----								2	
-29	0532104	BUSHING-STABILIZER -----								1	
	S1003-29A	BEARING-STABILIZER -----								1	
-30	S1415-1	MOULDING-STABILIZER ----- ATTACHING PARTS								2	
		SCREW -----								2	
		WASHER -----								2	
		-----*									
-31	0432123	PLATE-STABILIZER -----								1	
-32	0532001-96	SPAR ASSEMBLY-REAR -----								1	
-33	0532001-7	TIP-SPAR -----								2	
-34	0532001-8	REINFORCEMENT-SPAR -----								1	
-35	0532001-81	ANGLE-REINFORCEMENT -----								2	
-36	0532001-98	SPAR ASSEMBLY-FRONT -----								1	
-37	0532001-97	REINFORCEMENT-SPAR -----								2	
-38	0532001-20	BRACKET ASSEMBLY-STABILIZER -----								1	
-39	NAS698A3	NUTPLATE -----								4	
-40	0532006-1	BRACKET ASSEMBLY -----								1	
-41		DELETED -----									
-42	SEE FIG 19	ACTUATOR ASSEMBLY-ELEVATOR TAB ----- ATTACHING PARTS								1	
-43	0432126	CLAMP-ACTUATOR -----								2	
-44	AN520-10R8	SCREW -----								4	
		-----*									
-45	0530010-5	FAIRING ASSEMBLY-LH -----								1	
-46	0530010-6	FAIRING ASSEMBLY-RH -----								1	
		ATTACHING PARTS									
-47	S1021Z8-8	SCREW -----								2	
		-----*									
-48	S1938-1	SHOE-HORIZONTAL STABILIZER FSO S1938-1-67.00 -----								2	

Empennage (Cont)

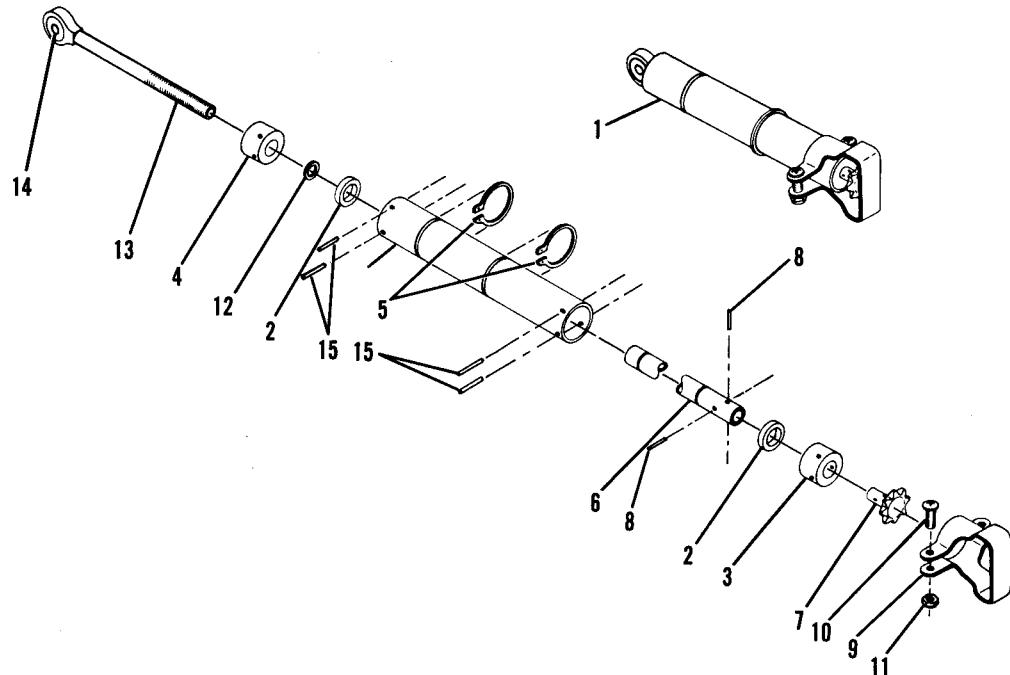


Figure 19. Elevator Trim Tab Actuator Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
19 - 1	1260074-1	ELEVATOR TRIM TAB ACTUATOR ASSEMBLY	1	
- 2	0310295	COLLAR-ACTUATOR	2	
- 3	0310297-1	BEARING-ACTUATOR	1	
- 4	0310298-1	BEARING-ACTUATOR	1	
- 5	MS16624-81	RING-RETAINER OUTSIDE	2	
- 6	1260049-1	SCREW-INTERNAL THREADS	1	
- 7	0310332	SPROCKET-ROLL CHAIN ATTACHING PARTS	1	
- 8	3/32X.38TYPE3	GROOV-PIN	2	
- 9	0310422-1	GUARD-ROLL CHAIN ATTACHING PARTS	1	
-10	AN515-8R8	SCREW	2	
-11	MS21044N08	NUT	2	
-12	AN6227-5	PACKING-ACTUATOR	1	
-13	0310362-5	SCREW ASSEMBLY-ACTUATOR	1	
-14	PN3A	BEARING TOR	1	
-15	1/16X.62TYPE3	GROOV-PIN	4	

This page intentionally left blank.

Empennage (Cont)


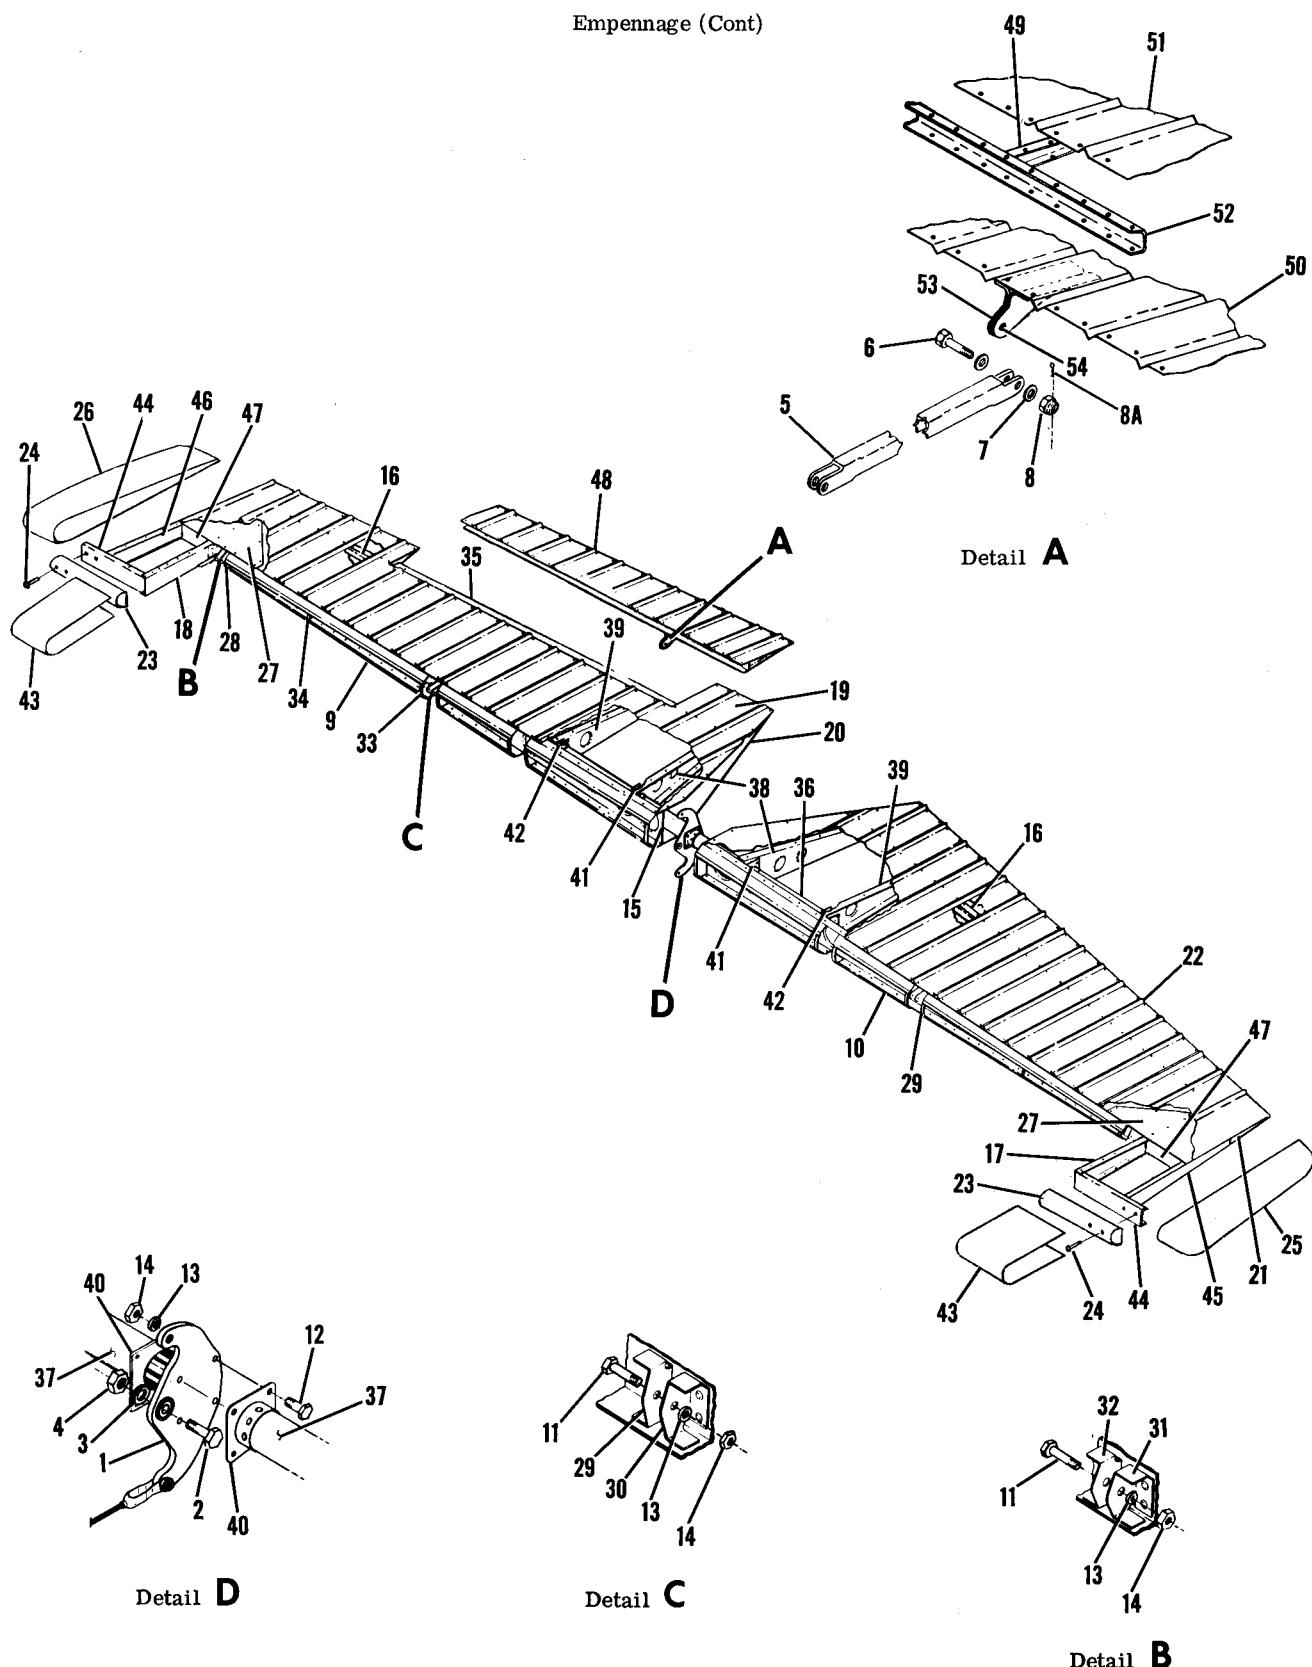



Figure 20. Elevator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
20 -		ELEVATOR INSTALLATION -----							
- 1	0534122-1	BELLCRANK ASSEMBLY ----- ATTACHING PARTS -----	1						
- 2	AN4-14A	BOLT -----		1					
- 3	AN960-416	WASHER -----		1					
- 4	MS21042L4	NUT -----		1					
- 5	0532001-47	-----*							
- 6	AN3-6	CHANNEL-TAB ACTUATOR PUSH-PULL ----- ATTACHING PARTS -----		1					
- 7	AN960-10L	BOLT -----		2					
- 8	AN320-3	WASHER -----		4					
- 8A	MS24665-132	NUT -----		2					
- 9	0593000-4	-----*							
-10	0532001-73	ELEVATOR ASSEMBLY-RH LESS TRIM TAB ----- ELEVATOR ASSEMBLY-LH ----- ATTACHING PARTS -----	1						
-11	AN4-11A	BOLT -----		4					
-12	AN4-7A	BOLT -----		4					
-13	AN960-416	WASHER -----		12					
-14	MS21042L4	NUT -----		8					
-15	0532001-28	-----*							
-16	0532001-29	SPAR-ELEVATOR -----		1					
-17	0532001-83	CHANNEL-ELEVATOR -----		1					
-18	0532001-82	RIB-ELEVATOR LH -----		1					
-19	0532001-88	RIB-ELEVATOR RH -----		1					
-20	0532001-90	SKIN-ELEVATOR UPPER RH -----		1					
-21	0532001-91	SKIN-ELEVATOR LOWER RH -----		1					
-22	0532001-89	SKIN-ELEVATOR LOWER LH -----		1					
-23	0532107-1	SKIN-ELEVATOR UPPER LH ----- WEIGHT-ELEVATOR BALANCE ----- ATTACHING PARTS -----	1						
-24	AN509-8R15	SCREW -----		2					
-25	0532001-94-791	-----*							
-26	0532001-100-791	TIP-ELEVATOR LH -----		1					
-27	0532001-86	TIP-ELEVATOR RH -----		1					
-28	0532001-87	DOUBLER-ELEVATOR UPPER -----		1					
-29	0532105-3	DOUBLER-ELEVATOR LOWER -----		1					
-30	0532105-4	BRACKET-ELEVATOR OUTBOARD -----		1					
-31	0531105-10	BRACKET-ELEVATOR INBOARD -----		1					
-32	0531105-11	BRACKET-ELEVATOR OUTBOARD -----		1					
-33	0534126-1	CLIP-ELEVATOR INBOARD -----		5					
-34	0534126-2	CLIP-ELEVATOR OUTBOARD -----		2					
-35	0532001-45	HINGE ASSEMBLY-TAB RH -----		1					
-36	0532001-30	TORQUE TUBE ASSEMBLY-ELEVATOR -----		1					
-37	0532001-31	TUBE-TORQUE -----		1					
-38	0532001-32	RIB-ELEVATOR -----		1					
-39	0532001-33	RIB-ELEVATOR -----		1					
-40	0532001-35	ADAPTER-TORQUE TUBE -----		1					
-41	0734102-3	ADAPTER-TORQUE TUBE -----		1					
-42	0734102-4	ADAPTER-TORQUE TUBE -----		1					
-43	0532001-92	SKIN-ELEVATOR TIP -----		1					
-44	0532001-95	RIB ASSEMBLY-TIP -----		1					
-45	0532001-85	RIB-ELEVATOR LH -----		1					
-46	0532001-84	RIB-ELEVATOR RH -----		1					
-47	0532001-80	RIB-SPAR EXTENTION -----		1					
-48	0532001-101	TRIM TAB ASSEMBLY-ELEVATOR -----		1					
-49	0532001-42	RIB-TAB -----		1					
-50	0532001-43	SKIN-TAB LOWER -----		1					
-51	0532001-44	SKIN-TAB UPPER -----		1					
-52	0532001-48	SPAR-TAB -----		1					
-53	0334128-3	HORN ASSEMBLY-TRIM TAB -----		1					
-54	PN-3A	BEARING-HORN ASSEMBLY TOR -----		1					

Fuselage

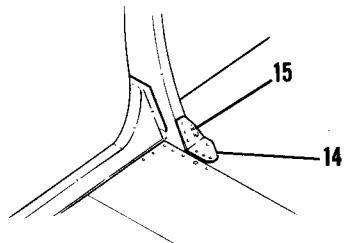

Detail A

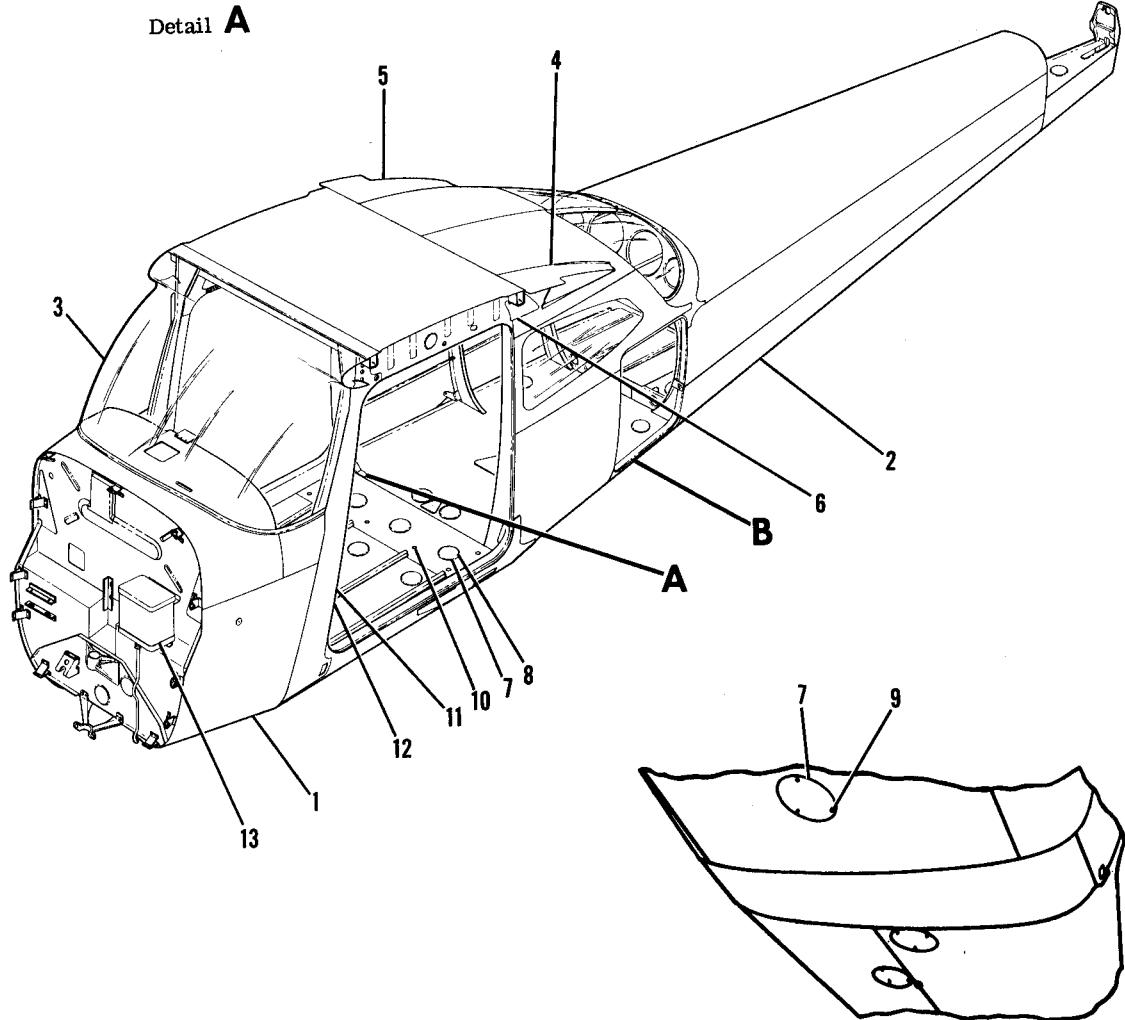

Detail B

Figure 21. Fuselage Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
21 -		FUSELAGE ASSEMBLY -----							
- 1	SEE FIG 22	FRONT & CENTER SECTION ASSY-FUSELAGE -----	1						
- 2	SEE FIG 32	AFT SECTION ASSY-FUSELAGE -----	1						
- 3	SEE FIG 31	WINDSHIELD INSTL -----	1						
- 4	0512027-1	FILLET ASSY-WING LH -----	1						
- 5	0512027-2	FILLET ASSY-WING RH -----	1						
- 6	0512146	PLATE-LH -----	1						
	0512146-1	PLATE-RH -----	1						
- 7	S225-1	PLATE-INSPECTION COVER -----	19						
- 8	49330	STUD-TRIMOUNT UC -----	48						
- 9	S102128-8	SCREW -----	9						
-10	41843	PLUG BUTTON UC -----	6						
-11		NAME PLATE-AIRCRAFT IDENTIFICATION -----		NP					
-12	0713047	PLACARD-FINISH & TRIM ATTACHING PARTS	1						
	AN535-2-3	SCREW -----	2						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-13	SEE FIG 36	BOX INSTL-BATTERY -----	1						
-14	0512184-1	STIFFENER-LH -----	1						
-15	0512184-2	STIFFENER-RH -----	1						
	0512185-1	SPACER -----	2						
NOTE. SEE FIG 93 & 95 FOR FLOATPLANE FUSELAGE STRUCTURE DETAILS									


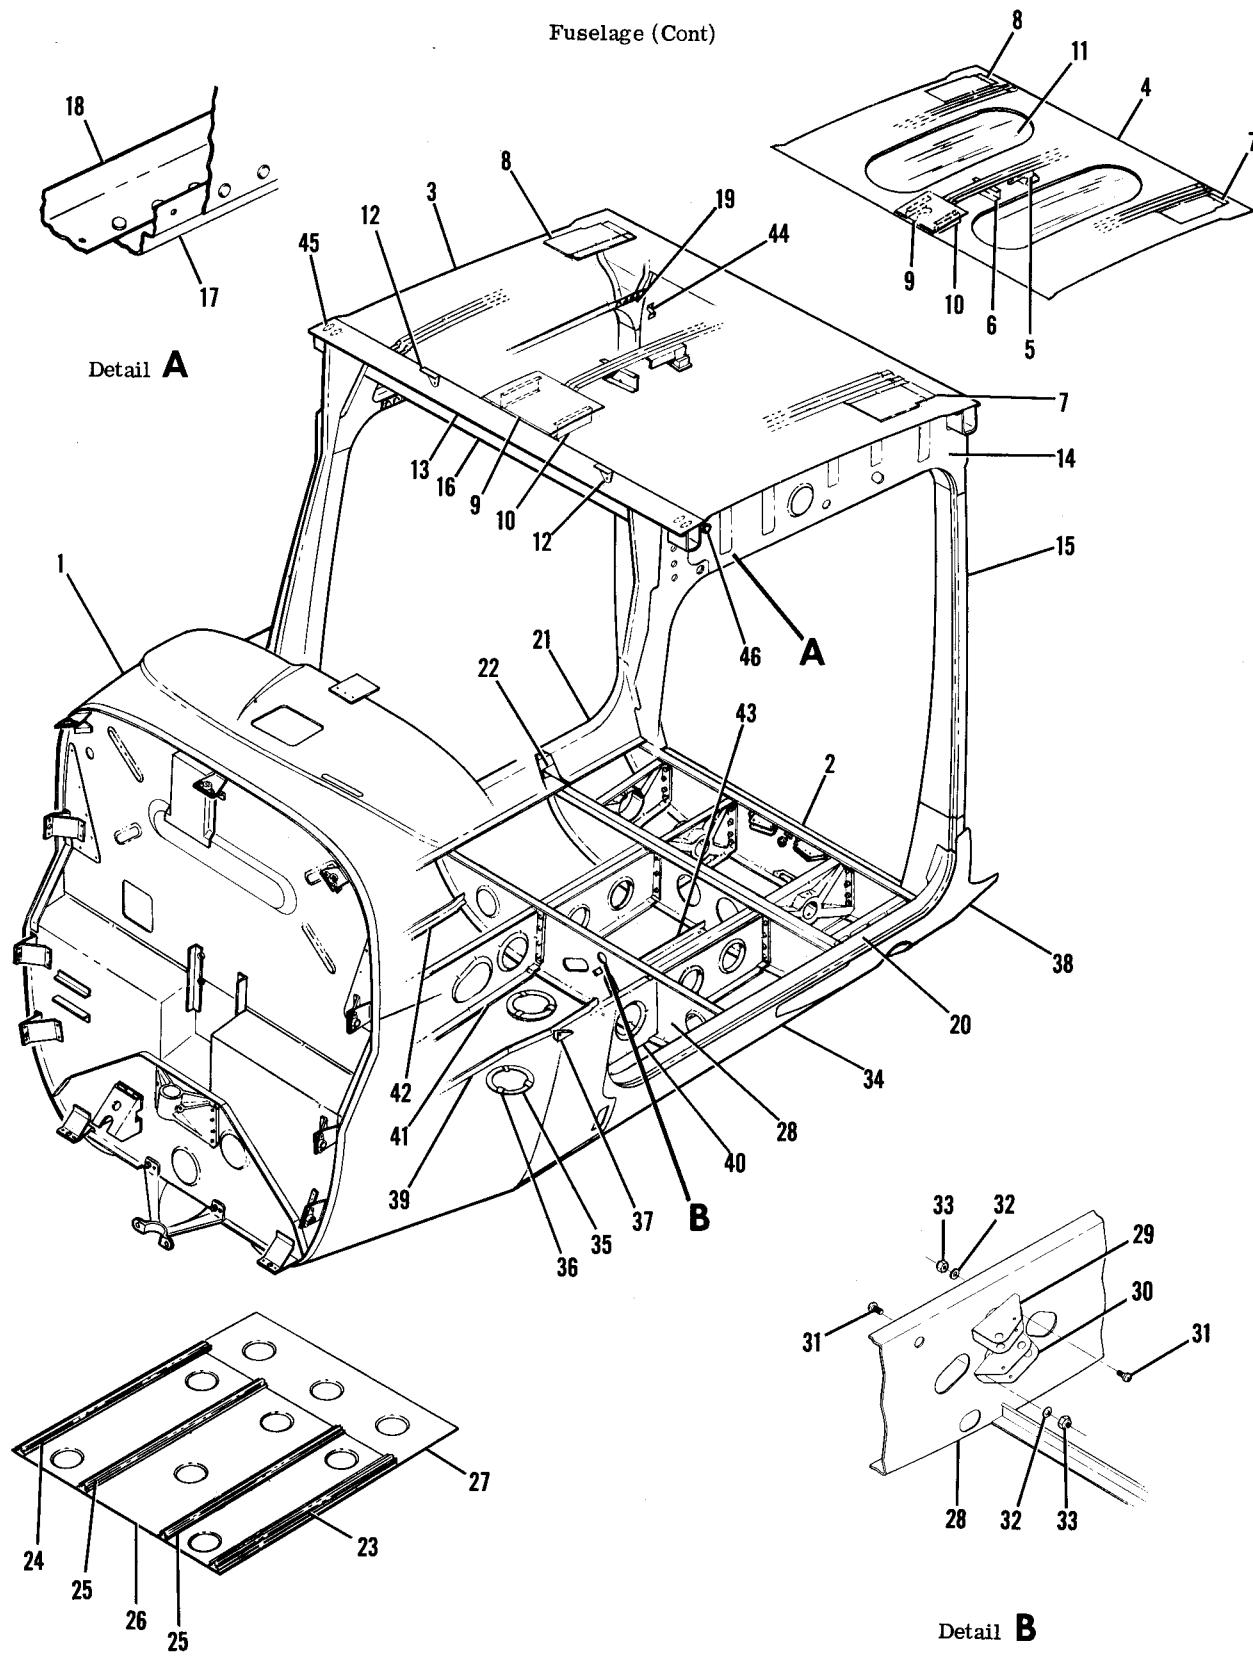


Figure 22. Fuselage Front & Center Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
22 -		FRONT & CENTER SECTION ASSEMBLY-FUSELAGE --- FRONT & CENTER SECTION ASSEMBLY-FUSELAGE WITH SKYLIGHT ---		NP					
- 1	SEE FIG 23	FRONT SECTION ASSY-FUSELAGE ---		NP					
- 2	SEE FIG 30	BULKHEAD ASSY-LANDING GEAR ---		1					
- 3	0511801-4	TOP ASSY-CABIN ---		1					
- 4	0511800-5	TOP ASSY-CABIN SKYLIGHT ---		1					
- 5	0513453-1	BRACKET ASSY-CONSOLE ---		1					
- 6	0511484-2	BRACKET-CONSOLE ---		1					
- 7	0511798-3	VIBRATION DAMPENER-LH ---		1					
- 8	0511798-4	VIBRATION DAMPENER-RH ---		1					
- 9	0511799-3	GUSSET ---		1					
-10	0513426-1	SUPPORT-SPEAKER ---	2						
-11	0511797-2	WINDOW-SKYLIGHT ---	2						
	0411014-3	FRAME-SKYLIGHT WINDOW ---		2					
	0414014-1	BRACKET-WINDOW TRIM ---		4					
	0414014-2	BRACKET-WINDOW TRIM ---							
	S1055-1	CHANNEL 45.0 IN LG BKI REF S1055-1-45.0 ---	12						
-12	0513399-1	BRACKET-FUEL TUBE ---	2						
-13	0511000-75	CAP-FUSELAGE FRONT SPAR ---	1						
-14	0511037-1	RIB-FUSELAGE FWD SECTION LH ---	1						
	0511037-2	RIB-FUSELAGE FWD SECTION RH ---	1						
-15	SEE FIG 29	BULKHEAD ASSY-STA 65.33 ---	1						
-16	0513312-1	RETAINER-WINDSHIELD TOP ---	1						
-17	0511000-6	FRAME-DOOR UPPER OUTBD LH ---	1						
	0511000-7	FRAME-DOOR UPPER OUTBD RH ---	1						
-18	0511000-22	FRAME-DOOR UPPER INBD LH ---	1						
	0511000-23	FRAME-DOOR UPPER INBD LH ---	1						
-19	0511000-73	GUSSET ASSY-UPPER REAR DOOR JAMB RH ---	1						
	0511000-74	GUSSET ASSY-UPPER REAR DOOR JAMB LH ---	1						
		ATTACHING PARTS ---							
		SCREW ---	7						
		WASHER ---	7						
		NUT ---	7						
		-----*							
		NUTPLATE ---							
-20	0511116-12	SILL ASSY-DOOR LWR LH ---	1						
-21	0511116-13	SILL ASSY-DOOR LWR RH ---	1						
-22	0511291-2	SUPPORT-LWR DOOR SILL RH ---	1						
	0511291-1	SUPPORT-LWR DOOR SILL LH ---	1						
	0511480-13	FLOORBOARD ASSY-FUSELAGE CENTER SECTION ---	1						
-23	0511243-6	SEATRAIL-OUTBD LH ---	1						
-24	0511243-5	SEATRAIL-OUTBD RH ---	1						
-25	0511243-4	SEATRAIL-INBD ---	2						
-26	0511480-12	FLOORBOARD-STA 27.41 TO 56.32 ---	1						
-27	0511479-2	FLOORBOARD-CENTER SECTION AFT ---	1						
		ATTACHING PARTS ---							
		SCREW ---	4						
		WASHER ---	26						
		NUT ---	26						
		SCREW ---	8						
		SCREW ---	14						
		-----*							
-28	0511497-5	BULKHEAD ASSY-STA 44.00 ---	1						
-29	0511498-1	BRACKET-PULLEY ---	1						
-30	0511499-1	BRACKET-PULLEY ---	1						
		ATTACHING PARTS ---							
-31	AN520-10R6	SCREW ---	1						
-32	AN960-8	WASHER ---	1						
-33	MS21044N3	NUT ---	1						
		-----*							
-34	0510201-5	SKIN-FUSELAGE CENTER SECTION LOWER ---	1						
-35	S226-3	DOUBLER ---	2						
-36	NAS395-14-3	NUT ---	6						
-37	0511254-1	BRACKET-PULLEY ---	1						
-38	0511295-3	SKIN-LANDING GEAR BULKHEAD ---	1						
-39	0511486-5	ANGLE ---	1						
-40	0512058-1	BULKHEAD-LH STA 27.03 TO STA 44.00 ---	1						
-41	0512058-2	BULKHEAD-RH STA 27.03 TO STA 44.00 ---	1						
-42	0511486-2	ANGLE-RH ---	1						
	0511486-1	ANGLE-LH ---	1						
-43	0511292-3	ANGLE ---	1						
-44	0511150-1	BRACKET-UPHOLSTERY RH ---	1						
	0511150	BRACKET-UPHOLSTERY LH ---	1						
-45	S1863-3	NUTPLATE ---	4						
-46	MS35489-118	GROMMET ---	2						

Fuselage (Cont)

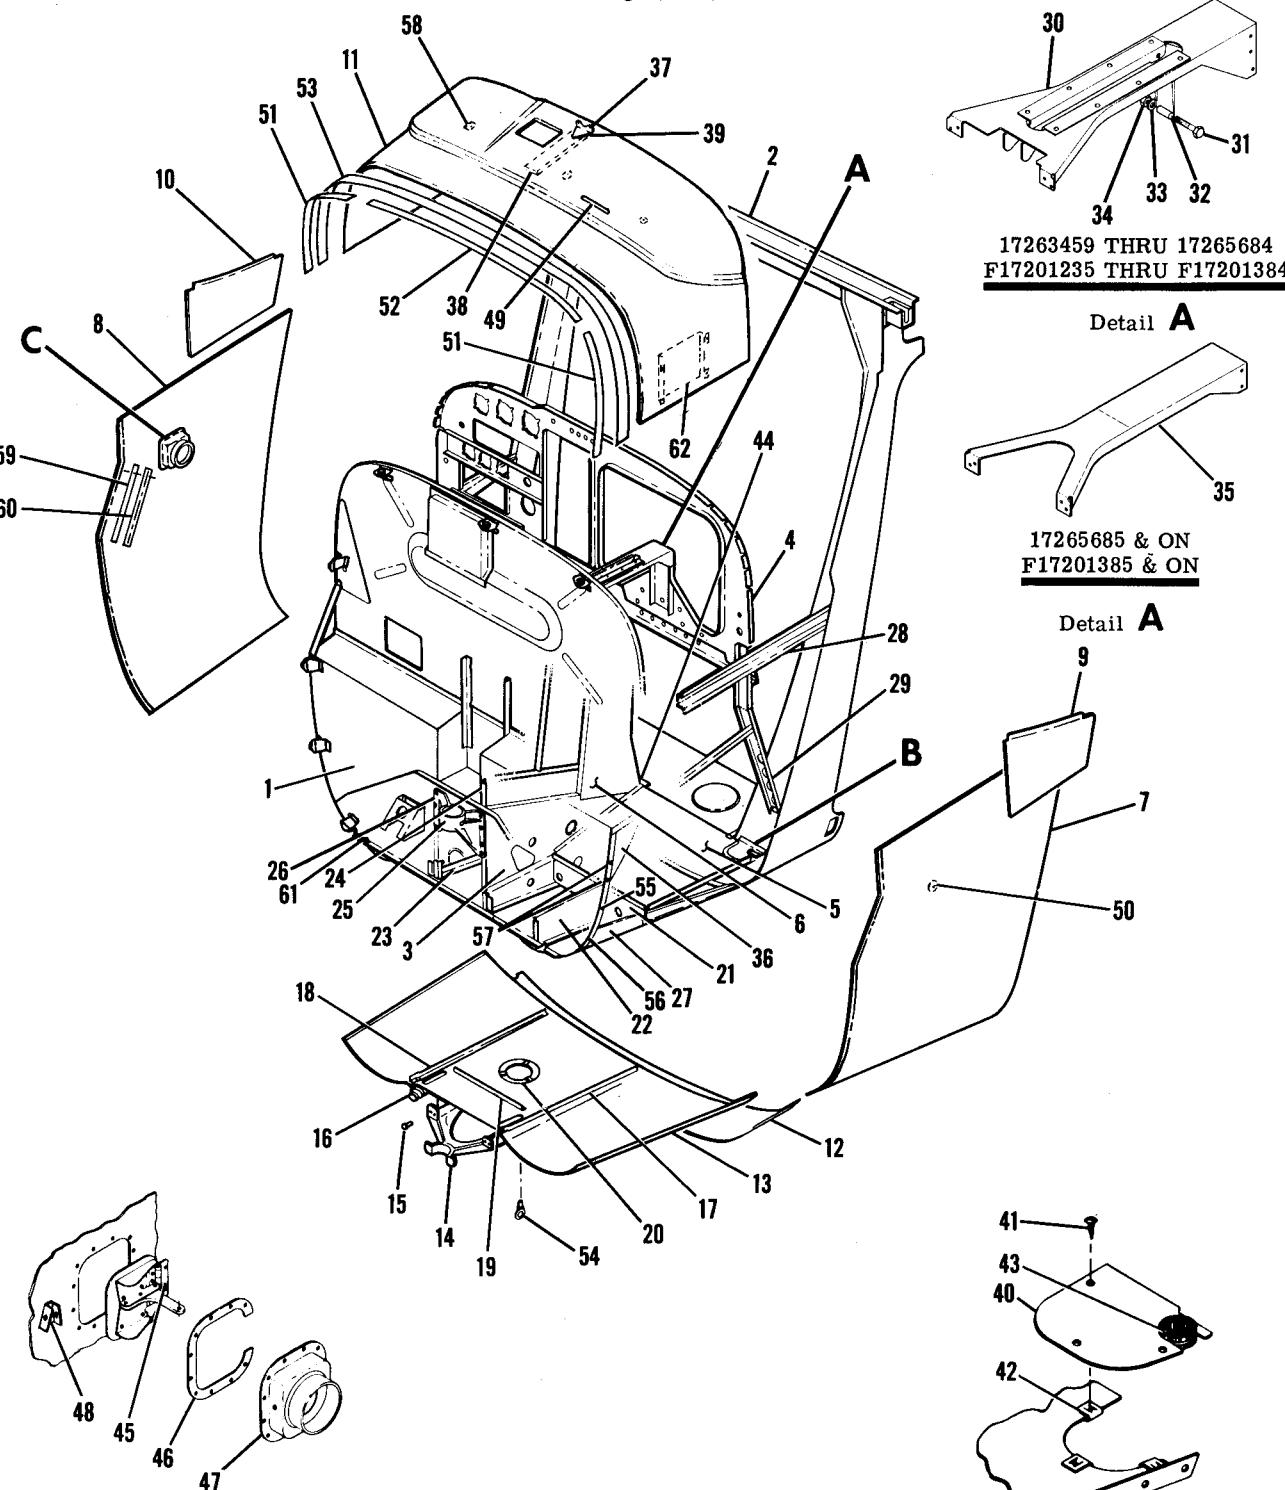

Detail C

Detail B

Figure 23. Fuselage Front Section Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
23 -		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION -----		
- 1	SEE FIG 27	FIREWALL ASSY -----	1	
- 2	SEE FIG 24	BULKHEAD ASSY-FRONT DOORPOST -----	1	
- 3	SEE FIG 25	TUNNEL COMPONENTS-FRONT SECTION -----	1	
- 4	SEE FIG 58	PANEL ASSY-STATIONARY -----	1	
- 5	0513375-1	FLOORBOARD ASSY-LH -----	1	
	0513375-2	FLOORBOARD ASSY-RH -----	1	
- 6	SEE FIG 26	CONSOLE STRUCTURE ASSY -----	1	
- 7	0513362-25	SKIN-FRONT SECTION LH -----	1	
- 8	0513362-14	SKIN-FRONT SECTION RH -----	1	
- 9	0513362-3	SKIN-UPPER SIDE LH -----	1	
-10	0513362-4	SKIN-UPPER SIDE RH -----	1	
-11	0513362-38	SKIN-DECK -----	1	
-12	0513362-9	SKIN-LWR AFT -----	1	
-13	0513362-15	SKIN-LWR FWD -----	1	
-14	0543016-1	FITTING-NOSE GEAR LWR ATTACHING PARTS	1	
-15	AN3-5A MS20365-1032C	BOLT ----- NUT ----- -----*	2 2	
-16	0543027-3	BOOT-STEERING LOCK LH -----	1	
	0543027-2	BOOT-STEERING LOCK RH -----	1	
-17	0513000-10	ANGLE-BULKHEAD REINFORCEMENT LH -----	1	
-18	0513000-9	ANGLE-BULKHEAD REINFORCEMENT RH -----	1	
-19	0513322-1	ANGLE-REINFORCEMENT -----	1	
-20	S327-2	DOUBLER ASSY -----	1	
	NAS395-14-3	NUT -----	3	
-21	0513053-1	BULKHEAD-FUSELAGE STA 8.125 LH -----	1	
	0513053-4	BULKHEAD-FUSELAGE STA 8.125 RH -----	1	
-22	0513235-1	BULKHEAD-RUDDER PEDAL OUTBD LH -----	1	
	0513054-4	BULKHEAD-RUDDER PEDAL OUTBD RH -----	1	
-23	0513038-8	ANGLE-RH -----	1	
	0513038-7	ANGLE-LH -----	1	
-24	0513369-1	ANGLE-LH -----	1	
	0513369-2	ANGLE-RH -----	1	
-25	0543013-1	FITTING-NOSE GEAR UPPER ATTACHING PARTS	1	
-26	NAS144-17 MS21042L4	BOLT ----- NUT ----- -----*	2 2	
-27	0513132-1	STRINGER ASSY-ENGINE MOUNT LWR LH -----	1	
	0513132-2	STRINGER ASSY-ENGINE MOUNT LWR RH -----	1	
-28	0513132-3	STRINGER ASSY-ENGINE MOUNT UPPER LH -----	1	
	0513132-4	STRINGER ASSY-ENGINE MOUNT UPPER RH -----	1	
-29	0513325-3	BULKHEAD-LH -----	1	
	0513325-4	BULKHEAD-RH -----	1	
-30	0513411-1	SUPPORT ASSY -----	1	
-31	AN3-11A	BOLT -----	1	
-32	NAS43HT3-42A	SPACER -----	1	
-33	AN960-10	WASHER -----	1	
-34	MS21044N3	NUT -----	1	
-35	0513089-1	SUPPORT-INSTRUMENT PANEL -----	1	
-36	0513137-1	GUSSET-LH -----	1	
	0513137-2	GUSSET-RH -----	1	
-37	0513264-1	BRACKET-COMPASS ATTACHING PARTS	1	
	AN5158R8	SCREW ----- -----*	3	
-38	0513326-2	STIFFENER -----	1	
-39	NAS698A06L	NUTPLATE -----	2	
	NAS680A06	NUTPLATE -----	1	
-40	0713002-3	COVER ----- ATTACHING PARTS	2	
-41	S1021Z6-4	SCREW -----	3	
-42	NAS395-3-3	NUT ----- -----*	3	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
23 -43	MS35489-20	GROMMET -----	2	
-44	0513378-1	SHEER PLATE -----	1	
-45	0713135-2	DOOR ASSY-OUTSIDE AIR -----	1	
-46	0713140-1	SEAL -----	1	
-47	0713139-1	INLET ASSY -----	1	
-48	0450286	CLIP -----	1	
-49	0513386-1	NOZZLE ASSY -----	1	
-50	S1776-1	BUTTON-STATIC SOURCE -----	1	
-51	0513362-18	STRIP-RETAINER LH -----	1	
	0513362-31	STRIP-RETAINER RH -----	1	
-52	0513362-19	STRIP-RETAINER -----	1	
-53	0513362-30	SEAL -----	1	
-54	0422344	EYEBOLT-MOORING ATTACHING PARTS -----	1	
	MS21042L5	NUT -----	1	
		-----*		
-55	S1862-2	NUTPLATE -----	2	
-56	S1863-3	NUTPLATE -----	4	
-57	S1863-3A	NUTPLATE -----	21	
-58	S1590-4A	BAND -----	1	
-59	0513362-32	SEAL RH ONLY -----	1	
-60	0513362-33	STRIP RH ONLY -----	1	
-61	NAS680A08	NUTPLATE PLUMB BOB -----	1	
	AN515-8R7	SCREW -----	1	
-62	0513096-1	SUPPORT ASSY-LH -----	1	
	NAS680A4	NUTPLATE -----	2	
	NAS680A3	NUTPLATE -----	2	
	NAS696A3	NUTPLATE -----	2	
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384		
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

A

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -	0513373-14	BULKHEAD ASSEMBLY-FRONT DOORPOST -----	1	A
	0513373-17	BULKHEAD ASSEMBLY-FRONT DOORPOST -----	1	B
- 1	0511162-9	SPAR ASSEMBLY-FUSELAGE CENTER SECTION FORWARD ----- ATTACHING PARTS	1	
- 2	AN3-21A	BOLT -----	4	
- 3	AN960-10	WASHER -----	4	
- 4	MS21044N3	NUT -----	4	
- 5	0411129	-----*----- BLOCK-FUSELAGE SPAR BEARING ----- ATTACHING PARTS	2	
- 6	AN3-20A	BOLT -----	2	
- 7	AN960-10	WASHER -----	2	
- 8	MS21044N3	NUT -----	2	
- 9	0412496	-----*----- RETAINER-UPHOLSTERY -----	1	
-10	NAS68043	NUTPLATE -----	4	
-11	0513007-31	DOORPOST ASSEMBLY-FUSELAGE LH -----	1	A
	0513007-35	DOORPOST ASSEMBLY-FUSELAGE LH -----	1	B
-12	0513006-149	BULKHEAD ASSEMBLY-DOORPOST FORWARD LH -----	1	
-13	0513006-110	BULKHEAD ASSEMBLY-DOORPOST AFT LH -----	1	
-14	0713496-3	BRACKET-STIFFENER LH -----	1	A
	0713496-7	BRACKET-STIFFENER LH -----	1	B
CONTINUED ON NEXT PAGE				

Fuselage (Cont)

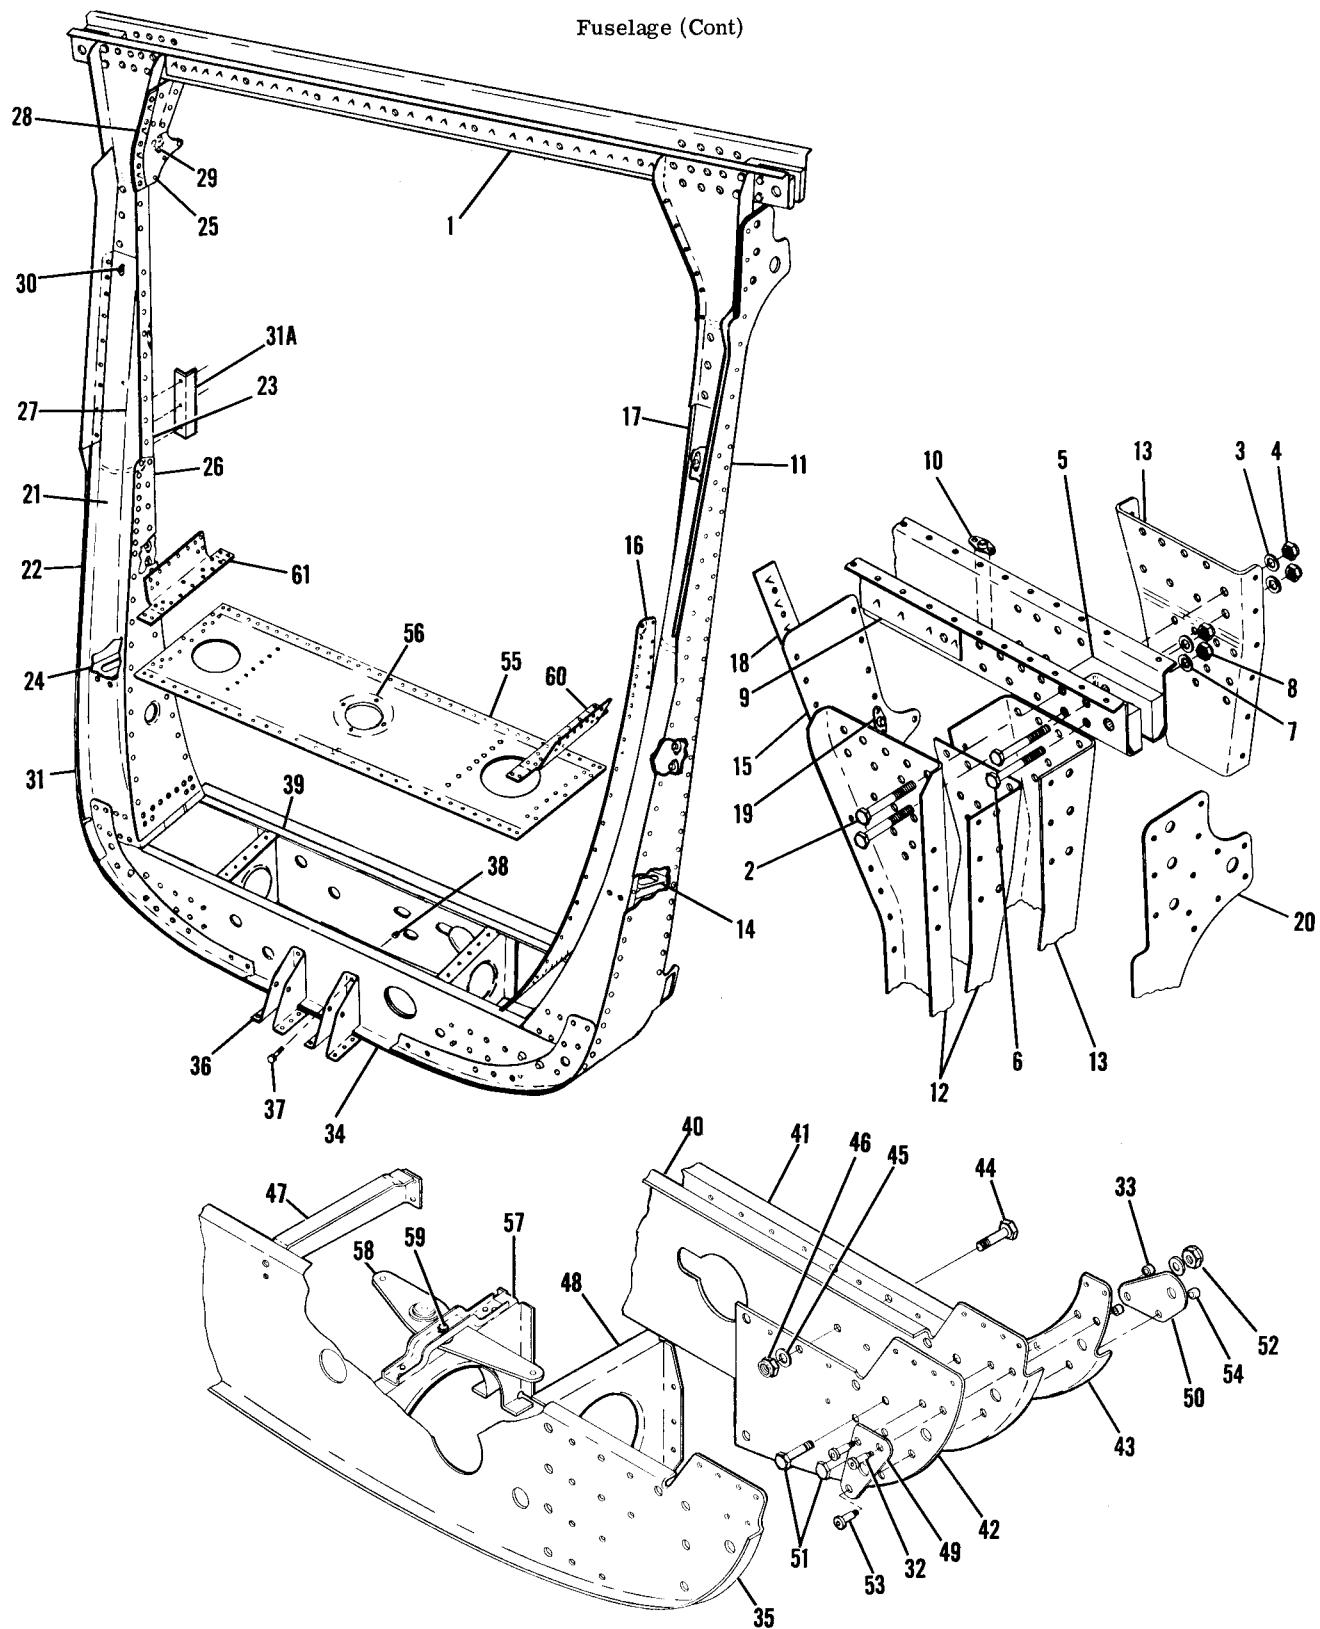


Figure 24. Front Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
24 -15	0513006-42	REINFORCEMENT-DOORPOST INBOARD LH -----	1								
-16	0513006-8	PLATE-DOORPOST SPLICE LH -----	1								
-17	0713248-3	RETAINER-WINDSHIELD LH -----	1								
-18	0513006-25	RETAINER-HEADLINING LH -----	1								
-19	NAS680A3	NUTPLATE -----	1								
-20	0513007-29	SKIN-DOORPOST OUTER LH -----	1								
	0515025-2	RETAINER-UPHOLSTERY TRIM -----	1								
-21	0513007-32	DOORPOST ASSEMBLY-FUSELAGE RH -----	1								A
	0513007-36	DOORPOST ASSEMBLY-FUSELAGE RH -----	1								B
-22	0513006-148	BULKHEAD ASSEMBLY-DOORPOST FORWARD RH -----	1								
-23	0513006-111	BULKHEAD ASSEMBLY-DOORPOST AFT RH -----	1								
-24	0713496-4	BRACKET-STIFFENER RH -----	1								A
	0713496-8	BRACKET-STIFFENER RH -----	1								B
-25	0513006-43	REINFORCEMENT-DOORPOST UPPER INBOARD RH -----	1								
-26	0513006-22	PLATE-DOORPOST SPLICE RH -----	1								
-27	0713248-4	RETAINER-WINDSHIELD RH -----	1								
-28	0513006-26	RETAINER-HEADLINING RH -----	1								
-29	NAS680A3	NUTPLATE -----	1								
-30	S1863-3	NUTPLATE TIN -----	1								
-31	0513007-30	SKIN-DOORPOST OUTER RH -----	1								
	0515025-2	RETAINER-UPHOLSTERY TRIM -----	1								
-31A	0513373-15	BULKHEAD ASSEMBLY-LOWER ATTACHING PARTS -----	1								
-32	NAS178-8-7	RIVET-HI SHEAR -----	4								
-33	NAS179-8	COLLAR -----	4								
	-----*	-----									
-34	0513373-2	BULKHEAD ASSEMBLY-FORWARD -----	1								
-35	0513374-1	BULKHEAD-FORWARD -----	1								
-36	0510110	BRACKET-CONTROL PULLEY ----- ATTACHING PARTS	2								
-37	AN3-4A	BOLT -----	1								
-38	MS21044N3	NUT -----	1								
	-----*	-----									
-39	0513373-16	BULKHEAD ASSEMBLY-AFT -----	1								
-40	0513374-5	BULKHEAD-AFT -----	1								
-41	0513006-145	ANGLE-AFT BULKHEAD REINFORCEMENT -----	1								
-42	0713495-13	PLATE-AFT BULKHEAD REINFORCEMENT LH -----	1								
	0713495-14	PLATE-AFT BULKHEAD REINFORCEMENT RH -----	1								
-43	0713495-65	STIFFENER-BULKHEAD AFT LH -----	1								
	0713495-66	STIFFENER-BULKHEAD AFT RH -----	1								
-44	AN3-5A	BOLT -----	2								
-45	AN960-10	WASHER -----	2								
-46	MS21044N3	NUT -----	2								
-47	0511496-1	BRACKET-REINFORCEMENT -----	2								
-48	0713054-1	BULKHEAD-LH -----	1								
	0713054-2	BULKHEAD-RH -----	1								
-49	0713495-55	SPACER -----	4								
-50	0713495-17	PLATE -----	2								
-51	AN6-6A	BOLT -----	4								
-52	MS21042L6	NUT -----	4								
-53	NAS178-8-7	RIVET-HI SHEAR -----	2								
-54	NAS179-8	COLLAR -----	2								
-55	0511493-1	FLOORBOARD ASSY-FRONT DOORPOST -----	1								
-56	S372-2	DOUBLER ASSY -----	1								
-57	0513063-1	BRACKET ASSEMBLY -----	1								
	NAS680A4	NUTPLATE -----	1								
-58	0513370-1	BELLCRANK ASSEMBLY-ELEVATOR ATTACHING PARTS -----	1								
-59	AN4-10A	BOLT -----	1								
	-----*	-----									
-60	0713495-53	STIFFENER LH -----	1								
-61	0713495-54	STIFFENER RH -----	1								
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

Fuselage (Cont)

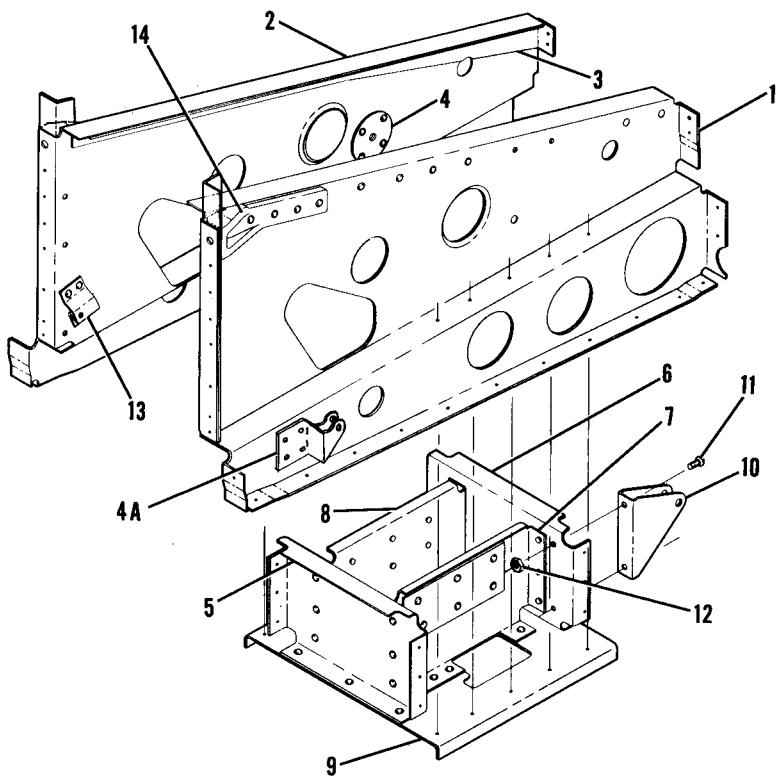


Figure 25. Front Section Tunnel Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
25 -		TUNNEL COMPONENTS-FRONT SECTION -----							
- 1	0513363-1	BULKHEAD ASSEMBLY-TUNNEL LH -----							
- 2	0513363-2	BULKHEAD ASSEMBLY-TUNNEL RH -----							
- 3	0513364-1	ANGLE-TUNNEL LH -----							
- 4	0513364-2	ANGLE-TUNNEL RH -----							
- 4A	0713102-1	PLATE -----							
- 4A	0713624-2	ANCHOR -----							
- 5	0513358-1	SUPPORT ASSEMBLY-CONTROL U -----							
- 6	0513359-1	BRACKET-FWD -----							
- 6	0513359-2	BRACKET AFT -----							
- 7	0513360-1	BRACKET ASSEMBLY-LH -----							
- 8	0513360-2	BRACKET ASSEMBLY-RH -----							
- 9	0513361-1	BRACKET SUPPORT -----							
-10	0513376-1	PULLEY BRACKET-TAB ATTACHING PARTS -----							
-11	AN515-8R6	SCREW -----							
-12	MS21044N08	NUT -----							
-13	0510128	-----*							
-14	0513372-1	BRACKET -----							
	0513372-2	FITTING-TUNNEL LH -----							
		FITTING-TUNNEL RH -----							

Fuselage (Cont)

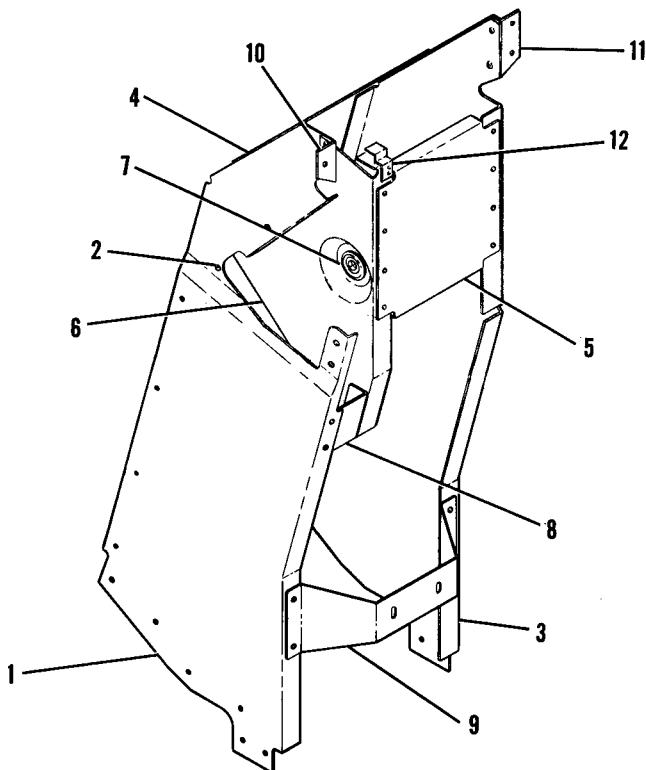


Figure 26. Console Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
26 -	0513368-201	CONSOLE STRUCTURE ASSEMBLY -----	1						
- 1	0513368-2	SIDE PANEL ASSEMBLY-LH -----		1					
- 2	NAS697A08	NUTPLATE -----		4					
- 3	0513368-4	SIDE PANEL-RH -----			1				
- 4	0513365-1	SUPPORT-AFT -----				1			
- 5	0513367-1	SUPPORT-FORWARD -----					1		
- 6	0513366-1	SUPPORT ASSEMBLY-ELEVATOR TRIM -----						1	
- 7	NAS295M4	BEARING -----						1	
	0411420	HOUSING -----						1	
- 8	0713641-3	CLIP -----						1	
- 9	0511252-1	BRACKET -----						1	
-10	0513368-10	ANGLE-CONSOLE -----						1	
-11	0513368-8	ANGLE-CONSOLE -----						1	

Fuselage (Cont)

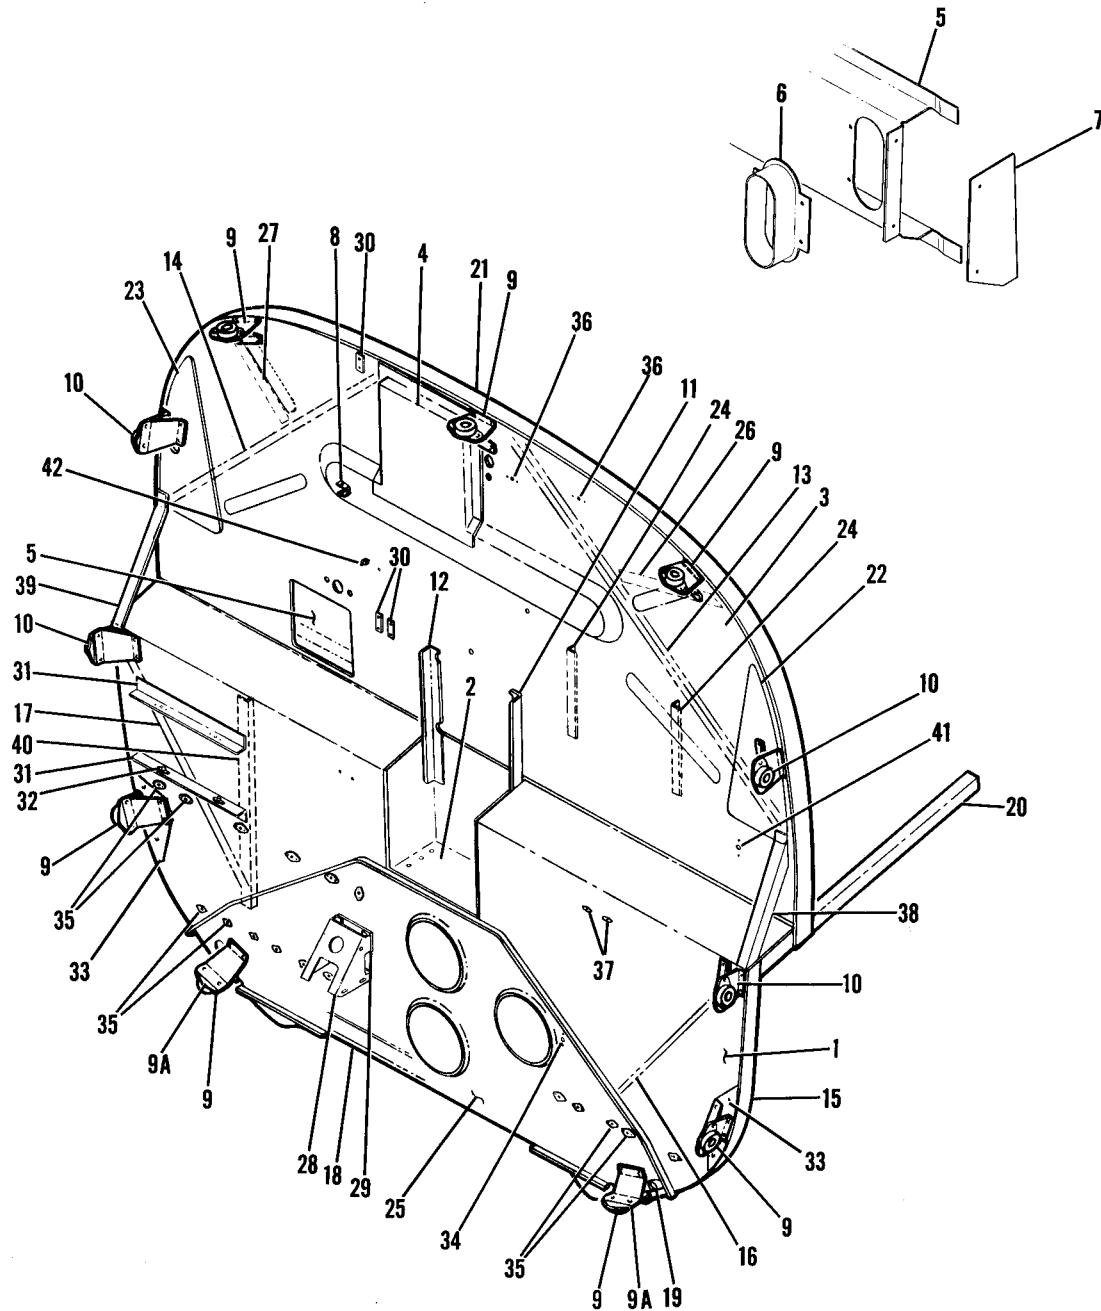


Figure 27. Firewall Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
				1 2 3 4 5 6 7					
27 -	0553006-203	FIREWALL ASSEMBLY -----	1						
- 1	0553006-202	SHEET-LOWER -----	1						
- 2	0513109-4	PAN ASSEMBLY -----	1						
- 3	0553006-201	SHEET-UPPER -----	1						
- 4	0513352-1	PAN-FIREWALL -----	1						
- 5	0513109-64	DUCT ASSEMBLY-HEATER -----	1						
- 6	1253031-3	ADAPTOR-HOSE -----	2						
- 7	0513387-1	PLATE-END COVER -----	2						
- 8	0450286	CLIP -----	1						
- 9	0453003-1	SHOCK MOUNT ASSEMBLY -----	7						
- 9A	0453003-12	SHOCK MOUNT ASSEMBLY FLOATPLANE ONLY -----	2						
	0500044-37	SHIM-MOUNT FLOATPLANE ONLY -----	2						
	0500044-38	SHIM-MOUNT FLOATPLANE ONLY -----	2						
-10	0453003-9	SHOCK MOUNT ASSEMBLY -----	4	A					
	0453003-9	SHOCK MOUNT ASSEMBLY-UPR -----	2	B					
	0453003-14	SHOCK MOUNT ASSEMBLY-LWR -----	2	B					
-11	0500044-9	ANGLE-LH -----	1						
-12	0500044-10	ANGLE-RH -----	1						
-13	0500044-23	ANGLE-LH -----	1						
-14	0500044-35	ANGLE-RH -----	1						
-15	0513109-7	ANGLE-LH -----	1						
	0513109-11	ANGLE-RH -----	1						
-16	0513109-12	ANGLE-REINFORCEMENT LH -----	1						
-17	0513109-8	ANGLE-REINFORCEMENT RH -----	1						
-18	0513109-9	ANGLE-LOWER -----	1						
-19	0513109-10	SPACER-ENGINE MOUNT REINFORCEMENT -----	4						
-20	0513109-15	* ANGLE-LH -----	1						
	0513109-24	* ANGLE-RH -----	1						
-21	0513109-23	ANGLE-UPPER -----	1						
-22	0513109-29	DOUBLER-LH -----	1						
-23	0513109-56	DOUBLER-RH -----	1						
-24	0513109-50	ANGLE -----	2						
-25	0513109-72	REINFORCEMENT -----	1						
-26	0513109-69	ANGLE-LH -----	1						
-27	0513109-70	ANGLE-RH -----	1						
-28	0713757-1	BRACKET -----	1						
-29	1713105-3	SPACER -----	1						
-30	0753000-13	DOUBLER -----	1						
	0513100-1	DOUBLER-MIXTURE CONTROL -----	1						
-31	1713110-1	BRACKET ASSEMBLY -----	2						
-32	NAS697A3	NUTPLATE -----	2						
-33	0553007-2	REINFORCEMENT -----	2						
	AN924-2D	NUT -----	1						
-34	S1863-4	NUTPLATE -----	1						
-35	S1863-3A	NUTPLATE -----	17						
-36	NAS680A4	NUTPLATE -----	2						
-37	NAS697A4K	NUTPLATE -----	2						
-38	0513327-1	STIFFENER-LH -----	1						
-39	0513327-2	STIFFENER-RH -----	1						
-40	0553006-4	STIFFENER -----	1						
-41	NAS680A08	NUTPLATE -----	2						
-42	1450024-3	UNION -----	1						
	AN960D616	WASHER -----	2						
	AN924-3D	NUT -----	1						
NOTE. *ITEMS MARKED * ARE SHIPPED AS LOOSE PARTS									
A---172 SERIAL 17263459 THRU 17264624 F172 SERIAL F172601235 THRU F17201384 B---172 SERIAL 17264625 & ON F172 SERIAL F17201385 & ON									

Fuselage (Cont)


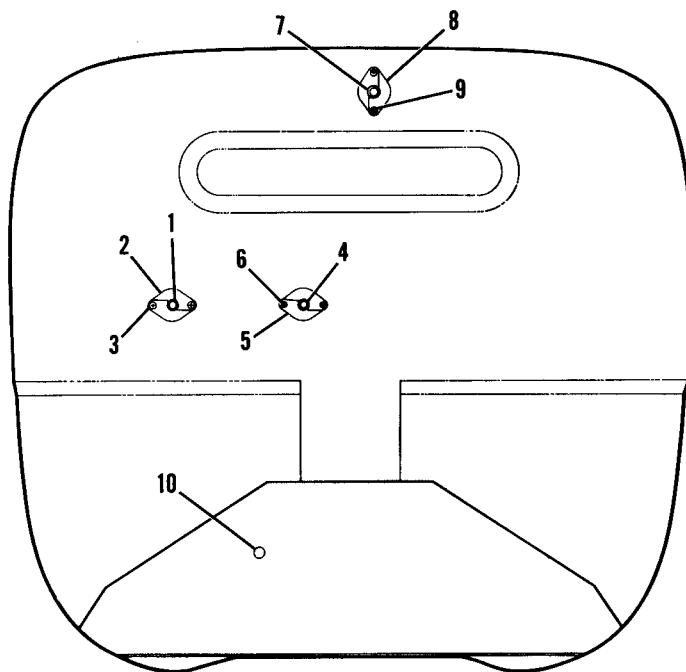


Figure 28. Firewall Grommets Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
28 - - 1	NAS557-3A	GROMMETS INSTALLATION-FIREWALL -----	NP	
- 2	S1095-1	GROMMET-OIL TEMPERATURE LINE -----	1	
		SHIELD HALF-OIL TEMPERATURE LINE -----	2	
- 3	S1021Z8-6 NAS446-4-3	ATTACHING PARTS SCREW ----- NUT -----	1 1	
- 4	NAS557-4A	-----*		
- 5	S1095-2	GROMMET-TACHOMETER SHAFT -----	1	
		SHIELD-TACHOMETER SHAFT -----	2	
- 6	S1021Z8-6 NAS446-4-3	ATTACHING PARTS SCREW ----- NUT -----	1 1	
- 7	NAS557-8A NAS557-10A NAS557-12A	-----*		
		GROMMET TO ACCOMMODATE 1/2 IN. WIRE BUNDLE -----	1	
		GROMMET TO ACCOMMODATE 5/8 IN. WIRE BUNDLE -----	1	
		GROMMET TO ACCOMMODATE 3/4 IN. WIRE BUNDLE -----	1	
- 8	S1095-4 S1095-5 S1095-6	SHIELD HALF TO ACCOMMODATE 1/2 IN. WIRE BUNDLE -----	2	
		SHIELD HALF TO ACCOMMODATE 5/8 IN. WIRE BUNDLE -----	2	
		SHIELD HALF TO ACCOMMODATE 3/4 IN. WIRE BUNDLE -----	2	
- 9	S1021Z8-6 NAS446-4-3	ATTACHING PARTS SCREW ----- NUT -----	1 1	
- 10	S354-3 0750032-1	-----*		
		GROMMET -----	1	
		SHIELD -----	1	

This page intentionally left blank.

Fuselage (Cont)

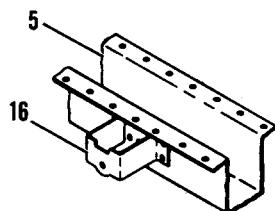

Detail A

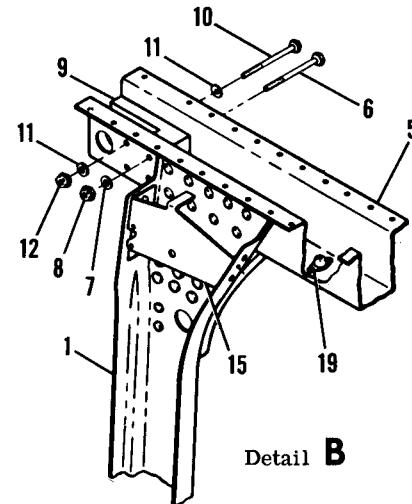

Detail B

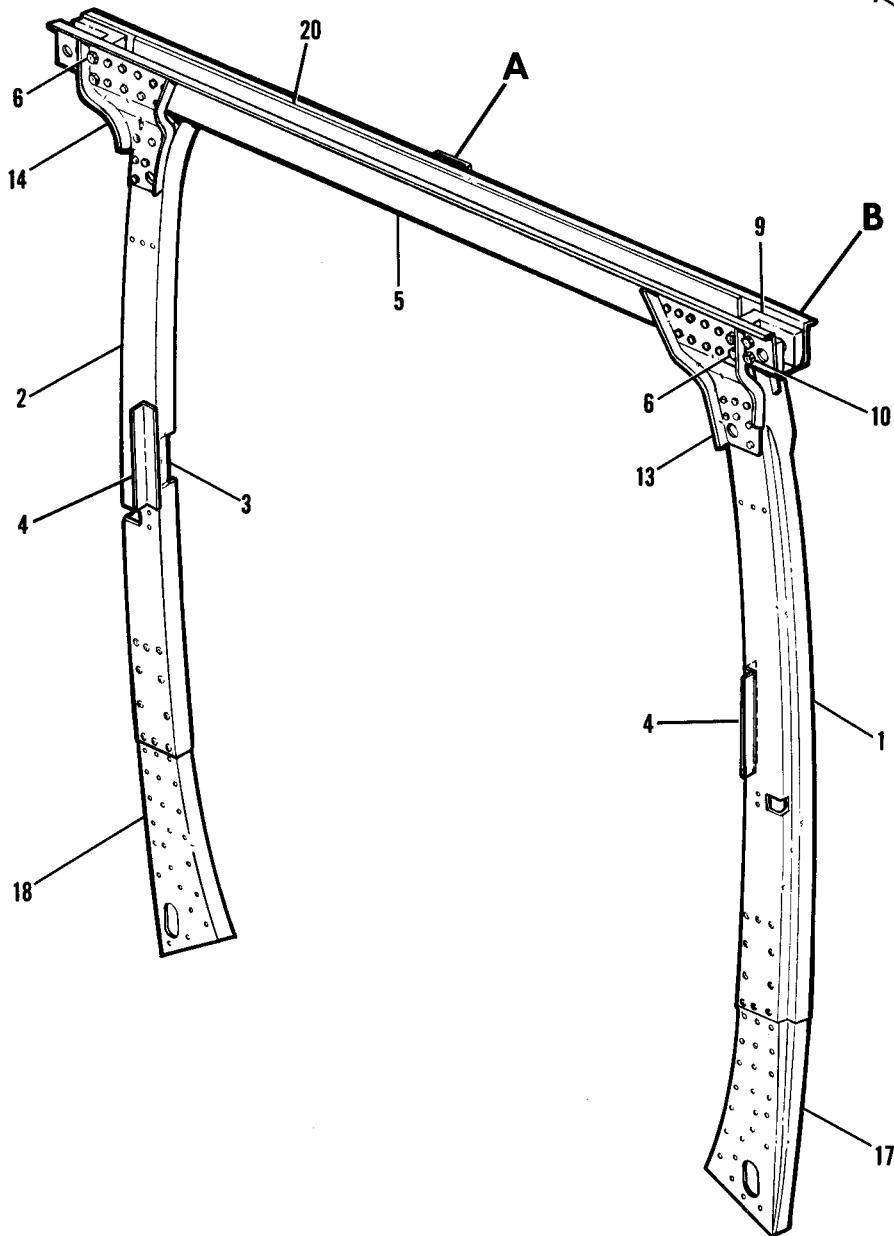


Figure 29. Rear Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
29 -	0512186-14	BULKHEAD ASSEMBLY-REAR DUORPOST STA 65.33 -----	1						
	- 1	CHANNEL-LH -----	1						
	- 2	CHANNEL-RH -----	1						
	0512186-13	DOUBLER-LH -----	1						
	- 3	DOUBLER-RH -----	1						
	- 4	RETAINER -----	2						
	- 5	SPAR-CENTER SECTION -----	1						
		ATTACHING PARTS -----							
	- 6	BOLT -----	4						
	- 7	WASHER -----	8						
	- 8	NUT -----	4						
		-----*							
	- 9	BLOCK-BEARING -----	2						
		ATTACHING PARTS -----							
	-10	BOLT -----	2						
	-11	WASHER -----	4						
	-12	NUT -----	2						
		-----*							
	-13	BRACE-LH -----	1						
	-14	BRACE-RH -----	1						
	-15	BRACKET-AILERON UPPER PULLEY LH -----	1						
		BRACKET-AILERON UPPER PULLEY RH -----	1						
	-16	BRACKET-PULLEY -----	1						
	-17	DOUBLER-LH -----	1						
	-18	DOUBLER-RH -----	1						
	-19	NUTPLATE -----	3						
	-20	CHANNEL-INERTIA REEL SUPPORT -----	1						
		NUTPLATE USED WITH INERTIA REEL -----	4						

Fuselage (Cont)

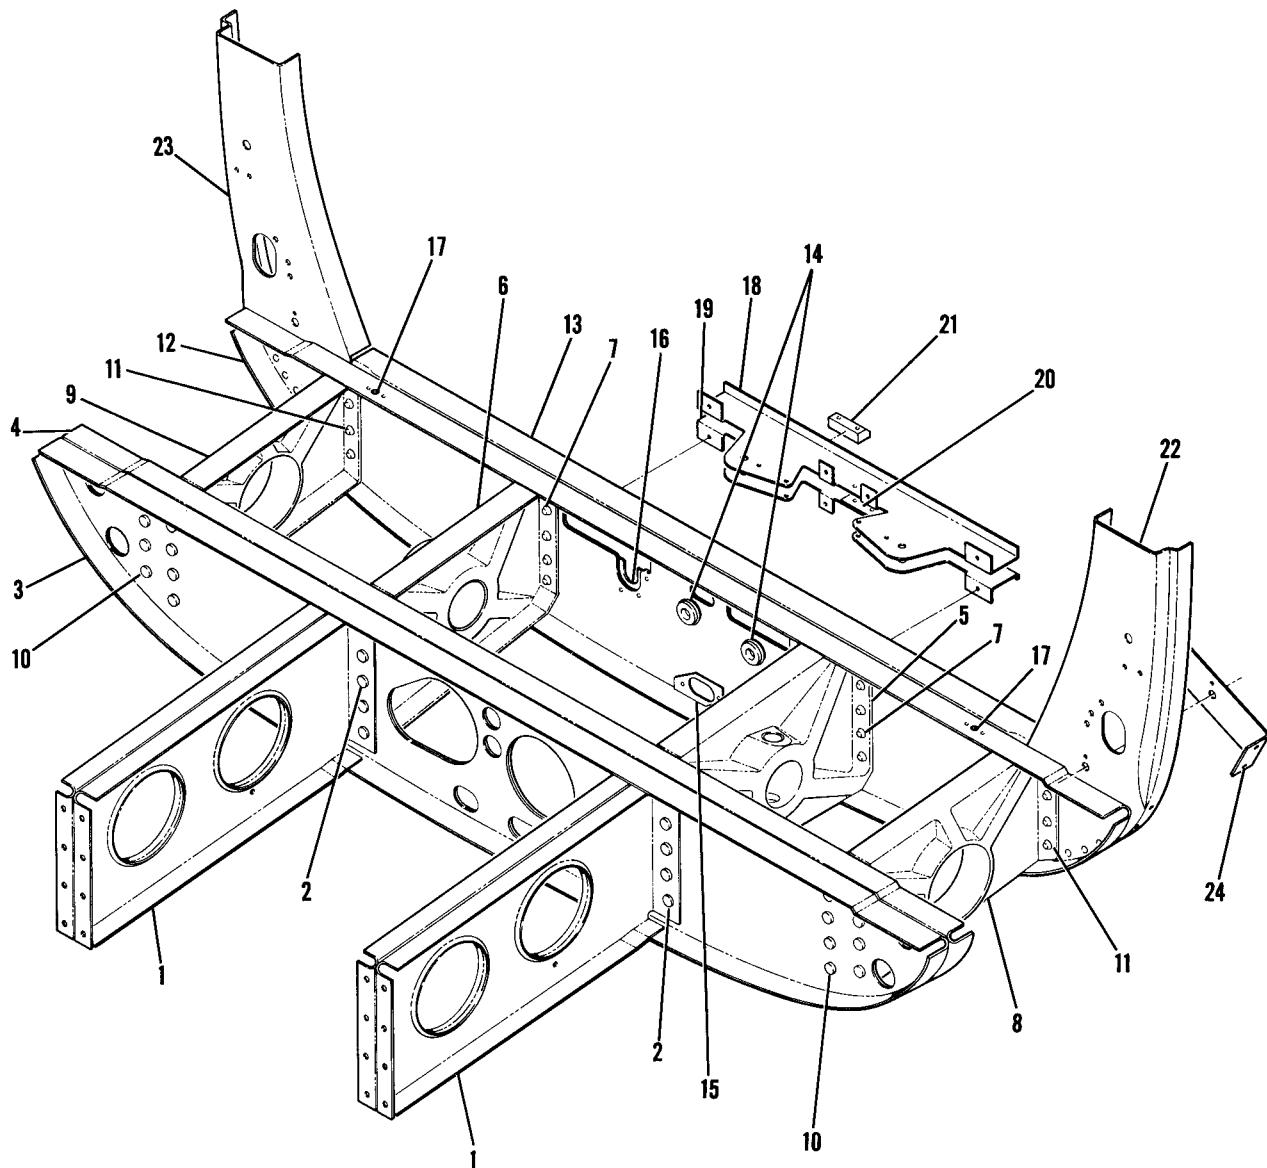


Figure 30. Landing Gear Bulkhead Assembly Sta. 44.00 To 65.33

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
30 -	0511794-3	BULKHEAD ASSEMBLY-LANDING GEAR STA 44.00 TO 65.33 -----	1						
- 1	0511777-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 44.00 TO 56.70 ----- ATTACHING PARTS	2						
- 2	NAS178-8-9	PIN -----	10						
	NAS1428-9	PIN ALTERNATE -----	10						
	NAS144-14	BOLT ALTERNATE -----	10						
	NAS144-13	BOLT ALTERNATE -----	10						
	NAS179-8	COLLAR -----	10						
	NAS1080C8	COLLAR ALTERNATE -----	10						
	AN960-416	WASHER ALTERNATE -----	10						
	MS21042L4	NUT ALTERNATE -----	10						
		-----*							
	0511795-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 56.70 -----	1						
	0511795-3	BULKHEAD-FORWARD STA 56.70 -----	1						
- 4	0511795-2	BULKHEAD-AFT STA 56.70 -----	1						
- 5	0541195-5	LANDING GEAR SUPPORT-INBOARD LH -----	1						
- 6	0541195-6	LANDING GEAR SUPPORT-INBOARD RH ----- ATTACHING PARTS	1						
- 7	NAS178-8-8	PIN -----	9						
	NAS1428-8	PIN ALTERNATE -----	9						
	NAS144-14	BOLT ALTERNATE -----	9						
	NAS144-13	BOLT ALTERNATE -----	9						
	NAS179-8	COLLAR -----	9						
	NAS1080C8	COLLAR ALTERNATE -----	9						
	AN960-416	WASHER ALTERNATE -----	9						
	MS21042L4	NUT ALTERNATE -----	9						
		-----*							
	0512124-15	FAIRLEAD USED ON 0511795-1 ONLY -----	1						
- 8	0541196-1	LANDING GEAR SUPPORT-OUTBOARD LH -----	1						
- 9	0541196-2	LANDING GEAR SUPPORT-OUTBOARD RH ----- ATTACHING PARTS	1						
-10	NAS178-8-8	PIN -----	8						
	NAS1428-8	PIN ALTERNATE -----	8						
	NAS144-14	BOLT ALTERNATE -----	8						
	NAS144-13	BOLT ALTERNATE -----	8						
	NAS179-8	COLLAR -----	8						
	NAS1080C8	COLLAR ALTERNATE -----	8						
	AN960-416	WASHER ALTERNATE -----	8						
	MS21042L4	NUT ALTERNATE -----	8						
-11	NAS178-8-10	PIN -----	9						
	NAS1428-8	PIN ALTERNATE -----	9						
	NAS144-14	BOLT ALTERNATE -----	9						
	NAS144-13	BOLT ALTERNATE -----	9						
	NAS179-8	COLLAR -----	9						
	NAS1080C8	COLLAR ALTERNATE -----	9						
	AN960-416	WASHER ALTERNATE -----	9						
	MS21042L4	NUT ALTERNATE -----	9						
		-----*							
	0511796-13	BULKHEAD ASSEMBLY-LANDING GEAR STA 65.33 -----	1						
-12	0511796-9	BULKHEAD-FORWARD STA 65.33 -----	1						
-13	0511796-14	BULKHEAD-AFT STA 65.33 -----	1						
-14	S338-7	FAIRLEAD HALF ----- ATTACHING PARTS	4						
	S339-P2	CLIP -----	1						
		-----*							
-15	0511807-1	FAIRLEAD -----	1						
-16	0511808-1	RUB STRIP -----	1						
-17	NAS680A4	NUTPLATE -----	2						
-18	0512132-15	BRACKET ASSEMBLY-AILERON PULLEY UPPER -----	1						
	0512132-4	FAIRLEAD -----	1						
-19	0512132-17	BRACKET ASSEMBLY-AILERON PULLEY LOWER -----	1						
-20	0512132-4	FAIRLEAD -----	1						
-21	0512132-5	FAIRLEAD -----	1						
-22	0512187-1	CHANNEL-BULKHEAD LH -----	1						
-23	0512187-2	CHANNEL-BULKHEAD RH -----	1						
-24	0512134-2	BRACKET-PULLEY LH -----	1						
	0512134-3	BRACKET-PULLEY RH -----	1						

Fuselage (Cont)

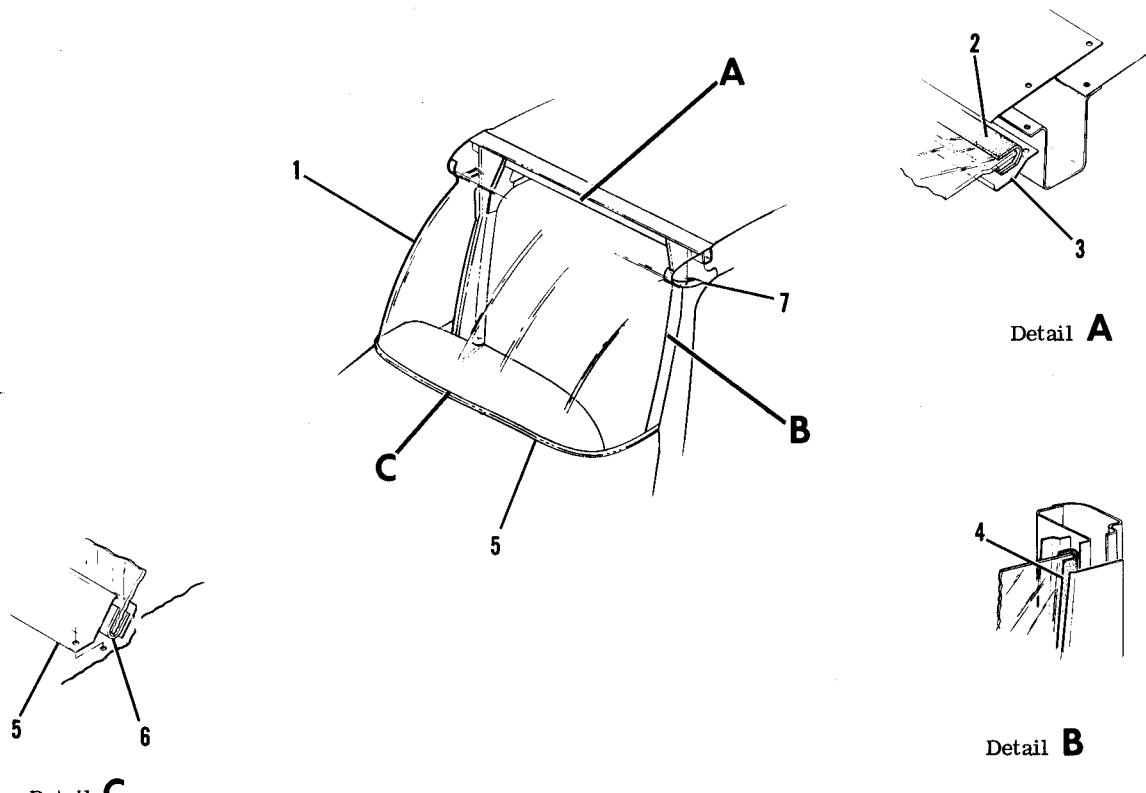


Figure 31. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31 - - 1	0513230-12	WINDSHIELD INSTALLATION -----	NP	
- 1	0513230-14 *	WINDSHIELD ASSY -----	I	
- 2	S1389-4	WINDSHIELD ASSY TINTED -----	1	
- 3	0513312-1	SEAL-FELT 46.50 IN LG BKI REF S1389-4-46.50 -----	AR	
- 4	S1389-1	RETAINER-WINDSHIELD TOP -----	1	
- 5	0513230-18	SEAL-FELT 18.50 IN LG BKI REF S1389-1-18.50 -----	AR	
- 6	S1389-2	RETAINER-OUTSIDE -----	1	
- 7	0413530-1	SEAL-FELT 76.50 IN LG BKI REF S1389-2-76.50 -----	AR	
		COVER-WINDSHIELD UPPER EDGE -----	1	
NOTE. *TINTED GLASS NOT USED ON FRENCH AIRCRAFT				

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
32 -		FUSELAGE ASSEMBLY-AFT SECTION -----	NP						
- 1	SEE FIG 29	BULKHEAD ASSY-FUSELAGE AFT SECTION STA 65.33 -----	1						
- 2	0511262-1	ROTARY CLUTCH ASSY-LH -----	1						
	0511262-2	ROTARY CLUTCH ASSY-RH -----	1						
- 3	AN525-1OR8	ATTACHING PARTS -----							
	AN960-10	SCREW -----	2						
	MS21044N3	WASHER -----	2						
		NUT -----	2						
		-----*							
- 4	0512192-1	BUMPER-DOOR LATCH -----	2						
- 5	SEE FIG 35	TAILCONE ASSY-AFT -----	1						
- 6	SEE FIG 34	EXTENDED BAGGAGE INSTL -----	1						
- 7	0512100-26	SKIN-REAR SADDLE -----	1						
- 8	0512100-11	SKIN-LH -----	1						
- 9	0512100-12	SKIN-RH -----	1						
- 10	0512100-19	SKIN-LH -----	1						
- 11	0512100-20	SKIN-RH -----	1						
- 12	0512100-7	SKIN-LH -----	1						
- 13	0512100-8	SKIN-RH -----	1						
- 14	0512100-13	SKIN-LH -----	1						
- 15	0512100-14	SKIN-RH -----	1						
- 16	0512180-5	WINDOW-SIDE LH -----	1						
	0512180-7 *	WINDOW-SIDE LH TINTED -----	1						
- 17	0512180-6	WINDOW-SIDE RH -----	1						
	0512180-8 *	WINDOW-SIDE RH TINTED -----	1						
- 18	S1166-1	SEAL-WINDOW 69.00 IN. LG. BK1 REF S1166-1-69.00 -----	2						
- 19	0512100-9	WINDOW-REAR -----	1						
	0512030-25 *	WINDOW-REAR TINTED -----	1						
- 20	S1839-2	SEALER-REAR WINDOW -----	2						
- 21	S1839-3	SEALER-REAR WINDOW -----	2						
- 22	S1839-1	SEALER-REAR WINDOW -----	1						
- 23	0512065-3	STIFFENER -----	1						
	0512065-5	STIFFENER FLOATPLANE ONLY -----	1						
	0510212-1	SPACER -----	2						
- 24	0512021-3	BRACE-LH -----	1						
- 25	0512181-1	BRACKET-WINDOW MOULDING LH -----	1						
	0512181-2	BRACKET-WINDOW MOULDING RH -----	1						
- 26	0512021-4	BRACE-RH -----	1						
- 27	0512188-2	GUSSET ASSY-RH -----	1						
	0512188-1	GUSSET ASSY-LH -----	1						
- 28	NAS680A4	NUTPLATE -----	1						
- 29	0512022-1	STRINGER ASSY-UPPER CENTER LINE -----	1						
- 30	0512022-3	PLATE -----	1						
- 31	NAS680A3K	NUTPLATE -----	7						
- 32	0512023-1	CHANNEL-LH -----	1						
- 33	0512023-2	CHANNEL-RH -----	1						
- 34	0512023-5	CHANNEL ASSY-LH -----	1						
	NAS697A08K	NUTPLATE -----	1						
- 35	0512023-4	CHANNEL-RH -----	1						
- 36	0512026-13	BULKHEAD ASSY-FUSELAGE STA 90.0 -----	1						
	0512026-16	BULKHEAD ASSY-FUSELAGE STA 90.0 -----	1						
- 36A	0512198-1	REINFORCEMENT-SEAT BELT ATTACH LH -----	1						
	0512198-2	REINFORCEMENT-SEAT BELT ATTACH RH -----	1						
		ATTACHING PARTS -----							
	NAS220-8	SCREW -----	3						
	AN960-8	WASHER -----	3						
	MS21044N08	NUT -----	3						
		-----*							
- 37	0512028-1	STRINGER-LH -----	1						
- 38	0512028-2	STRINGER-RH -----	1						
- 39	0512029-1	STRINGER ASSY-AFT CABIN TOP RH -----	1						
- 40	0512029-2	CLIP-SHOULDER HARNESS ATTACH -----	2						
	0411680	STRINGER ASSY-AFT CABIN TOP RH -----	1						
- 41	0512029-3	HANGER-HEADLINER -----	2						
- 42	0512029-4	STRINGER-LH -----	1						
- 43	0512029-5	STRINGER-RH -----	1						
	0512029-6	STRINGER-LH -----	1						
- 44	0512032-4	STRINGER-RH -----	1						
- 45	0512037-5	RETAINER ASSY -----	1						
- 46	0512037-6	STRINGER-LH -----	1						
		STRINGER-RH -----	1						

CONTINUED ON NEXT PAGE

Fuselage (Cont)

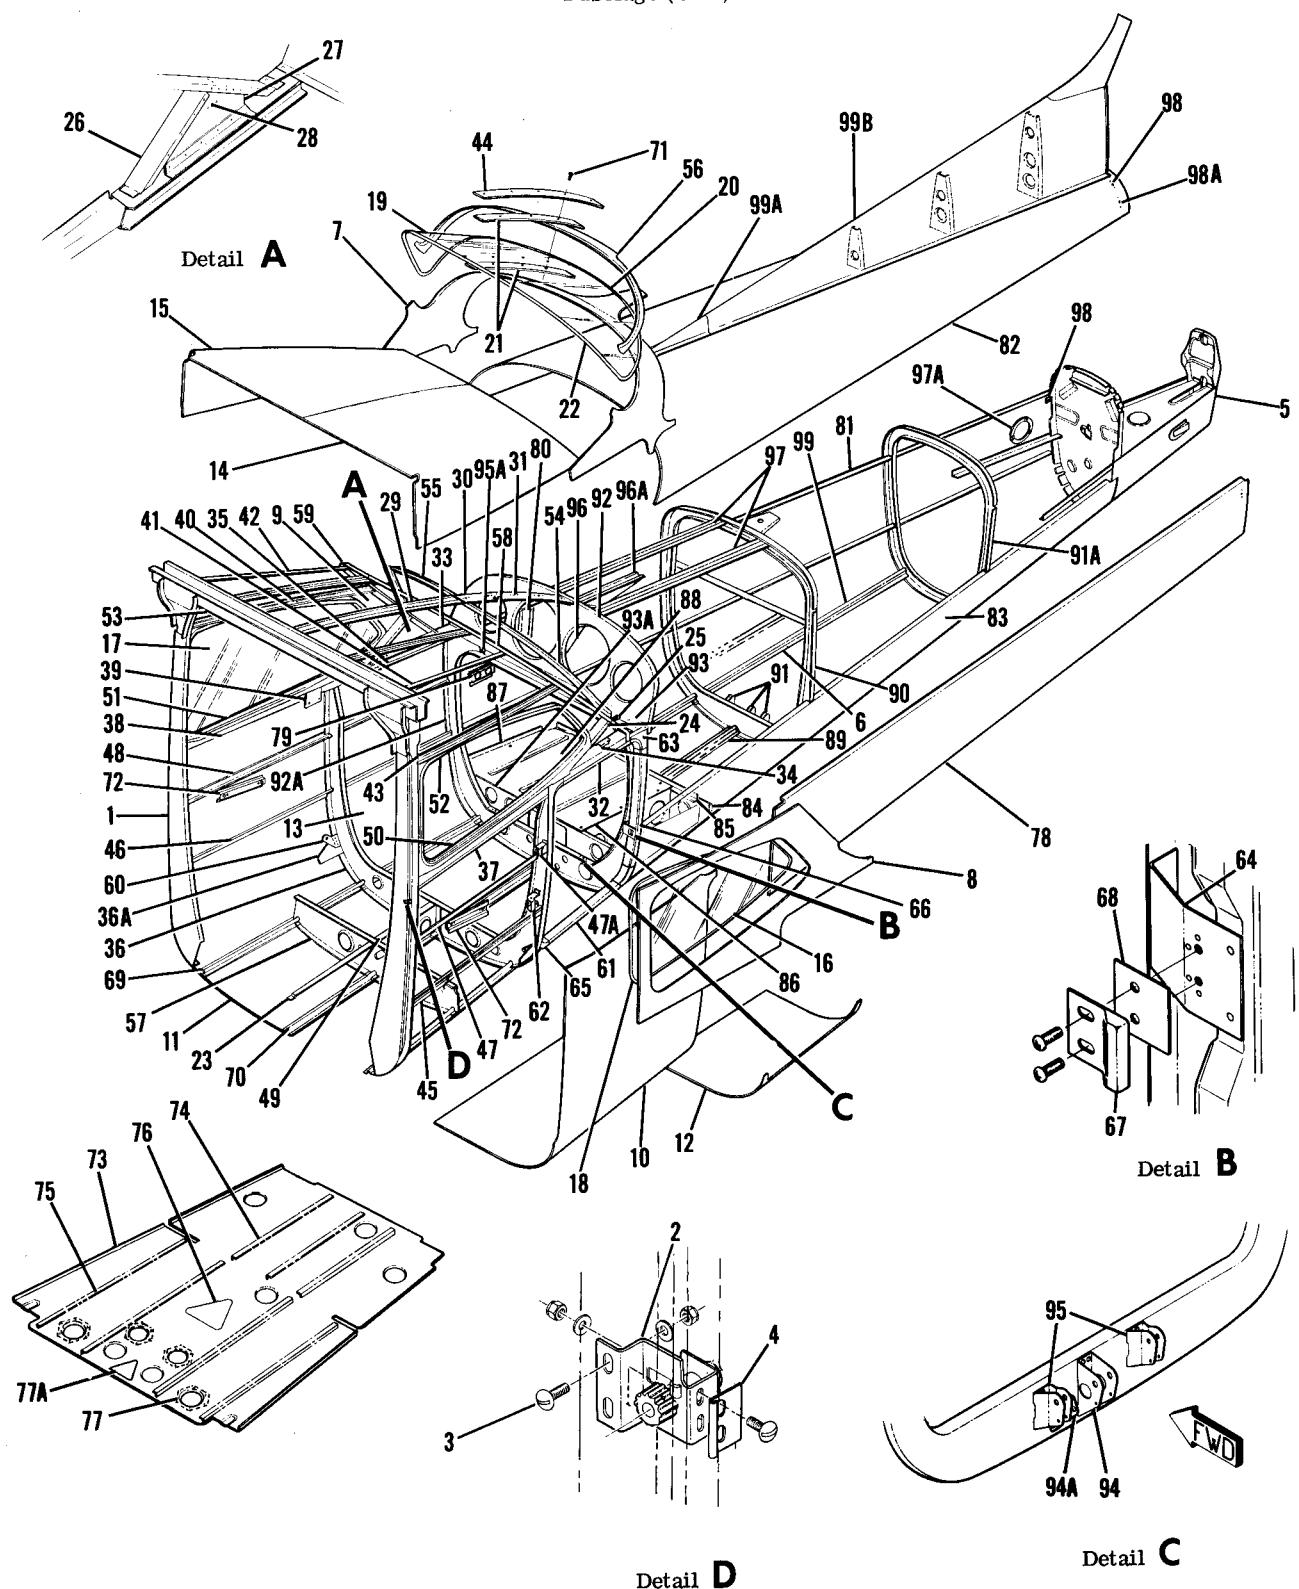


Figure 32. Fuselage Aft Section Assembly

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			1	ON CODE
		1 2 3 4 5 6 7		
32 -47	0512037-3	STRINGER-LH -----	1	A
	0512037-7	STRINGER-LH -----	1	B
-47A	0512201-1	GUSSET -----	1	
-48	0512037-4	STRINGER-RH -----	1	
-49	0512189-3	BULKHEAD ASSY-STA 80.0 TO 90.0 -----	1	
	NAS697A4	NUTPLATE -----	2	
-50	0512177-1	RETAINER-LH LWR -----	1	
-51	0512177-2	RETAINER-RH LWR -----	1	
-52	0512178-1	RETAINER-LH UPPER FWD -----	1	
	0512178-1	RETAINER-LH UPPER AFT -----	1	
-53	0512178-2	RETAINER-RH UPPER FWD -----	1	
	0512178-2	RETAINER-RH UPPER AFT -----	1	
-54	0512040-1	RETAINER-LH -----	1	
-55	0512040-2	RETAINER-RH -----	1	
-56	0512040-4	RETAINER-REAR WINDOW -----	1	
-57	0512064-1	BULKHEAD ASSY -----	1	
	S1291-10	GROMMET -----	2	
-58	0512020-3	BULKHEAD-LH -----	1	
-59	0512020-4	BULKHEAD-RH -----	1	
	0711084-7	PLATE ASSY-ANCHOR LH -----	1	
-60	0711084-8	PLATE ASSY-ANCHOR RH -----	1	
-61	0711101-8	JAMB-BAGGAGE DOOR LWR -----	1	
-62	0711101-10	BRACKET-LWR HINGE -----	1	A
	0512199-1	BRACKET-LWR HINGE -----	1	B
	0711101-11	BRACKET-UPPER HINGE -----	1	A
	0512199-2	BRACKET-UPR HINGE -----	1	B
-63	0711101-36	GUSSET-BAGGAGE DOOR UPPER -----	1	
	0711101-43	GUSSET-BAGGAGE DOOR LWR -----	1	
-64	0512066-1	BRACKET ASSY-STRIKE -----	1	
	NAS684A08	NUTPLATE -----	2	
-65	0711101-35	STOP-BAGGAGE DOOR FWD -----	1	A
	0711101-45	STOP-BAGGAGE DOOR FWD -----	1	B
-66	0711101-34	STOP-BAGGAGE DOOR AFT -----	1	
-67	0311319-1	PLATE-STRIKE -----	1	
-68	0311319-2	SHIM-STRIKE PLATE -----	1	
	AN515-8R6	ATTACHING PARTS		
		SCREW -----	2	
		-----*		
	0512039-7	STRINGER-LH -----	1	
-69	0512039-8	STRINGER-RH -----	1	
-70	0512039-12	STRINGER -----	1	
	0510212-1	SPACER -----	2	
	0512039-4	STRINGER -----	1	
-71	AN525-10R10	SCREW -----	5	
-72	0500229-2	SUPPORT-REAR ARM REST -----	2	
	1717034-1	BRACKET ASSY -----	1	
	NAS680A3	NUTPLATE -----	1	
-73	0512034-11	FLOORBOARD ASSY -----	1	
	0512034-13	FLOORBOARD ASSY FLOATPLANE ONLY -----	1	
-74	0512107-13	STIFFENER -----	3	
-75	0512034-42	STIFFENER -----	4	
-76	0512065-2	PLATE -----	1	
	0512065-4	PLATE FLOATPLANE ONLY -----	1	
-77	S1209-1	DOUBLER FLOATPLANE ONLY -----	4	
-77A	0512065-1	GUSSET -----	1	
-78	0512010-3	SKIN-LH -----	1	
-79	1260474-1	BRACKET-ELT -----	1	
-80	0512010-24	STIFFENER-RH -----	1	
-81	0512010-4	SKIN-RH -----	1	
-82	0512010-19	SKIN-TOP -----	1	
-83	0512010-21	SKIN-BOTTOM -----	1	
	0512015-2	BULKHEAD ASSY -----	1	
-84	0512015-7	BULKHEAD LH -----	1	
	0512015-8	BULKHEAD RH -----	1	
-85	0512015-11	ANGLE -----	1	
	NAS680A3	NUTPLATE -----	4	
-86	0512015-3	BULKHEAD ASSY -----	1	
	NAS680A3	NUTPLATE -----	3	
-87	0512015-4	ANGLE ASSY -----	1	
	NAS680A3	NUTPLATE -----	3	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
32 -88	0512017-1	SHELF-RADIO ATTACHING PARTS	1						
	NAS520-10R6	SCREW -----*	14						
-89	0512060-1	STRINGER	1						
-90	0512016-5	BULKHEAD ASSY-STA 142.00	1						
-91	0512160-3	BRACKET ATTACHING PARTS	3						
	AN520-10R7	SCREW	1						
	MS21044N3	NUT -----*	1						
-91A	0512016-3	BULKHEAD-STA 178.0	1						
	0512016-7	BULKHEAD-STA 178.0 FLOATPLANE ONLY	1						
-92	0512012-2	BULKHEAD-CANTED STA 108.0	1						
-92A	0512011-1	BULKHEAD ASSY-CANTED STA 108.0	1						
-93	0512019-1	ANGLE	1						
-93A	0512015-1	BULKHEAD ASSY	1						
	NAS680A3	NUTPLATE	4						
-94	0510164	BRACKET-PULLEY	1						
-94A	0412467	BRACKET-PULLEY	1						
-95	0512160-2	BRACKET-PULLEY ATTACHING PARTS	2						
	AN3-3A	BOLT	1						
	MS21044N3	NUT	1						
-95A	0512045-3	-----*							
	NAS697A3	BRACKET ASSY-BAGGAGE NET	2						
-96	0512013-1	NUTPLATE	1						
-96A	0512014-2	BRACKET-STRINGER STA 108.0	1						
-97	0512059-1	BRACKET-STRINGER	1						
-97A	S237-2	STRINGER	2						
-98	S1863-3A	DOUBLER	1						
-98A	S1863-2A	NUT	2						
-99	0512041-4	NUT	2						
-99A	0512041-5	STRINGER-RH	1						
	0531020-1	STRINGER-LH	1						
-99B	SEE FIG 33	FAIRING-DORSAL	1						
		DORSAL ASSY	1						
NOTE. *TINTED GLASS NOT USED ON FRENCH AIRCRAFT									
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

Fuselage (Cont)

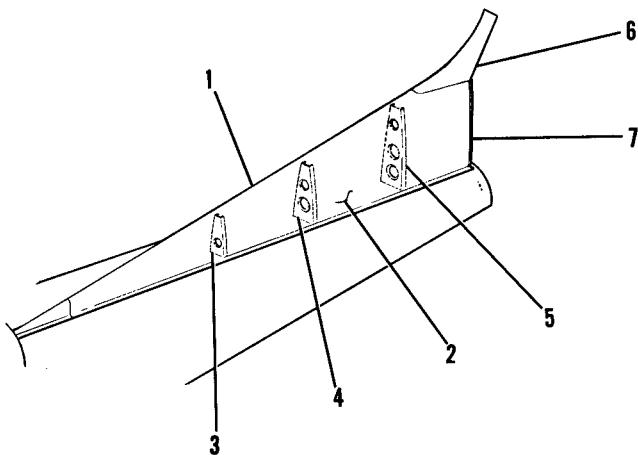


Figure 33. Dorsal Fin Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1	2
33 - 1	0531019-8	DORSAL FIN ASSEMBLY -----	1	
- 2	0531019-9	SKIN -----	1	
- 3	0531019-3	RIB-FWD -----	1	
- 4	0531019-4	RIB-CENTER -----	1	
- 5	0531015-5	RIB-AFT -----	1	
- 6	0531012-2	FAIRING -----	1	
- 7	S1161-1	SEAL-VINYL 14 IN LG -----	2	

Fuselage (Cont)



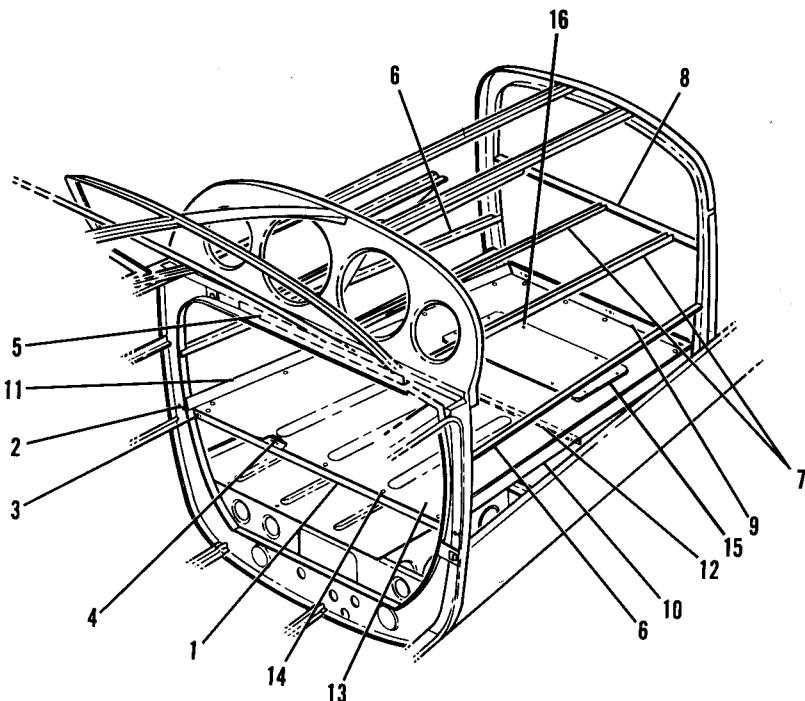


Figure 34. Extended Baggage Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
34 -		1 2 3 4 5 6 7		
- 1	0512193-1	EXTENDED BAGGAGE INSTALLATION ----- SUPPORT ASSY-FWD LOWER ----- ATTACHING PARTS -----*	NP	1
- 2	AN520-10R6	SCREW -----*		4
- 3	NAS697A3	NUTPLATE -----		6
- 4	NAS680A3	NUTPLATE -----		5
- 5	0512194-6	SUPPORT-FWD UPPER -----		1
- 6	0512194-1	SUPPORT-SIDEWALL UPPER -----		2
- 7	0512194-2	SUPPORT-UPPER -----		3
- 8	0512194-4	SUPPORT-AFT UPPER -----		1
- 9	NAS680A3	NUTPLATE -----		3
	0512193-3	SUPPORT ASSY-AFT LOWER ----- ATTACHING PARTS -----*		1
	AN525-10R6	SCREW -----		4
	MS21044N3	NUT -----		4
- 10	0512193-5	SUPPORT ASSY-SIDE LH LOWER -----		1
- 11	0512193-6	SUPPORT ASSY-SIDE RH LOWER -----		1
	NAS680A3	NUTPLATE -----		4
- 12	0512193-10	SUPPORT ASSY-CENTER -----		1
	NAS680A3	NUTPLATE -----		2
- 13	0512195-6	SHELF-EXTENDED BAGGAGE ----- ATTACHING PARTS -----*		1
- 14	AN525-10R8	SCREW -----*		20
- 15	0512195-8	COVER-ACCESS ----- ATTACHING PARTS -----*		1
- 16	S1878-1	STUD -----*		1

This page intentionally left blank.

Fuselage (Cont)

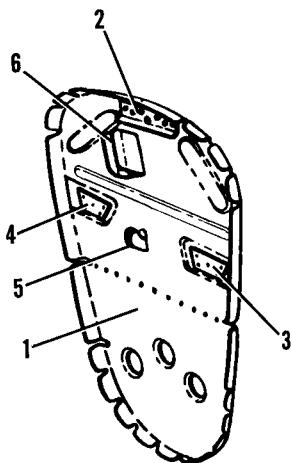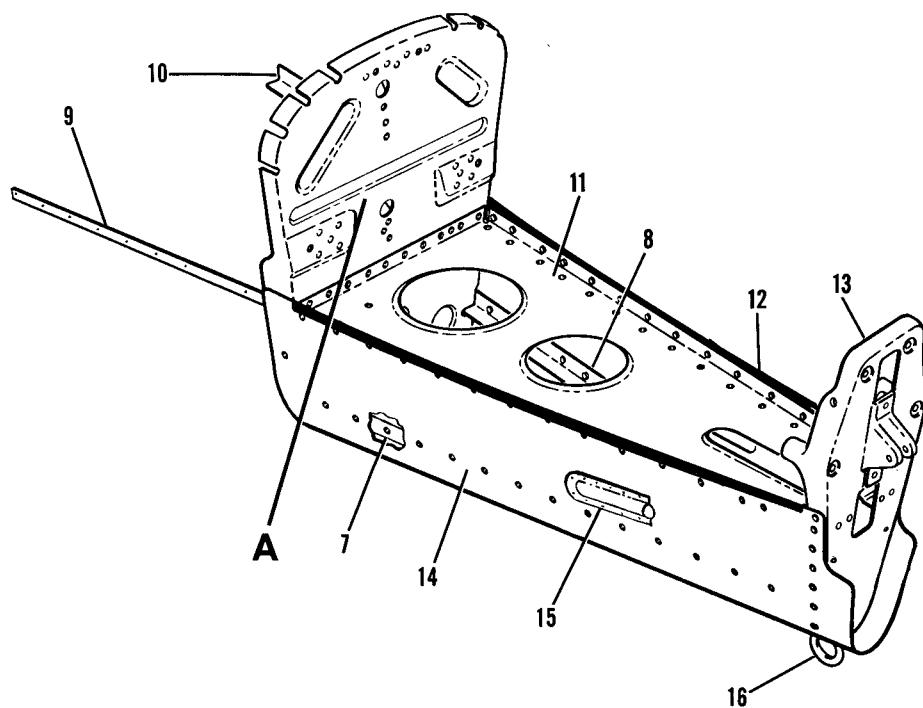

Detail A

Figure 35. Fuselage Tailcone Assembly Sta. 205.812 To 228.812

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
35 -	0512008-9	TAILCONE ASSEMBLY-FUSELAGE STA 205.812 TO 228.812	1						
- 1	0512157-6	BULKHEAD ASSEMBLY-FUSELAGE AFT SECTION STA 205.812 -----	1						
- 2	0512157-2	DOUBLER-BULKHEAD REINFORCEMENT -----	1						
- 3	0512143	DOUBLER-BULKHEAD REINFORCEMENT LH -----	1						
- 4	0512143-1	DOUBLER-BULKHEAD REINFORCEMENT RH -----	1						
- 5	0512160-5	BRACKET-ELEVATOR TAB PULLEY -----	1						
	AN520-10R8	SCREW HEAD ON FWD SIDE -----	1						
	MS21044N3	NUT -----	1						
	AN960-10L	WASHER -----	1						
- 6	0412467	BRACKET-TRIM TAB CONTROL PULLEY -----	1						
- 7	0512001-7	ANGLE-TAILCONE REINFORCEMENT LOWER LH -----	1						
- 8	0512001-8	ANGLE-TAILCONE REINFORCEMENT LOWER RH -----	1						
- 9	0512001-9	ANGLE-TAILCONE REINFORCEMENT UPPER LH -----	1						
-10	0512001-10	ANGLE-TAILCONE REINFORCEMENT UPPER RH -----	1						
-11	0512156	BULKHEAD-HORIZONTAL -----	1						
-12	S202RB	MOULDING 22 IN LG BULK ITEM REF S-202RB22.00 -----	AR						
-13	0512159-3	BULKHEAD-FUSELAGE AFT SECTION STA 228.687 -----	1						
	0512165-1	PLATE -----	2						
	NAS395-14-3	NUT -----	1						
-14	0512008-4	SKIN-AFT SECTION FUSELAGE LOWER -----	1						
-15	0530011-2	FAIRING-TAILCONE -----	2						
	0512009-10	RUB STRIP -----	2						
-16	0422344	EYEBOLT-MOORING -----	1						
		ATTACHING PARTS -----							
	22NA-3-054	NUTPLATE EN -----	1						
	NAS680A5	NUTPLATE ALTERNATE -----	1						
		-----*							

Fuselage (Cont)



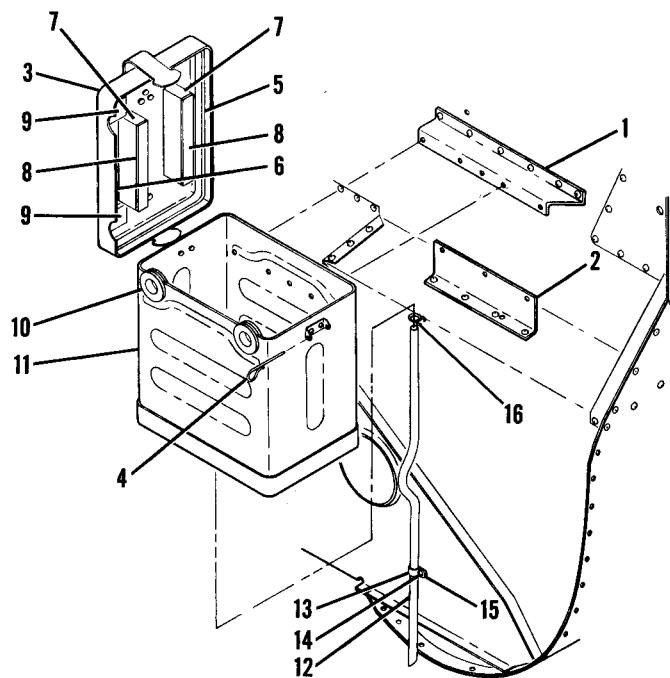


Figure 36. Battery Box Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
36 -	0513011-11	BOX INSTALLATION-BATTERY ----- BOX ASSEMBLY-BATTERY ----- ATTACHING PARTS -----	NP	
- 1	0513253-1	BRACKET-BATTERY BOX UPPER -----	1	
- 2	0513328-2	BRACKET-BATTERY BOX LOWER -----	1	
- 3	0413307-21	-----*----- LID ASSEMBLY-BATTERY BOX ----- ATTACHING PARTS -----	1	
- 4	AN415-2	PIN -----	2	
- 5	S1441-1	SEAL 20 IN LG BULK ITEM REF S-1441-1-20.0 -----	1	
- 6	S1441-1	SEAL 5.19 IN LG BULK ITEM REF S-1441-1-5.19 -----	1	
- 7	0413354-1	SPACER-LID -----	2	
- 8	0413307-6	INSULATOR-LID -----	2	
- 9	0413307-7	INSULATOR-LID -----	2	
-10	MS35489-12	GROMMET -----	2	
-11	0413307-18	SPOTWELD ASSEMBLY-BATTERY BOX -----	1	
-12	S1071-4	TUBE 18.5 IN LG BULK ITEM REF S1071-4-18.5 ----- ATTACHING PARTS -----	1	
-13	AN742D8	CLAMP -----	2	
-14	S1021Z8-6	SCREW -----	1	
-15	NAS446-4-3	NUT -----	1	
-16	S1494-8	CLAMP -----*-----	1	

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
37 - - 1	SEE FIG 38	NOSE GEAR INSTALLATION --- SHOCK STRUT ASSY-NOSE GEAR --- ATTACHING PARTS	NP 1	
- 2	AN5-31A MS21042L5	BOLT -----	1	
- 3	0543018-1	NUT -----	3	
- 4	AN5-10A AN960-516	CAP -----	1	
	0543042-1	BOLT -----	2	
	0543042-2	WASHER -----	2	
		SHIM .032 -----	AR	
		SHIM .016 -----	AR	
		---*---		
- 5	SEE FIG 41	DAMPENER ASSY-SHIMMY --- ATTACHING PARTS	1	
	AN23-17	BOLT -----	1	
	AN320-3	NUT -----	2	
	NAS75-3-009	SPACER -----	1	
	MS24665-132	COTTER PIN -----	2	
	AN23-11	BOLT -----	1	
	AN960-10L	WASHER -----	1	
		---*---		
CONTINUED ON NEXT PAGE				

Landing Gear

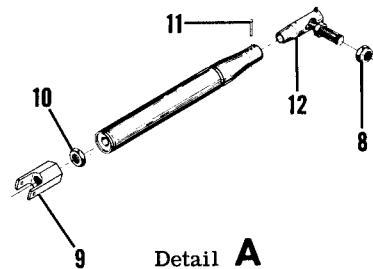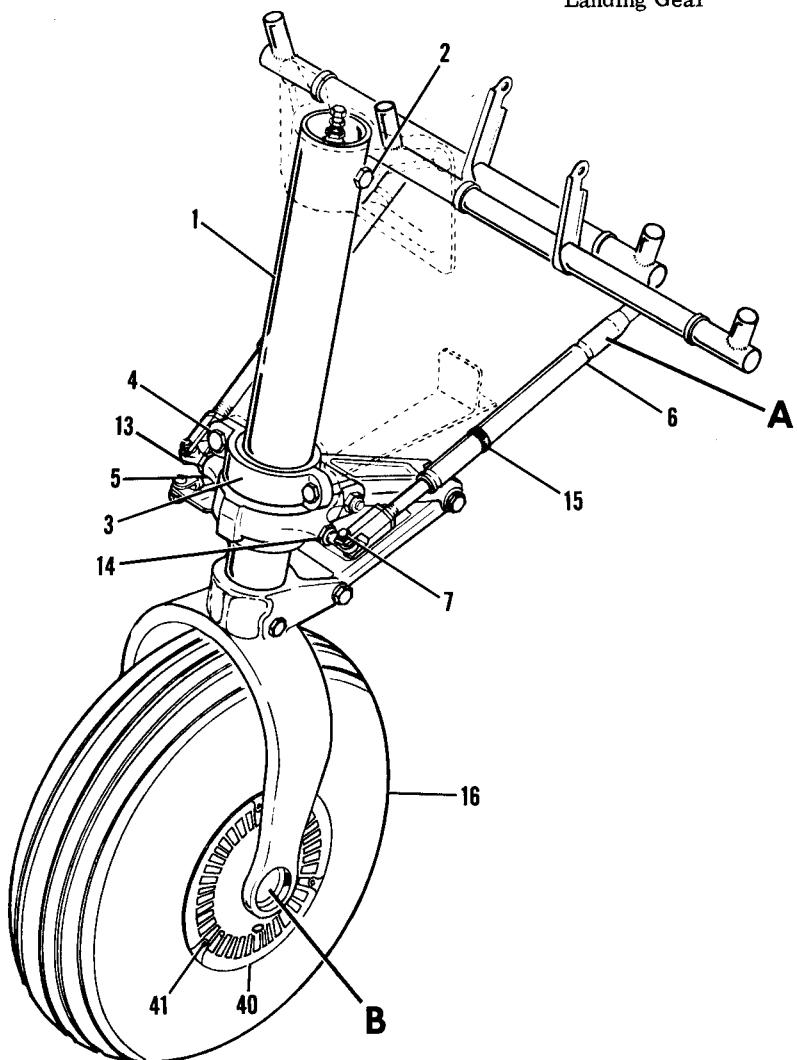

Detail A

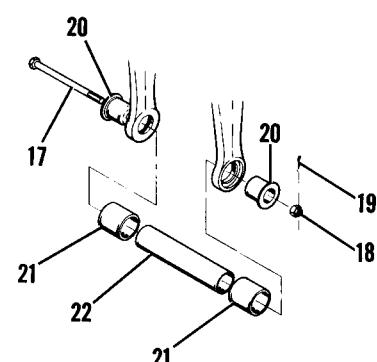

Detail B

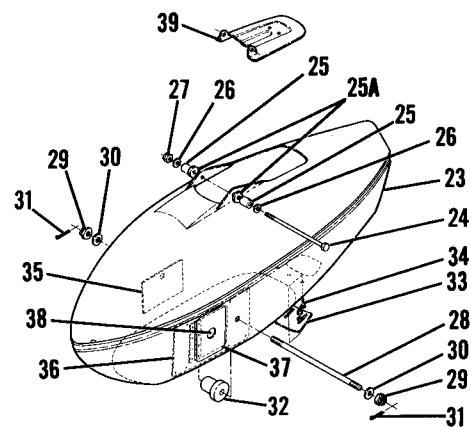


Figure 37. Nose Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
37 - 6	05430222-1 05430222-2	TUBE ASSY-STEERING LH TUBE ASSY-STEERING RH ATTACHING PARTS	1						
- 7	AN3-10A	BOLT	1						
	MS21045L3	NUT	1						
- 8	MS20364-624C	NUT	1						

- 9	0543023	CLEVIS	1						
- 10	AN316-6R	NUT	1						
- 11	MS20435-4	RIVET	1						
- 12	C109	BALL JOINT TOK	1						
- 13	S1823-3	BEARING-ROD END	2						
- 14	AN316-6R	NUT	2						
- 15	NAS397-16	CLAMP	2						
- 16	SEE FIG 39	WHEEL ASSY NOSE GEAR	1						
	SEE FIG 40	WHEEL ASSY-NOSE GEAR ALT ATTACHING PARTS	1						
- 17	AN5-47	BOLT	1						
- 18	AN310-5	NUT	1						
- 19	MS24665-134	COTTER PIN	1						
- 20	0543001	FERRULE-AXLE BOLT	2						
- 21	0543037-1	SPACER-AXLE NOSE WHEEL	2						
- 22	0543003	TUBE-AXLE	1						

- 23	0543079-3	SPEED FAIRING ASSY-NOSE GEAR ATTACHING PARTS	1						
- 24	AN5-51A	BOLT	1						
- 25	0743009-1	SPACER	2						
- 25A	S1450-5A15-050	WASHER	2						
- 26	AN960-516L	WASHER		AR					
- 27	MS21042L5	NUT	1						
- 28	0742410-27	STUD	1						
- 29	AN310-5	NUT	2						
- 30	S1450-5-12-035	WASHER	2						
- 31	MS24665-136	COTTER PIN	2						
- 32	0742410-8	FERRULE	2						

- 33	0541221-2	SCRAPER ATTACHING PARTS	1						
- 34	AN520-10R12	SCREW	3						
	AN960-10	WASHER	6						
	MS21045L3	NUT	3						

- 35	0541207-3	DOUBLER	1						
- 36	0541222-5	DOUBLER-FAIRING	1						
- 37	0541223-13	DOOR ASSY-SPEED FAIRING	1						
- 38	KM610-64	LATCH-DOOR CLC	1						
- 39	0543063-7	COVER PLATE ASSY ATTACHING PARTS	1						
		BOLT	1						
		NUT	1						
		WASHER		AR					
		COTTER PIN	1						

- 40	0743627-3	HUB CAP-NOSE GEAR VALVE STEM SIDE	1						
	0743627-4	HUB CAP-NOSE GEAR	1						
		ATTACHING PARTS							
- 41	AN515-8R4	SCREW	3						
	S2191-8-4	SCREW USE WITH MCCUALEY WHEEL	3						
	AN936A8	WASHER	3						

	6241M	EXTENSION VALVE DL	1						
	3680C	EXTENSION VALVE ALTERNATE SU	1						

Landing Gear (Cont)

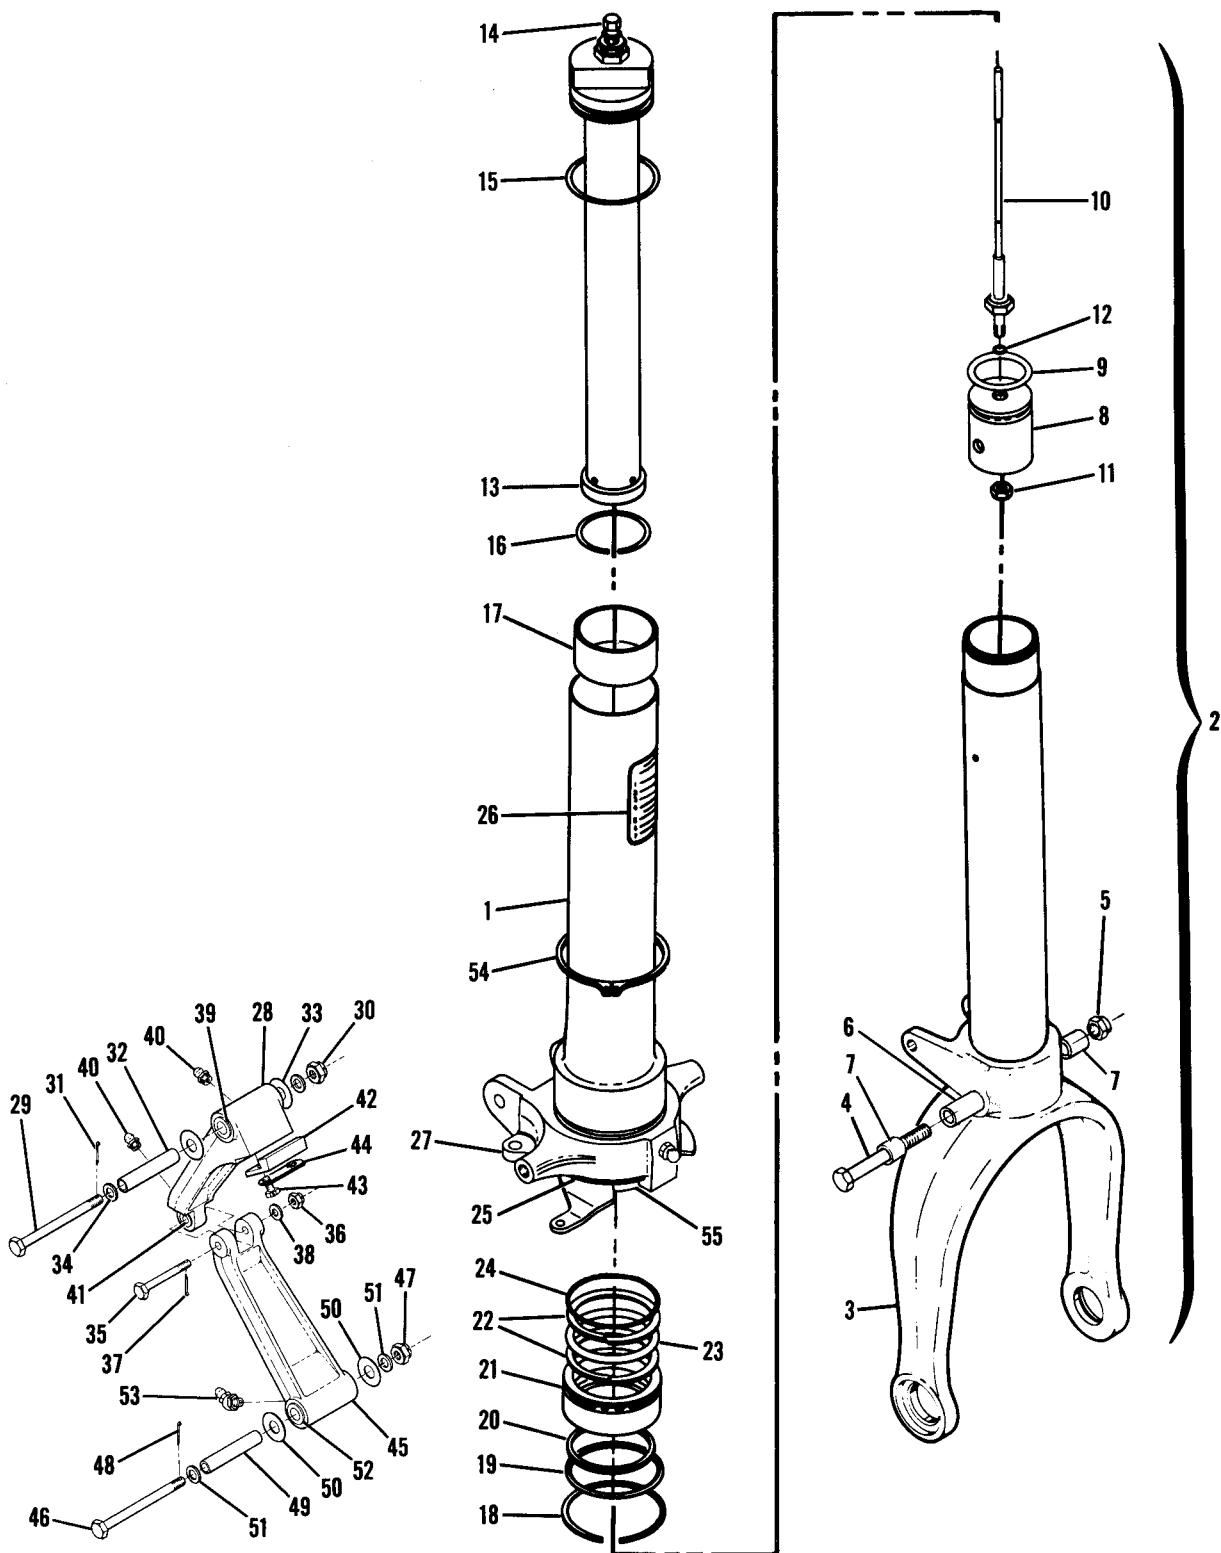


Figure 38. Nose Gear Shock Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
38 -	0543062-200	SHOCK STRUT ASSY-NOSE GEAR -----	1	
- 1	0543008-2	TUBE ASSY-SHOCK STRUT -----	1	
- 2	0543062-201	SHOCK STRUT ASSY-LOWER -----	1	
- 3	SK175-9	FORK-NOSE GEAR ----- ATTACHING PARTS	1	
- 4	AN5-47A	BOLT -----	1	
- 5	MS21042L5	NUT -----	1	
- 6	NAS75-5-231	BUSHING -----	1	
- 7	0743009-1	BUSHING ----- -----*	2	
- 8	0743612-1	PLUG-PIN BASE -----	1	
- 9	AN6227B26	O-RING -----	1	
-10	0442017-7	METERING ----- ATTACHING PARTS	1	
-11	MS21042L4	NUT -----	1	
-12	AN6227B5	O-RING ----- -----*	1	
-13	0543000-6	ORIFICE PISTON SUPPORT ASSY -----	1	
-14	0543036-1	VALVE ASSEMBLY -----	1	
	AN901-5A	O-RING -----	1	
-15	AN6230B3	O-RING -----	1	
-16	0841200-19	LOCK RING -----	1	
-17	1243021-1	BEARING -----	1	
-18	0841200-25	LOCK RING -----	1	
-19	0841200-15	RING PACK RETAINER -----	1	
-20	S11065-21	RING SCRAPER SHWS -----	1	
-21	1243626-1	RING PACK SUPPORT -----	1	
-22	S1628-329	RING BACK UP -----	2	
-23	AN6227B32	O-RING -----	1	
-24	AN6230B6	O-RING -----	1	
-25	0543029	WASHER -----	1	
-26	SEE FIG 2	PLACARD -----	1	
-27	0743011-8	ARM ASSY-NOSE GEAR STEERING -----	1	
	B4416D	BEARING TOR -----	1	
	AN944-101A	FITTING-LUBRICATION -----	1	
-28	0442506-1	TORQUE LINK-UPPER ----- ATTACHING PARTS	1	
-29	AN4-31	BOLT -----	1	
-30	AN310-4	NUT -----	1	
-31	MS24665-134	COTTER PIN -----	1	
-32	0543047-1	SPACER -----	1	
-33	0543048-1	SHIM-TORQUE LINK -----		AR
-34	AN960-416L	WASHER -----		AR
-35	NAS464-3-22	BOLT -----	1	
-36	AN310-3	NUT -----	1	
-37	MS24665-132	COTTER PIN -----	1	
-38	AN960-10L	WASHER ----- -----*	1	
-39	NAS77-6-88	BUSHING -----	1	
-40	AN944-101A	FITTING LUBE -----	2	
-41	NAS77-3-23	BUSHING -----	2	
-42	0442506-8	STOP LUG -----	1	
-43	AN3H3A	BOLT -----	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
38 -44	0442506-9	LUG-SAFETY -----	1						
-45	0442506-2	TORQUE-LINK-LOWER -----	1						
		ATTACHING PARTS							
-46	AN4-31	BOLT -----	1						
-47	AN310-4	NUT -----	1						
-48	MS24665-134	COTTER PIN -----	1						
-49	0543047-1	SPACER -----	1						
-50	0543048-1	SHIM-TORQUE LINK -----	AR						
-51	AN960-416L	WASHER -----	AR						
		-----*							
-52	NAS77-6-98	BUSHING -----	2						
-53	MS15002-3	FITTING-LUBE -----	1						
-54	MS16624-1275	RING-RETAINING -----	1						
	1243030-5	SHIM .006 THICK -----	AR						
	1243030-6	SHIM .012 THICK -----	AR						
	1243030-7	SHIM .020 THICK -----	AR						

Landing Gear (Cont)

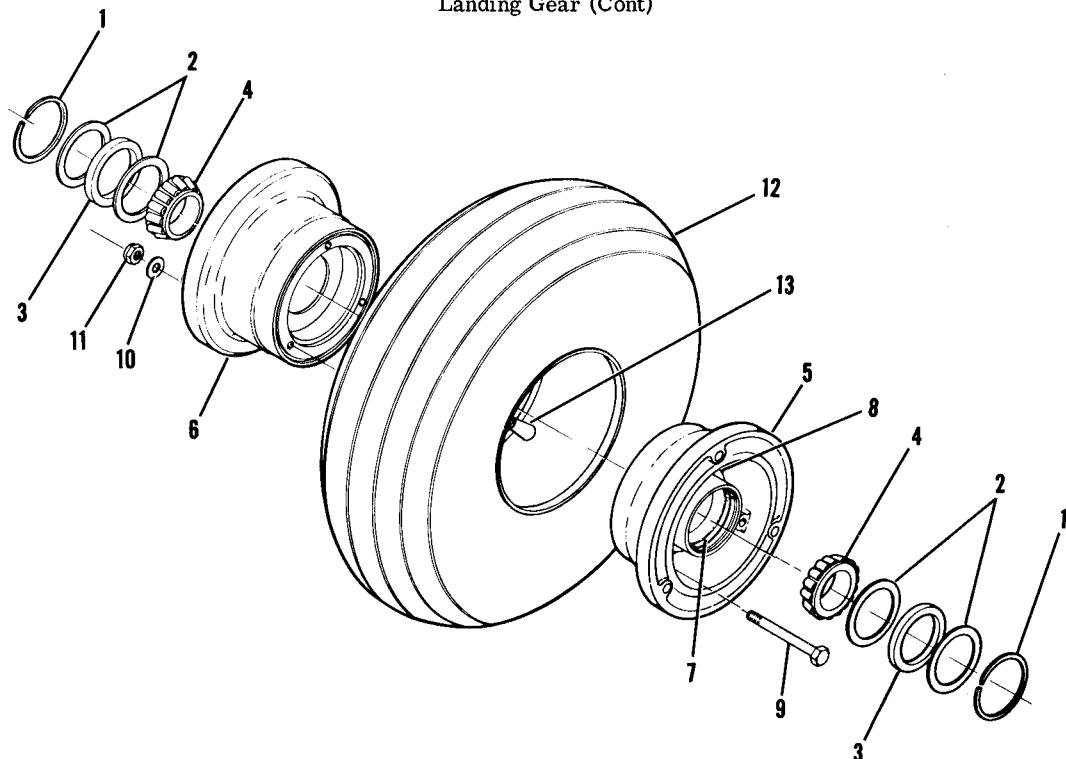


Figure 39. Cleveland Nose Gear Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE ON CODE				
			1	2	3	4	5	6
39 -	1241156-12	WHEEL ASSEMBLY-NOSE GEAR CLEVELAND -						
- 1	155-2	WHEEL ASSEMBLY CFP 40-77 -----						
- 2	153-8	RING CFP -----	1					
- 3	154-6	RING-GREASE SEAL CFP -----	2					
- 4	08125	GREASE SEAL-FELT CFP -----	2					
- 5	161-31	BEARING CFP -----	2					
- 6	162-28	WHEEL HALF-MALE CFP -----	1					
- 7	08231	WHEEL HALF-FEMALE CFP -----	1					
- 8	217-1	CUP-BEARING CFP -----	1					
- 9	AN4-22A	GROMMET CFP -----	1					
-10	AN960-416	BOLT -----	3					
-11	MS20365-328	WASHER -----	3					
-12	C262003-0102	NUT -----	3					
-13	C262001-0202	TIRE 5.00 X 5 4 PLY RATED -----	1					
	C262023-0101	TIRE-WHITE WALL 5.00X5 4 PLY RATED -----	1					
		TUBE 5.00 X 5 -----	1					

Landing Gear (Cont)

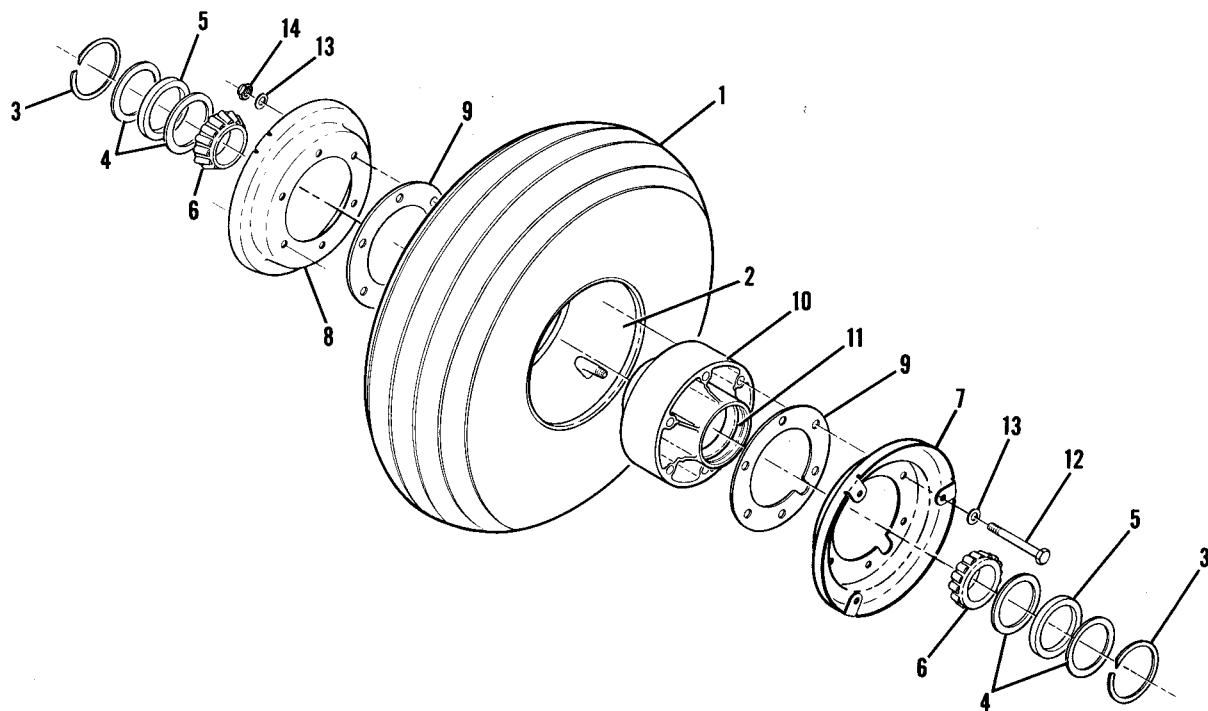


Figure 40. Nose Gear Wheel Assembly (Alternate)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
40 -		WHEEL ASSEMBLY-NOSE GEAR ALT -----	NP	
- 1	C262003-0102	TIRE-BLACKWALL 5.00X5 4 PLY RATED -----	1	
	C262004-0101	TIRE-WHITEWALL 5.00X5 4 PLY RATED -----	1	
- 2	C262023-0101	TUBE 5.00X5 -----	1	
	C163003-0201	WHEEL ASSY -----	1	
- 3	A1636-23	RETAINING RING MCL -----	2	
- 4	A30048	RING GREASE SEAL MCL -----	4	
- 5	A30047	GREASE SEAL-FELT MCL -----	2	
- 6	A30078-2	BEARING -----	2	
- 7	C30172-1	FLANGE-WHEEL MCL -----	1	
- 8	C30172	FLANGE-WHEEL MCL -----	1	
- 9	B30077	SPACER MCL -----	2	
-10	C30057	HUBASSY MCL -----	1	
-11	A30078-1	CUP-BEARING MCL -----	2	
-12	A2513-66	BOLT MCL -----	6	
-13	A1638-29	WASHER -----	12	
-14	MS20365-428A	NUT -----	6	

Landing Gear (Cont)

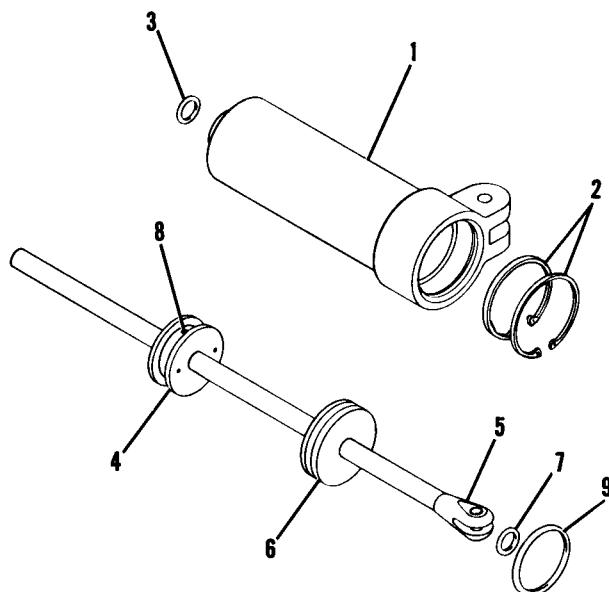


Figure 41. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
			1	2	
41 -		DAMPENER ASSEMBLY-SHIMMY -----	1		
- 1		BARREL-SHIMMY DAMPENER -----	1		
- 2		RING-SNAP -----	2		
- 3		O RING -----	1		
- 4		PISTON ASSEMBLY -----	1		
- 5		SHAFT -----	1		
- 6		HEAD BEARING -----	1		
- 7		O RING -----	1		
- 8		ROLL PIN -----	1		
- 9		O RING -----	1		

Landing Gear (Cont)

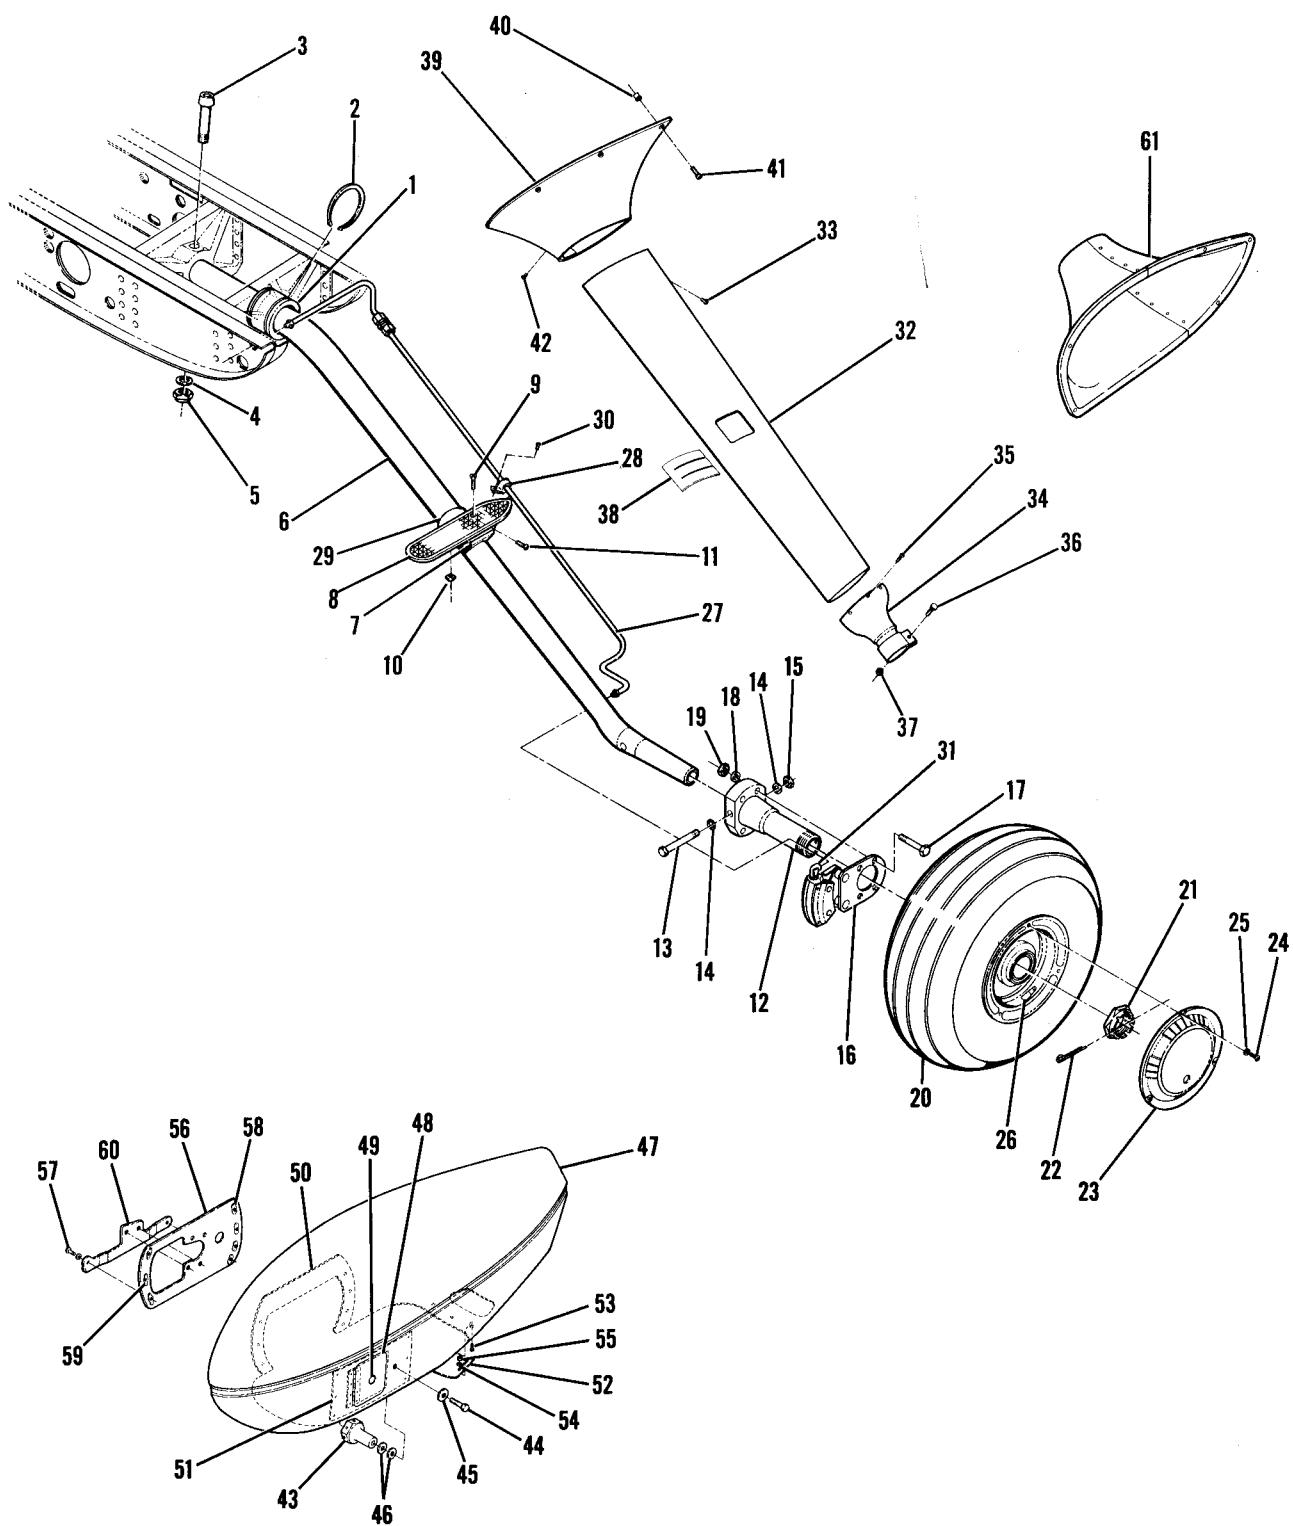


Figure 42. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
42 -		MAIN LANDING GEAR INSTALLATION -								NP	
- 1	0541202-4	BUSHING -----								1	
- 2	MS16624-1262	RETAINER -----								2	
- 3	S2138-1	BOLT -----								1	
- 4	S1450-10-15-063	WASHER -----									AR
- 5	MS20365-1018C	NUT -----								1	
		MAIN LANDING GEAR ASSY-LH -----									
		MAIN LANDING GEAR ASSY-RH -----									
- 6	0541198-9	SPRING ASSY-MAIN LANDING GEAR-LH -----								1	
	0541193-10	SPRING ASSY-MAIN LANDING GEAR-RH -----								1	
- 7	0541212-1	BRACKET ASSY-STEP LH -----								1	
	0541212-2	BRACKET ASSY-STEP RH -----								1	
- 8	0541211-1	STEP -----								1	
		ATTACHING PARTS -----									
- 9	AN507-1032R10	SCREW -----								1	
-10	MS21044N3	NUT -----								1	
-11	NAS221-9	SCREW -----								2	
	MS21044N3	NUT -----								2	
		-----*									
-12	0541199-1	AXLE-MAIN LANDING GEAR -----								1	
		ATTACHING PARTS -----									
-13	NAS464P7LA44	BOLT -----								1	
-14	AN960-716	WASHER -----								2	
-15	MS20364-720C	NUT -----								1	
		-----*									
-16	SEE FIG 43	Brake ASSY -----								1	
		ATTACHING PARTS -----									
-17	AN5-13A	BOLT -----								4	
	AN5-14A	BOLT ----- USED WITH FAIRINGS -----								4	
-18	AN960-516L	WASHER -----								4	
-19	MS21042L5	NUT -----								4	
		-----*									
-20	SEE FIG 43	WHEEL ASSY-MAIN LANDING GEAR -----								1	
-21	S1117-24	NUT -----								1	
-22	MS24665-351	PIN-COTTER -----								1	
-23	0741048-8	WHEEL CAP -----								1	
		ATTACHING PARTS -----									
-24	AN515-8R4	SCREW -----								3	
	S2191-8-4	SCREW ----- USED WITH MCCAUFLY WHEELS -----								3	
-25	AN936A8	WASHER -----								3	
		-----*									
-26	6241M	VALVE-EXTENSION DL -----								1	
	3680C	VALVE-EXTENSION SV ALT -----								1	
-27	0500118-126	LINE ASSY-BRAKE LH -----								1	
	0500118-127	LINE ASSY-BRAKE RH -----								1	
		ATTACHING PARTS -----									
-28	MS21919DG3	CLAMP -----								1	
-29	S148526L	CLAMP -----								1	
-30	S1021Z10-8	SCREW -----								1	
		-----*									
-31	MS20822-3D	ELBOW -----								1	
-32	0541193-7	FAIRING ASSY-MAIN LANDING GEAR LH -----								1	
	0541193-8	FAIRING ASSY-MAIN LANDING GEAR RH -----								1	
		ATTACHING PARTS -----									
-33	AN515-8R6	SCREW -----								9	
		-----*									
	NAS680A08	NUTPLATE -----								7	
	NAS696A08	NUTPLATE -----								2	
	NAS696A06L	NUTPLATE -----								3	
-34	0541191-1	COVER PLATE ASSY-MAIN LANDING GEAR LH -----								1	
	0541191-2	COVER PLATE ASSY-MAIN LANDING GEAR RH -----								1	
		ATTACHING PARTS -----									
-35	AN515-6R6	SCREW -----								3	
-36	AN3-4	BOLT -----								1	
-37	MS21044N3	NUT -----								1	
		-----*									
-38	0541226-1	COVER-STEP BRACKET -----								2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE						
				1	2	3	4	5	6	7
42 -39	1741005-239	FAIRING ASSY-MAIN LANDING GEAR LH VESTAL WHITE -----	1							
	1741005-240	FAIRING ASSY-MAIN LANDING GEAR RH VESTAL WHITE -----	1							
	1741005-247	FAIRING ASSY-MAIN LANDING GEAR LH PAINT TO ----- MATCH AIRCRAFT COLOR NOT USED ON F172	1							
	1741005-248	FAIRING ASSY-MAIN LANDING GEAR RH PAINT TO ----- MATCH AIRCRAFT COLOR NOT USED ON F172 ATTACHING PARTS	1							
-40	S1613-3-75	NUT -----	5							
-41	AN520-10R12	SCREW -----	5							
-42	AN515-6R6	SCREW -----	3							
-43	0741047-2	-----*								
	MS24665-362	NUT USE WITH FAIRING ONLY -----	2							
-44	ANG-6A	PIN-COTTER -----	2							
-45	AN960-616L	BOLT -----	2							
-46	AN960-616	WASHER -----	2							
-47	0541223-17	FAIRING ASSY-WHEEL MAIN LANDING GEAR LH -----	1							
	0541223-16	FAIRING ASSY-WHEEL MAIN LANDING GEAR RH -----	1							
-48	0541223-13	DOOR ASSY-FAIRING ACCESS -----	1							
-49	KM610-64	LATCH-DOOR CLC -----	1							
-50	0541219-1	DOUBLER-LH FAIRING -----	1							
	0541219-2	DOUBLER-RH FAIRING -----	1							
-51	0541222-1	DOUBLER-FAIRING -----	1							
-52	0541221-1	SCRAPER-FAIRING ----- ATTACHING PARTS	2							
-53	AN520-10R12	SCREW -----	3							
-54	AN960-10	WASHER -----	6							
-55	MS21044N3	NUT -----	3							
	NAS680A08	-----*								
-56	0541220-1	NUTPLATE -----	6							
	0541220-2	PLATE ASSY-LH MOUNTING -----	1							
		PLATE ASSY-RH MOUNTING -----	1							
-57	AN52510R10	ATTACHING PARTS								
	S1450-309-032	SCREW -----	7							
		WASHER -----	7							
-58	NAS685A3	-----*								
-59	NAS680A3K	NUTPLATE -----	4							
-60	0541218-1	STIFFENER-LH FAIRING -----	3							
	0541218-2	STIFFENR-RH FAIRING -----	1							
-61	0541224-1	FAIRING-BRAKE LH -----	1							
	0541224-2	FAIRING-BRAKE RH -----	1							
	AN525-832P10	ATTACHING PARTS								
	S1021Z6-6	SCREW -----	6							
		SCREW -----	4							

This page intentionally left blank.

Landing Gear (Cont)

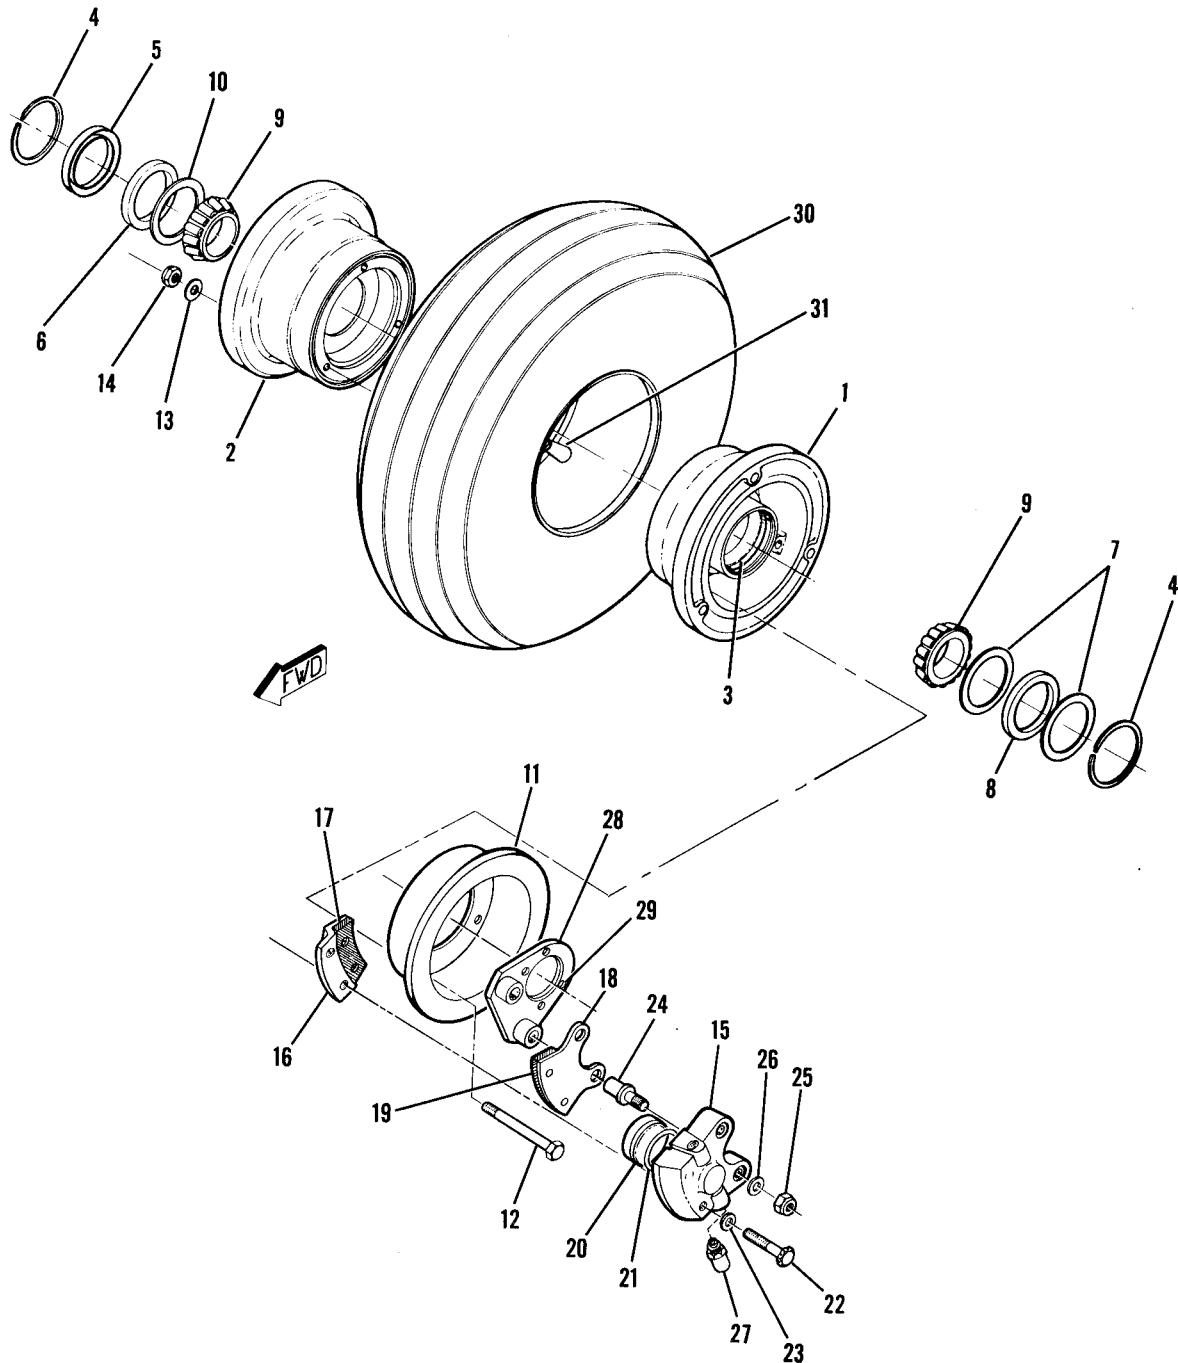


Figure 43. Main Landing Gear Wheel & Brake Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
43 -		WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR -----	NP								
- 1	161-49	WHEEL ASSY-MAIN GEAR CFP 40-113 -----	1								
- 2	162-47	WHEEL HALF ASSY-MALE CFP -----	1								
- 3	13836	WHEEL HALF ASSY-FEMALE CFP -----	1								
- 4	3023	CUP-BEARING -----	1								
- 5	153-15	SNAP RING CFP -----	1								
- 6	154-13	RING-GREASE SEAL CFP -----	1								
- 7	3022	FELT-GREASE SEAL CFP -----	2								
- 8	3021	RING-GREASE SEAL CFP -----	1								
- 9	13889	FELT-GREASE SEAL CFP -----	1								
-10	A39070	CONE-BEARING CFP -----	2								
-11	164-40	RING-GREASE SEAL CFP -----	1								
-12	AN4-36A	DISC ASSY-BRAKE CFP -----	1								
-13	AN960-416	BOLT -----	3								
-14	AN365-428	WASHER -----	3								
	C163030-0111 **	NUT -----	3								
	91-44	BRAKE ASSY -----	1								
		CYLINDER ASSY CFP -----	1								
-15	61-37	CYLINDER CFP -----	1								
-16	74-10	BACK PLATE ASSY CFP -----	1								
-17	66-30	LINING CFP -----	1								
-18	73-11	PRESSURE PLATE ASSY CFP -----	1								
-19	66-30	LINING CFP -----	1								
-20	92-17	PISTON ASSY CFP -----	1								
-21	AN6230B2	O-RING -----	1								
-22	LP4-17AM	BOLT CFP -----	2								
-23	AN960-416L	WASHER -----	2								
-24	69-4	BOLT-ANCHOR CFP -----	2								
-25	MS21042L4	NUT -----	2								
-26	AN960-416L	WASHER -----	2								
-27	FC6446	SCREW-BLEEDER CFP -----	1								
	183-1	CAP-BLEEDER SCREW CFP -----	1								
	37-206	SEAT-BLEEDER SCREW CFP -----	1								
-28	75-67	TORQUE PLATE ASSY CFP -----	1								
-29	145-10	BUSHING-TORQUE PLATE CFP -----	2								
-30	C262003-0101	TIRE-6.00X6 4 PLY RATED -----	1								
	C262001-0201	TIRE-WHITE WALL 6.00X6 6 PLAY RATED -----	1								
-31	C262023-0102	TUBE-6.00X6 -----	1								
		NOTE. **BRAKE ASSEMBLIES DESCRIBED ARE NORMALLY LH, REVERSE FITTINGS & TORQUE PLATE BUSHING FOR RH INSTALLATION.									

Landing Gear (Cont)

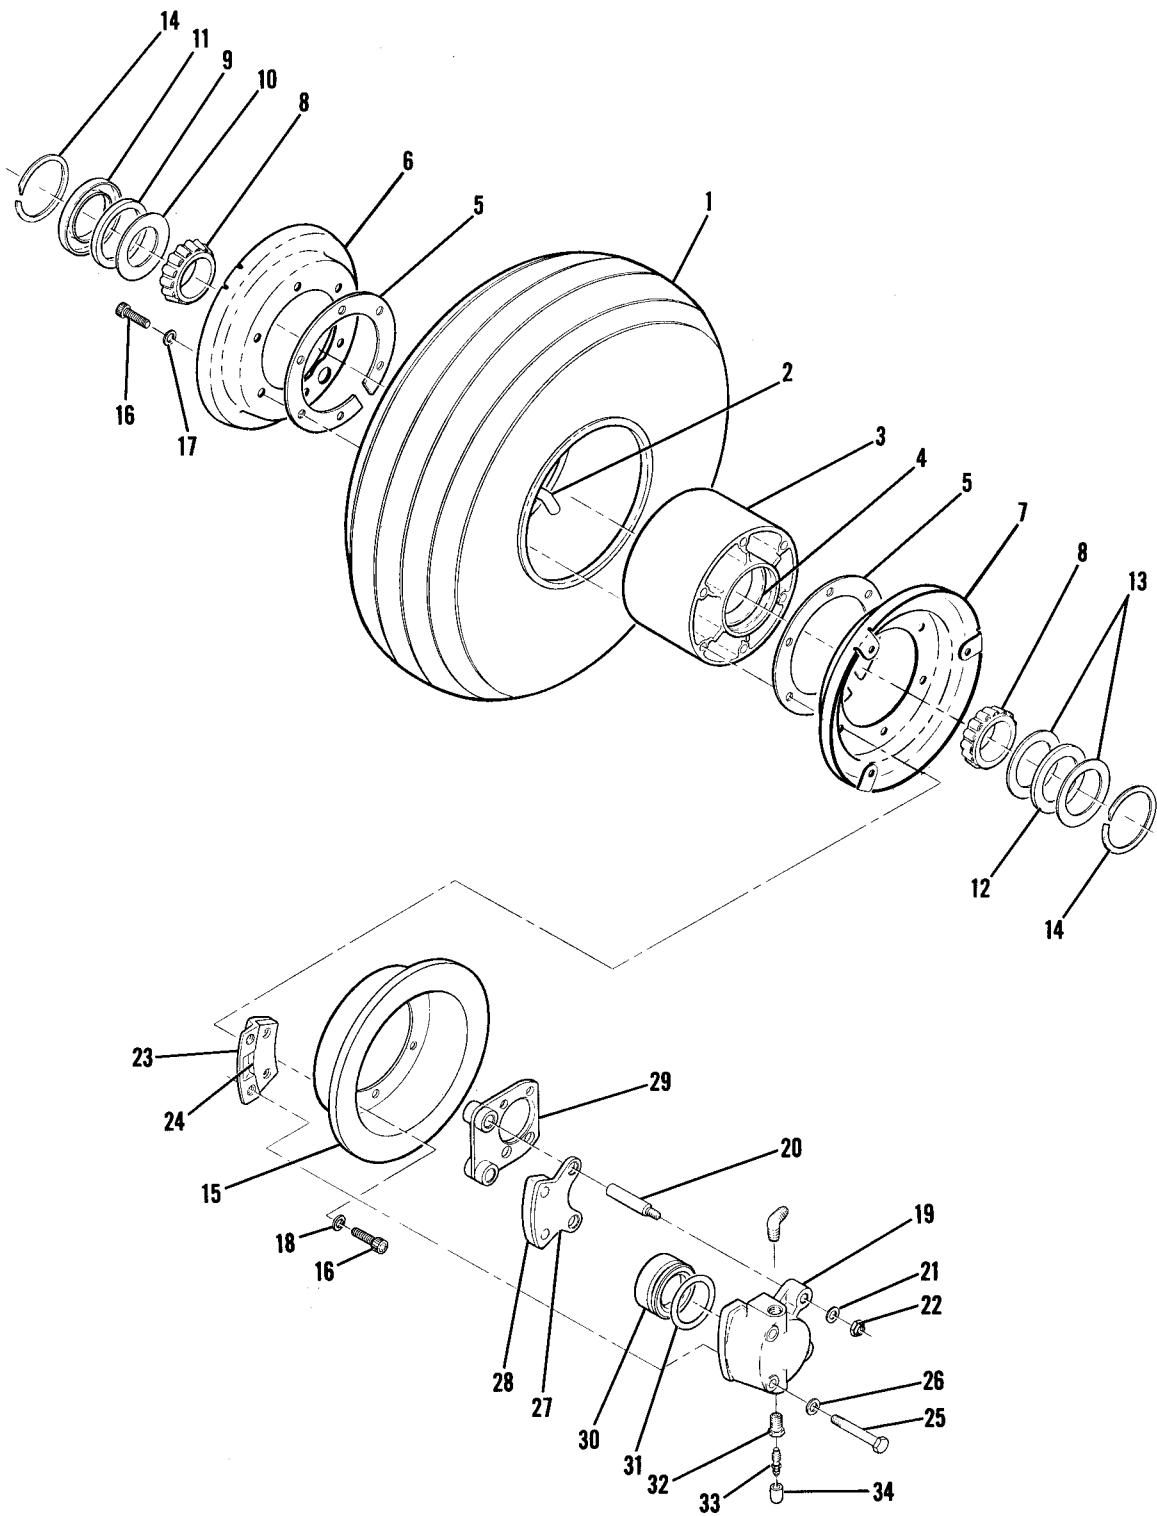


Figure 44. Main Landing Gear Wheel & Brake Assembly (Alternate)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
44 -		WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR ALT -							
- 1	C262003-0101	TIRE-BLACKWALL 6.00X6 4 PLY RATED -----	1						
	C262004-0102	TIRE-WHITEWALL 6.00X6 4 PLY RATED -----	1						
- 2	C262023-0102	TUBE 6.00X6 -----	1						
	C163003-0101 *	WHEEL ASSY-MAIN GEAR -----	1						
- 3	D30256	HUB ASSY MCL -----	1						
- 4	A30079-1	CUP BEARING MCL -----	2						
- 5	B30076	SPACER MCL -----	2						
- 6	C30163-1	FLANGE-WHEEL MCL -----	1						
- 7	C30163	FLANGE-WHEEL MCL -----	1						
- 8	A30079-2	CONE-BEARING MCL -----	2						
- 9	A30010	GREASE SEAL-FELT MCL -----	1						
-10	A30015	RETAINER-GREASE SEAL MCL -----	1						
-11	A30014	RETAINER-GREASE SEAL MCL -----	1						
-12	A30011	GREASE SEAL-FELT MCL -----	1						
-13	A30013	RETAINER-GREASE SEAL MCL -----	2						
-14	A1636-24	RING-RETAINER MCL -----	2						
-15	B30195	DISC ASSY MCL -----	1						
-16	A1635-73	SCREW MCL -----	12						
-17	A1638-30	WASHER MCL -----	6						
-18	A1638-1	WASHER MCL -----	6						
	C163032-0105 **	BRAKE ASSY -----	1						
	C30019	CYLINDER ASSY MCL -----	1						
-19	C30041	CYLINDER MCL -----	1						
-20	A30023	PIN-GUIDE MCL -----	2						
-21	AN960-416L	WASHER -----	2						
-22	MS21042L4	NUT -----	2						
-23	B30027	BACK PLATE ASSY MCL -----	1						
-24	B30026	LINING-BRAKE MCL -----	1						
	A30087	RIVET MCL -----	2						
-25	AN4H21A	BOLT -----	2						
-26	AN960-416L	WASHER -----	2						
-27	B30024	PRESSURE PLATE ASSY MCL -----	1						
-28	B30026	LINING-BRAKE MCL -----	1						
	A30087	RIVET MCL -----	2						
-29	B30089	TORQUE PLATE ASSY MCL -----	1						
-30	A30021	PISTON ASSY MCL -----	1						
-31	AN6230B2	O-RING -----	1						
-32	A30030	FITTING-BLEEDER MCL -----	1						
-33	A30085	FITTING-BLEEDER MCL -----	1						
-34	A30040	CAP-DUST MCL -----	1						
	R561	RIVET SET KIT -----	1						
NOTE.*THIS WHEEL ASSEMBLY MUST BE USED ONLY ON AIRCRAFT ORIGINALLY EQUIPPED WITH C163003-0101 MAIN GEAR WHEELS									
NOTE.**THIS BRAKE ASSEMBLY MUST BE USED WITH C163003-0101 WHEEL ASSEMBLIES ONLY.									

Door & Window

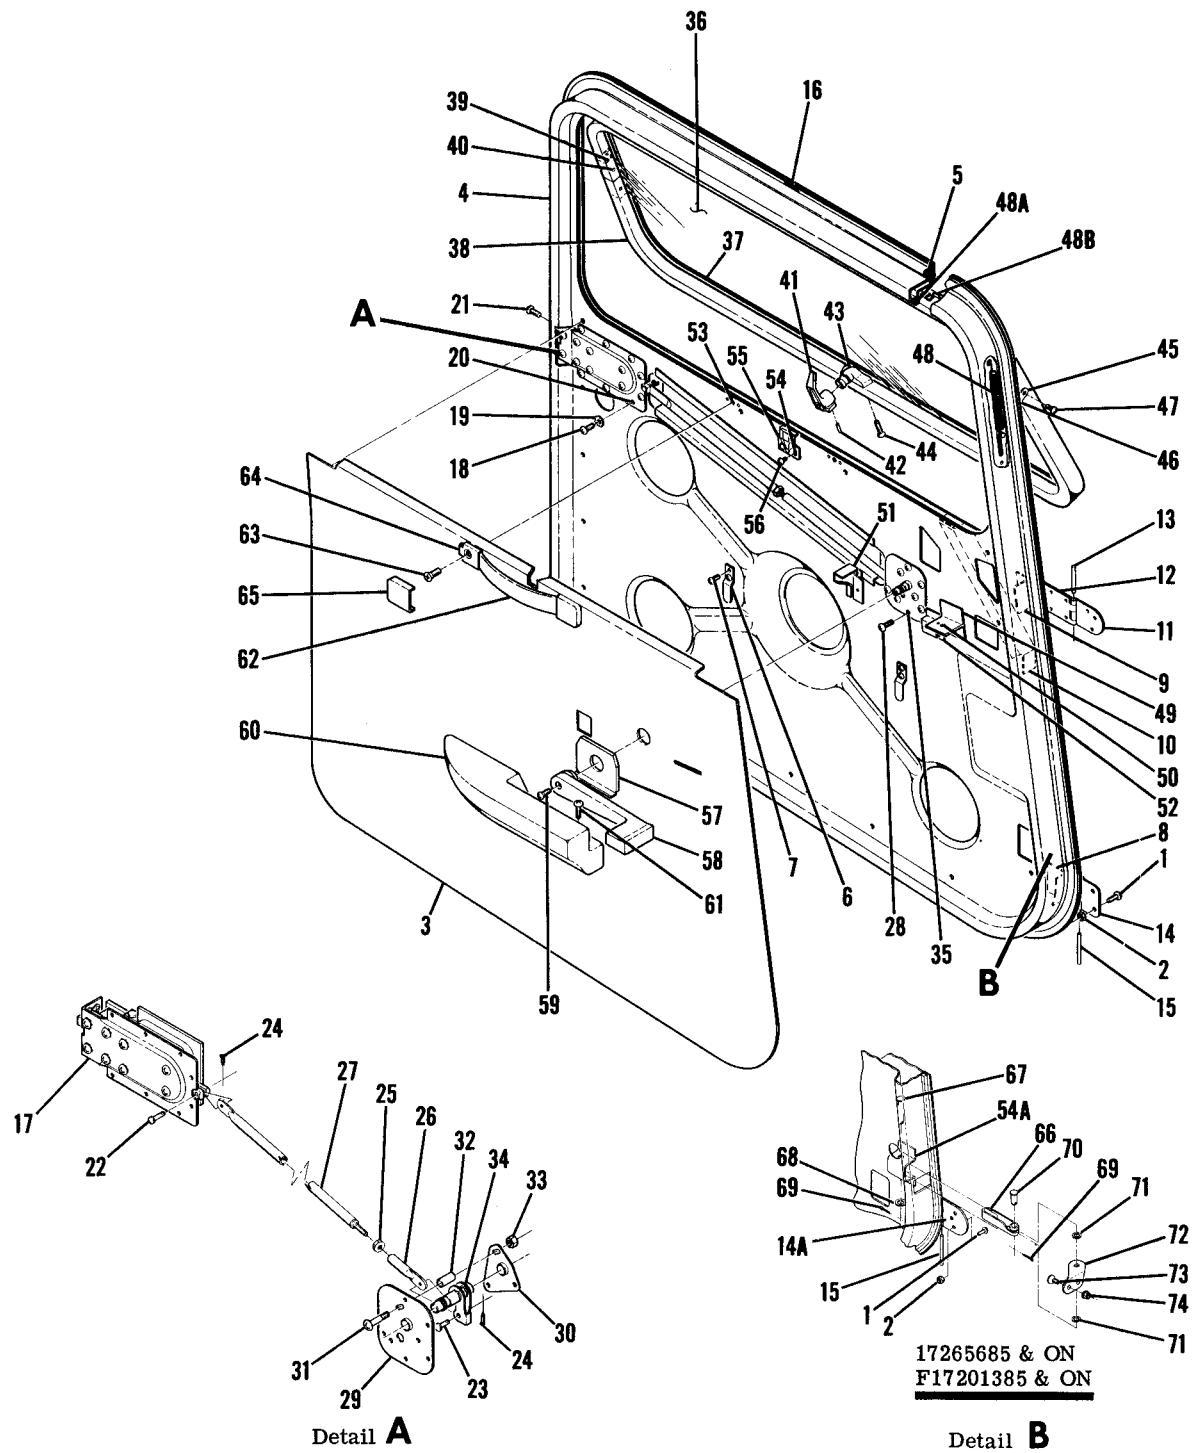


Figure 45. LH Cabin Door Assembly

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
45 -		CABIN DOOR ASSEMBLY-LH ATTACHING PARTS							NP	
- 1	AN520-10R8	SCREW -----							5	A
	AN525-10R8	SCREW -----							6	B
- 2	MS21044N3	NUT -----							5	A
	MS21044N3	NUT -----							6	B
		-----*								
- 3	0515005-19	# PANEL ASSY-UPHOLSTERY -----							1	A
	0515032-3	# PANEL ASSY-UPHOLSTERY -----							1	B
	S1933-1	FASTENER-UPHOLSTERY -----							17	
- 4	0511803-23	STRUCTURE ASSY-CABIN DOOR LH -----							1	A
	0511803-41	STRUCTURE ASSY-CABIN DOOR LH -----							1	B
- 5	S1346-1	SEAL 144 IN LG BULK ITEM REF S1346-1-144 -----							1	
- 6	0511463-1	CLIP-UPHOLSTERY -----							2	
		ATTACHING PARTS								
- 7	S1021Z4-4	SCREW -----							2	
		-----*								
- 8	0511461-1	REINFORCEMENT-DOOR HINGE LWR -----							1	
- 9	0511464-1	ANGLE-REINFORCEMENT -----							1	
-10	0511469-1	BRACE-DOOR UPR -----							1	
	0511280-1	HINGE ASSY-UPR -----							1	
-11	0511237-1	HINGE HALF ASSY -----							1	
-12	0511238-1	HINGE HALF ASSY -----							1	
-13	0711001-59	PIN-HINGE -----							1	
	0511280-3	HINGE ASSY-LWR -----							1	
	0517019-1	HINGE ASSY-LWR -----							1	A
-14	0511239-1	HINGE HALF -----							1	B
	0517019-3	HINGE HALF -----							1	A
	0511239-3	HINGE HALF -----							1	B
-14A	0517019-5	HINGE HALF -----							1	A
-15	0411579-3	PIN-HINGE -----							1	B
-16	A1663-022-1	LATCH-DOOR STOP TIN -----							1	
-17	SEE FIG 48	LATCH ASSY-CABIN DOOR -----							1	
		ATTACHING PARTS								
-18	S1021Z6-6	SCREW -----							8	
-19	AN936B6	WASHER -----							8	
-20	NAS395-3-3	NUT -----							8	
-21	AN525-832R6	SCREW -----							2	
		-----*								
	0517021-1	PUSH ROD ASSY -----							1	
		ATTACHING PARTS								
-22	MS20392-1C15	PIN -----							1	
-23	MS20392-1C9	PIN -----							1	
-24	MS24665-132	PIN-COTTER -----							2	
		-----*								
-25	AN315-4R	NUT-JAMB -----							1	
-26	0517021-4	** TUBE ASSY-PUSH ROD -----							1	
-27	0517021-5	** TUBE ASSY-PUSH ROD -----							1	
	1217046-3	BASE PLATE ASSY -----							1	
		ATTACHING PARTS								
-28	NAS220-4	SCREW -----							5	
		-----*								
-29	1217046-5	PLATE ASSY -----							1	
-30	1217046-6	BEARING ASSY -----							1	
		ATTACHING PARTS								
-31	NAS221-15	SCREW -----							3	
-32	NAS43HT3-45	SPACER -----							3	
-33	MS20364-1032C	NUT -----							3	
		-----*								
-34	1217050-3	SHAFT ASSY -----							1	
-35	NAS697A08	NUTPLATE -----							5	
	0711050-23	WINDOW ASSY-OPENABLE -----							1	
-36	0711051-1	GLASS ASSY-WINDOW -----							1	
	0711051-2	GLASS ASSY-WINDOW TINTED -----							1	
-37	0711051-5	SEAL -----							1	
-38	0711050-5	FRAME ASSY -----							1	
-39	0711050-7	TUBE-SPLICE -----							1	
		ATTACHING PARTS								
-40	CR763	RIVET CY -----							6	
		-----*								
-41	S1483-2	HANDLE-WINDOW -----							1	
		ATTACHING PARTS								
-42	NAS561P3-8	ROLL PIN -----							1	
		-----*								

CONTINUED ON NEXT PAGE

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
45 -43	1411202-201	BRACKET ASSY-WINDOW LATCH ----- ATTACHING PARTS	1						
-44	NAS514P1032-14	SCREW ----- -----*	2						
	NAS43HT3-34	SPACER -----	2						
-45	S1613-3-75	RIVNUT -----	1						
-46	0711021-11	ARM ASSY ----- ATTACHING PARTS	1						
-47	AN525-10R8	SCREW -----	1						
	0711021-12	SPACER ----- -----*	1						
-48	0711021-9	SPPING -----	1						
-48A	S2195-2	TRIM-WINDOW 84.0 IN LG BKI REF S2195-2-84.00 -----	1						
	S2108-1	SEAL-WINDOW 84.0 IN LG BKI REF S2108-1-84.00 -----	1						
-48B	0411185-7	HINGE ASSY-WINDOW ----- HINGE ASSY-LWR ----- HINGE ASSY-UPR ----- PIN-HINGE -----	2						
	0411185-6	SUPPORT ASSY-ARMREST -----	1						
	0411185-5	NUTPLATE -----	1						
	0411185-4	SUPPORT-ARMREST -----	1						
-49	0517014-1	SUPPORT-ARMREST -----	1						
-50	NAS697A08	NUTPLATE-ASSIST STRAP -----	2						
-51	0517013-1	NUT-STRIKER PLATE -----	2						
-52	0517015-1	BRACKET-DOORSTOP -----	1						
-53	NAS697A3	PLATE-STRIKER ----- ATTACHING PARTS	1						
-54	NAS1329-08K75	SCREW ----- -----*	2						
-54A	0517018-3	ESCUTCHEON-DOOR HANDLE ----- HANDLE-CABIN DOOR ----- ATTACHING PARTS	1						
-55	0517002-1	SCREW SELF-LOCKING ----- -----*	1						
-56	S1021Z8-8	ARMREST ASSY ----- ATTACHING PARTS	1						
-57	0705042-1	SCREW -----	1						
-58	1217053-2	HANDLE ASSY-ASSIST ----- ATTACHING PARTS	1						
-59	NAS388-10-7P *	SCREW ----- -----*	1						
-60	0717011-1 #	CLAMP ----- CAP -----	2						
-61	AN515-8R12	STOP-SPRING ----- ATTACHING PARTS	2						
-62	S1362-25	PIN -----	1						
-63	AN507-1032R10	WASHER ----- PIN-COTTER -----	1						
-64	S1362-2	PIN -----	2						
-65	S1362-24	WASHER -----	2						
-66	0517018-4	WASHER ----- -----*	1						
-67	MS20392-4C47	BRACKET-DOORPOST LH ----- ATTACHING PARTS	1						
-68	AN960D516L	SCREW -----	2						
-69	MS24665-281	NUT ----- -----*	2						
-70	MS20392-4C17	A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384							
-71	0517018-5	B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							
-72	0517018-1								
-73	NAS514P428-10								
-74	MS21042L4								
		NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.							
		NOTE * WHEN ORDERING THIS PART INCLUDE ENTIRE NOMENCLATURE.							
		NOTE. %TINTED GLASS NOT USED ON FRENCH AIRCRAFT.							
		NOTE. **WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 17265288 & F17201385 THE 0517021-1 PUSH ROD ASSY MUST BE ORDERED.							
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384							
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
46 -		CABIN DOOR ASSEMBLY-RH							NP	
- 1	AN520-10R8	ATTACHING PARTS							5	A
	AN525-10R8	SCREW							6	B
- 2	MS21044N3	SCREW							5	A
	MS21044N3	NUT							6	B
		-----*								
- 3	0515005-20	#	PANEL-UPHOLSTERY						1	A
	0515032-4	#	PANEL-UPHOLSTERY						1	B
	S1933-1	FASTENER-UPHOLSTERY							17	
- 4	0511803-24	STRUCTURE ASSEMBLY-CABIN DOOR RH							1	A
	0511803-42	STRUCTURE ASSEMBLY-CABIN DOOR RH							1	B
- 5	0511463-1	CLIP-UPHOLSTERY							2	
		ATTACHING PARTS								
- 6	S1021Z4-4	SCREW							2	
		-----*								
- 7	S1346-1	SEAL 144 IN LG BULK ITEM REF S1346-1-144							1	
- 8	0511461-1	REINFORCEMENT-DOOR HINGE LWR							1	
- 9	0511464-1	ANGLE-DOOR REINFORCEMENT							1	
-10	0511469-2	BRACE-DOOR HINGE UPPER							1	
	0511280-2	HINGE ASSY-UPPER							1	
-11	0511238-2	HINGE HALF ASSY							1	
-12	0511237-2	HINGE HALF ASSY							1	
-13	0711001-59	PIN-HINGE							1	
	0511280-4	HINGE ASSY-LOWER							1	
	0517019-2	HINGE ASSY-LOWER							1	
-14	0511239-4	HINGE HALF ASSY							1	A
	0517019-6	HINGE HALF ASSY							1	B
	0511239-2	HINGE HALF ASSY							1	A
-14A	0517019-4	HINGE HALF ASSY							1	B
-15	0411579-3	PIN-HINGE							1	A
-16	A1663-022-1	CATCH-DOOR STOP TIN							1	A
-17	SEE FIG 48	LATCH ASSY-CABIN DOOR							1	
		ATTACHING PARTS								
-18	AN825-832R6	SCREW							2	
-19	S1021Z6-6	SCREW							8	
-20	AN936B6	WASHER							8	
-21	NAS395-3-3	NUT							8	
		-----*								
	0517021-1	PUSH ROD ASSY							1	
		ATTACHING PARTS								
-22	MS20392-1C15	PIN							1	
-23	MS20392-1C9	PIN							1	
-24	MS24665-132	COTTER PIN							2	
		-----*								
-25	AN515-4R	NUT-JAMB							1	
-26	0517021-4	TUBE ASSY-PUSH ROD							1	
-27	0517021-5	**	TUBE ASSY-PUSH ROD						1	

CONTINUED ON NEXT PAGE

Door & Window (Cont)

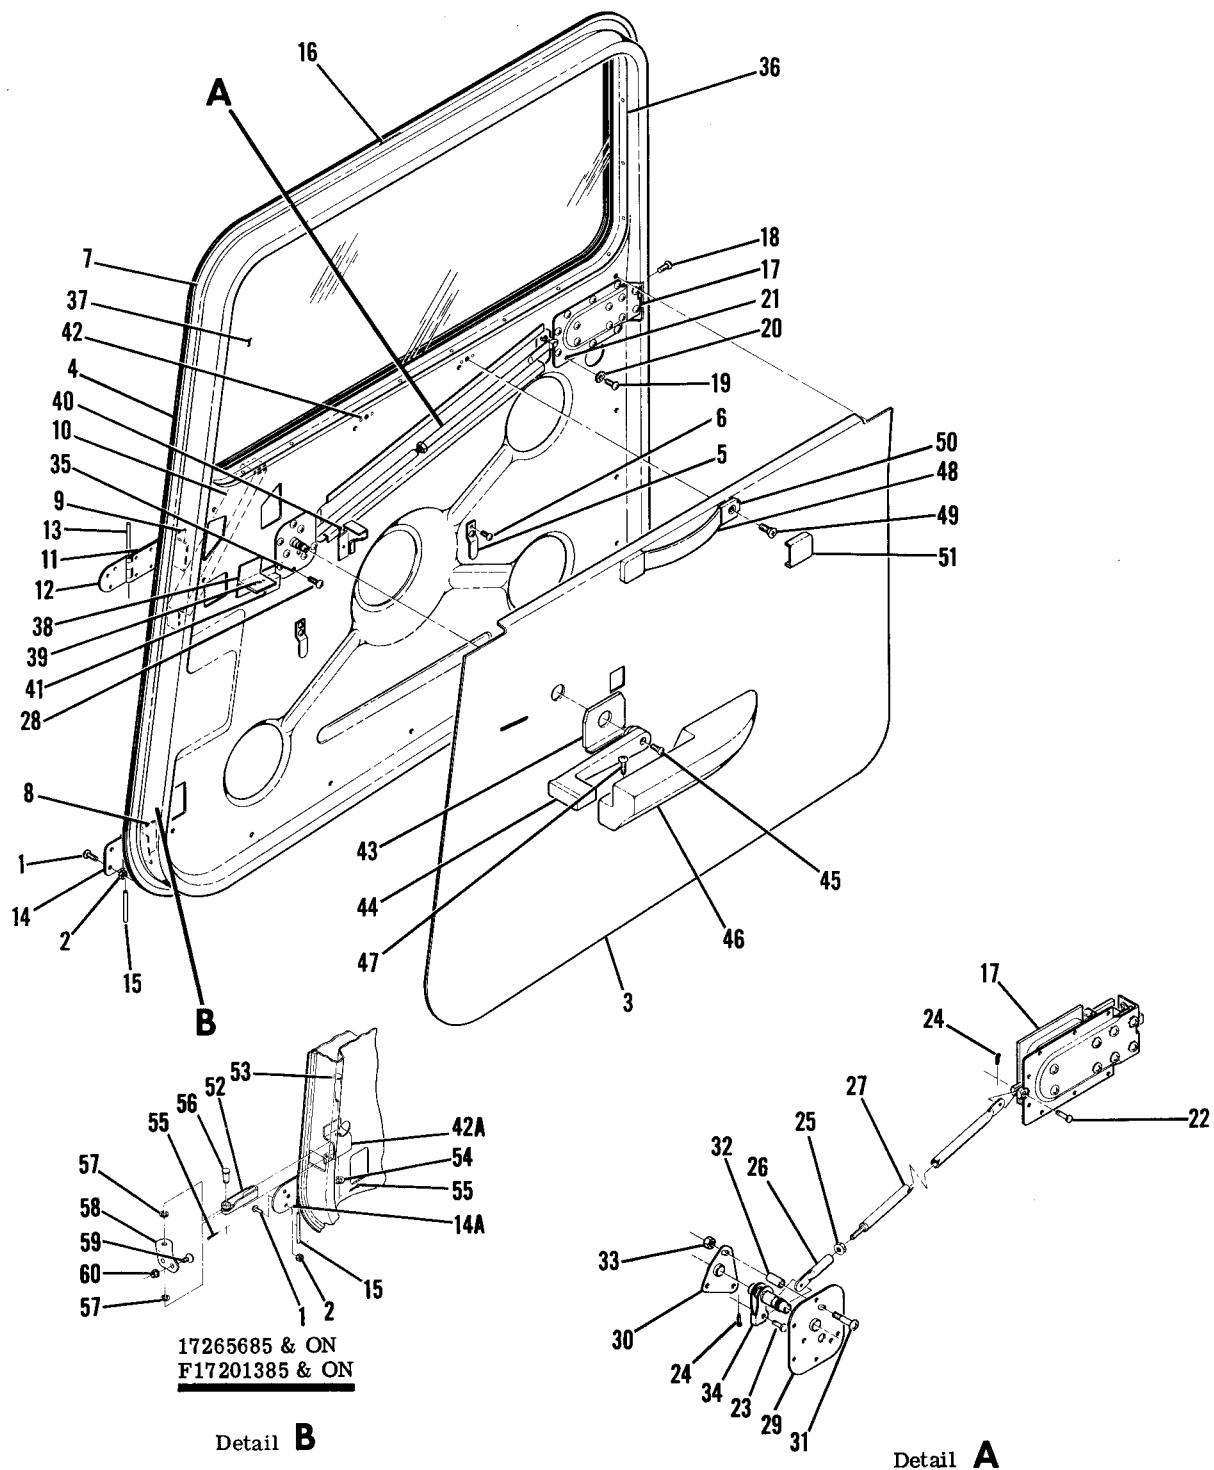


Figure 46. RH Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
46 -	1217046-4	BASE PLATE ASSY ----- ATTACHING PARTS -----	1						
-28	NAS220-4	SCREW ----- -----*	5						
-29	1217046-5	PLATE ASSY -----	1						
-30	1217046-6	BEARING ASSY ----- ATTACHING PARTS -----	1						
-31	NAS221-15	SCREW -----	3						
-32	NAS43HT3-45	SPACER -----	3						
-33	MS20364-1032C	NUT ----- -----*	3						
-34	1217050-4	SHAFT ASSY -----	1						
-35	NAS697A08	NUTPLATE -----	5						
-36	1210040-10	RETAINER-WINDOW -----	1						
-37	1210040-23	GLASS ASSY-WINDOW -----	1						
	1210040-8 *	GLASS ASSY-WINDOW TINTED -----	1						
-38	0517014-1	SUPPORT ASSY-ARMREST -----	1						
-39	NAS697A08	NUTPLATE -----	1						
-40	0517013-2	SUPPORT ASSY-ARMREST -----	1						
-41	0517015-1	SUPPORT ASSY-ARMREST -----	1						
-42	NAS697A3	NUTPLATE-ASSIST STRAP -----	2						
-42A	0517018-3	BRACKET-DOOR STOP -----	1						B
-43	0705042-1	ESCUTCHEON-DOOR HANDLE -----	1						
-44	1217053-2	HANDLE-CABIN DOOR ----- ATTACHING PARTS -----	1						
-45	NAS388-10-74 *	SCREW SELF-LOCKING ----- -----*	1						
-46	0717011-2 *	ARMREST ASSY ----- ATTACHING PARTS -----	1						
-47	AN515-8R12	SCREW ----- -----*	1						
-48	S1362-25	HANDLE ASSY-ASSIST ----- ATTACHING PARTS -----	1						
-49	AN507-1032R10	SCREW ----- -----*	2						
-50	S1362-2	CLAMP -----	2						
-51	S1362-24	CAP -----	2						
-52	0517018-4	STOP-SPRING ----- ATTACHING PARTS -----	1						B
-53	MS20392-4C47	PIN -----	1						
-54	AN9600516L	WASHER -----	1						
-55	MS24665-281	PIN-COTTER -----	2						
-56	MS20392-4C17	PIN -----	1						
-57	0517018-5	WASHER ----- -----*	2						
-58	0517018-2	BRACKET-DOOR STOP RH ----- ATTACHING PARTS -----	1						B
-59	NAS514P428-10	SCREW -----	2						
-60	MS21042L4	NUT ----- -----*	2						
		NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.							
		NOTE. *WHEN ORDERING THIS PART INCLUDE ENTIRE NOMENCLATURE.							
		NOTE. #TINTED GLASS NOT USED ON FRENCH AIRCRAFT.							
		NOTE. **WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 17265288 & F17201385 THE 0517021-1 PUSH ROD ASSY MUST BE ORDERED.							
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							

Door & Window (Cont)

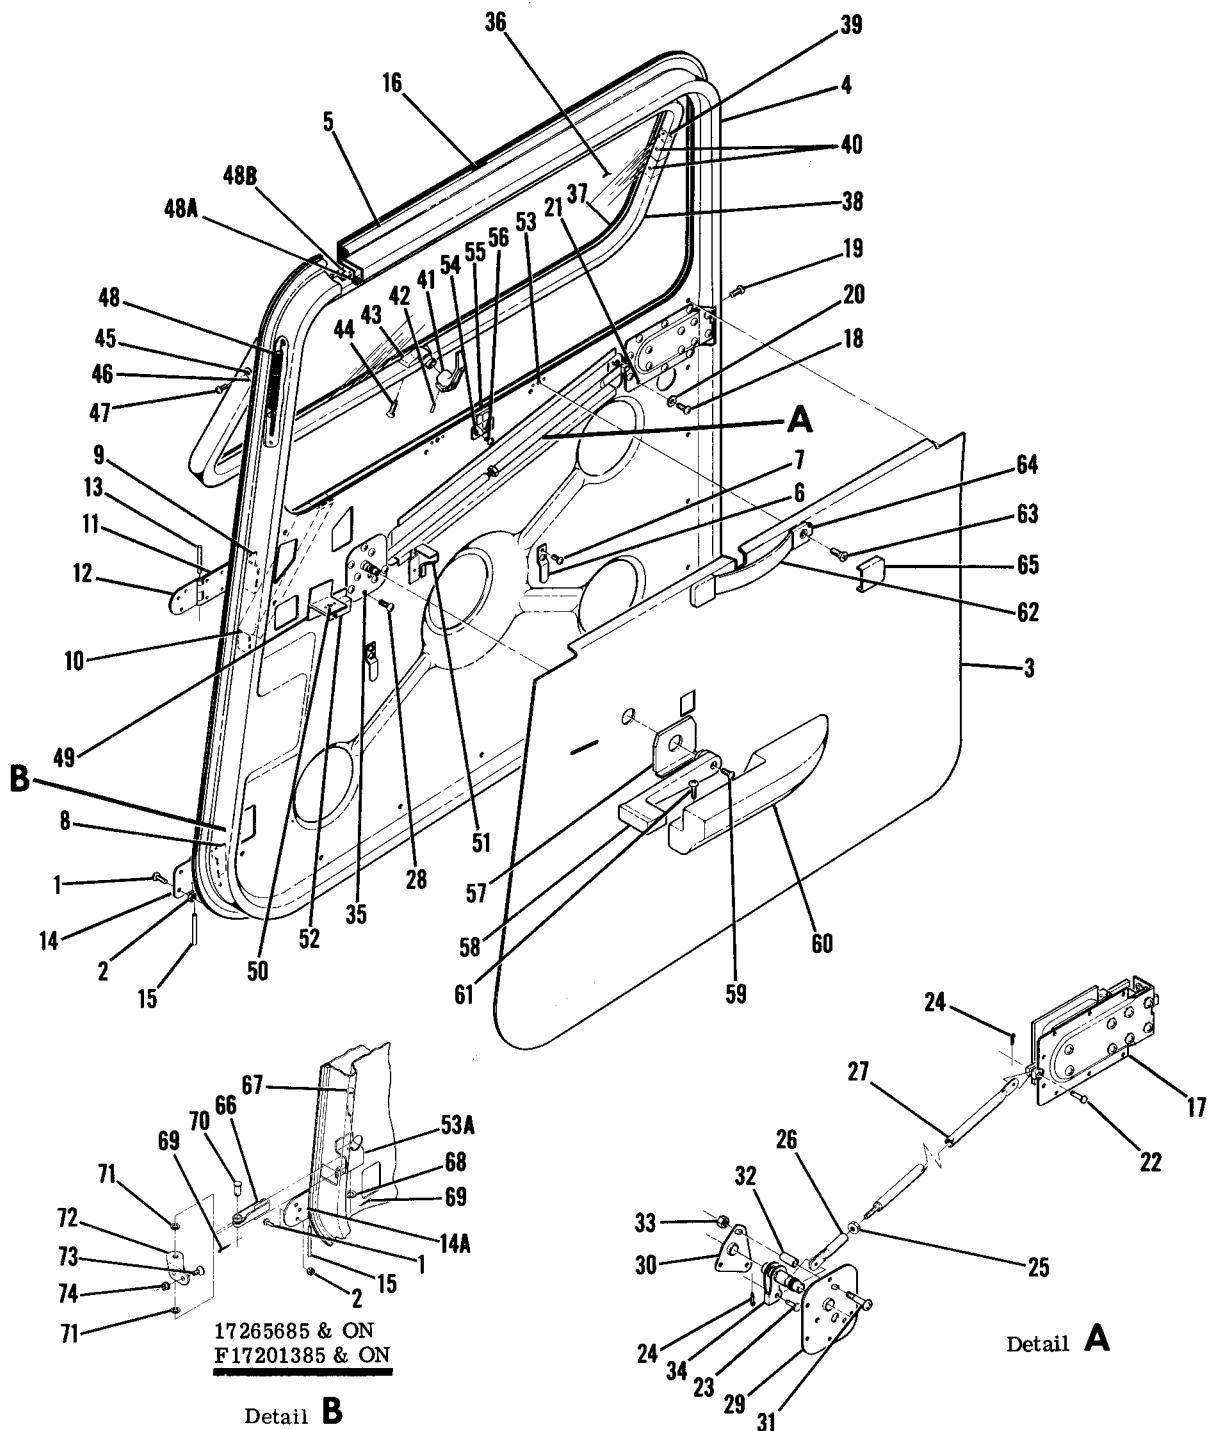


Figure 47. RH Cabin Door Assembly (Openable Window)

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION						UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6		
47 -		CABIN DOOR ASSEMBLY-RH ATTACHING PARTS		OPENABLE WINDOW				NP	
- 1	AN520-10R8	SCREW					5		A
	AN520-10R8	SCREW					6		B
- 2	MS21044N3	NUT					5		A
	MS21044N3	NUT					6		B
		-----*							
- 3	0515005-22	# PANEL ASSY-UPHOLSTERY						1	A
	0515005-45	# PANEL ASSY-UPHOLSTERY					1		B
	S1933-1	FASTENER-UPHOLSTERY						17	
- 4	0511803-26	STRUCTURE ASSY-CABIN DOOR RH					1		
- 5	S1346-1	SEAL 144 IN LG BULK ITEM REF S1346-1-144					1		
- 6	0511463-1	CLIP-UPHOLSTERY ATTACHING PARTS					2		
- 7	S1021Z4-4	SCREW						2	
		-----*							
- 8	0511461-1	REINFORCEMENT-DOOR HINGE LWR					1		
- 9	0511464-1	ANGLE-DOOR REINFORCEMENT					1		
-10	0511469-2	BRACE-DOOR HINGE UPPER					1		
	0511280-2	HINGE ASSY-UPPER					1		
-11	0511238-2	HINGE HALF ASSY					1		
-12	0511237-2	HINGE HALF ASSY					1		
-13	0711001-59	PIN-HINGE					1		
	0511280-4	HINGE ASSY-LWR					1		
	05117019-2	HINGE ASSY-LWR					1		
-14	0511239-4	HINGE HALF					1		
	05117019-6	HINGE HALF					1		
	0511239-2	HINGE HALF					1		
-14A	05117019-4	HINGE HALF					1		
-15	0411579-3	PIN-HINGE					1		
-16	A1663-022-1	CATCH-DOOR STOP TIN					1		
-17	SEE FIG 48	LATCH ASSY-CABIN DOOR ATTACHING PARTS					1		
-18	AN525-832R6	SCREW					2		
-19	S1021Z6-6	SCREW					8		
-20	AN936B6	WASHER					8		
-21	NAS395-3-3	NUT					8		
		-----*							
	0517021-1	PUSH ROD ASSY ATTACHING PARTS					1		
-22	MS20392-1C15	PIN					1		
-23	MS20392-1C9	PIN					1		
-24	MS24665-132	COTTER PIN					2		
		-----*							
-25	AN315-4R	NUT-JAMB					1		
-26	0517021-4	TUBE ASSY-PUSH ROD					1		
-27	0517021-5	TUBE ASSY-PUSH ROD					1		
	1217046-4	BASE PLATE ASSY ATTACHING PARTS					1		
-28	NAS220-4	SCREW					5		
		-----*							
-29	1217046-5	PLATE ASSY					1		
-30	1217046-6	BEARING ASSY ATTACHING PARTS					1		
-31	NAS221-15	SCREW					3		
-32	NAS43HT3-45	SPACER					3		
-33	MS20364-1032C	NUT					3		
		-----*							
-34	1217050-4	SHAFT ASSY					1		
-35	NAS697A08	NUTPLATE					5		
	0711050-24	WINDOW ASSY-OPENABLE					1		
-36	0711051-1	GLASS ASSY-WINDOW					1		
	0711051-2	GLASS ASSY-WINDOW TINTED					1		
-37	0711051-5	SEAL					1		
-38	0711050-6	FRAME ASSY					1		
-39	0711050-7	SPLICING TUBE ATTACHING PARTS					1		
-40	CR763	RIVET CY					6		
		-----*							
-41	S1483-1	HANDLE-WINDOW ATTACHING PARTS					1		
-42	NAS561P3-8	ROLL PIN					1		
		-----*							

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
47 -43	1411202-201	BRACKET ASSY-WINDOW LATCH -----	1						
-44	NAS514P1032-14	ATTACHING PARTS							
		SCREW -----	2						
		-----*							
		SPACER -----	2						
-45	NAS43HT3-34	RIVNUT -----	1						
-46	S1613-3-75	ARM ASSY -----	1						
-46	0711021-11	ATTACHING PARTS							
-47	AN525-10R8	SCREW -----	1						
	0711021-12	SPACER -----	1						
		-----*							
-48	0711021-9	SPRING -----	1						
-48A	S2195-2	TRIM-WINDOW 84.0 IN LG BKI REF S2195-2-84.00 -----	1						
	S2108-1	SEAL-WINDOW 84.0 IN LG BKI REF S2108-1-84.00 -----	1						
-48B	0411185-7	HINGE ASSY-WINDOW -----	2						
	0411185-6	HINGE HALF-LWR -----	1						
	0411185-5	HINGE HALF-UPR -----	1						
	0411185-4	PIN-HINGE -----	1						
-49	0517014-1	SUPPORT ASSY-ARMREST -----	1						
-50	NAS697A08	NUTPLATE -----	1						
-51	0517013-2	SUPPORT-ARMREST -----	1						
-52	0517015-1	SUPPORT-ARMREST -----	1						
-53	NAS697A3	NUTPLATE-ASSIST STRAP -----	2						
-53A	0517018-3	BRACKET-DOOR STOP -----	1						
-54	NAS1329-08K75	NUT-STRIKE PLATE -----	2						
-55	0517002-1	PLATE-STRIKER -----	1						
		ATTACHING PARTS							
-56	S1021Z8-8	SCREW -----	2						
		-----*							
-57	0705042-1	ESCUTCHEON-DOOR HANDLE -----	1						
-58	1217053-2	HANDLE-CABIN DOOR -----	1						
		ATTACHING PARTS							
-59	NAS388-10-7P *	SCREW SELF LOCKING -----	1						
		-----*							
-60	0717011-2 #	ARMREST ASSY -----	1						
		ATTACHING PARTS							
-61	AN515-8R12	SCREW -----	1						
		-----*							
-62	S1362-25	HANDLE ASSY-ASSIST -----	1						
		ATTACHING PARTS							
-63	AN507-1032R10	SCREW -----	2						
		-----*							
-64	S1362-2	CLAMP -----	2						
-65	S1362-24	CAP -----	2						
-66	0517018-3	STOP-SPRING -----	1						B
		ATTACHING PARTS							
-67	MS20392-4C47	PIN -----	1						
-68	AN960D516L	WASHER -----	1						
-69	MS24665-281	PIN-COTTER -----	2						
-70	MS20392-4C17	PIN -----	1						
-71	0517018-5	WASHER -----	2						
		-----*							
-72	0517018-2	BRACKET-DOOR STOP RH -----	1						B
		ATTACHING PARTS							
-73	NAS514P428-10	SCREW -----	2						
-74	MS21042L4	NUT -----	2						
		-----*							
<p>NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-SEE PAGE VI.</p> <p>NOTE. *WHEN ORDERING THIS PART INCLUDE ENTIRE NOMENCLATURE.</p> <p>NOTE. #TINTED GLASS NOT USED ON FRENCH AIRCRAFT.</p> <p>NOTE. **WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 17265288 & F17201385 THE 0517021-1 PUSH ROD ASSY MUST BE ORDERED.</p> <p>A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON</p>									

This page intentionally left blank.

Door & Window (Cont)

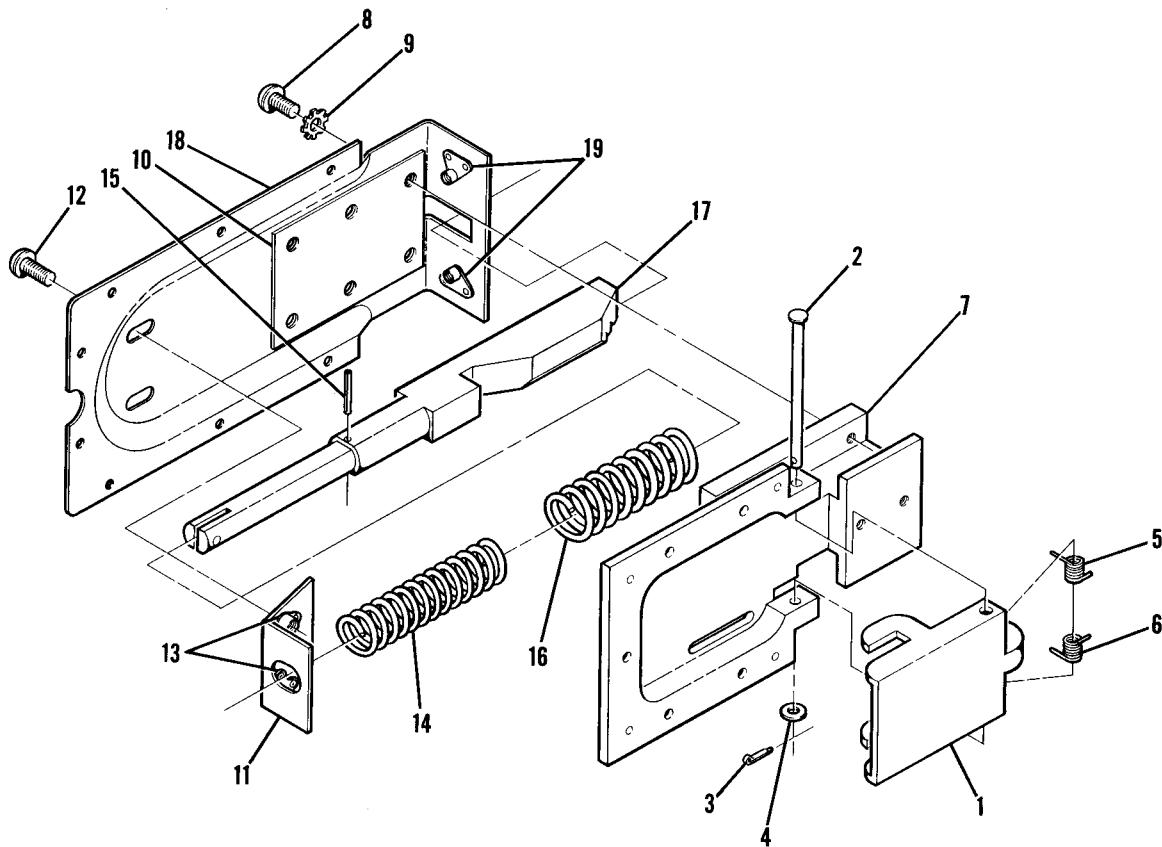


Figure 48. Cabin Door Latch Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
48 -	0517012-1	LATCH ASSEMBLY-CABIN DOOR LH -----	1	
	0517012-2	LATCH ASSEMBLY-CABIN DOOR RH -----	1	
- 1	0417010-2	HANDLE ASSY-DOOR LATCH ----- ATTACHING PARTS	1	
- 2	MS20392-1C67	PIN -----	1	
- 3	MS24665-132	COTTER PIN -----	1	
- 4	AN960-4	WASHER -----	1	
- 5	0511261-4	SPRING -----	1	
- 6	0511261-5	SPRING -----	1	
		-----*		
- 7	0511258-1	HOUSING ASSY-DOOR LATCH ----- ATTACHING PARTS	1	
- 8	AN525-832R6	SCREW -----	6	
- 9	AN93688	WASHER -----	6	
-10	0511264-1	SPACER -----	1	
		-----*		
-11	0511266-1	SUPPORT ASSY-BOLT ----- ATTACHING PARTS	1	
-12	AN525-832R7	SCREW -----	2	
		-----*		
-13	NAS698A08	NUTPLATE -----	2	
-14	0511261-3	SPRING-BOLT -----	1	
-15	NAS561-3-14	ROLL PIN -----	1	
-16	0511261-2	SPRING-BOLT -----	1	
-17	0511260-3	BOLT-DOOR LATCH LH -----	1	
	0511260-4	BOLT-DOOR LATCH RH -----	1	
-18	0517011-1	PLATE ASSY-DOOR LATCH -----	1	
-19	NAS698A08	NUTPLATE -----	2	

Baggage Door

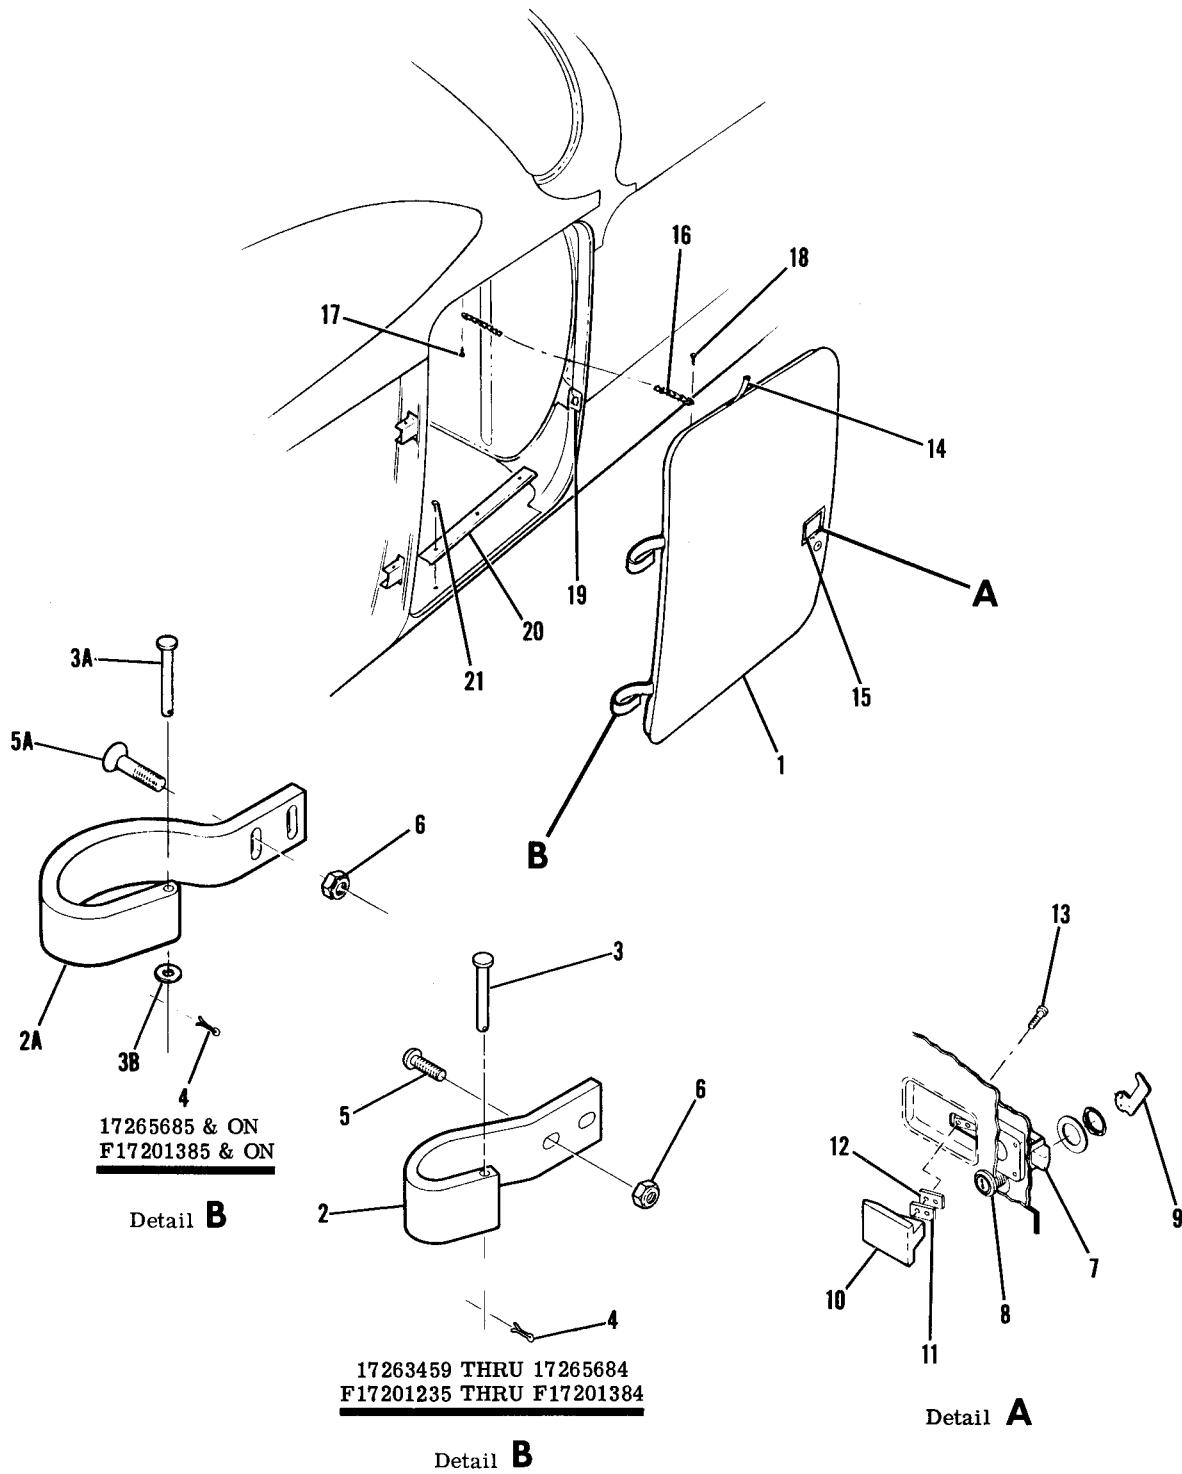


Figure 49. Baggage Door Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE				
			1	2	3	4	5	6
49 -		BAGGAGE DOOR INSTALLATION -----	NP					
- 1	0717000-13	DOOR ASSY-BAGGAGE -----	1	A				
	0717000-16	DOOR ASSY-BAGGAGE -----	1	B				
- 2	0711102	ATTACHING PARTS -----						
- 2A	0512200-1	HINGE -----	2	A				
- 3	MS20392-1C49	HINGE -----	2	B				
- 3A	MS20392-1C39	CLEVIS PIN -----	2	A				
- 3B	AN960PD4	CLEVIS PIN -----	2	B				
- 4	MS24665-132	WASHER -----	2	B				
- 5	AN520-10R10	COTTER PIN -----	2					
- 5A	AN509-10R10	SCREW -----	4	A				
- 6	MS21044N3	SCREW -----	4	B				
		NUT -----	4					
		-----*						
- 7	S1359-8	LATCH ASSY-BAGGAGE DOOR -----	1					
- 8	C253001-0101	LOCK ASSY-DOOR -----	1					
- 9	0711111-1	CAM -----	1					
-10	07111705-1	HANDLE-OUTSIDE -----	1					
		ATTACHING PARTS -----						
-11	07111709-1	SPACER -----	1					
-12	07111709-2	SHIM -----	1					
-13	M31A832R6C	SCREW -----	2					
		-----*						
-14	S1084-1	SEAL 80.00 IN LG BKI REF S1084-1-80.00 -----	1					
-15	07111707-4	PAN -----	1					
-16	0500210-5	CHAIN ASSY-BAGGAGE DOOR -----	1					
		ATTACHING PARTS -----						
-17	AN515-8R8	SCREW -----	1					
-18	AN525-832R8	SCREW -----	1					
		-----*						
-19	0311319-1	PLATE-BAGGAGE DOOR LATCH -----	1					
		ATTACHING PARTS -----						
		SCREW -----	2					
		-----*						
-20	0311623-1	SCUFF PLATE -----	1					
		ATTACHING PARTS -----						
-21	S1021Z4-4	SCREW -----	3					
		-----*						
		A---172 SERIAL 17263459 THRU 17265684						
		F172 SERIAL F17201235 THRU F17201384						
		B---172 SERIAL 17265685 & ON						
		F172 SERIAL F17201385 & ON						

Upholstery

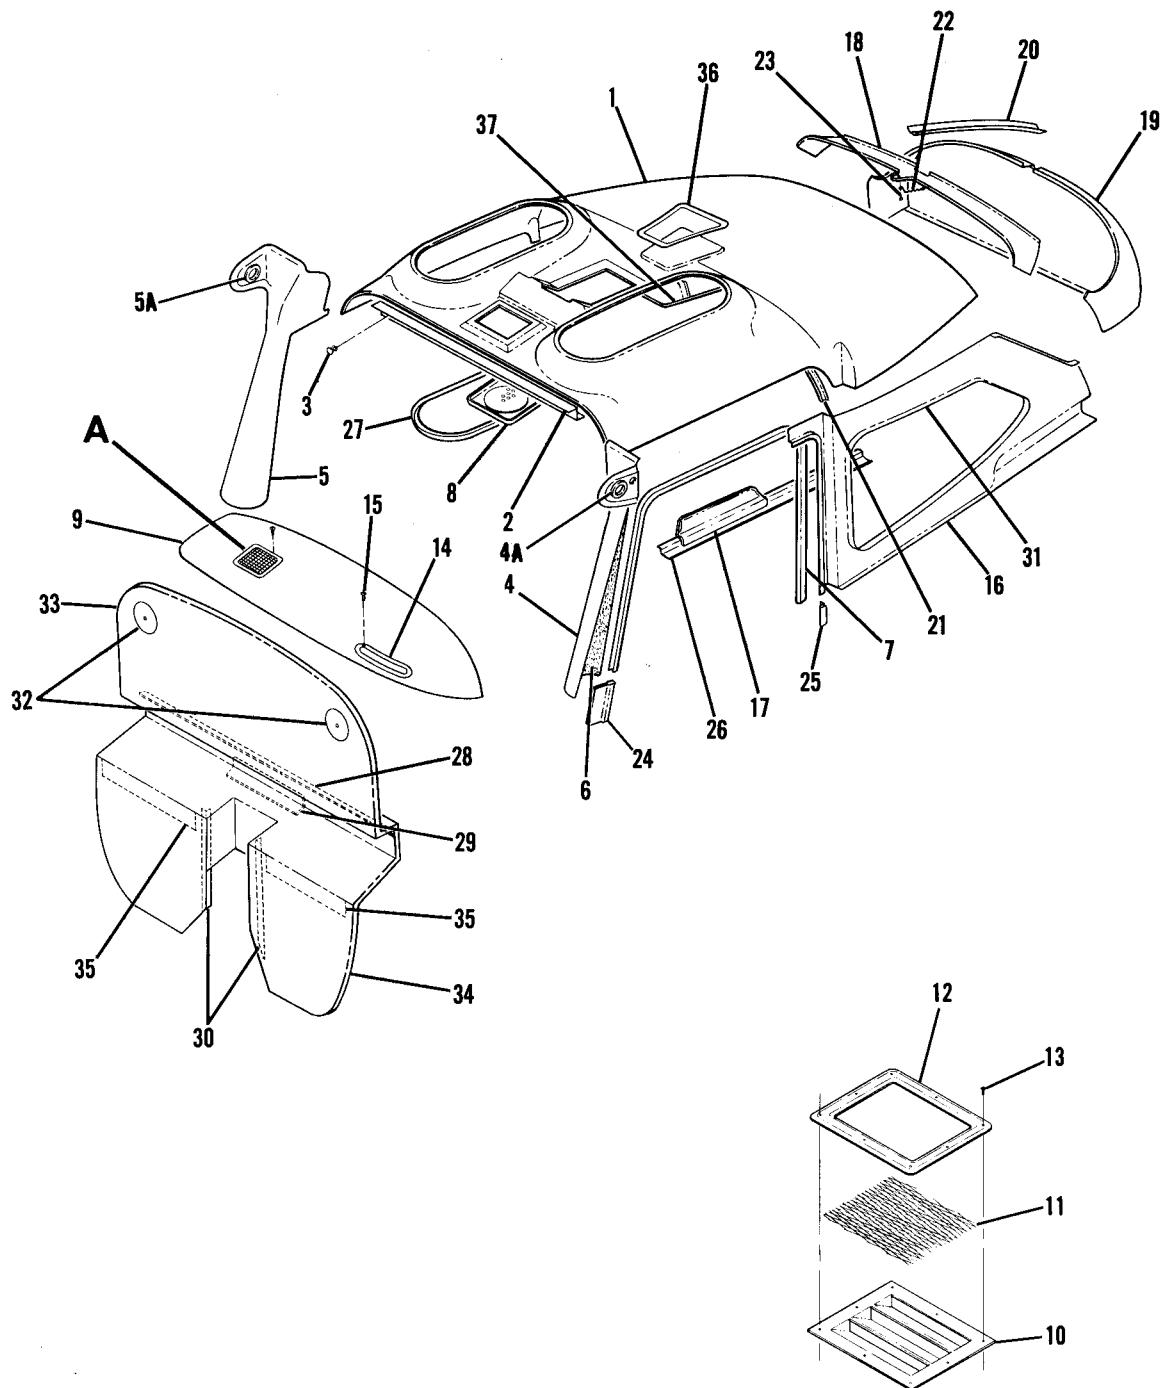


Figure 50. Cabin Top & Firewall Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
50 - - 1	0514062-11 0514062-12	UPHOLSTERY INSTALLATION-CABIN TOP & FIREWALL HEADLINER HEADLINER USED WITH SKYLIGHT ATTACHING PARTS	NP 1 1	
	S1021Z4-6	SCREW -----	3	
- 2	0514067-1	-----*	1	
- 3	S1898-2	SHIELD-FRONT SPAR ATTACHING PARTS	3	
- 4	0413484-18 0413484-22	STUD -----	1	A
- 4A	0415023-3	SHIELD ASSY-LH DOORPOST	1	B
- 5	0515026-6	SHIELD ASSY-LH DOORPOST	1	B
- 5A	0515026-8	SHIELD ASSY-RH DOORPOST	1	A
- 5A	0415023-1	SHIELD ASSY-RH DOORPOST	1	B
- 6	0513425-1	ESCUTCHEON ASSY-LH	1	
- 7	S2195-2	ESCUTCHEON ASSY-RH	2	
- 8	0514068-2	PAD-DOORPOST SHIELD	2	
	S1021Z6-10	TRIM-WINDOW 60.00 IN LG BKI REF S2195-2-60.00	2	
		COVER ASSY-SPEAKER ATTACHING PARTS	1	
		SCREW -----	4	
- 9	0500210-108	-----*	1	
-10	0513419-1	COVER-COWL DECK	1	
-11	0500210-131	LOUVER-RADIO VENT	1	
-12	0513348-1	GRILL-VENT	1	
-13	S1021Z8-8 NAS446-4-3	RETAINER-COWL DECK COVER ATTACHING PARTS	8	
		SCREW -----	8	
-14	0713046	NUT -----	8	
-15	S1021Z4-6	RETAINER-UPHOLSTERY ATTACHING PARTS	1	
		SCREW -----	4	
-16	0515027-1 0515027-2	MOULDING-WINDOW LH MOULDING-WINDOW RH	1 1	
-17	0515010-10	TRAY-SHOULDER HARNESS ATTACHING PARTS	2	
	S1021A4-6	SCREW -----	2	
-18	0515014-1 S1948-2	MOULDING-REAR WINDOW UPPER TRIM-EXTRUDED	1 AR	
-19	0500210-135 S1948-2	MOULDING-REAR WINDOW LOWER TRIM-EXTRUDED	1 AR	
-20	0500210-44	COVER-CENTER POST	1	
-21	0514113-1	TIARA ASSY ATTACHING PARTS	1	
	S1021Z4-6	SCREW -----	4	
-22	0515008-1	-----*	1	
-23	AN525-10R12	COAT HANGER ATTACHING PARTS	2	
		SCREW -----	2	
-24	0715049-2	-----*	2	
-25	0514120-1	SPlice-LH FWD	2	
-26	0514024-1 0514024-2	SPlice-AFT RETAINER-HEADLINER LH RETAINER-HEADLINER RH ATTACHING PARTS	1 1	
	S1021Z4-4	SCREW -----	5	
		-----*		
		CONTINUED ON NEXT PAGE		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE	
			1	2	3	4	5	6	7			
50 -27	0514064-1	□	RETAINER-SKYLIGHT ATTACHING PARTS							2		
	S1021Z4-6		SCREW							4		
-28	0511033-30		-----*							1		
	S1021Z4-6C		ANGLE								5	
			ATTACHING PARTS									
			SCREW									
-29	0513109-21		-----*							1		
	S1021Z4-6C		RETAINER								5	
			ATTACHING PARTS									
			SCREW									
-30	0511033-7		NUT							2		
	S1021Z4-6C		-----*							2		
	NAS446-2-3		TRIM-WINDOW								AR	
-31	S1948-2	%	DISC							2		
-32	0400123-1		ATTACHING PARTS									
	S1021Z10-10		SCREW							1		
	NAS446-5-3		NUT							1		
-33	0500210-48		-----*							1		
-34	0500210-49		COVER-UPPER FIREWALL									
-35	0700103-131		COVER-LOWER FIREWALL							1		
-36	0515031-1		STRIP							2		
-37	0515030-1	□	SUPPORT-INERTIA REEL COVER							1		
	S1021Z4-6		COVER-INERTIA REEL							1		
			ATTACHING PARTS									
			SCREW							4		
			-----*									
<p>NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.</p> <p>NOTE. %REFER TO FIGURE 1 FOR SECOND DASH NUMBER TO DEFINE COLOR REQUIRED.</p> <p>A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON</p>												

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
51 -		UPHOLSTERY INSTALLATION-CABIN SIDE PANELS & FLOORBOARD -----	NP	
- 1	0515005-17	SIDE PANEL ASSY-FWD LH -----	1	A
	0515032-1	SIDE PANEL ASSY-FWD LH -----	1	B
- 2	0515005-18	SIDE PANEL ASSY-FWD RH -----	1	A
	0515032-2	SIDE PANEL ASSY-FWD RH -----	1	B
- 3	0411030-6	ASH TRAY -----	2	
- 4	0411030-5	RETAINER-ASH TRAY ATTACHING PARTS	2	
	S1021Z4-8	SCREW -----	2	
	NAS446-1	NUT -----	2	
		-----*		
- 5	0515020-1	RETAINER-UPHOLSTERY ATTACHING PARTS	2	
	S1021Z4-6	SCREW -----	2	
		-----*		
- 6	0515028-1	COVER-AFT DOORPOST LH -----	1	
- 7	0515028-2	COVER-AFT DOORPOST RH ----- ATTACHING PARTS	1	
- 8	S1021Z6-6	SCREW -----	6	
		-----*		
- 9	0515005-5	SIDE PANEL ASSY-LH -----	1	A
	0515032-5	SIDE PANEL ASSY-LH -----	1	B
- 10	0515005-6	SIDE PANEL ASSY-RH -----	1	A
	0515032-6	SIDE PANEL ASSY-RH -----	1	B
- 11	0715039-3	ARMREST ASSY-REAR LH -----	1	
- 12	0715039-4	ARMREST ASSY-REAR RH ATTACHING PARTS	1	
	AN520-10R12	SCREW -----	2	
		-----*		
- 13	S1957-2	ASH TRAY -----	2	
- 14	0500210-97	PANEL-BAGGAGE COMPARTMENT RH -----	1	
- 15	0515018-1	COVER-BAGGAGE DOOR FRAME AFT -----	1	
	0500210-95	COVER-BAGGAGE DOOR FRAME FWD -----	1	A
	0515036-1	COVER-BAGGAGE DOOR FRAME FWD -----	1	B
- 16	0500210-99	RETAINER-UPHOLSTERY -----	1	
- 17	0717000-12	PANEL-BAGGAGE COMPARTMENT -----	1	A
	0717000-18	PANEL-BAGGAGE COMPARTMENT ATTACHING PARTS	1	B
	XH99608F1099	STUD UC -----	8	
		-----*		
- 18	S1273-1	HANDLE-BAGGAGE DOOR ATTACHING PARTS	1	
	AN515-8R8	SCREW -----	2	
		-----*		
- 19	0515012-1	PANEL-BAGGAGE COMPARTMENT LWR FWD ATTACHING PARTS	1	
- 20	H559-3-1	GROMMET HLW -----	4	
	H323-3-1-1	PLUNGER HLW -----	4	
		-----*		
- 21	S1441-1	SEAL 19.00 IN LG BKI REF S1441-1-19.00 -----	1	
- 22	0515012-2	MOULDING-BAGGAGE COMPARTMENT ATTACHING PARTS	1	
	S1021Z6-6	SCREW -----	3	
		-----*		
- 23	0515015-1	PANEL ASSY-BAGGAGE COMPARTMENT UPR ATTACHING PARTS	1	
	S1022A4-6	SCREW -----	3	
		-----*		
- 24	S2092-1	HOOK-FABRIC FASTENER * IN LG BKI REF S2092-1-* -	AR	
	0515019-3	PANEL ASSY-BAGGAGE COMPARTMENT -----	1	
	S2092-1	HOOK-FABRIC FASTENER * IN LG BKI REF S2092-1-* -	AR	
	S2092-2	PILE-FABRIC FASTENER * IN LG BKI REF S2092-2-* -	AR	
		CONTINUED ON NEXT PAGE		

Upholstery (Cont)


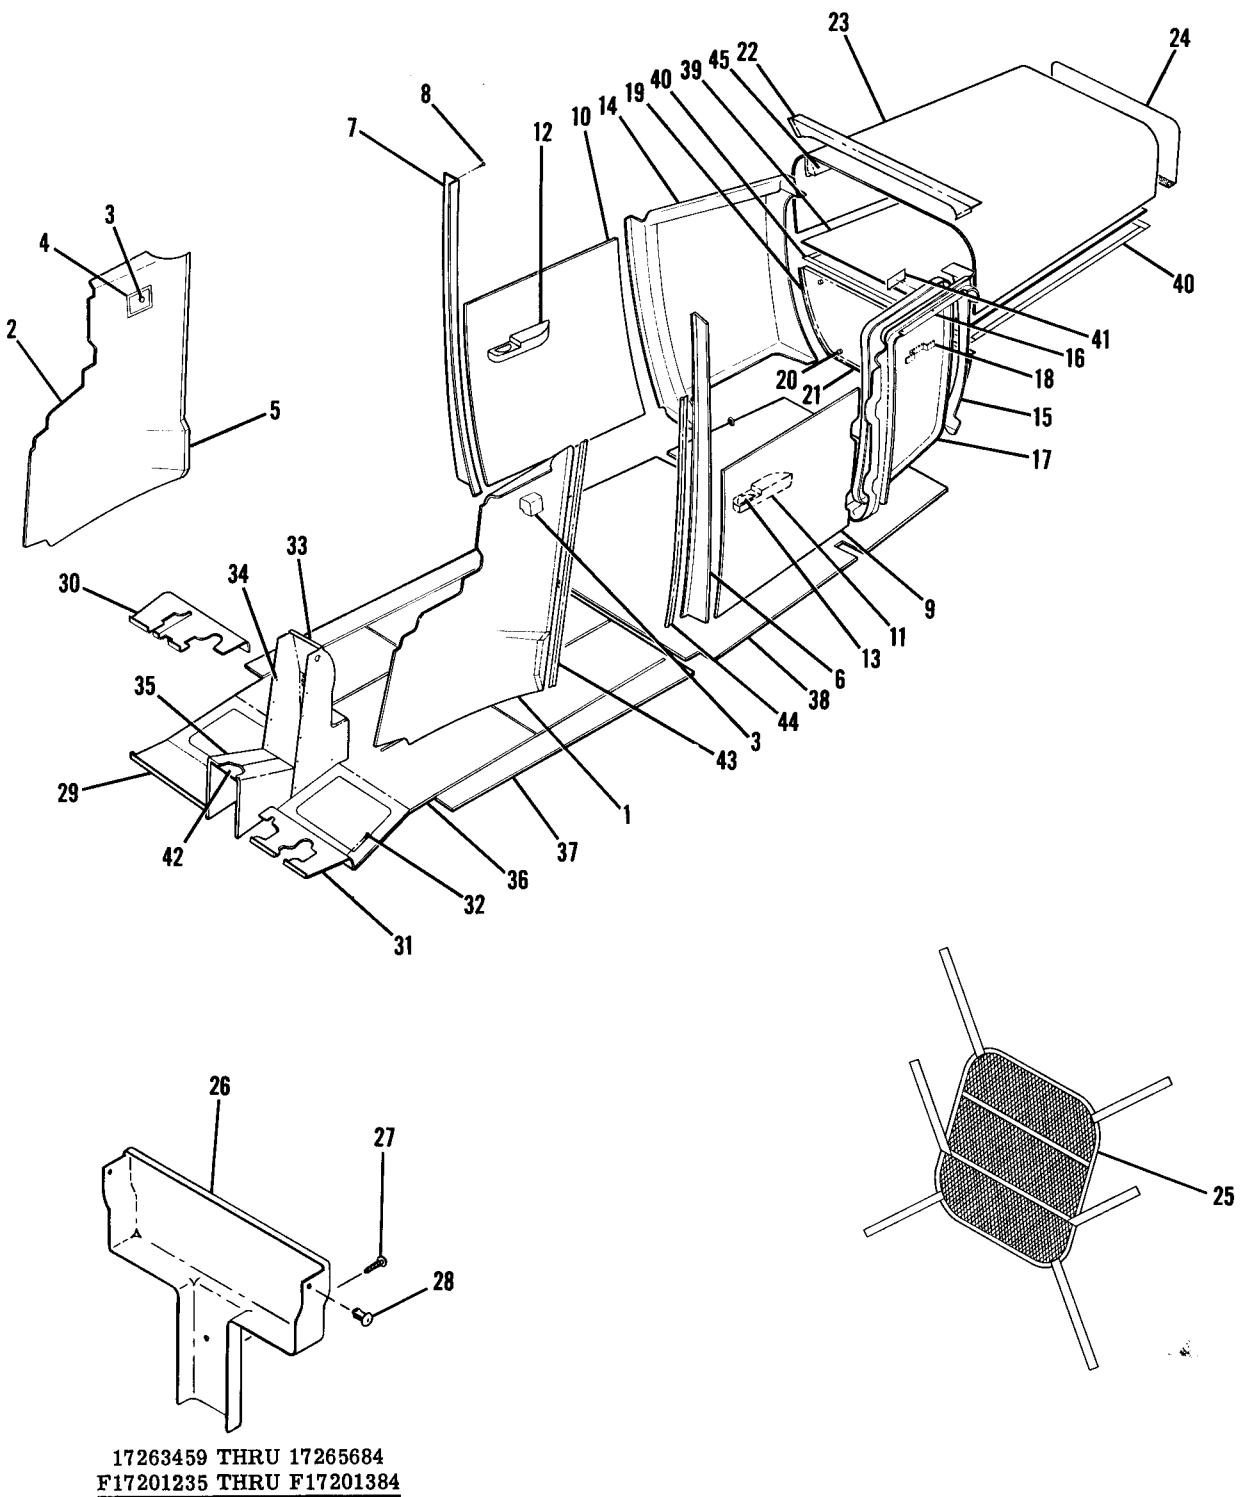


Figure 51. Cabin Side Panels & Floorboard Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
51 -25	2015009-5		NET-BAGGAGE							1	
			ATTACHING PARTS								
	1211203-1		EYEBOLT							6	
	1200127-1		WASHER							6	
			-----*								
-26	0500403-1	□	COVER-CONTROL YOKE						SKYHAWK & SKYHAWK II ONLY	1	A
			ATTACHING PARTS								
-27	S1021Z6-6		SCREW							2	
-28	S1878-1		STUD							2	
			-----*								
-29	1713049-8		SHIELD-RUDDER BAR RH							1	
-30	0513058-1		SHIELD-RUDDER BAR RH						DUAL CONTROLS	1	
	0513058-2		SHIELD-RUDDER BAR RH						FLOATPLANE ONLY	1	
			ATTACHING PARTS								
	S1021Z6-8		SCREW							8	
	NAS446-4-3		NUT							4	
			-----*								
-31	0513057-1		SHIELD-RUDDER BAR LH							1	
	0513057-2		SHIELD-RUDDER BAR LH						FLOATPLANE ONLY	1	
			ATTACHING PARTS								
-32	S1021Z6-8		SCREW							8	
	NAS446-4-3		NUT							4	
			-----*								
-33	0500233-14	□	COVER-CONSOLE							1	
			ATTACHING PARTS								
-34	S1878-1		STUD							14	
			-----*								
-35	0500210-76	#	CARPET ASSY-TUNNEL							1	
-36	0515016-2	#	CARPET ASSY-FWD							1	
-37	0515016-3	#	CARPET ASSY-CTR							1	
-38	0515016-4	#	CARPET ASSY-AFT							1	
			ATTACHING PARTS								
	S1021A4-6		SCREW							AR	
	S2092-1		HOOK-FABRIC FASTENER	*	IN LG		BKI		REF S2092-1-*	AR	
			-----*								
-39	0515016-5		CARPET ASSY-UPR BAGGAGE AREA							1	
			ATTACHING PARTS								
-40	S2092-1		HOOK-FABRIC FASTENER	*	IN LG		BKI		REF S2092-1-*	AR	
	S1022A4-6		SCREW							AR	
	S1066C1		WASHER							AR	
			-----*								
-41	SEE FIG 2		PLACARD-BAGGAGE CAPACITY							1	
-42	0513380-2		PLATE-TUNNEL							1	
			ATTACHING PARTS								
	S1021Z8-6		SCREW							4	
			-----*								
-43	0700668-13		WINDLACE-FWD							2	
-44	0700668-14		WINDLACE-AFT							2	
-45	0515009-1	□	COVER ASSY-EMERGENCY LOCATOR TRANSMITTER							1	
	H559-3-1		GROMMET	HLW						2	
	H323-3-1-1		PLUNGER	HLW						2	
	SEE FIG 2		PLACARD-EMERGENCY LOCATOR TRANSMITTER							1	
			NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-SEE PAGE VI.								
			NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-SEE PAGE VII.								
			NOTE. *LENGTH TO BE ADDED LATER.								
			A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON								

Soundproofing

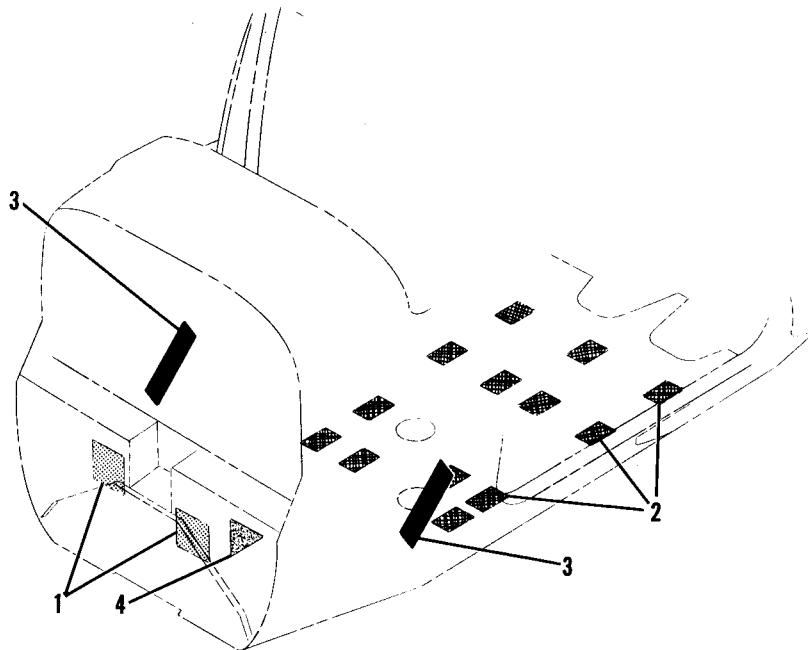


**172 SERIAL 17263459 THRU 17265684
F172 SERIAL F17201235 THRU F17201384**

Figure 52. Soundproofing Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
52 -		1 2 3 4 5 6 7		
- 1	1700127-1	SOUNDPROOFING INSTALLATION-FUSELAGE ----- PANEL-SOUNDPROOFING -----	NP	A
- 2	1700127-3	PANEL-SOUNDPROOFING -----	2	
- 3	1700127-4	PANEL-SOUNDPROOFING -----	13	
- 4	1700127-6	PANEL-SOUNDPROOFING ----- PANEL-SOUNDPROOFING -----	2	
			1	
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384		

Soundproofing (Cont)

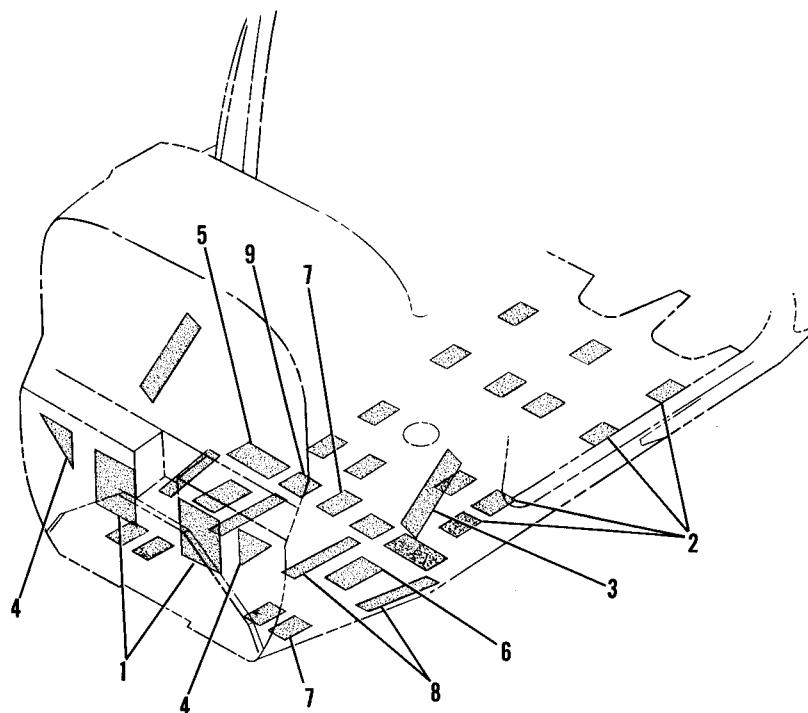

**172 SERIAL 17265685 & ON
F172 SERIAL F17201385 & ON**

Figure 52A. Soundproofing Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE ON CODE
			PER ASSY	
52A-		1 2 3 4 5 6 7		
- 1	1700127-1	SOUNDPROOFING INSTALLATION-FUSELAGE -----	NP	A
- 2	1700127-3	PANEL-SOUNDPROOFING -----	2	
- 3	1700127-4	PANEL-SOUNDPROOFING -----	13	
- 4	1700127-6	PANEL-SOUNDPROOFING -----	2	
- 5	1700127-9	PANEL-SOUNDPROOFING -----	1	
- 6	1700127-10	PANEL-SOUNDPROOFING -----	2	
- 7	1700127-14	PANEL-SOUNDPROOFING -----	2	
- 8	1700127-16	PANEL-SOUNDPROOFING -----	5	
- 9	1700127-19	PANEL-SOUNDPROOFING -----	4	
		A---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON	2	

This page intentionally left blank.

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	#	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
53 -	0514104-1	#	SEAT ASSEMBLY-PILOT & CO-PILOT							1	A
	0514122-1	#	SEAT ASSEMBLY-PILOT & CO-PILOT							1	B
- 1	0511242-1		ATTACHING PARTS							2	
	AN500A8-4		STOP-SEAT							2	
			SCREW								
			-----*								
	0514104-3	#	BACK ASSY-UPHOLSTERED SEAT							1	A
	0514122-3	#	BACK ASSY-UPHOLSTERED SEAT							1	B
			ATTACHING PARTS								
- 2	AN23-16A		BOLT							2	
- 3	1414104-4		BUSHING							2	
- 4	0711668-1		BUSHING							2	
- 5	0711667-1		SPRING							2	
- 6	AN507-832R14		SCREW							2	
- 7	MS21044N08		NUT							2	
- 8	AN960-10L		WASHER							2	
- 9	S1914-8		NUT							2	
			-----*								
-10	0514104-5	#	COVER-SEAT BACK							1	A
	0514122-5	#	COVER-SEAT BACK							1	B
-11	0514104-7		CUSHION ASSY-SEAT BACK							1	
	0514122-7		CUSHION ASSY-SEAT BACK							1	B
-12	1414230-1		CAM ASSY							2	
-13	0514100-1	#	FORMER ASSY-SEAT BACK							1	
			ATTACHING PARTS								
-14	0514099-3		CLIP							2	
			-----*								
-15	0514099-1		BRACKET-SEAT BACK							2	
-16	0514099-2		BRACKET-SEAT BACK							1	
-17	1214062-5	#	POCKET ASSY							1	
-18	0514112-2	□	TRIM-SEAT BACK							1	
			ATTACHING PARTS								
-19	S1021A4-6		SCREW								AR
			-----*								
-20	0514102-7	#	RETAINER ASSY-POCKET BACK							2	
			ATTACHING PARTS								
-21	S1021A4-6		SCREW								AR
			-----*								
-22	0514110-1		GROMMET							2	
	0514104-2	#	BOTTOM ASSY-UPHOLSTERED SEAT							1	A
	0514122-2	#	BOTTOM ASSY-UPHOLSTERED SEAT							1	B
-23	0514104-4	#	COVER-SEAT BOTTOM							1	A
	0514122-4	#	COVER-SEAT BOTTOM							1	B
-24	0514104-6		CUSHION ASSY-SEAT BOTTOM							1	A
	0514122-6		CUSHION ASSY-SEAT BOTTOM							1	B
-25	AN23-15A		BOLT SEAT BACK STOP							2	
	MS21044N3		NUT							2	

CONTINUED ON NEXT PAGE

Seat

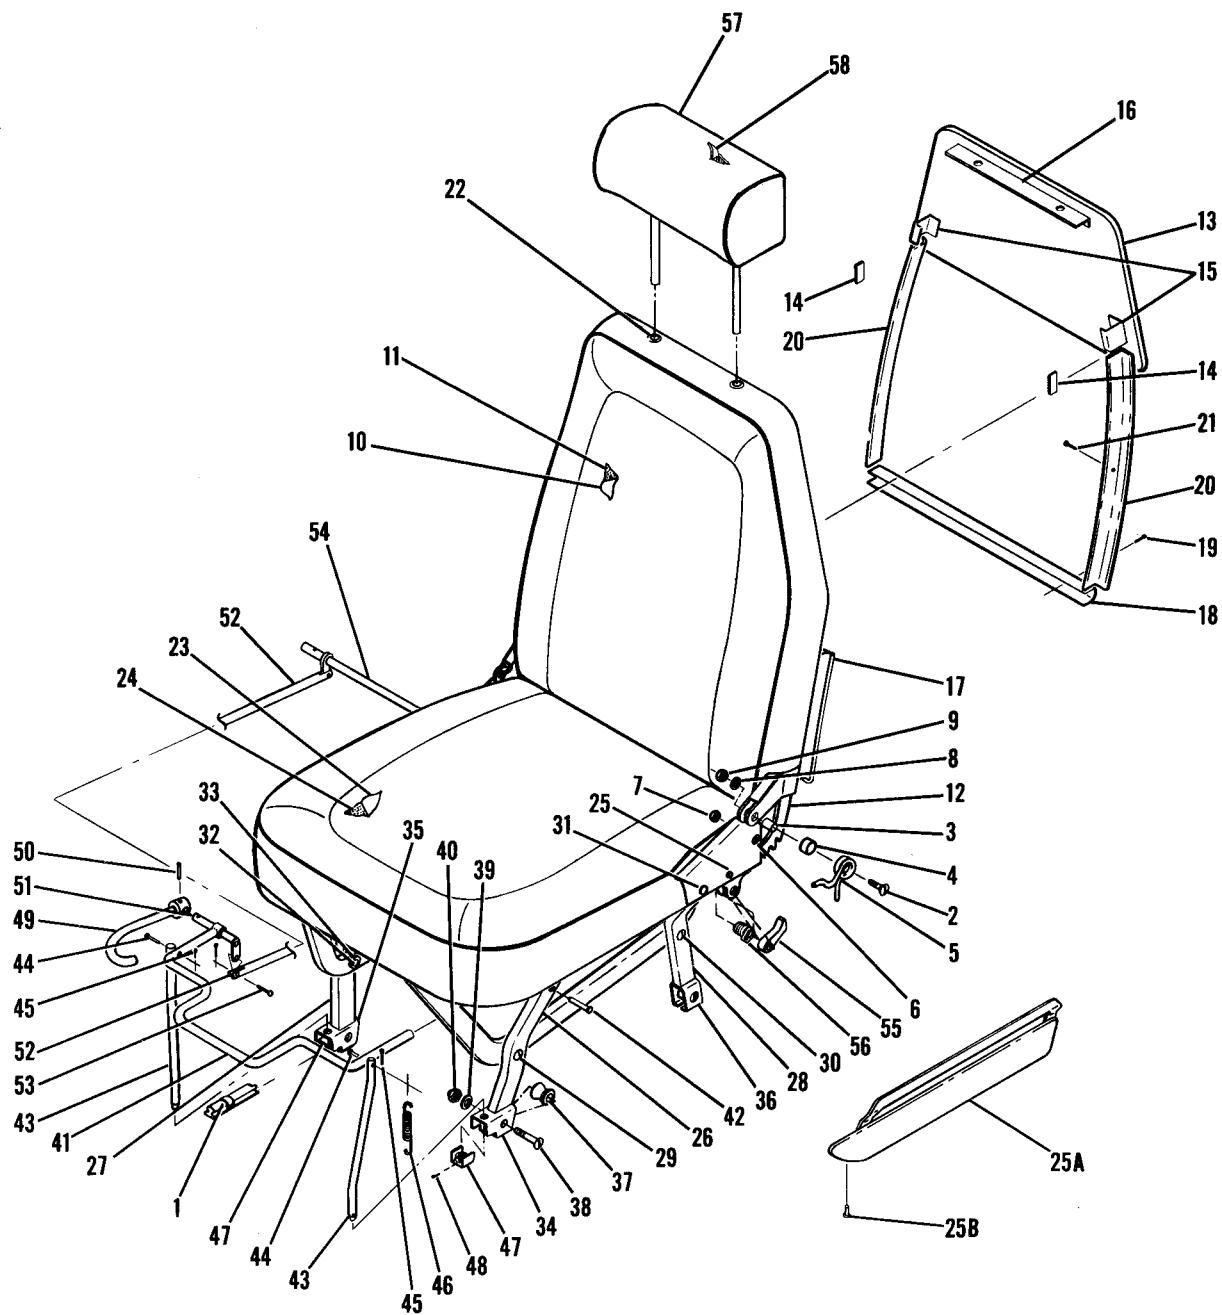


Figure 53. Pilot & Co-Pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
53 -25A	1714101-3	#	TRIM ASSY-SEAT SKIRT LH -----							1	B
	1714101-4	#	TRIM ASSY-SEAT SKIRT RH -----							1	B
-25B	S1021A4-6		SCREW -----							3	
-26	1414103-2		-----*							1	
-27	1414103-45		LEG ASSY-FWD LH -----							1	
-28	1414103-6		LEG ASSY-FWD RH -----							2	
			LEG-AFT -----								
			ATTACHING PARTS								
-29	AN24-13A		BOLT FWD LEG -----							2	
-30	AN24-13A		BOLT AFT LEG -----							1	
-31	AN24-16A		BOLT AFT LEG -----							1	
	AN936A416		WASHER -----							2	
	AN936A616		WASHER -----							2	
-33	1414112-1		NUT -----							2	
			-----*								
-34	1414104-39		HOUSING-SEAT ROLLER FWD LH -----							1	
-35	1414104-61		HOUSING-SEAT ROLLER FWD RH -----							1	
-36	1414104-41		HOUSING-SEAT ROLLER AFT LH -----							1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH -----							1	
-37	1414100-212		KIT-SEAT ROLLER -----							4	
			ATTACHING PARTS								
-38	AN23-19A		BOLT -----							1	
-39	AN960-10L		WASHER -----							1	
-40	S1914-8		NUT -----							1	
			-----*								
-41	0514052-1		HANDLE ASSY-SEAT ADJUST -----							1	
			ATTACHING PARTS								
-42	MS20392-2C43		PIN -----							1	
	MS24665-132		PIN-COTTER -----							1	
			-----*								
-43	0514066-1		PIN-SEAT ADJUST -----							2	
			ATTACHING PARTS								
-44	MS20392-1C23		PIN -----							1	
-45	MS24665-132		PIN-COTTER -----							1	
			-----*								
-46	1414116-1		SPRING-SEAT ADJUSTMENT -----							1	
-47	1414104-8		BRACKET-SEAT ADJUSTMENT -----							2	
-48	NAS561P3-8		ROLL PIN -----							2	
-49	1200504-3		HANDLE ASSY-RECLINING ADJUSTMENT -----							1	
			ATTACHING PARTS								
-50	NAS561-3-8		ROLL PIN -----							1	
			-----*								
-51	1200503-1		ARM ASSY-SEAT BACK ADJUST -----							1	
-52	1514223-28		LINK-SEAT BACK ADJUST -----							1	
			ATTACHING PARTS								
-53	MS20392-1C9		PIN -----							2	
	MS24665-132		PIN-COTTER -----							2	
			-----*								
-54	1414223-34		TUBE ASSY-TORQUE -----							1	
-55	0514043-2		PAWL-SEAT BACK ADJUST -----		REPLACE IN PAIRS ONLY					2	
			ATTACHING PARTS								
	NAS561C3-10		ROLL PIN -----							1	
			-----*								
-56	1414107-1		SPRING -----							1	
-57	1215073-11	#	HEADREST ASSY -----							2	
-58	1215073-18	#	COVER-HEADREST -----							1	
			NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.								
			NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.								
			A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON								

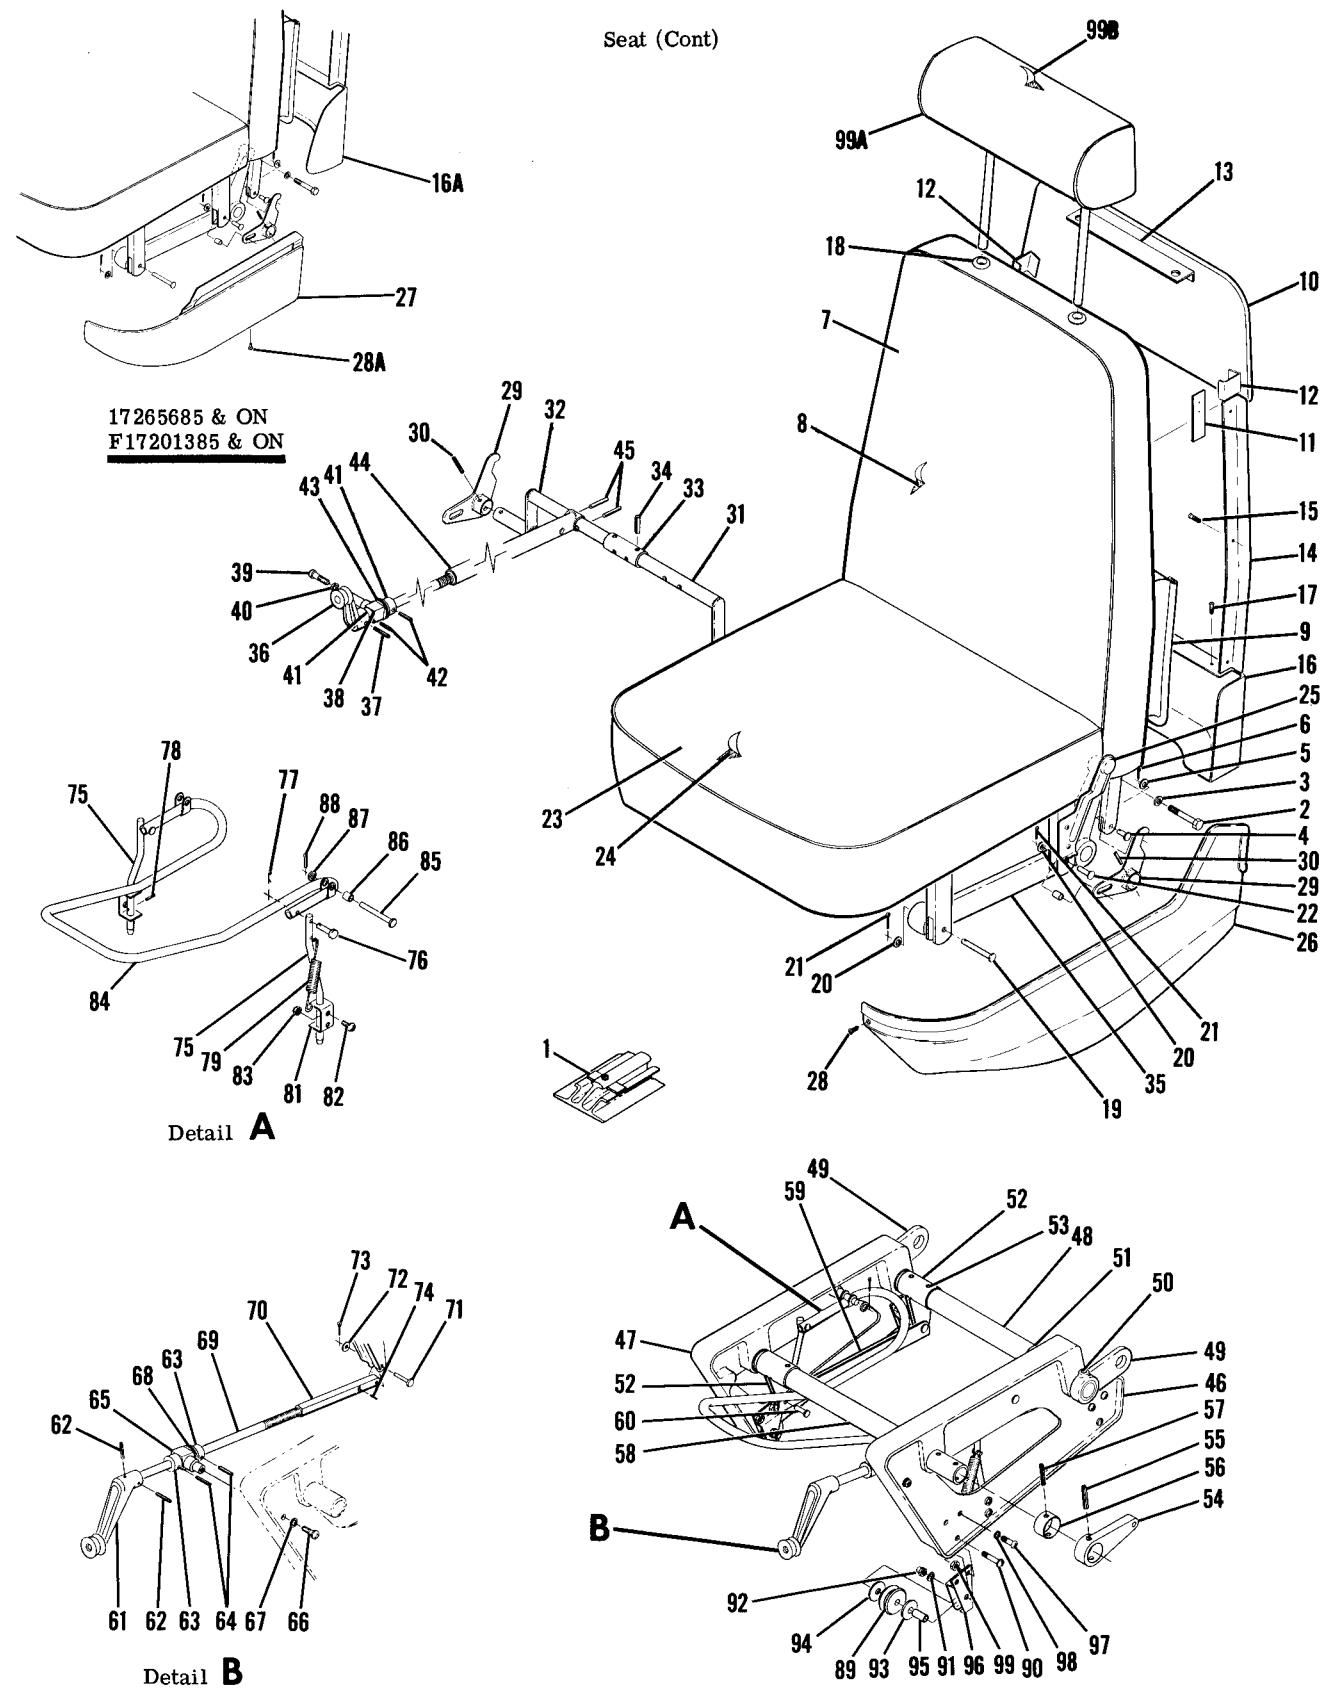


Figure 54. Infinitely Adjustable Front Seat Installation

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
54 -	0514105-1	#	FRONT SEAT INSTALLATION-INFINITE ADJUST						NP	
	0514123-1	#	FRONT SEAT ASSY-INFINITE ADJUST	PILOT					1	A
	0514105-2	#	FRONT SEAT ASSY-INFINITE ADJUST	PILOT					1	B
	0514123-2	#	FRONT SEAT ASSY-INFINITE ADJUST	CO-PILOT					1	A
			FRONT SEAT ASSY-INFINITE ADJUST	CO-PILOT					1	B
- 1	0511242-1		ATTACHING PARTS							
	AN500A8-4		STOP-SEAT						1	
			SCREW						1	
			-----*							
	0514105-4	#	BACK ASSY-UPHOLSTERED SEAT						1	A
	0514123-4	#	BACK ASSY-UPHOLSTERED SEAT						1	B
			ATTACHING PARTS							
- 2	AN3-17A		BOLT						2	
- 3	AN960-10L		WASHER						4	
	0514029-2		SPACER						2	
	MS21044N3		NUT						2	
- 4	MS20392-2C11		PIN						2	
- 5	AN960-10L		WASHER						2	
- 6	MS24665-132		COTTER PIN						2	
			-----*							
- 7	0514105-8	#	COVER ASSY-SEAT BACK						1	A
	0514123-8	#	COVER ASSY-SEAT BACK						1	B
- 8	0514105-9		CUSHION ASSY						1	A
	0514123-9		CUSHION ASSY						1	B
- 9	1214062-5	#	POCKET ASSY						1	
- 10	0514100-1	#	FORMER ASSY						1	
			ATTACHING PARTS							
- 11	0514099-3		CLIP						2	
			-----*							
- 12	0514099-1		BRACKET-FORMER ASSY						2	
- 13	0514099-2		BRACKET-FORMER ASSY						1	
- 14	0514102-1	#	RETAINER ASSY-SEAT BACK						2	
			ATTACHING PARTS							
- 15	S1021A4-6		SCREW						AR	
			-----*							
- 16	1214098-1	□	TRIM-SEAT BACK						1	A
- 16A	1714100-1	□	TRIM-SEAT BACK						1	B
- 17	S1021A4-6		ATTACHING PARTS						AR	
			SCREW							
			-----*							
- 18	0514110-1		GROMMET						2	
	0514105-5	#	BOTTOM ASSY-UPHOLSTERED SEAT	PILOT					1	A
	0514123-5	#	BOTTOM ASSY-UPHOLSTERED SEAT	PILOT					1	B
	0514105-6	#	BOTTOM ASSY-UPHOLSTERED SEAT	CO-PILOT					1	A
	0514123-6	#	BOTTOM ASSY-UPHOLSTERED SEAT	CO-PILOT					1	B
			ATTACHING PARTS							
- 19	MS20392-3C49		PIN						2	
- 20	AN960-416L		WASHER						4	
- 21	MS24665-134		COTTER PIN						4	
- 22	MS20392-3C17		PIN						2	
			-----*							
- 23	0514105-12	#	COVER ASSY-SEAT BOTTOM						1	A
	0514123-12	#	COVER ASSY-SEAT BOTTOM						1	B
- 24	0514105-10		CUSHION						1	A
	0514123-10		CUSHION						1	B
- 25	0514101-1		STIFFENER-LH SEAT TRIM						1	A
	0514101-2		STIFFENER-RH SEAT TRIM						1	A
	S1021A4-6		ATTACHING PARTS						2	
			SCREW							
			-----*							
- 26	0714010-1	□	TRIM-LH						1	A
	0714010-2	□	TRIM-RH						1	B
- 27	1714101-1	#	TRIM ASSY-SEAT SKIRT LH						1	B
	1714101-2	#	TRIM ASSY-SEAT SKIRT RH						1	B
			ATTACHING PARTS							
- 28	S1021A4-6		SCREW						6	A
- 28A	S1021A4-6		SCREW						5	B
			-----*							
- 29	0514030-4		BELLCRANK ASSY-SEAT BACK ADJUST						2	
			ATTACHING PARTS							
- 30	NAS561P4-12		PIN						2	
			-----*							

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE						
				1	2	3	4	5	6	7
54 -31	1714074-13	CRANK WELD ASSY-LH -----	1							
-32	1714074-14	CRANK WELD ASSY-RH -----	1							
-33	1714074-6	SPLICE -----	1							
-34	NAS561P6-12	ATTACHING PARTS PIN -----	4							
-35	0514060-5	-----*								
-36	0514036-1	BRACKET-SEAT PIVOT -----	2							
0514121-2	HANDLE ASSY-SEAT BACK ADJUST -----	1	A							
-37	NAS561P4-12	HANDLE ASSY-SEAT BACK ADJUST -----	1	B						
NAS561P4-10	ATTACHING PARTS PIN -----	1								
-38	0514033-1	PIN -----	1							
-39	AN520-10R8	BEARING BLOCK -----	1							
-40	AN960-10L	ATTACHING PARTS SCREW -----	1							
-41	1200138-2	WASHER -----	1							
-42	NAS561P4-12	-----*								
-43	S2013-2	COLLAR -----	2							
S2014-2	ATTACHING PARTS PIN -----	1								
-44	0514089-1	BEARING -----	1							
-45	NAS561P4-15	RACE-BEARING -----	2							
0514051-1	JACK SCREW ASSY -----	1								
0514051-2	ATTACHING PARTS PIN -----	1								
-46	0514035-17	-----*								
-47	0514035-18	PEDESTAL-LH -----	1							
-48	0514026-2	PEDESTAL-RH -----	1							
-49	0514034-1	TORQUE TUBE-REAR -----	1							
-50	NAS561P6-28	BELLCRANK-REAR TORQUE TUBE -----	2							
-51	0514028-6	ATTACHING PARTS PIN -----	1							
NAS561P8-18	-----*									
-52	0514028-5	BELLCRANK ASSY-REAR TORQUE TUBE INBD -----	1							
-53	NAS561P6-18	ATTACHING PARTS PIN -----	2							
-54	0700633-5	-----*								
-55	NAS561P6-22	BELLCRANK ASSY-TORQUE TUBE INBD -----	2							
-56	1200136-1	ATTACHING PARTS PIN -----	2							
-57	NAS561P6-18	COLLAR -----	3							
-58	0514026-4	ATTACHING PARTS PIN -----	1							
-59	0514032-1	TORQUE TUBE-FWD -----	1							
-60	MS20392-2C17	CHANNEL-TORQUE TUBE INTERCONNECT -----	1							
AN960-10L	ATTACHING PARTS PIN -----	2								
MS24665-132	WASHER -----	2								
-61	1200159-3	COTTER PIN -----	2							
0514121-1	-----*									
-62	NAS561P4-12	HANDLE ASSY-VERTICAL ADJUST -----	1	A						
NAS561P4-10	ATTACHING PARTS PIN -----	1	B							
-63	1200138-2	-----*								
-64	NAS561P4-12	COLLAR -----	2							
		ATTACHING PARTS PIN -----	1							

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
54 -65	0514033-2		BEARING BLOCK ----- ATTACHING PARTS -----							1	
-66	AN520-10R8		SCREW -----							1	
-67	AN960-10L		WASHER -----							1	
-68	S2013-2		-----*								
-69	S2014-2		BEARING -----							1	
-70	0514027-21		RACE -----							2	
-71	1514119-3		SCREW ASSY-VERTICAL ADJUST -----							1	
-72	MS20392-2C37		NUT-VERTICAL ADJUST ----- ATTACHING PARTS -----							1	
-73	AN960-10		PIN -----							1	
-74	MS24665-132		WASHER -----							1	
-75	NAS561P4-8		COTTER PIN -----							1	
-76	1714067-5		PIN -----							2	
-77	MS20392-1C21		ATTACHING PARTS -----								
-78	MS24665-132		PIN -----							1	
-79	NAS561-3-16		COTTER PIN -----							1	
-80	1414116-1		PIN -----							1	
-81	1714061-1		DELETED NOT USED -----							2	
-82	1714061-1		GUIDE-PIN ----- ATTACHING PARTS -----								
-83	AN515-BR6		SCREW -----							2	
-84	MS21044N08		NUT -----							2	
-85	0514090-4		-----*							1	
-86	MS20392-2C59		HANDLE-SEAT ADJUST ----- ATTACHING PARTS -----								
-87	NAS43DD3-18		PIN -----							2	
-88	AN960-10		SPACER -----							2	
-89	MS24665-132		WASHER -----							2	
-90	S1704-1		COTTER PIN -----							2	
-91	AN23-20A		ROLLER-SEAT ----- ATTACHING PARTS -----							4	
-92	AN960-10L		BOLT -----							1	
-93	S1914-8		WASHER -----							1	
-94	1714000-22		NUT -----							1	
-95	1714000-41		WASHER -----							1	
-96	1714000-54		WASHER -----							1	
-97	1714000-33		BUSHING -----							1	
-98			-----*								
-99	NAS220-11		HOUSING-SEAT ROLLER ----- ATTACHING PARTS -----							4	
-99A	AN960-8		SCREW -----							2	
-99B	NAS679A08		WASHER -----							2	
			NUT -----							2	
		#	-----*								
		#	HEADREST ASSY ----- COVER-HEADREST -----							AR	1
			NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.								
			NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.								
			NOTE. *WHEN ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIAL 17265685 & F17201385 ALSO ORDER 0514121-2 HANDLE & ATTACHING PART.								
			A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384								
			B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON								

Seat (Cont)

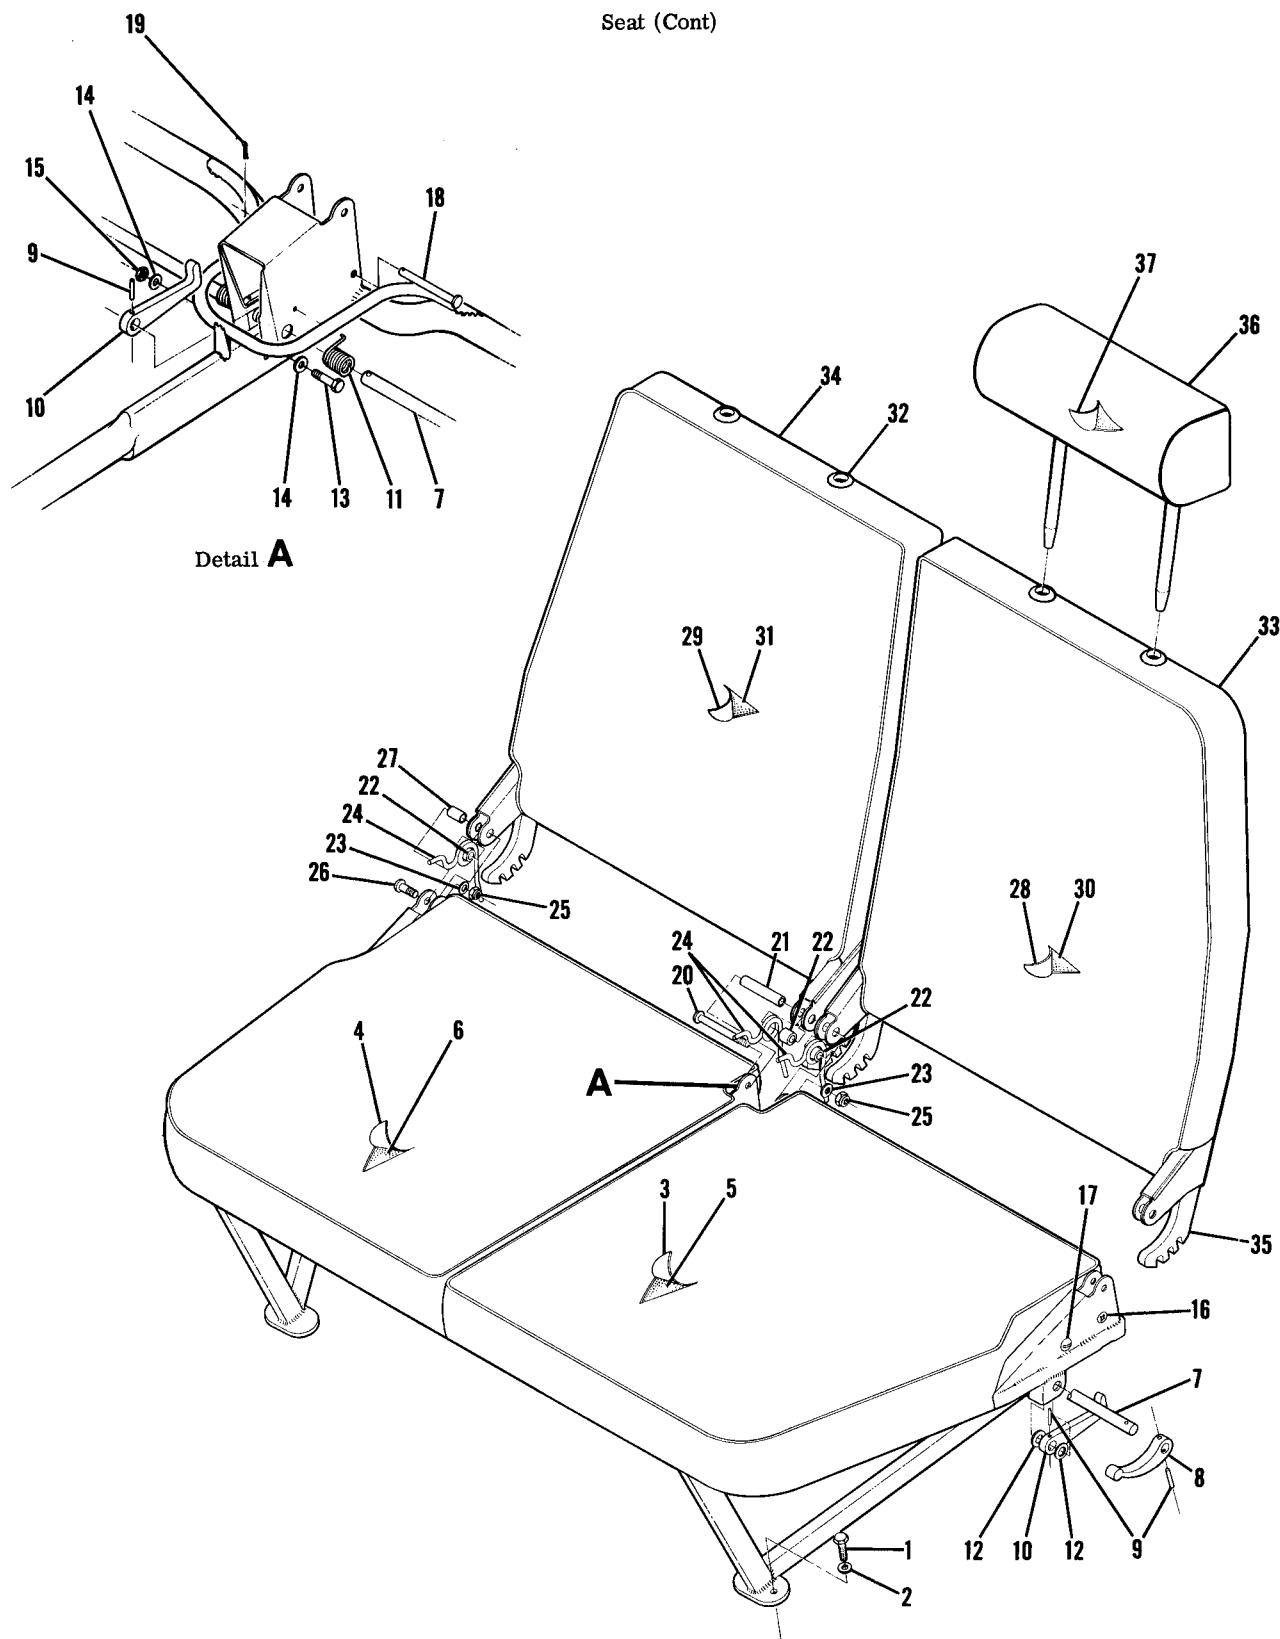


Figure 55. Rear Seat Installation - Individually Reclining Back

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
55 -		REAR SEAT INSTALLATION-INDIVIDUALLY RECLINING BACK -----	NP	
	0514103-1 #	SEAT ASSY-REAR SPLIT BACK -----	1	A
	0514125-1 #	SEAT ASSY-REAR SPLIT BACK -----	1	B
	0514103-2 #	BOTTOM ASSY-REAR SEAT -----	1	A
	0514125-2 #	BOTTOM ASSY-REAR SEAT -----	1	B
		ATTACHING PARTS -----		
- 1	AN4-7A	BOLT-FRONT LEGS ONLY -----	2	
	AN4-5A	BOLT-REAR LEGS ONLY -----	2	
- 2	AN960-416	WASHER -----	4	
		-----*		
- 3	0514103-11 #	COVER ASSY-LH SEAT BOTTOM -----	1	A
	0514125-11 #	COVER ASSY-LH SEAT BOTTOM -----	1	B
- 4	0514103-12 #	COVER ASSY-RH SEAT BOTTOM -----	1	A
	0514125-12 #	COVER ASSY-LH SEAT BOTTOM -----	1	B
- 5	0514103-7	CUSHION ASSY-LH SEAT BOTTOM -----	1	A
	0514125-7	CUSHION ASSY-LH SEAT BOTTOM -----	1	B
- 6	0514103-8	CUSHION ASSY-RH SEAT BOTTOM -----	1	A
	0514125-8	CUSHION ASSY-RH SEAT BOTTOM -----	1	B
- 7	0512031-9	SHAFT-CONTROL -----	2	
		ATTACHING PARTS -----		
- 8	0710312-2	HANDLE -----	1	
- 9	NAS561-P3-10	PIN -----	3	
-10	1414231-2	PAWL -----	2	
-11	1414107-2	SPRING-LH SHAFT ONLY -----	1	
	1414107-1	SPRING-RH SHAFT ONLY -----	1	
-12	AN960C616L	WASHER -----	2	
		-----*		
-13	AN3-10A	BOLT -----	2	
-14	AN960-10L	WASHER -----	4	
-15	MS21044N3	NUT -----	2	
-16	AN507-832R14	SCREW -----	2	
	MS21044N08	NUT -----	2	
-17	AN23-15A	BOLT -----	2	
	MS21044N3	NUT -----	2	
-18	MS20392-2C71	PIN -----	1	
-19	MS24665-132	PIN-COTTER -----	1	
	0514103-3 #	BACK ASSY-REAR SEAT LH -----	1	
	0514125-3 #	BACK ASSY-REAR SEAT LH -----	1	A
	0514103-4 #	BACK ASSY-REAR SEAT RH -----	1	A
	0514125-4 #	BACK ASSY-REAR SEAT RH -----	1	B
		ATTACHING PARTS -----		
-20	AN23-40A	BOLT -----	1	
-21	1414211-22	BUSHING -----	1	
-22	0711668-1	BUSHING -----	4	
-23	AN960-10L	WASHER -----	6	
-24	0711667-1	SPRING -----	4	
-25	MS21044N3	NUT -----	3	
-26	AN23-16A	BOLT -----	2	
-27	1414104-4	SPACER -----	2	
		-----*		
-28	0514103-9 #	COVER ASSY-SEAT BACK LH -----	1	
	0514125-9 #	COVER ASSY-SEAT BACK LH -----	1	A
-29	0514103-10 #	COVER ASSY-SEAT BACK RH -----	1	A
	0514125-10 #	COVER ASSY-SEAT BACK RH -----	1	B
-30	0514103-5	CUSHION ASSY-SEAT BACK LH -----	1	A
	0514125-5	CUSHION ASSY-SEAT BACK LH -----	1	B
-31	0514103-6	CUSHION ASSY-SEAT BACK RH -----	1	A
	0514125-6	CUSHION ASSY-SEAT BACK LH -----	1	B
-32	0514110-1	GROMMET-SEAT BACK -----	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	1	2	3	4	5	6	7
					1	2	3	4	5	6	7
55 -33	0514108-1	TRIM ASSY-BACK PANEL LH -----	1								
-34	0514108-2	TRIM ASSY-BACK PANEL RH -----	1								
	S1021Z6-4	ATTACHING PARTS -----									
		SCREW -----									7
		-----*									
-35	1414230-2	CAM-SEAT BACK RECLINE -----									2
-36	1215073-11	HEADREST ASSEMBLY -----									2
-37	1215073-18	COVER ASSEMBLY-HEADREST -----									1
		NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.									
		NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.									
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

This page intentionally left blank.

Seat (Cont)

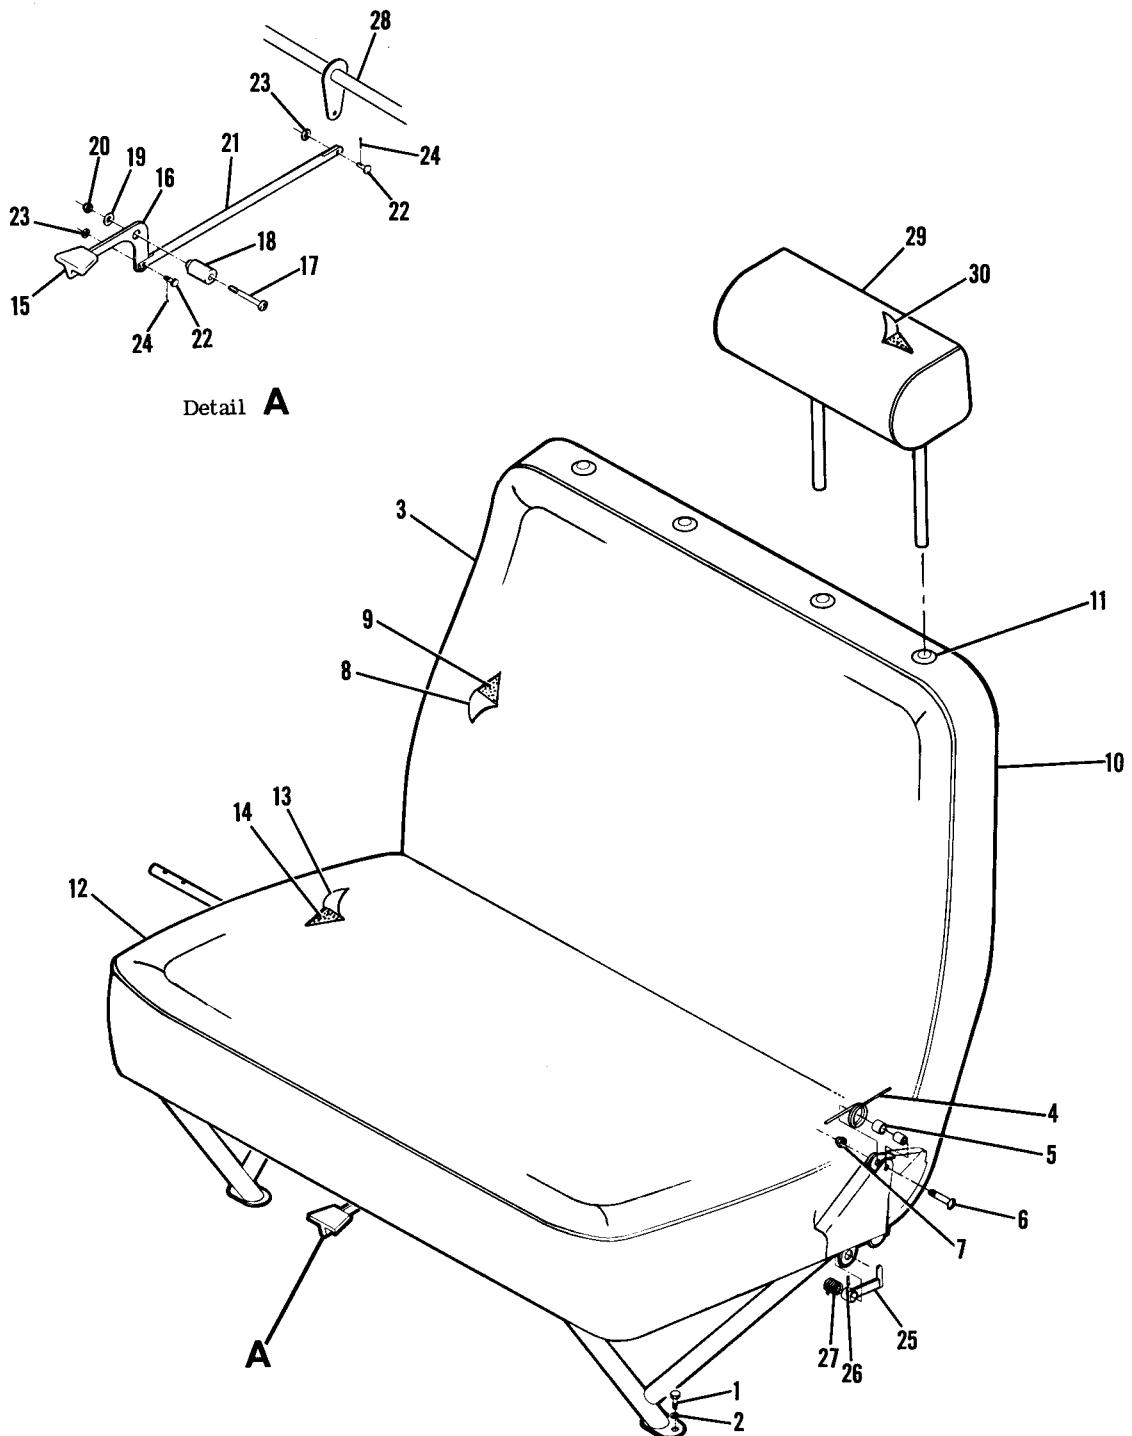



Figure 56. Rear Seat Installation - One Piece Reclining Back

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
56 -		REAR SEAT INSTALLATION-ONE PIECE RECLINING BACK -----							NP	
	0514106-1	#	SEAT ASSY-REAR SOLID BACK -----						1	A
	0514124-1	#	SEAT ASSY-REAR SOLID BACK ----- ATTACHING PARTS						1	B
- 1	AN4-7A		BOLT FRONT ATTACH -----						2	
- 2	AN4-5A		BOLT REAR ATTACH -----						2	
	AN960-416		WASHER -----*						4	
- 3	0514106-4	#	BACK ASSY-UPHOLSTERED SEAT -----						1	A
	0514124-4	#	BACK ASSY-UPHOLSTERED SEAT ----- ATTACHING PARTS						1	B
- 4	1714002-1		SPRING -----						2	
- 5	1714001-20		BUSHING -----						2	
- 6	1714001-22		BUSHING -----						2	
- 7	AN24-18A		BOLT -----						2	
	S1914-11		NUT -----*						2	
- 8	0514106-5	#	COVER ASSY-SEAT BACK -----						1	A
	0514124-5	#	COVER ASSY-SEAT BACK -----						1	B
- 9	0514106-6		CUSHION ASSY-SEAT BACK -----						1	A
	0514124-6		CUSHION ASSY-SEAT BACK -----						1	B
-10	0514109-1	#	TRIM ASSY ----- ATTACHING PARTS						1	
	S1021Z6-4		SCREW -----						12	A
	S1021Z6-4		SCREW -----						14	B
-11	0514110-1		GROMMET -----						4	
-12	0514106-2	#	BOTTOM ASSY-UPHOLSTERED SEAT -----						1	A
	0514124-2	#	BOTTOM ASSY-UPHOLSTERED SEAT -----						1	B
-13	0514106-3	#	COVER ASSY-SEAT BOTTOM -----						1	A
	0514124-3	#	COVER ASSY-SEAT BOTTOM -----						1	B
-14	0514106-7		CUSHION ASSY-SEAT BOTTOM -----						1	A
	0514124-7		CUSHION ASSY-SEAT BOTTOM -----						1	B
-15	1714005-1		KNOB-SEAT ADJUSTMENT ----- ATTACHING PARTS						1	
	NAS561P3-6		PIN -----*						1	
-16	1714033-1		BELLCRANK ----- ATTACHING PARTS						1	
-17	AN24-31A		BOLT -----						1	
-18	1714036-1		BUSHING -----						1	
-19	S1450-4-10-032		WASHER -----						1	
-20	MS21042L4		NUT -----*						1	
-21	1714095-1		LINK-SEAT BACK ADJUST ----- ATTACHING PARTS						1	
-22	MS20392-1C7		PIN -----						2	
-23	AN960-4L		WASHER -----						2	
-24	MS24665-132		PIN-COTTER -----*						2	
-25	1714001-19		PAWL-SEAT BACK ----- ATTACHING PARTS						2	
-26	NAS561P3-8		PIN -----*						1	
-27	1414107-1		SPRING-PAWL -----						2	
-28	0514007-11		TUBE ASSEMBLY-BACK ADJUST -----						1	
-29	1215073-11	#	HEADREST ASSY -----						AR	
-30	1215073-18	#	COVER-HEADREST -----						1	
NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.										
NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.										
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON										

Seat (Cont)





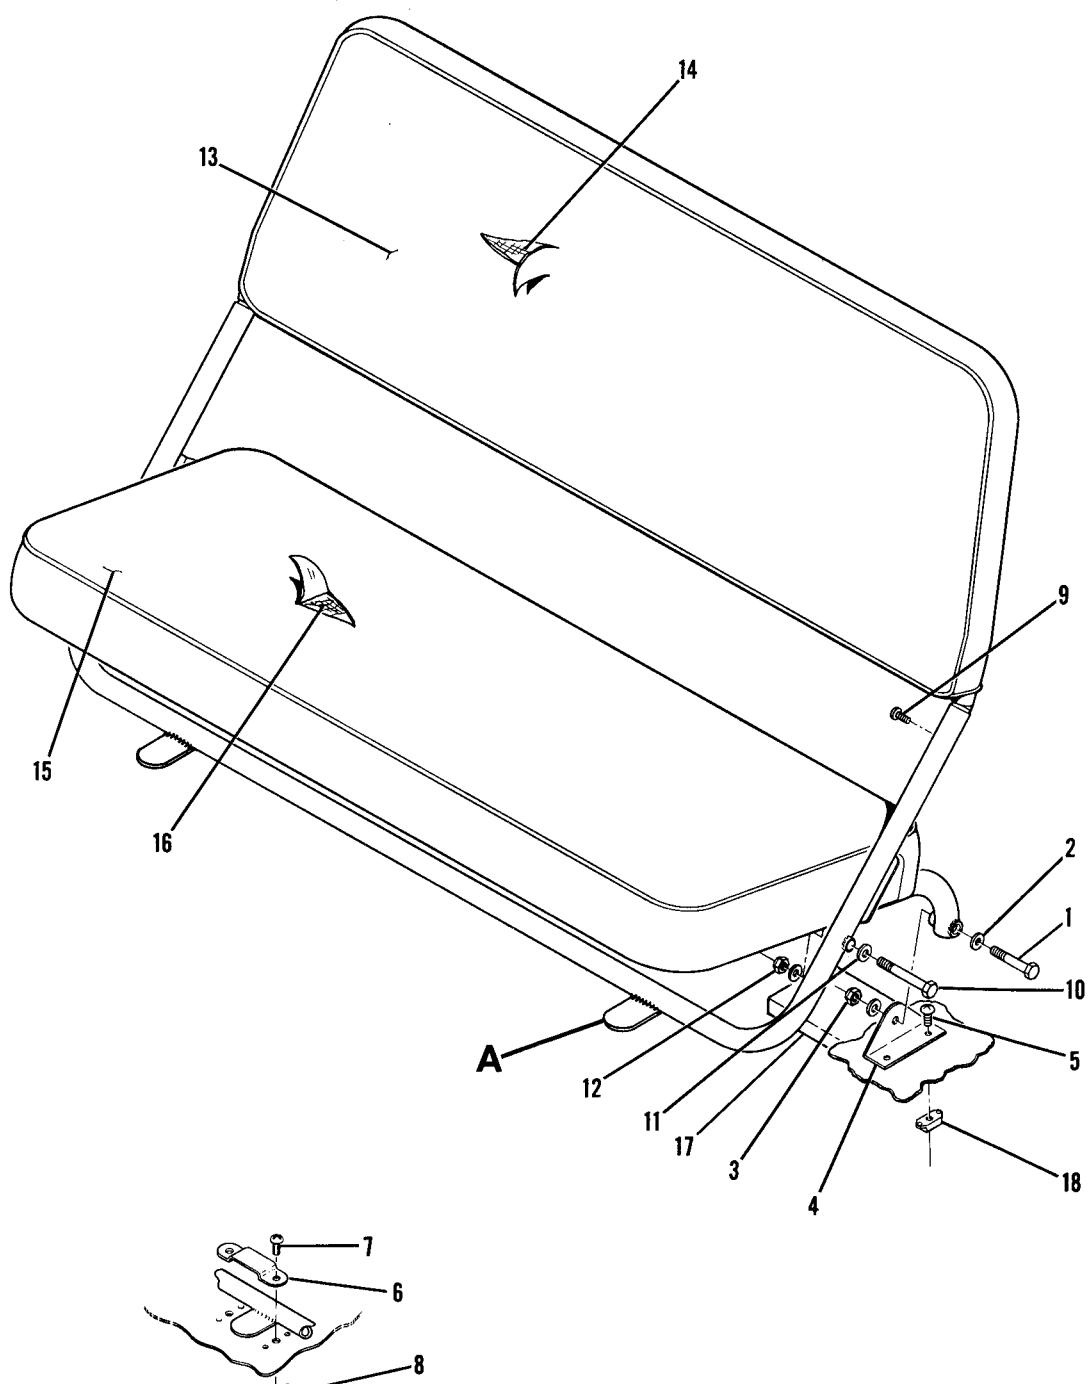


Detail A

Figure 57. Auxiliary Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
57 -	0514107-1	#	AUXILIARY SEAT INSTALLATION							NP	
	0514107-4	#	SEAT ASSY-CHILDS							1	A
- 1	AN4-13A		SEAT ASSY-CHILDS							1	B
- 2	AN960-416		ATTACHING PARTS								
- 3	MS21042L4		BOLT							2	
- 4	0514042-1		WASHER							4	
- 5	AN515-8R8		NUT							2	
- 6	0715026-1		BRACKET-SEAT MOUNT							2	
- 7	AN515-8R8		SCREW							4	
- 8	NAS686A08		RETAINER							2	
			SCREW							2	
- 9	S1021Z8-6		NUT							2	
-10	AN4-17A		COVER ASSY-SEAT BACK							1	
-11	AN960-416		COVER ASSY-SEAT BACK							1	
-12	MS21042L4		CUSHION-SEAT BACK							1	
-13	0514107-3	#	COVER ASSY-SEAT BOTTOM							1	A
	0514107-6	#	COVER ASSY-SEAT BOTTOM							1	B
-14	0515002-9		CUSHION-SEAT BOTTOM							1	
-15	0514107-2	#	REINFORCEMENT ASSY-LH							1	A
	0514107-5	#	REINFORCEMENT ASSY-RH							1	B
-16	0515002-10		NUTPLATE							1	
-17	0513065-5									2	
	0513065-6										
-18	NAS686A08										
<p>NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VI.</p> <p>A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON</p>											

Instruments

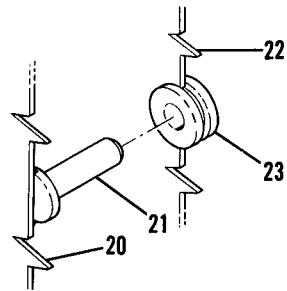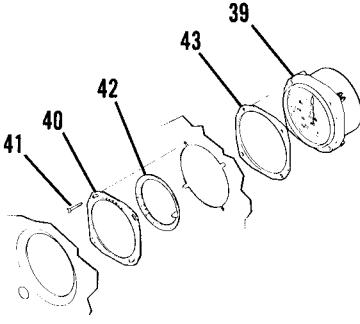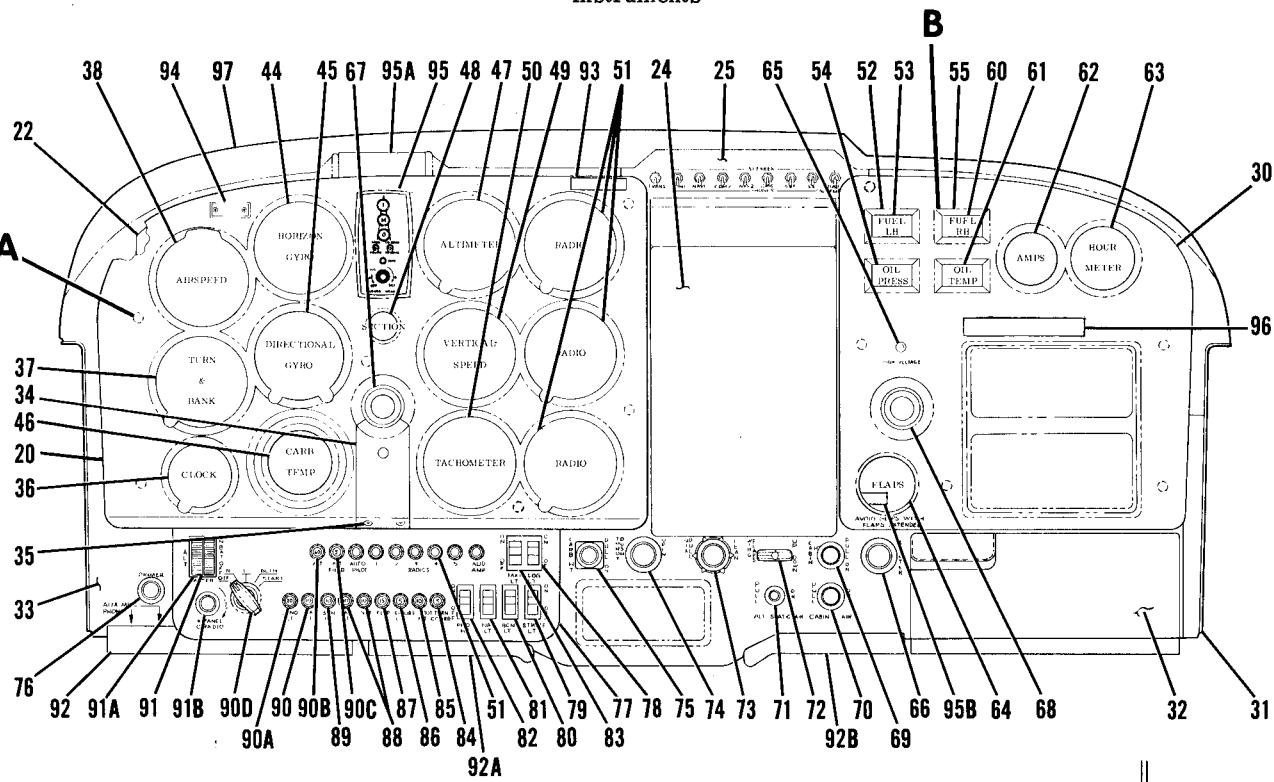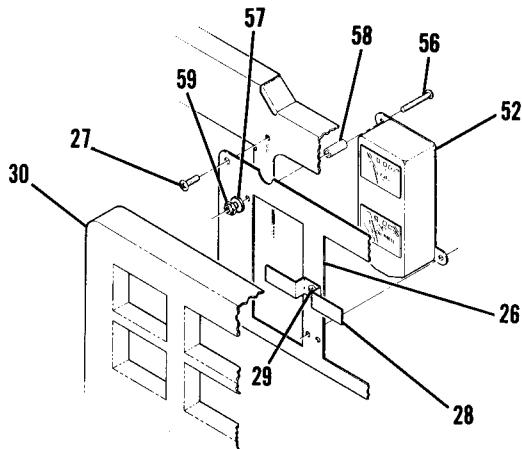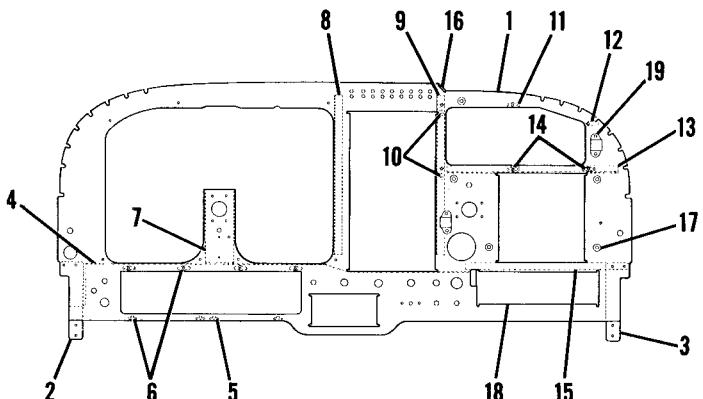**TRUE AIRSPEED**

**172 SERIAL 17263459 THRU 17265684
F172 SERIAL F17201235 THRU F17201384**

Figure 58. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
58 -		INSTRUMENT PANEL EQUIPMENT INSTALLATION		
- 1	0513070-10	PANEL ASSY-STATIONARY -----	1	A
- 2	0513068-1	SUPPORT-LH -----	1	
- 3	0513068-2	SUPPORT-RH -----	1	
- 4	0513069-5	STIFFENER ASSY -----	1	
- 5	NAS680A3	NUTPLATE -----	1	
- 6	NAS680A08	NUTPLATE -----	7	
- 7	0513067-2	SUPPORT-COLUMN -----	1	
- 8	0513316-12	ANGLE -----	1	
- 9	0513066-1	STIFFENER ASSY -----	1	
-10	NAS682A08	NUTPLATE -----	2	
-11	NAS680A08	NUTPLATE -----	1	
-12	NAS682A08	NUTPLATE -----	1	
-13	0513066-3	STIFFENER ASSY -----	1	
-14	NAS680A08	NUTPLATE -----	2	
-15	0513316-6	ANGLE -----	1	
-16	0513078-1	GUSSET -----	1	
-17	MS35489-4	GROMMET-COVER ATTACH -----	5	
-18	SEE FIG 59	MAP CASE ASSY -----	1	
-19	0413522-2	BRACKET-FASTENER -----	2	
-20	S2092-3	FASTENER-HOOK * IN LG BKI REF S2092-3-* -----		AR
-20	0513445-13	COVER ASSY-SHOCK PANEL -----	1	
-21	1513839-4	GUIDE-COVER ATTACH -----	9	
-21	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-3-* -----		AR
-21	1213327-19	SHIM-FASTENER -----	2	
-22	0513071-11	PANEL ASSY-SHOCK -----	1	
	0413523-4	ATTACHING PARTS -----		
	AN936A8	MOUNT ASSY -----	4	
	MS25082B2	WASHER -----	8	
	0413247	NUT -----	8	
		STRAP-GROUND -----	1	
		-----*		
-23	MS35489-33	GROMMET -----	9	
-23	S2092-3	FASTENER-HOOK * IN LG BKI REF S2092-3-* -----		AR
-24	0413531-59	COVER-RADIO -----	1	
-25	0513446-3	PANEL COVER-RADIO SWITCH -----	1	
-25	0513446-5	PANEL COVER-RADIO SWITCH -----	1	
-26	0513072-3	PLATE-GAGE CLUSTER ADAPTER -----	1	
-26		ATTACHING PARTS -----		
-27	AN515-8R8	SCREW -----	6	
		-----*		
-28	0513427-1	RETAINER-INSTRUMENT -----	1	
-29	AN515-6R8	ATTACHING PARTS -----		
-29	MS21045L06	SCREW -----	1	
-29		NUT -----	1	
		-----*		
-30	0513445-36	COVER ASSY-RH -----	1	
-30	0513839-6	GUIDE-COVER ATTACH -----	5	
-30	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-* -----		AR
-31	0513077-8	COVER-LOWER RH -----	1	
-32	SEE FIG 59	MAP BOX & DOOR INSTALLATION -----	1	
-33	0513077-28	COVER-LOWER LH -----	1	
-34	0513445-23	PLATE-SPICE -----	1	
-34	0513445-24	PLATE-SPICE USED WITH MAPLIGHT -----	1	
-34		ATTACHING PARTS -----		
-35	S1021Z6-8B	SCREW -----	2	
-35	NAS395-4-3	NUT -----	2	
		-----*		
-36	C664508-0101	CLOCK-ELECTRIC -----	1	
	AN51586R10	ATTACHING PARTS -----		
		SCREW -----	3	
		-----*		
-37	S1413N2	INDICATOR-TURN & BANK -----	1	
-37	C661003-0504	INDICATOR-TURN COORDINATOR -----	1	
	AN51586R12	ATTACHING PARTS -----		
		SCREW -----	3	
		-----*		
	35060-0114	INDICATOR-TURN COORDINATOR ARC NAV-O-MATIC -----	1	
	AN515-6R14	ATTACHING PARTS -----		
		SCREW -----	4	
		NUT -----	4	
		-----*		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE ON CODE					
			1	2	3	4	5	6	7
58 -38	C661060-0109	INDICATOR-AIRSPED							1
	AN515B6R16	ATTACHING PARTS							4
		SCREW							

-39	C661061-0106	TRUE AIRSPEED INDICATOR INSTALLATION							NP
-40	0700162-1	INDICATOR-AIRSPED							1
-41	AN515B6R16	RETAINER							1
-42	0700189-10	ATTACHING PARTS							
-43	0700162-6	SCREW							4
-44	C661076-0104 *	GYRO-HORIZON							1
	C661076-0103 *	GYRO-HORIZON							1
	C661076-0102 *	GYRO-HORIZON							1
	C661076-0101 *	GYRO-HORIZON							1
		ATTACHING PARTS							
	AN515B6R6	SCREW							4

	37570-0105	GYRO-HORIZON ARC NAV-O-MATIC							1
		ATTACHING PARTS							
	AN515-6R10	SCREW							3

-45	C661075-0102 **	GYRO-DIRECTIONAL WEU C661075-0101							1
	C661075-0103 **	GYRO-DIRECTIONAL							1
	C661075-0101 **	GYRO-DIRECTIONAL							1
	C661075-0104 **	GYRO-DIRECTIONAL							1
	C661075-0105	GYRO-DIRECTIONAL A.I.M. 200H							1
		ATTACHING PARTS							
	AN515B6R6	SCREW							3

	40760-0104	GYRO-DIRECTIONAL ARC NAV-O-MATIC							1
		ATTACHING PARTS							
	AN515-6R10	SCREW							3

-46	S1311-3	GAGE-CARBURETOR AIR TEMPERATURE							1
		ATTACHING PARTS							
	AN515B6R12	SCREW							4
	NAS395-2-3	NUT							4

-47	C661012-0101	INDICATOR-ALTIMETER							1
	C661071-0101	INDICATOR-ALTIMETER FEET & INCHES	20,000 FT						1
	C661071-0102 %%	INDICATOR-ALTIMETER FEET & MILLIBARS	20,000 FT						1
	C661025-0102 ***	INDICATOR-ALTIMETER FEET & MILLIBARS	35,000 FT						1
		ATTACHING PARTS							
	AN515B6R16	SCREW							3
	AN936A6B	WASHER							3
	AN34086	NUT							3

-48	C668509-0101	GAGE-SUCTION ONE INCH							1
-49	C661080-0101	INDICATOR-VERTICAL SPEED							1
		ATTACHING PARTS							
	AN515B6R16	SCREW							4

-50	C668020-0102	TACHOMETER							1
		ATTACHING PARTS							
	AN515B6R8	SCREW							4
	AN936A6B	WASHER							4

	S1605-8	SHAFT-TACHOMETER DRIVE							1
-51	C669504-0103	RADIO INSTALLATION SEE ELECTRONICS MANUAL							NP
-52	441347	INSTRUMENT CLUSTER							1
-53	444678	GAGE-LH FUEL SW							1
-54		GAGE-OIL PRESSURE SW							1
		CONTINUED ON NEXT PAGE							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
58 -55	C669505-0101	INSTRUMENT CLUSTER ----- ATTACHING PARTS	1						
-56	AN515-6R5	SCREW -----	2						
-57	AN960D6L	WASHER -----	2						
-58	NAS43DD1-42	SPACER -----	2						
-59	MS21045L06	NUT -----	2						
		-----*							
-60	441346	GAGE-RH FUEL SW -----	1						
-61	442792	GAGE-OIL TEMP SW -----	1						
		TUBE ASSY-OIL PRESSURE GAGE TO FIREWALL -----	1						
-62	S1320-5	AMMETER ----- ATTACHING PARTS	1						
		BRACKET-AMMETER GAGE -----	1						
		SPACER -----	1						
		SCREW -----	4						
		NUT -----	4						
		-----*							
-63	C664501-0103	HOURMETER ----- ATTACHING PARTS	1						
		SCREW -----	4						
		WASHER -----	8						
		NUT -----	4						
		-----*							
-64	C668001-0105	INDICATOR-FLAP ----- ATTACHING PARTS	1						
		BRACKET -----	1						
		SPACER -----	1						
		-----*							
-65	S2135-1	LIGHT ASSY-OVERVOLTAGE -----	1						
-66	0513052-16	LIGHTER ASSY-CIGAR -----	1						
		ELEMENT ASSY CUNO -----	1						
		KNOB-CIGAR LIGHTER -----	1						
		CIRCUIT BREAKER-CIGAR LIGHTER -----	1						
		SUPPORT ASSY-CONTROL LH -----	1						
		SUPPORT ASSY-CONTROL RH -----	1						
		CONTROL ASSY-CABIN HEAT -----	1						
		CONTROL ASSY-CABIN AIR -----	1						
		KNOB ASSY-ALT STATIC AIR -----	1						
		SWITCH-FLAP MOTOR -----	1						
		KNOB-FLAP CONTROL -----	1						
		NUT-DECORATIVE -----	1						
		CONTROL ASSY-MIXTURE -----	1						
		CONTROL ASSY-THROTTLE -----	1						
		CONTROL ASSY-CARBURETOR HEAT -----	1						
		CONTROL ASSY-PRIMER -----	1						
		PANEL ASSY-REMOVABLE SWITCH -----							
		ATTACHING PARTS							
		SCREW -----	4						
		-----*							
-77	0513076-43	□ COVER ASSY-SWITCH PANEL -----	1						
-78	S2160-4	SWITCH LANDING & TAXI LIGHT -----	1						
		SWITCH LANDING LIGHT ONLY -----	1						
-79	S2160-5	SWITCH STROBE LIGHT -----	1						
-80	S2160-1	SWITCH BEACON LIGHT -----	1						
-81	S2160-1	SWITCH NAVIGATION LIGHT -----	1						
-82	S2160-1	SWITCH PITOT HEAT -----	1						
		S1824-1 CIRCUIT-PITOT HEAT FLOATPLANE ONLY -----	1						
		S2161-1 COVER-SWITCH USED WHEN SWITCHES ARE NOT INSTALLED -----	3						
		S2161-2 COVER-SWITCH USED WHEN SWITCH IS NOT INSTALLED -----	1						
-84	S1360-5L	CIRCUIT BREAKER 5 AMP TURN COORDINATOR -----	1						
-85	S1360-10L	CIRCUIT BREAKER 10 AMP PITOT HEAT -----	1						
-86	S1360-5L	CIRCUIT BREAKER 5 AMP STROBE LIGHT -----	1						
-87	S1360-15L	CIRCUIT BREAKER 15 AMP FLAP -----	1						
-88	S1360-10L	CIRCUIT BREAKER 10 AMP INSTRUMENT LIGHTS -----	2						
-89	S1360-15L	CIRCUIT BREAKER 15 AMP BEACON LIGHT -----	1						
-90	S1360-10L	CIRCUIT BREAKER 10 AMP NAVIGATION LIGHT -----	1						
-90A	S1360-20L	CIRCUIT BREAKER 20 AMP LANDING LIGHTS -----	1						
-90B	S1596-60L	CIRCUIT BREAKER 60 AMP ALTERNATOR -----	1						
		S2122-1 NUT CIRCUIT BREAKER ATTACH -----							
-90C	S1360-5L	CIRCUIT BREAKER 5 AMP ALT FIELD -----	1						
-90D	C292501-0104	* KIT-IGNITION SWITCH -----	1						
-91	S1994-1-1	SWITCH-MASTER -----	1						
-91A	S1843-1	MOUNTING BEZEL-MASTER SWITCH -----	1						

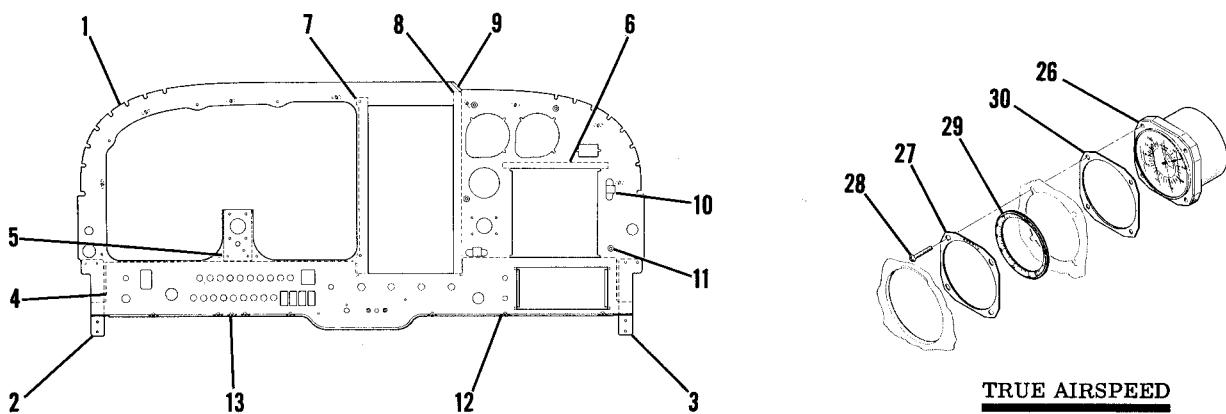
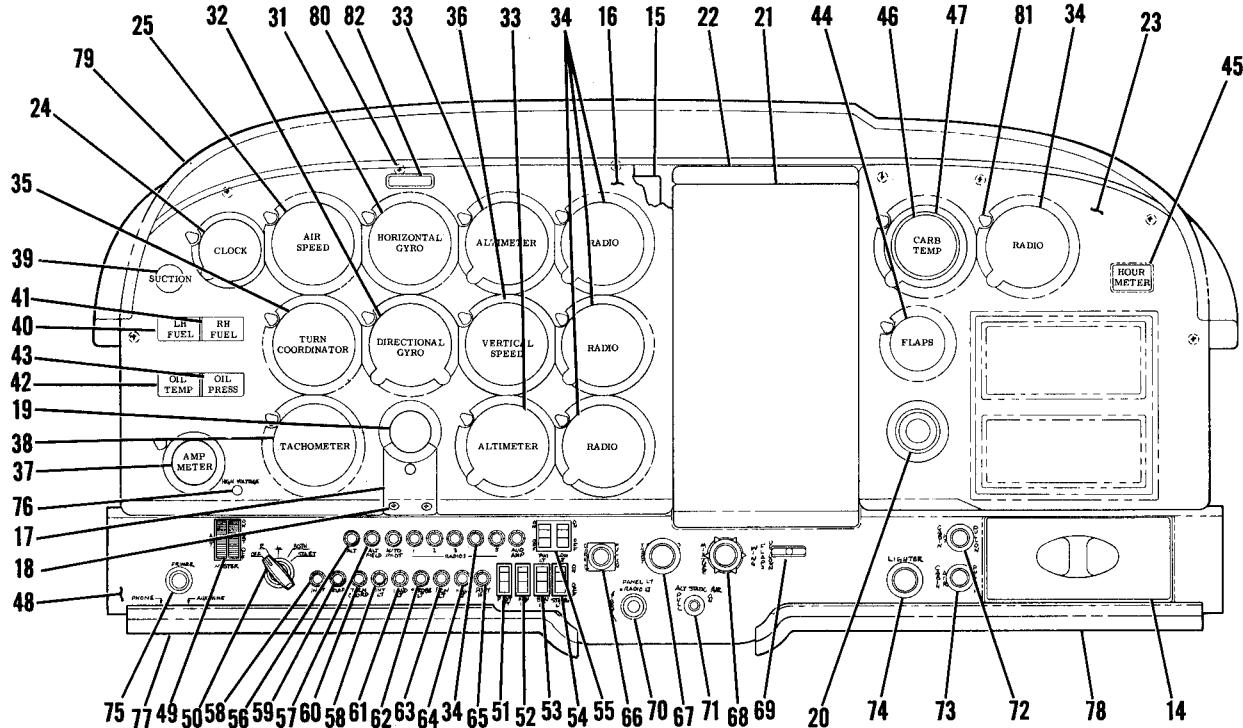
CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	1	2	3	4	5	6	7
58 -91B	S1995-4 S2091-5 AN565B2H3 0513434-5	KNOB ASSY-RESISTOR ----- RESISTOR-PANEL LIGHTS ----- SCREW-SET ----- PAD-KNEE ----- ATTACHING PARTS	1 1 1 1								
-92	AN515-8R13 AN960D8L	SCREW ----- WASHER ----- ----*	2 2								
-92A	0513454-3	PAD-KNEE ----- ATTACHING PARTS	1								
	AN515-8R13 AN960D8L	SCREW ----- WASHER ----- ----*	2 2								
-92B	0513434-4	PAD-KNEE ----- ATTACHING PARTS	1								
	S1021Z6-12C AN960D6L	SCREW ----- WASHER ----- ----*	2 2								
-93	C622003-0105	PLACARD-STROBE LIGHT WARNING -----	1								
-94	1213004-2	RETAINER-AIRCRAFT IDENTIFICATION ----- ATTACHING PARTS	1								
	S1022Z6-108 NAS446-2-3	SCREW ----- NUT ----- ----*	2 2								
-95	0505042-2	PLACARD-MARKER BEACON -----	1								
-95A	0400210-2	PLACARD-COMPASS CORRECTION -----	1								
-95B	1220112-4	FLOATPLANE ONLY									
-96	0505009-3	PLACARD-FLOATPLANE FLAPS -----	1								
-97	0515003-2	FLOATPLANE ONLY									
	S1021Z4-6	EYEBROW-INSTRUMENT PANEL ----- ATTACHING PARTS	1								
		SCREW ----- ----*	6								
<p>NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.</p> <p>NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.</p> <p>NOTE. %THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS.</p> <p>NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS - SEE PAGE VII.</p> <p>NOTE. ***FOR DUAL ALTIMETER INSTALLATION-20 FT INCREMENTS, USE 2 C661025-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREW, AN936A68 WASHER & AN34086 NUT.</p> <p>NOTE. %%FOR DUAL ALTIMETER INSTALLATION-50 FT INCREMENTS, USE 2 C661071-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREW, AN936A68 WASHER & AN34086 NUT.</p> <p>A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384</p>											

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
58A-		INSTRUMENT PANEL EQUIPMENT INSTALLATION							
- 1	0513088-1	PANEL ASSY-STATIONARY							
- 2	0513068-1	SUPPORT-LH							
- 3	0513068-2	SUPPORT-RH							
- 4	0513088-7	STIFFENER							
- 5	0513088-9	SUPPORT-CONTROL COLUMN							
- 6	0513087-1	STIFFENER							
- 7	0513087-3	STIFFENER-LH							
- 8	0513087-2	STIFFENER-RH							
- 9	0513280-1	GUSSET							
-10	0413522-2	BRACKET-FASTENER							
	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-*							
-11	MS35489-4	GROMMET							
-12	NAS680A08	NUTPLATE							
-13	NAS680A3	NUTPLATE							
-14	SEE FIG 59	MAP CASE ASSY							
-15	0513084-1	PANEL ASSY-SHOCK ATTACHING PARTS							
	0413523-4	MOUNT ASSY							
	AN936A8	WASHER							
	MS2508282	NUT							
	0413247-0	STRAP-GROUND							
		-----*							
	S2092-3	FASTENER-HOOK * IN LG BKI REF S2092-3-*							
	MS35489-33	GROMMET							
-16	0513093-2	□ COVER ASSY-SHOCK PANEL							
	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-*							
	1513839-3	GUIDE							
-17	0513093-5	□ COVER-CONTROL COLUMN ATTACHING PARTS							
-18	S1021Z6-88	SCREW							
	NAS395-4-3	NUT							
		-----*							
-19	0760131-6	SUPPORT & LOCK COLLAR-LH ATTACHING PARTS							
	AN51586R8	SCREW							
	AN340B6	NUT							
		-----*							
-20	0760131-5	SUPPORT & LOCK COLLAR-RH ATTACHING PARTS							
	AN515-6R8	SCREW							
	MS20365-632	NUT							
		-----*							
-21	0513095-1	□ COVER ASSY-RADIO							
	S2092-2	FASTENER-PILE * IN LG BKI REF S2092-2-*							
-22	0513095-15	□ COVER-RADIO							
-23	0513093-1	□ COVER-RH INSTRUMENT							
	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-*							
	1513839-3	GUIDE							
-24	C664508-0101	CLOCK ATTACHING PARTS							
	AN51586R10	SCREW							
		-----*							
-25	C661064-0102	INDICATOR-AIRSPEED ATTACHING PARTS							
	AN51586R16	SCREW							
		-----*							

CONTINUED ON NEXT PAGE

Instruments (Cont)

**TRUE AIRSPEED**

**172 SERIAL 17265685 & ON
F172 SERIAL F17201385 & ON**

Figure 58A. Instrument Panel Equipment Installation



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
58A-		TRUE AIRSPEED INSTL -----	NP						
-26	C661065-0102	INDICATOR-TRUE AIRSPEED -----	1						
-27	0700162-1	RING-RETAINER -----	1						
-28	AN515B6R16	ATTACHING PARTS SCREW ----- -----*	4						
-29	S2234-1	RING -----	1						
-30	0700162-3	SPACER .050 THICK -----	AR						
	0700162-4	SPACER .063 THICK -----	AR						
	0700162-6	SPACER .071 THICK -----	AR						
	0700162-7	SPACER .040 THICK -----	AR						
-31	C661076-0101 %	GYRO-HORIZON -----	1						
	C661076-0102 %	GYRO-HORIZON -----	1						
	C661076-0103 %	GYRO-HORIZON -----	1						
	C661076-0105 %	GYRO-HORIZON -----	1						
	AN515B6R6	ATTACHING PARTS SCREW ----- -----*	4						
-32	C661075-0101 %%	GYRO-DIRECTIONAL -----	1						
	C661075-0103 %%	GYRO-DIRECTIONAL -----	1						
	C661075-0104 %%	GYRO-DIRECTIONAL -----	1						
	C661075-0107 %%	GYRO-DIRECTIONAL -----	1						
	C661075-0106	GYRO-DIRECTIONAL A.I.M. 200H -----	1						
	AN515B6R6	ATTACHING PARTS SCREW ----- -----*	3						
	40760-0104	GYRO-DIRECTIONAL ARC NAV-O-MATIC -----	1						
	AN515-6R10	ATTACHING PARTS SCREW ----- -----*	3						
-33	C661011-0105	INDICATOR-ALTIMETER -----	1						
	C661011-0106	INDICATOR-ALTIMETER ALT -----	1						
	C661071-0101	INDICATOR-ALTIMETER FEET & INCHES 20,000 FT -----	1						
	C661071-0102 **	INDICATOR-ALTIMETER FEET & MILLIBARS 20,000 FT -----	1						
	C661025-0102 ***	INDICATOR-ALTIMETER FEET & MILLIBARS 35,000 FT -----	1						
	AN515B6R16	ATTACHING PARTS SCREW ----- -----*	3						
-34		RADIO INSTL SEE ELECTRONICS MANUAL -----	NP						
-35	S1413N2	INDICATOR-TURN & BANK -----	1						
	C661003-0504	INDICATOR-TURN COORDINATOR -----	1						
	AN515B6R12	ATTACHING PARTS SCREW ----- -----*	3						
	42320-0014	INDICATOR-TURN COORDINATOR ARC NAV-O-MATIC -----	1						
	AN515B6R12	ATTACHING PARTS SCREW ----- -----*	4						
	AN936A6B	WASHER -----	4						
-36	C661080-0101	INDICATOR-VERTICAL SPEED -----	1						
	AN515B6R16	ATTACHING PARTS SCREW ----- -----*	4						
-37	S1320-5	AMMETER -----	1						
-38	C668020-0102	TACHOMETER ----- ATTACHING PARTS SCREW ----- -----*	1						
	AN515B6R8	WASHER -----	4						
	AN936A6B	-----*	4						
-39	S1605-10	SHAFT-TACHOMETER DRIVE -----	1						
	C668509-0101	GAGE-SUCTION -----	1						
		CONTINUED ON NEXT PAGE							

Cessna illustrated parts catalog


MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
58A-	C669511-0102	INSTRUMENT CLUSTER-FUEL ATTACHING PARTS	1	
	AN51586R16	SCREW	2	
	AN43DD1-48	SPACER	2	
	AN936A6	WASHER	2	
	AN340B6	NUT	2	
		-----* -----</td <td></td> <td></td>		
-40	441410	GAGE-LH FUEL SW	1	
-41	441411	GAGE-RH FUEL SW	1	
	C669512-0102	INSTRUMENT CLUSTER-OIL ATTACHING PARTS	1	
	AN51586R16	SCREW	2	
	NAS43DD1-48	SPACER	2	
	AN936A6	WASHER	2	
	AN940B6	NUT	2	
		-----* -----</td <td></td> <td></td>		
-42	442908	GAGE-OIL TEMP SW	1	
-43	444678	GAGE-OIL PRESS SW	1	
-44	C668001-0106	INDICATOR-FLAP ATTACHING PARTS	1	
	S1558-1	BRACKET	1	
	0513392-5	SPACER	1	
		-----* -----</td <td></td> <td></td>		
-45	C664502-0101	HOURMETER ATTACHING PARTS	1	
	AN51586R12	SCREW	2	
	NAS43DD1-22	SPACER	2	
	AN936A6	WASHER	2	
	AN340B6	NUT	2	
		-----* -----</td <td></td> <td></td>		
-46	S1311-3	GAGE-CARBURETOR TEMP ATTACHING PARTS	1	
-47	0411897-3	ADAPTER PLATE	1	
	AN51586R12	SCREW	4	
	AN51586R8	SCREW	3	
	AN340B6	NUT	4	
		-----* -----</td <td></td> <td></td>		
-48	0513090-1	COVER ASSY-LWR	1	
-49	S1994-1-1	SWITCH-MASTER	1	
	S1843-1	MOUNTING BEZEL-MASTER SWITCH	1	
-50	C292501-0104 ***	KIT-IGNITION SWITCH	1	
-51	S2160-1	SWITCH-PITOT HEAT	1	
-52	S2160-1	SWITCH-NAV LIGHT	1	
-53	S2160-1	SWITCH-BEACON LIGHT	1	
-54	S2160-1	SWITCH-STROBE LIGHT	1	
-55	S2161-1	COVER-SWITCH USED WHEN SWITCHES ARE NOT INSTALLED		AR
	S2160-4	SWITCH-LANDING & TAXI LIGHT	1	
	S2161-2	COVER-SWITCH USED WHEN SWITCH IS NOT INSTALLED	1	
-56	S1596-60L	CIRCUIT BREAKER-ALTERNATOR	1	
-57	S1360-5L	CIRCUIT BREAKER-ALT FIELD	1	
-58	S1360-5L	CIRCUIT BREAKER-INSTRUMENT	2	
-59	S1360-15L	CIRCUIT BREAKER-FLAP	1	
-60	S1360-5L	CIRCUIT BREAKER-TURN COORDINATOR	1	
-61	S1360-5L	CIRCUIT BREAKER-LANDING LIGHTS	1	
-62	S1360-5L	CIRCUIT BREAKER-STROBE LIGHTS	1	
-63	S1360-15L	CIRCUIT BREAKER-BEACON LIGHT	1	
-64	S1360-10L	CIRCUIT BREAKER-NAV LIGHT	1	
-65	S1360-10L	CIRCUIT BREAKER-PITOT HEAT	1	
	S2122-1	NUT-CIRCUIT BREAKER ATTACH		AR

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
58A-66	S1230-15	CONTROL-CARBURETOR HEAT -----	1						
-67	C299505-0102	CONTROL-THROTTLE -----	1						
-68	S1234-12	CONTROL-MIXTURE -----	1						
	S1661-2	SWITCH-FLAPS -----	1						
-69	S1771-1	KNOB-FLAP CONTROL -----	1						
	S1216-4	NUT-DECORATIVE -----	1						
	S2091-5	RESISTOR ASSY-PANEL LIGHTS -----	1						
-70	S1995-4	KNOB ASSY-RESISTOR -----	1						
	AN565B2H3	SETScrew -----	1						
-71	S1981-5	KNOB ASSY-ALT STATIC AIR -----	1						
-72	S1239-47	CONTROL-CABIN HEAT -----	1						
-73	S1239-48	CONTROL-CABIN AIR -----	1						
-74	0513052-3	LIGHTER ASSY-CIGAR -----	1						
	L4858-1	ELEMENT ASSY CUND -----	1						
	S1740-6	KNOB-CIGAR LIGHTER -----	1						
	60232-1	CIRCUIT BREAKER-LIGHTER -----	1						
-75	C291502-0103	CONTROL-PRIMER -----	1						
-76	S2135-1	LIGHT -----	1						
-77	0513092-1	KNEE PAD-LWR LH ATTACHING PARTS	1						
	AN515-8R13	SCREW -----	4						
	AN960D8L	WASHER -----	4						
-78	0513092-2	-----*							
	AN515-8R13	KNEE PAD-LWR RH ATTACHING PARTS	1						
	AN960D8L	SCREW -----	3						
	-----*	WASHER -----	3						
-79	0515003-4	EYEBROW ASSY ATTACHING PARTS	1						
-80	S1023A6-8B	SCREW -----	8						
	S1067B1	WASHER -----	8						
-81	SEE FIG 58B	-----*							
-82	SEE FIG 2	POST LIGHTED INSTRUMENT PANEL INSTALLATION PLACARDS -----	1						
		AR							
		NOTE. *LENGTH TO BE DETERMINED LATED.							
		NOTE. **FOR DUAL ALTIMETER INSTL-50 FT INCREMENTS, USE 2 C661071-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREWS, AN936A6B WASHERS & AN340B6 NUTS.							
		NOTE. ***FOR DUAL ALTIMETER INSTL-20 FT INCREMENTS, USE 2 C661025-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREWS, AN936A6B WASHERS & AN340B6 NUTS.							
		NOTE. %THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.							
		NOTE. %%THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.							
		NOTE. %%%THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS.							
		NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-SEE PAGE VII.							
		A---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							


Instruments (Cont)

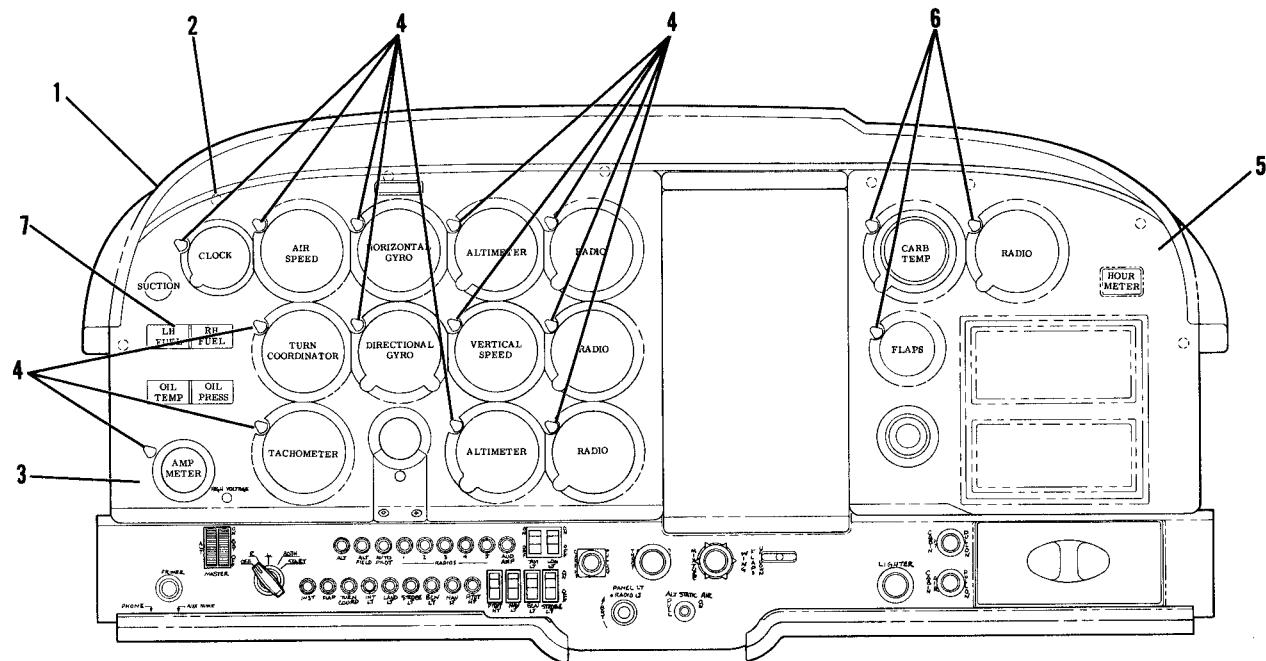


**172 SERIAL 17265685 & ON
F172 SERIAL F17201385 & ON**

Figure 58B. Post Lighted Instrument Panel Covers

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
58B-		POST LIGHTED INSTRUMENT PANEL COVERS -----	NP						
- 1	0515034-1	GLARESHIELD ASSY -----	1						
	0515034-6	GLARESHIELD ASSY FLOATPLANE ONLY -----	1						
		ATTACHING PARTS -----							
- 2	S1023A6-88	SCREW -----	4						
	S106781	WASHER -----	4						
	AN525-832R10	SCREW -----	8						
	NAS680A08	NUTPLATE -----	5						
	NAS684A08	NUTPLATE -----	3						
		-----*							
- 3	0513094-3	COVER ASSY-LH POST LIGHTED -----	1						
	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-* -----	AR						
	1513839-3	GUIDE -----	8						
- 4	1213379-9	POST LIGHT ASSY -----	13						
	MS25237-330	BULB-POST LIGHT -----	1						
- 5	0513094-5	COVER ASSY-RH POST LIGHTED -----	1						
	S2092-4	FASTENER-PILE * IN LG BKI REF S2092-4-* -----	AR						
	1513839-3	GUIDE -----	5						
- 6	1213379-9	POST LIGHT ASSY -----	3						
	MS25237-330	BULB-POST LIGHT -----	1						
- 7	1270479-10	LIGHT ASSY-INSTRUMENT CLUSTER -----	1						
	1270479-9	HOLDER ASSY-LAMP -----	1						
	S1894-1	BULB-INSTRUMENT CLUSTER -----	2						
		NOTE. *LENGTH TO BE DETERMINED LATER.							
		NOTE. <input checked="" type="checkbox"/> THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-SEE PAGE VII.							
		A---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							

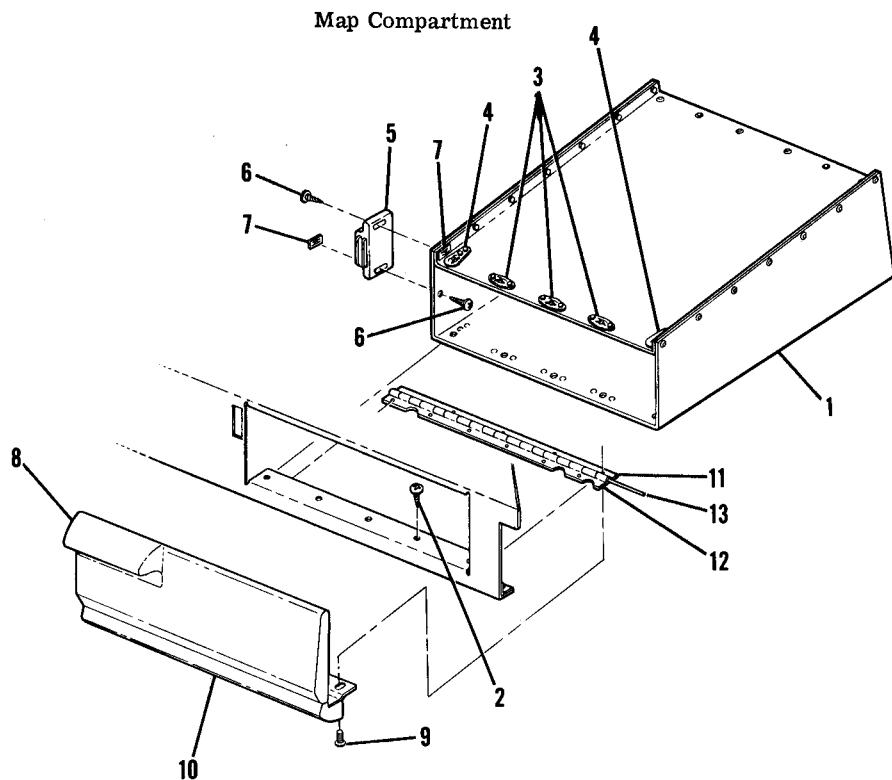

**17263459 THRU 17265684
F17201235 THRU F17201384**

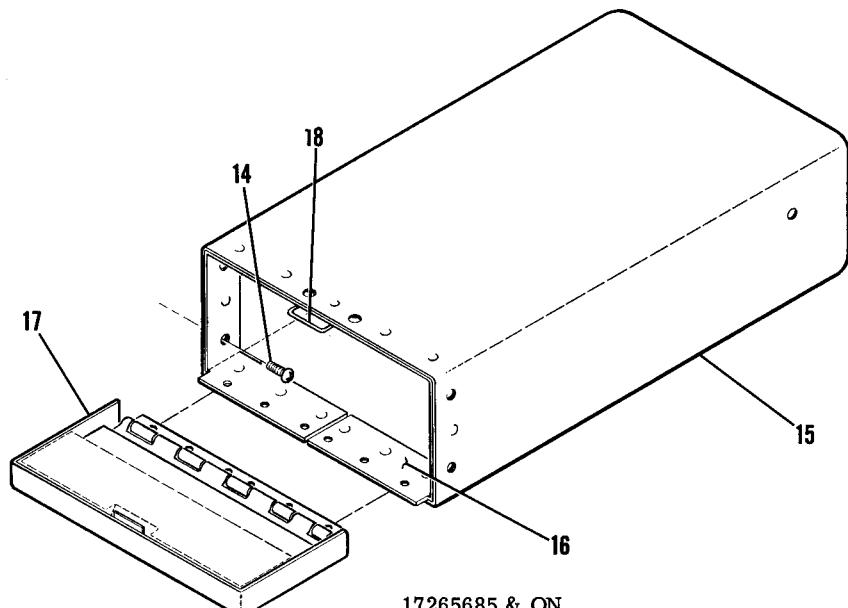

**17265685 & ON
F17201385 & ON**

Figure 59. Map Compartment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
59 -		MAP COMPARTMENT INSTALLATION -----							
- 1	0513320-8	MAP CASE ASSY -----							
- 2	S1021Z6-6	ATTACHING PARTS SCREW -----							
- 3	S1863-2A	-----*							
- 4	S1862-1A	NUT-ANCHOR -----							
- 5	S1895-1	NUT-ANCHOR -----							
- 6	S1021Z6-8	CATCH ASSEMBLY-MAGNETIC -----							
- 7	NAS446-2-3	ATTACHING PARTS SCREW -----							
- 8	0513438-1	NUT -----							
- 9	AN515-6R5	-----*							
	MS21045L06	DOOR ASSEMBLY-MAP CASE -----							
		ATTACHING PARTS SCREW -----							
- 10	0513438-8	NUT -----							
- 11	0513316-21	PAD -----							
- 12	0513316-22	HINGE HALF -----							
- 13	MS20253P1	HINGE HALF -----							
	0513085-1	PIN-HINGE 8.14 IN LG BKI REF MS20253P1-8.14 -----							
		MAP CASE ASSY-REMOVABLE -----							
		ATTACHING PARTS SCREW -----							
- 14	S1021Z6-8	-----*							
- 15	0513085-3	CASE-MAP -----							
- 16	0513085-12	DOUBLER-MAP CASE -----							
- 17	0513085-2	DOOR ASSY-MAP CASE -----							
- 18	1513189-9	CLIP-MAP CASE -----							
NOTE. <input checked="" type="checkbox"/> THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.									
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

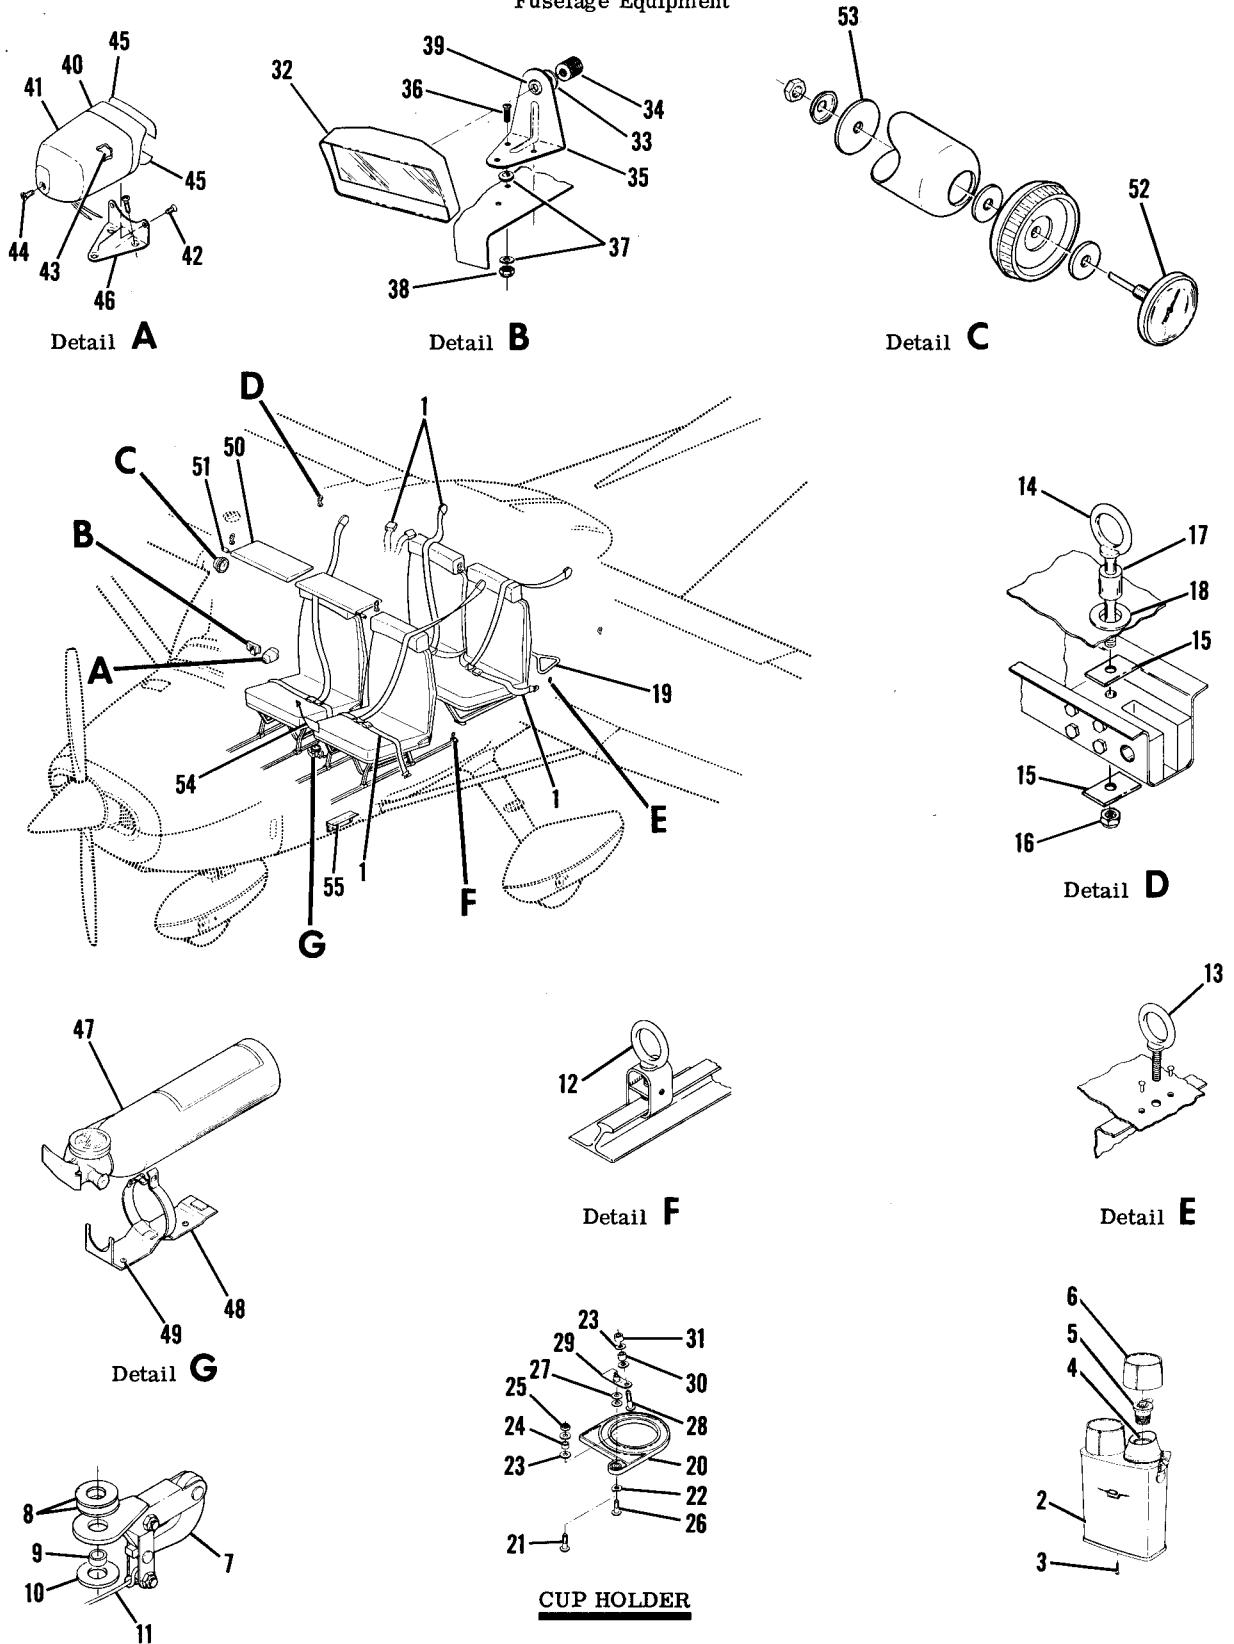


Figure 60. Fuselage Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
60 -		FUSELAGE EQUIPMENT INSTALLATION							
- 1	SEE FIG 61	SEAT BELT & SHOULDER HARNESS INSTALLATION	NP						
- 2	C733001-0101	TWIN PACK ASSY-BEVERAGE	1						
- 3	S1021A10-16	SCREW	2						
- 4	01	FILLER LFC	2						
- 5	C733001-0103	STOPPER	2						
- 6	1195-0061	CAP LFC	2						
- 7	0500228-2	TOW HOOK-GLIDER	1						
		ATTACHING PARTS							
- 8	AN970-5	WASHER	2						
- 9	0500228-5	BUSHING	1						
-10	S1450-5-14-063	WASHER	1						

-11	0500228-3	CORD-TOW HOOK	1						
-12	0711121-2	SLIDE ASSY-CARGO TIE DOWN	2						
-13	0511165	EYEBOLT-CARGO TIE DOWN	6						
-14	0541115-3	EYEBOLT-HOISTING	4						
		ATTACHING PARTS							
-15	0541115-4	PLATE	2						
-16	MS21042L5	NUT	1						
-17	0541115-2	SPACER	1						

-18	MS35489-17	GROMMET	4						
-19	0501019-1	TOW BAR ASSY	1						
-20	0501022-1	HOLDER-CUP	2						
		ATTACHING PARTS							
-21	AN525-10R14	SCREW WHEN INSTALLED IN GLOVE BOX	1						
-22	S1357-3	WASHER	1						
-23	AN960-10L	WASHER	2						
-24	NAS43DD3-8	SPACER WHEN INSTALLED IN GLOVE BOX	1						
-25	MS21044N3	NUT WHEN INSTALLED IN GLOVE BOX	1						
-26	AN525-10R12	SCREW	1						
-27	AN960-10	WASHER	2						
-28	AN525-832R20	SCREW	1						
-29	0513437-2	BRACKET ASSY	1						
-30	NAS43DD3-26	SPACER	1						
-31	NAS43DD3-19	SPACER	1						

		REAR VIEW MIRROR INSTALLATION							
-32	0500312-2	MIRROR & COVER ASSY	1						
		ATTACHING PARTS							
-33	S1450-4A11-.063	WASHER	1						
-34	0500313-1	NUT	1						

-35	0500310-1	BRACKET ASSY	1						
		ATTACHING PARTS							
-36	AN507B832R8	SCREW	3						
-37	S1450-3A14-.050	WASHER	4						
-38	MS20365B832C	NUT	3						

-39	MS35489-6	GROMMET	1						
		COMPASS INSTALLATION							
-40	0413517-13	BEZEL-COMPASS	1						
-41	0413517-12	CUP-COMPASS	1						
		ATTACHING PARTS							
-42	AN510B4R6	SCREW	2						

-43	C660501-0101	COMPASS	1						
		ATTACHING PARTS							
-44	AN507B832R14	SCREW	1						



-45	SEE FIG 2	PLACARD-COMPASS CORRECTION	2						
-46	SEE FIG 23	BRACKET-COMPASS MOUNTING	1						
		CONTINUED ON NEXT PAGE							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
60 -47	C421001-0101	FIRE EXTINGUISHER -----	1	
-48	C421001-0102	BRACKET ASSY-FIRE EXTINGUISHER -----	1	
-49	AN520-10R8 NAS680A3	ATTACHING PARTS SCREW ----- NUTPLATE -----*	4 4	
-50	0700122-13 0700122-12	SUN VISOR ASSY-LH ----- SUN VISOR ASSY-RH ----- ATTACHING PARTS BRACKET-SUN VISOR -----*	1 1	
-51	0713011-12 AN507-1032R14	SCREW -----	1 2	
-52	C668507-0101	GAGE-OUTSIDE AIR TEMPERATURE -----	1	
-53	S1450-5A24-040	WASHER -----	1	
-54	0513385-7 0513385-9	CONTROL LOCK ASSY ----- CONTROL LOCK ASSY -----	1 1	A
-55	SEE FIG 63 SEE FIG 62 SEE FIG 12	STEP & HANDLE INSTALLATION ----- PORTABLE STRETCHER INSTALLATION ----- CUP-FUEL SAMPLER -----	1 1 1	B
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION						UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6		
61 - - 1	S2240CC103 *%	SEAT BELT AND SHOULDER HARNESS INSTALLATION						NP	
	S2240BB103 *%	BELT ASSY-FRONT SEAT	BROWN					2	A
	S2240AA103 *%	BELT ASSY-FRONT SEAT	BLUE					2	A
	S2240T103 *%	BELT ASSY-FRONT SEAT	GREEN					2	A
	S2240DD103 *%	BELT ASSY-FRONT SEAT	RED					2	A
	S2240B103 *%	BELT ASSY-FRONT SEAT	GOLD					2	A
	S2240CC103 *%	BELT ASSY-FRONT SEAT	BLACK					2	A
	S2240FF103 *%	BELT ASSY-FRONT SEAT	BROWN					2	B
	S2240GG103 *%	BELT ASSY-FRONT SEAT	BLUE					2	B
	S2240EE103 *%	BELT ASSY-FRONT SEAT	GREEN					2	B
	S2240HH103 *%	BELT ASSY-FRONT SEAT	RED					2	B
	S2240B103 *%	BELT ASSY-FRONT SEAT	GOLD					2	B
		ATTACHING PARTS	BLACK					2	B
- 2	AN4-6A	BOLT						2	
- 3	NAS43HT4-18	SPACER						2	
- 4	AN960-416	WASHER						2	
- 5	MS21042L4	NUT						2	
- 6	0510205-9 0510205-10	FITTING-SEAT BELT	OUTBD LH & INBD RH					2	
		FITTING-SEAT BELT	OUTBD RH & INBD LH					2	
		ATTACHING PARTS							
- 7	AN4-5	BOLT						2	
- 8	AN960-416	WASHER						1	
- 9	0510211-1	REINFORCEMENT						1	
-10	MS21042L4	NUT						2	
-11	S1746CC13 S1746BB13 S1746AA13 S1746T13 S1746DD13 S1746B13 S2240CC108 *% S2240BB108 *% S2240AA108 *% S2240T108 *% S2240DD108 *% S2240B108 *% S2240CC108 *% S2240FF108 *% S2240GG108 *% S2240EE108 *% S2240HH108 *% S2240B108 *%	SEAT BELT ASSY-REAR SEAT	BROWN					2	
		SEAT BELT ASSY-REAR SEAT	BLUE					2	
		SEAT BELT ASSY-REAR SEAT	GREEN					2	
		SEAT BELT ASSY-REAR SEAT	RED					2	
		SEAT BELT ASSY-REAR SEAT	GOLD					2	
		SEAT BELT ASSY-REAR SEAT	BLACK					2	
		SEAT BELT ASSY-REAR SEAT	BROWN					2	
		SEAT BELT ASSY-REAR SEAT	BLUE					2	
		SEAT BELT ASSY-REAR SEAT	GREEN					2	A
		SEAT BELT ASSY-REAR SEAT	RED					2	A
		SEAT BELT ASSY-REAR SEAT	GOLD					2	A
		SEAT BELT ASSY-REAR SEAT	BLACK					2	A
		SEAT BELT ASSY-REAR SEAT	BROWN					2	B
		SEAT BELT ASSY-REAR SEAT	BLUE					2	B
		SEAT BELT ASSY-REAR SEAT	GREEN					2	B
		SEAT BELT ASSY-REAR SEAT	RED					2	B
		SEAT BELT ASSY-REAR SEAT	GOLD					2	B
		SEAT BELT ASSY-REAR SEAT	BLACK					2	B
		ATTACHING PARTS							
-12	AN4-6A	BOLT						1	
-13	NAS43HT4-10	SPACER						1	
-14	AN960-416	WASHER						1	
-15	MS21042L4	NUT						1	
-15A	0515035-1	LINK ASSY-LH ONLY						1	
		ATTACHING PARTS							
-15B	AN26-9A	BOLT LH ONLY						1	
-15C	MS21042L6	NUT LH ONLY						1	
-15D	AN4-6A	BOLT LH ONLY						1	
-15E	MS21042L4	NUT LH ONLY						1	
-16	0711083-1	LATCH ASSY						2	
		ATTACHING PARTS							
-17	AN4-6A	BOLT						1	
-18	S1746CC-5 S1746BB-5 S1746AA-5 S1746T-5 S1746DD-5 S1746B-5	SEAT BELT ASSY-CHILDS SEAT	BROWN					1	
		SEAT BELT ASSY-CHILDS SEAT	BLUE					1	
		SEAT BELT ASSY-CHILDS SEAT	GREEN					1	
		SEAT BELT ASSY-CHILDS SEAT	RED					1	
		SEAT BELT ASSY-CHILDS SEAT	GOLD					1	
		SEAT BELT ASSY-CHILDS SEAT	BLACK					1	

CONTINUED ON NEXT PAGE

Fuselage Equipment (Cont)

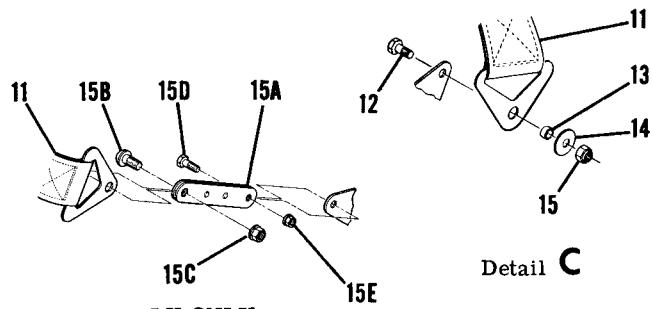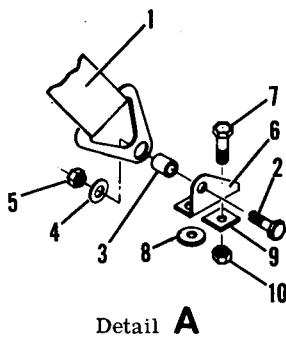

LH ONLY
17265685 & ON
F17201385 & ON

Detail C

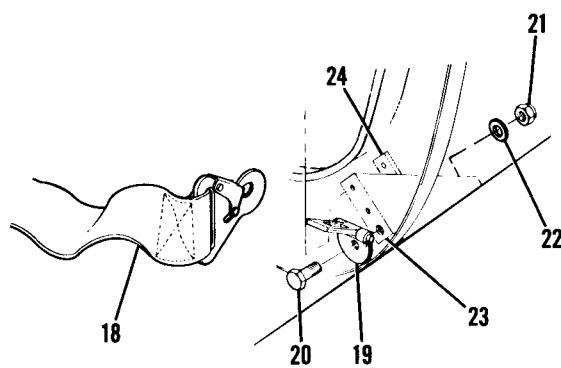
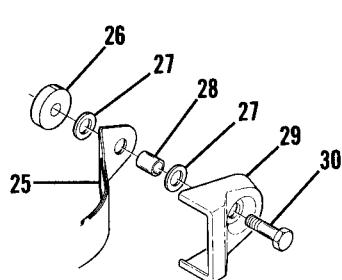
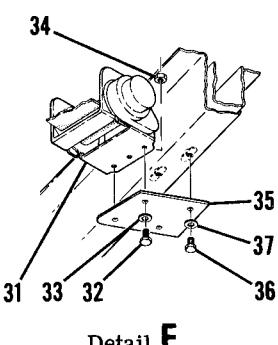
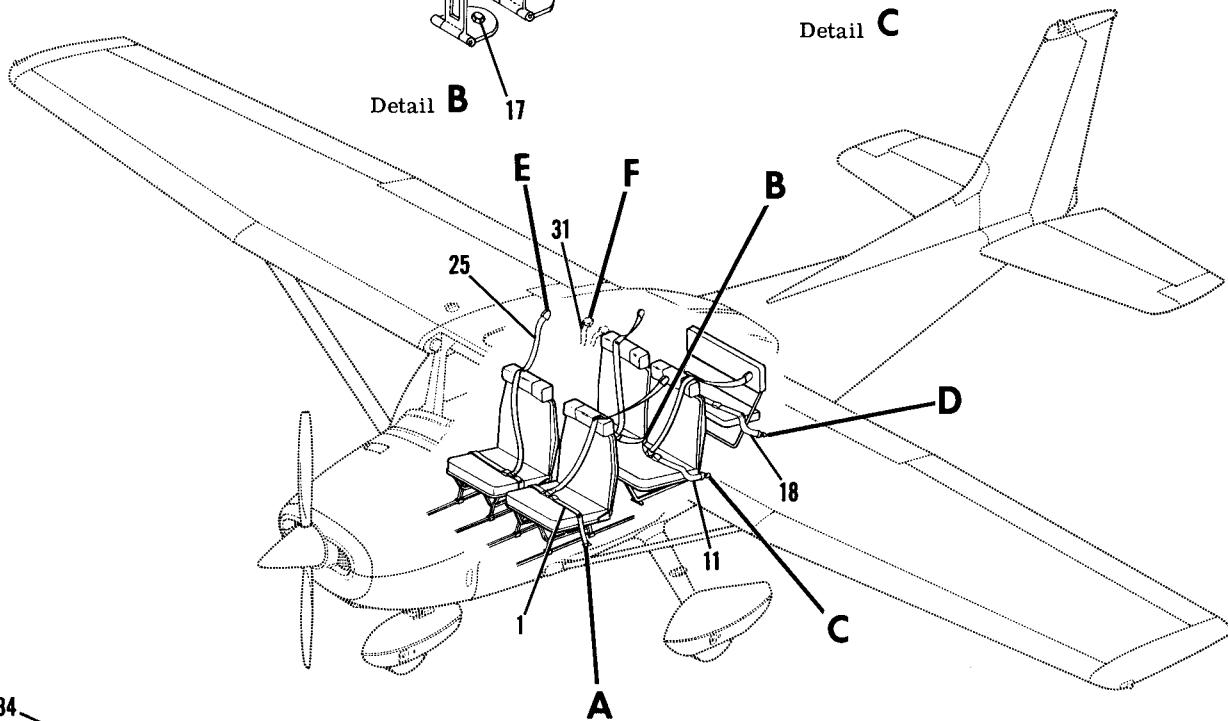
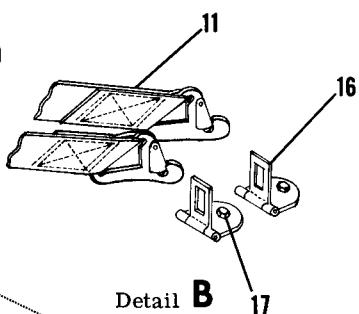


Figure 61. Seat Belts & Shoulder Harness Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
61 -	S1746CC5	SEAT BELT ASSY-CHILDS SEAT BROWN -----	1	B							
	S1746FF5	SEAT BELT ASSY-CHILDS SEAT BLUE -----	1	B							
	S1746GG5	SEAT BELT ASSY-CHILDS SEAT GREEN -----	1	B							
	S1746EE5	SEAT BELT ASSY-CHILDS SEAT RED -----	1	B							
	S1746HH5	SEAT BELT ASSY-CHILDS SEAT GOLD -----	1	B							
	S1746BS5	SEAT BELT ASSY-CHILDS SEAT BLACK -----	1	B							
-19	0711083-1	LATCH ASSY ----- ATTACHING PARTS	2								
-20	AN4-6A	BOLT -----	1								
-21	MS21042L4	NUT -----	1								
-22	AN960-416	WASHER ----- -----*	1								
-23	0512169-3	BRACKET-LH -----	1								
	0512169-4	BRACKET-RH -----	1								
-24	0712009-2	SPACER -----	2								
-25	S2240CC201 ***%	SHOULDER HARNESS ASSY BROWN -----	4	A							
	S2240BB201 ***%	SHOULDER HARNESS ASSY BLUE -----	4	A							
	S2240AA201 ***%	SHOULDER HARNESS ASSY GREEN -----	4	A							
	S2240T201 ***%	SHOULDER HARNESS ASSY RED -----	4	A							
	S2240DD201 ***%	SHOULDER HARNESS ASSY GOLD -----	4	A							
	S2240B201 ***%	SHOULDER HARNESS ASSY BLACK -----	4	A							
	S2240CC201 ***%	SHOULDER HARNESS ASSY BROWN -----	4	B							
	S2240FF201 ***%	SHOULDER HARNESS ASSY BLUE -----	4	B							
	S2240GG201 ***%	SHOULDER HARNESS ASSY GREEN -----	4	B							
	S2240EE201 ***%	SHOULDER HARNESS ASSY RED -----	4	B							
	S2240HH201 ***%	SHOULDER HARNESS ASSY GOLD -----	4	B							
	S2240B201 ***%	SHOULDER HARNESS ASSY BLACK -----	4	B							
		ATTACHING PARTS									
-26	2013131-1	SPACER-FWD SHOULDER HARNESS -----	1								
-27	AN960-616	WASHER -----	2								
-28	NAS43HT4-22	SPACER -----	1								
-29	0415010-1	COVER -----	1								
-30	NAS464P4A12	BOLT-FWD SHOULDER HARNESS -----	1								
	NAS464P4A8	BOLT-REAR SHOULDER HARNESS -----	1								
		-----*									
-31	S2199-7	BELT ASSY-PILOT LAP & SHOULDER HARNESS -----	1								
	S2199-8	BELT ASSY-COPILOT LAP & SHOULDER HARNESS ----- ATTACHING PARTS	1								
		BOLT -----	2								
-32	AN4-6A	WASHER -----	4								
-33	AN960-416	NUT -----	2								
-34	MS21042L4	-----*									
-35	0501046-4	PLATE-INERTIA REEL ----- ATTACHING PARTS	2								
-36	AN4-6A	BOLT -----	2								
-37	AN960-416	WASHER ----- -----*	2								
		NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2240CC103VH									
		NOTE. *FOR USE WITH SHOULDER HARNESS. WHEN INITIALLY REPLACING THIS PART FOR AIRCRAFT PRIOR TO 17264659 & F17201385 BOTH SEAT BELT & SHOULDER HARNESS MUST BE REPLACED.									
		NOTE. **WHEN INITIALLY REPLACING THIS PART FOR AIRCRAFT PRIOR TO 17264659 & F17201385 BOTH SEAT BELT & SHOULDER HARNESS MUST BE REPLACED.									
		NOTE. @THIS PART NUMBER CONSISTS OF A BLACK LAP BELT & SHOULDER HARNESS & INCLUDES INERTIA REEL ASSY.									
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

Fuselage Equipment (Cont)



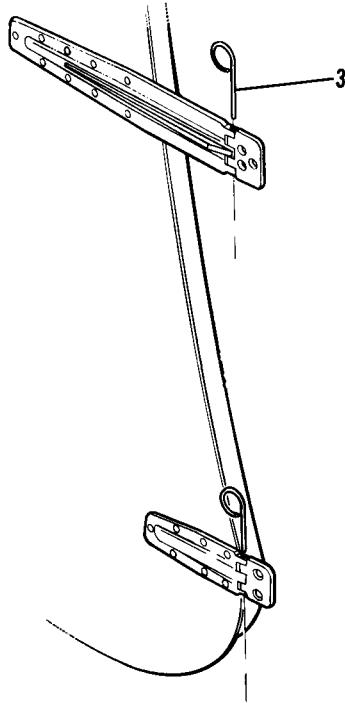


Figure 62. Portable Stretcher Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
62 - - 1 - 2 - 3	0700164-6 S1809-1 S1426-2	STRETCHER INSTALLATION-PORTABLE ----- STRETCHER-PORTABLE ----- BELT-EXTENSION METAL TO METAL BUCKLE ----- PIN-HINGE -----	NP 1 1 2	

Fuselage Equipment (Cont)

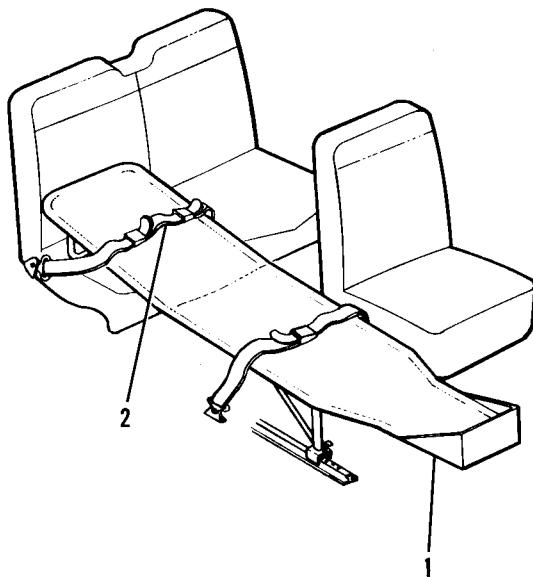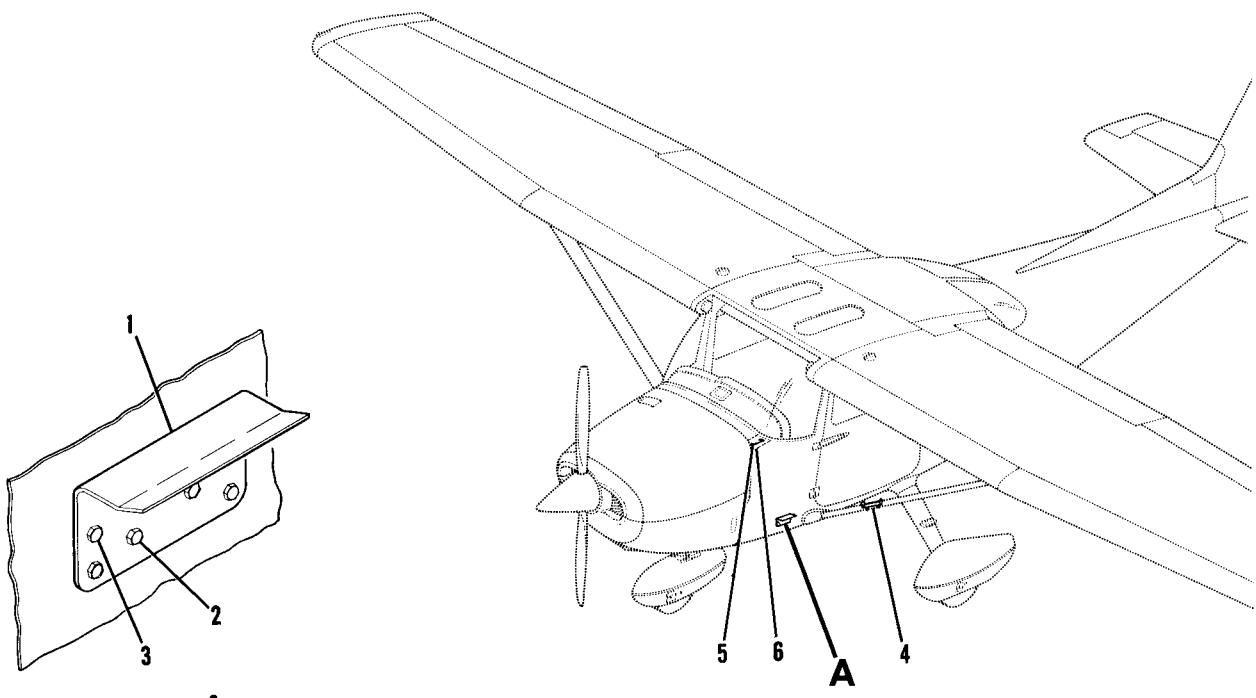


Detail **A**

Figure 63. Step & Handle Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
63 - - 1	0513395-1 0513395-2	STEP & HANDLE INSTALLATION-REFUELING ----- STEP-LH ----- STEP-RH ----- ATTACHING PARTS	NP						
- 2	AN3-4A MS21044N3 AN960D10L	BOLT ----- NUT ----- WASHER ----- WASHER ----- -----*	6	6	5	1			
- 3	AN970-3								
- 4	0500276-1 0500276-2 AN3-3A MS21044N3 AN960D10L	STEP ASSEMBLY-STRUT LH ----- STEP ASSEMBLY-STRUT RH ----- ATTACHING PARTS BOLT ----- NUT ----- WASHER ----- -----*	1	1					
- 5	1613224-2 S1450-4H12-050 AN960-416L MS21042L4	HANDLE-ASSIST ----- ATTACHING PARTS WASHER UPPER ----- WASHER LOWER ----- NUT ----- -----*	2	2	2	2			
- 6	0513429-1 0513429-2	DOUBLER-LH ----- DOUBLER-RH -----	1	1					

Static Dischargers

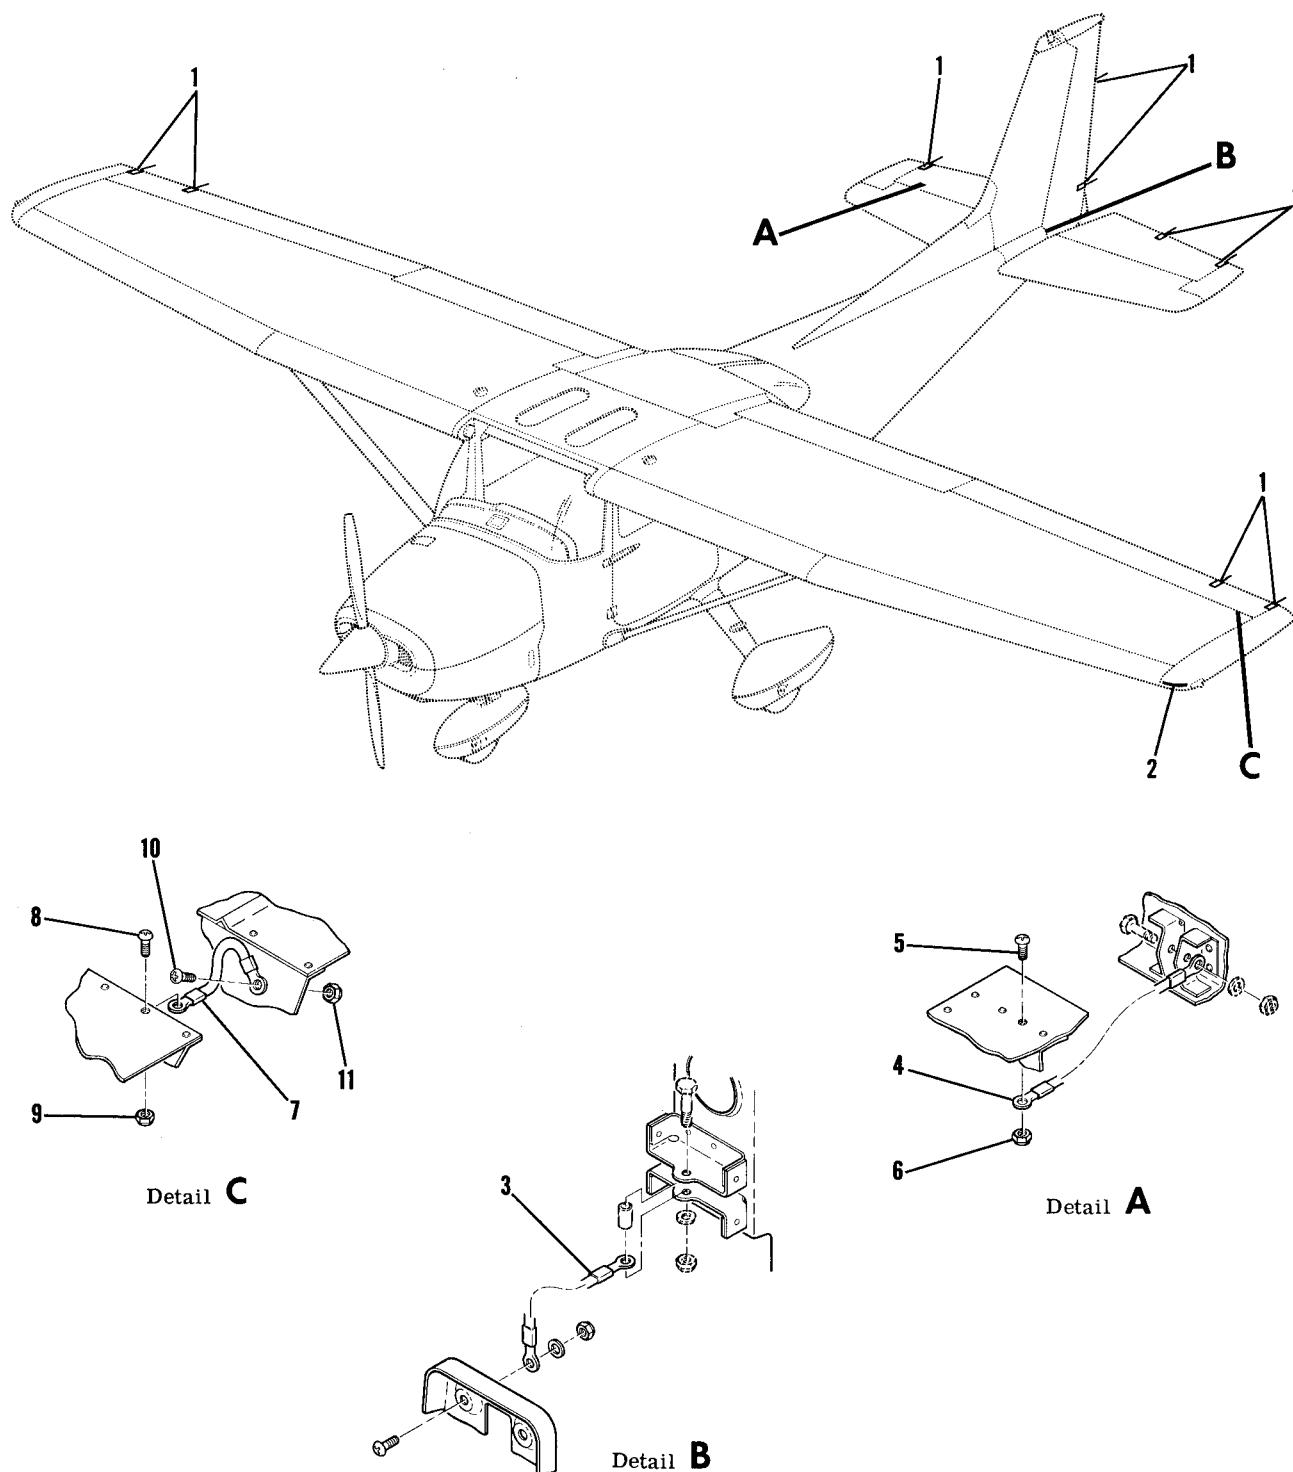

**172 SERIAL 17265685 & ON
F172 SERIAL F17201385 & ON**

Figure 63A. Static Discharger Installation


Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
63A-		1 2 3 4 5 6 7		
- 1	C592001-0201	STATIC DISCHARGER INSTALLATION	NP	
- 2	1570102-10	WICK-STATIC DISCHARGE	10	
- 3	1570102-12	STRAP ASSY-BONDING	2	
- 4	1570102-14	STRAP ASSY-BONDING	1	
- 5	AN515-8R6	STRAP ASSY-BONDING	2	
- 6	MS21044N08	ATTACHING PARTS	1	
- 7	1570102-19	SCREW	1	
- 8	AN515-8R6	NUT	1	
- 9	MS21044N08	-----*	1	
-10	AN525-10R6	STRAP ASSY-BONDING	1	
-11	MS21044N3	ATTACHING PARTS	1	
		SCREW	1	
		NUT	1	
		-----*	1	
		A---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

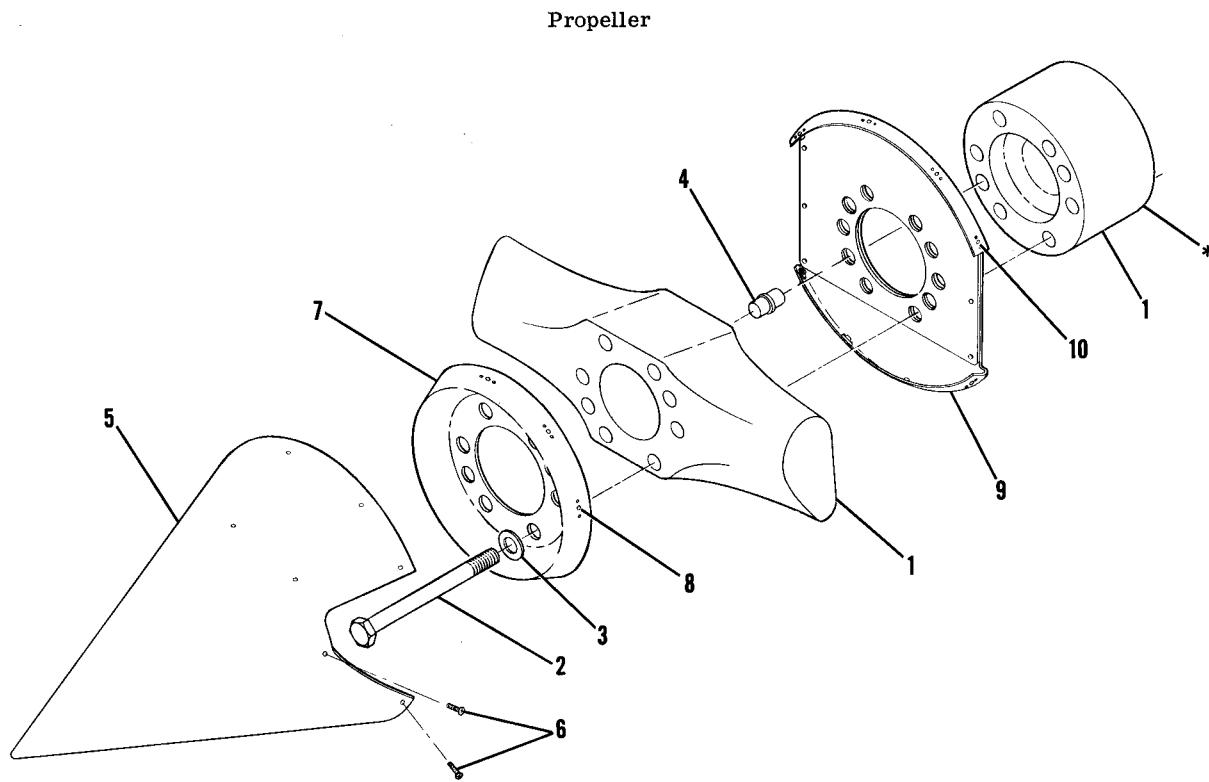


Figure 64. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
64 -	- 1	PROPELLER INSTALLATION -----	NP						
	C161001-0306	PROPELLER ASSY -----	1						
	C161001-0309	PROPELLER ASSY ALT -----	1						
	C161001-0307	PROPELLER ASSY FLOATPLANE ONLY -----	1						
	C161001-0308	PROPELLER ASSY FLOATPLANE ONLY ALT -----	1						
	- 2	ATTACHING PARTS -----							
	A2513-38	BOLT MCL -----	6						
	- 3	WASHER MCL -----	6						
	- 4	DOWEL -----	2						
	- 5	-----*							
	0550236-8	SPINNER -----	1						
	- 6	ATTACHING PARTS -----							
	AN525-832R7	SCREW -----	14						
	- 7	-----*							
	0550321-4	BULKHEAD ASSY-FWD -----	1						
	- 8	NUTPLATE -----	6						
	- 9	BULKHEAD ASSY-AFT -----	1						
	-10	NUTPLATE -----	8						
NOTE. *USE ONLY THE SPACER PROVIDED WITH PROPELLER ASSY.									

This page intentionally left blank.

Cowling

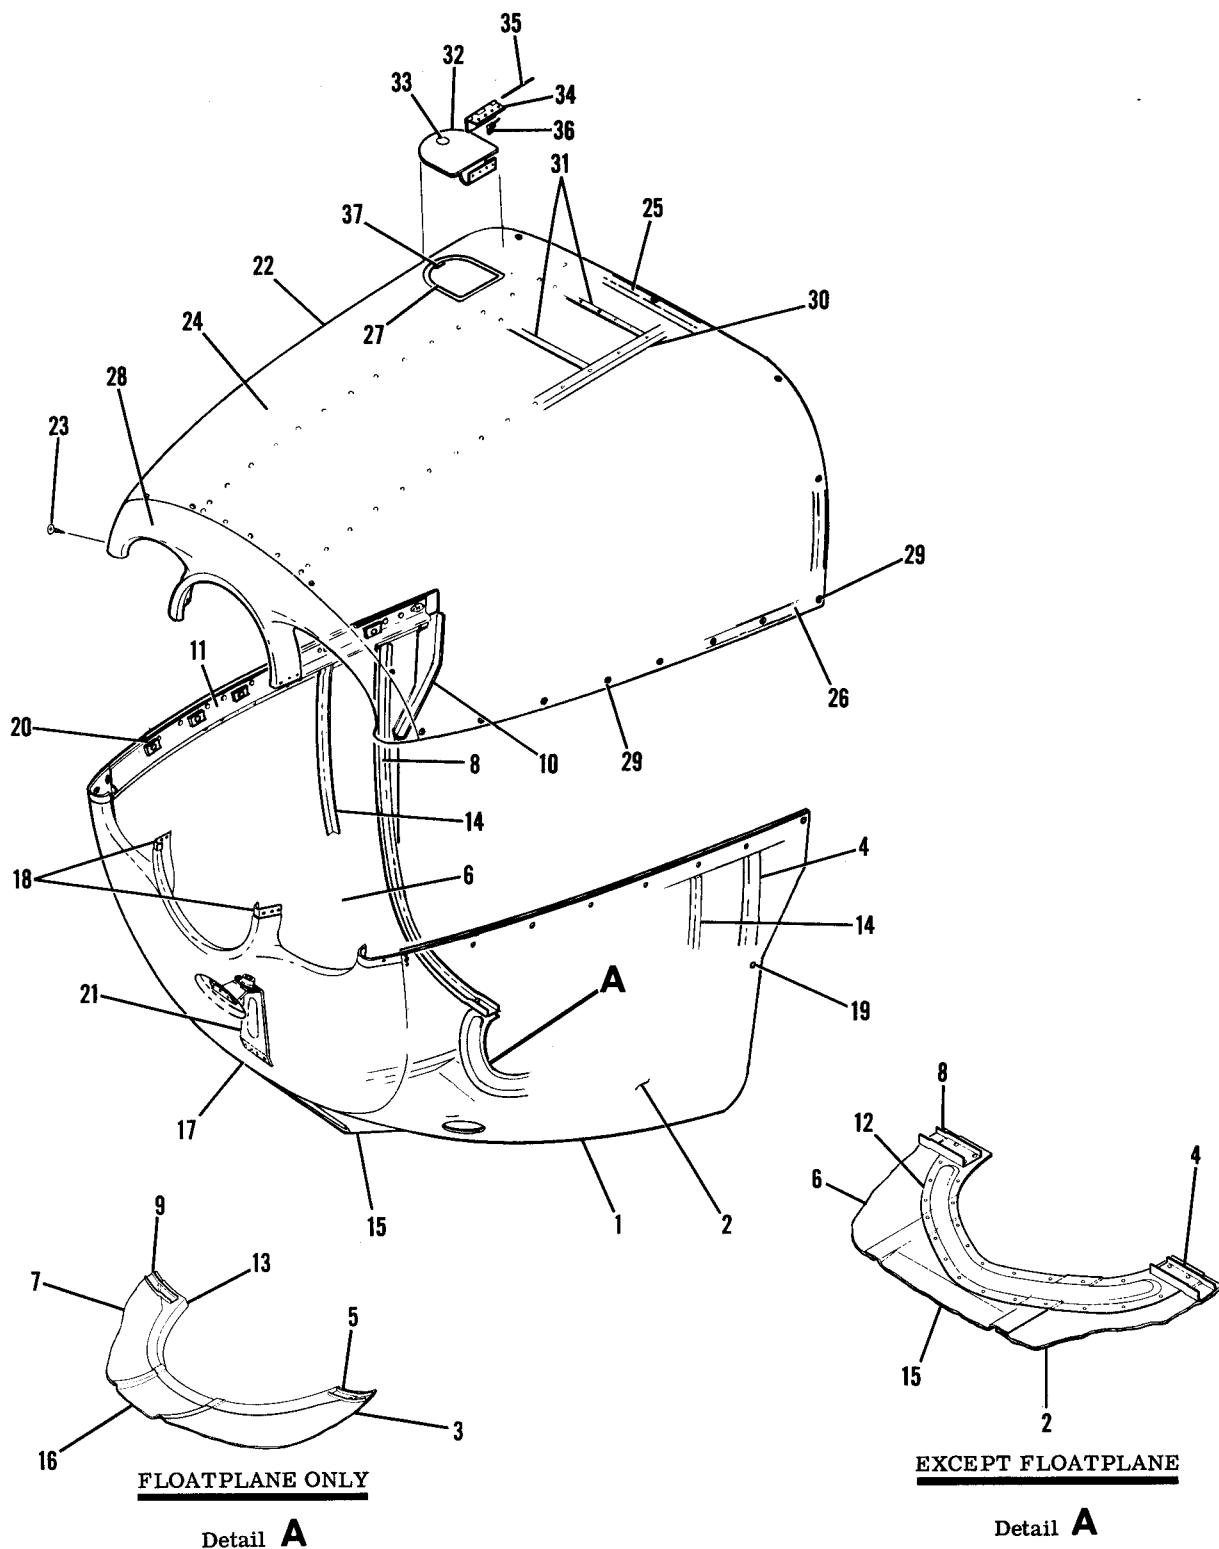


Figure 65. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE				
			1	2	3	4	5	6
65 -		* COWL ASSEMBLY-ENGINE -----	NP					
- 1	0552112-30	COWL ASSY-LWR -----	1					
- 2	0552112-32	COWL ASSY-LWR FLOATPLANE ONLY -----	1					
- 3	0552112-25	SPOTWELD ASSY-LH -----	1					
- 4	0552112-9	SPOTWELD ASSY-LH FLOATPLANE ONLY -----	1					
- 5	0552010-93	CHANNEL -----	1					
- 6	0552010-69	CHANNEL FLOATPLANE ONLY -----	1					
- 7	0552112-29	SPOTWELD ASSY-RH -----	1					
- 8	0552112-31	SPOTWELD ASSY-RH FLOATPLANE ONLY -----	1					
- 9	0552010-92	CHANNEL -----	1					
- 10	0552010-70	CHANNEL FLOATPLANE ONLY -----	1					
- 11	0552151-1	DOUBLER -----	1					
- 12	0552010-94	STIFFENER-RH -----	1					
- 13	0552010-60	STIFFENER-LH -----	1					
- 14	0552143-1	STIFFENER-LWR COWL -----	1					
- 15	0552010-68	LIP-LWR COWL FLOATPLANE ONLY -----	1					
- 16	0552010-54	STIFFENER -----	2					
- 17	0552010-91	AIR SCOOP -----	1					
- 18	0552010-95	AIR SCOOP FLOATPLANE ONLY -----	1					
- 19	0552019-4	NOSE CAP ASSY-LWR -----	1					
- 20	NAS697A08	NUTPLATE -----	12					
- 21	S1115-32	STUD -----	4					
- 22	S1115-35	STUD -----	2					
- 23	S1115-9	RING -----	6					
- 24	S1115-19	RECEPTACLE -----	14					
- 25	0552115-1	SUPPORT ASSY-COWL SNUBBER -----	1					
- 26	S1115-29	SNUBBER -----	1					
- 27	0552112-18	COWL ASSY-UPR -----	1					
- 28		ATTACHING PARTS						
- 29	AN515-8R8	SCREW -----	12					
- 30		*-----						
- 31	0552112-20	SPOTWELD ASSY-UPR COWL -----	1					
- 32	0552010-89	CHANNEL-UPR -----	1					
- 33	0552010-87	CHANNEL-LH -----	1					
- 34	0552010-88	CHANNEL-RH -----	1					
- 35	0552004-32	DOUBLER-DOOR OPENING -----	1					
- 36	0552019-6	NOSECAP-UPR -----	1					
- 37	S1115-32	STUD -----	19					
- 38	S1115-9	RING -----	19					
- 39	0552010-74	STIFFENER-LH -----	1					
- 40	0552010-73	STIFFENER-RH -----	1					
- 41	0552010-47	STIFFENER -----	2					
- 42	1552004-28	DOOR ASSY-UPR COWL	1					
- 43	KM610-064	LATCH-DOOR CLC -----	1					
- 44	1552004-22	HINGE HALF -----	1					
- 45	1552004-23	HINGE HALF -----	1					
- 46	1552004-17	PIN -----	1					
- 47	1552010-1	SPRING -----	1					
- 48	1552004-25	STRIKER -----	1					
- 49	1752002-3	SHIM -----	1					
		NOTE. *THIS FIGURE DOES NOT APPLY TO AIRPLANES WITH COWL MOUNTED LANDING LIGHT-SEE FIGURE 66. FOR AIRPLANES WITH COWL MOUNTED DUAL LANDING LIGHT SEE FIG 67.						

Cowling (Cont)

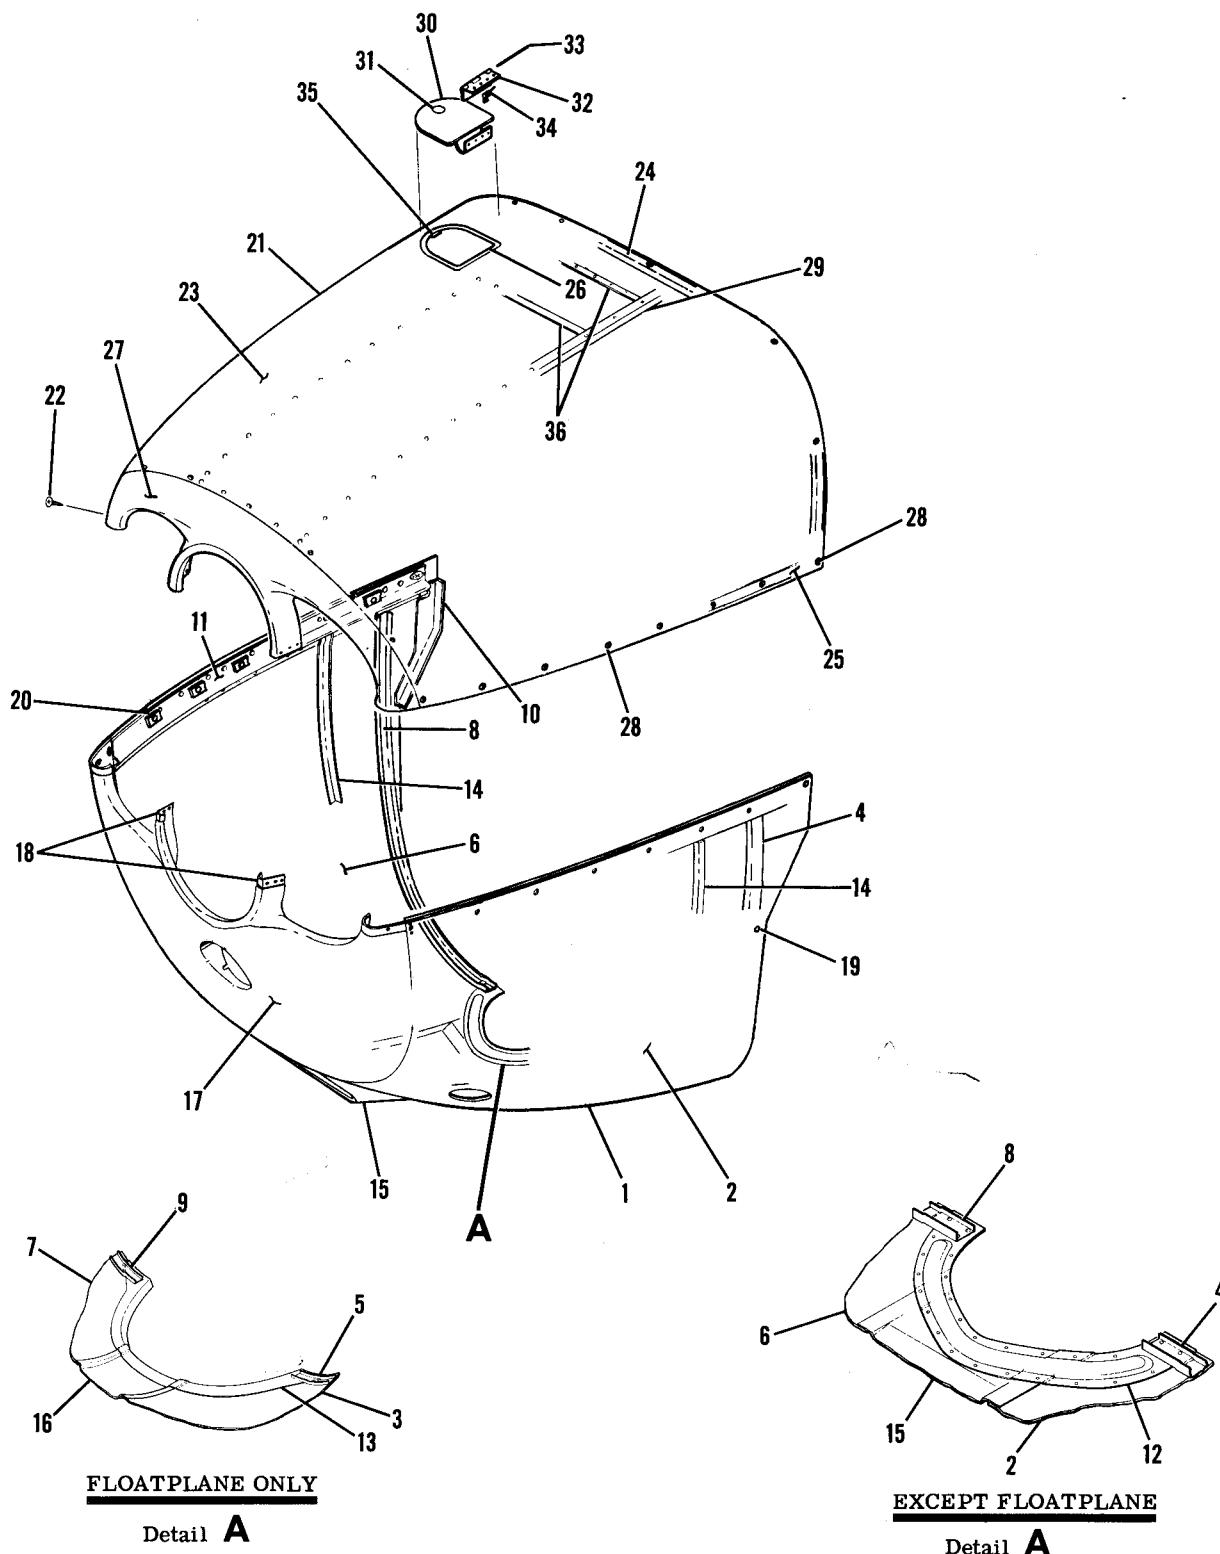



Figure 66. Engine Cowl Assembly - Single Landing Light





FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
66 -		* COWL ASSEMBLY-ENGINE WITH LANDING LIGHT PROVISIONS -----	NP						
- 1	0552112-206	COWL ASSY-LWR -----	1						
	0552112-207	COWL ASSY-LWR FLOATPLANE ONLY -----	1						
- 2	0552112-25	SPOTWELD ASSY-LWR LH -----	1						
- 3	0552112-9	SPOTWELD ASSY-LWR LH FLOATPLANE ONLY -----	1						
- 4	0552010-93	CHANNEL-LH -----	1						
- 5	0552010-69	CHANNEL-LH FLOATPLANE ONLY -----	1						
- 6	0552112-29	SPOTWELD ASSY-LWR RH -----	1						
- 7	0552112-31	SPOTWELD ASSY-LWR RH FLOATPLANE ONLY -----	1						
- 8	0552010-92	CHANNEL-RH -----	1						
- 9	0552151-70	CHANNEL-RH FLOATPLANE ONLY -----	1						
-10	0552151-1	DOUBLER -----	1						
-11	0552010-94	STIFFENER-RH -----	1						
	0552010-60	STIFFENER-LH -----	1						
-12	0552143-1	DOUBLER-LWR COWL -----	1						
-13	0552010-68	LIP-COWL FLOATPLANE ONLY -----	1						
-14	0552010-54	STIFFENER -----	2						
-15	0552010-91	AIR SCOOP -----	1						
-16	0552010-95	AIR SCOOP FLOATPLANE -----	1						
-17	0552019-12	NOSE CAP ASSY-LWR -----	1						
-18	NAS697A08	NUTPLATE -----	12						
	AN256F8	ANGLE NUT LANDING LIGHT ATTACH -----	3						
-19	S1115-32	STUD -----	4						
	S1115-35	STUD -----	2						
	S1115-9	RING -----	6						
-20	S1115-19	RECEPTACLE -----	14						
-21	0552112-204	COWL ASSY-UPR -----	1						
		ATTACHING PARTS							
-22	AN515-8R8	SCREW -----	12						
		-----*							
-23	0552112-20	SPOTWELD ASSY-UPR COWL -----	1						
-24	0552010-89	CHANNEL-UPR -----	1						
-25	0552010-87	DOUBLER-LH -----	1						
	0552010-88	DOUBLER-RH -----	1						
-26	1552004-32	DOUBLER-DOOR OPENING -----	1						
-27	0552019-10	NOSE CAP ASSY-UPR -----	1						
-28	S1115-32	STUD -----	19						
	S1115-9	RING -----	19						
-29	0552010-74	STIFFENER-LH -----	1						
	0552010-73	STIFFENER-RH -----	1						
-30	1552004-28	DOOR ASSY-UPR COWL -----	1						
-31	KM610-064	LATCH-DOOR CLC -----	1						
-32	1552004-22	HINGE HALF -----	1						
	1552004-23	HINGE HALF -----	1						
-33	1552004-17	PIN-HINGE -----	1						
-34	1552010-1	SPRING-HINGE PIN -----	1						
-35	1552004-25	STRIKER -----	1						
-36	0552010-47	STIFFENER -----	2						

NOTE. *THIS FIGURE APPLIES TO AIRPLANES WITH COWL MOUNTED LANDING LIGHT ONLY. FOR AIRPLANES WITH STANDARD COWL SEE FIG 65. FOR AIRPLANES WITH COWL MOUNTED DUAL LANDING LIGHTS SEE FIG 67.

Cowling (Cont)

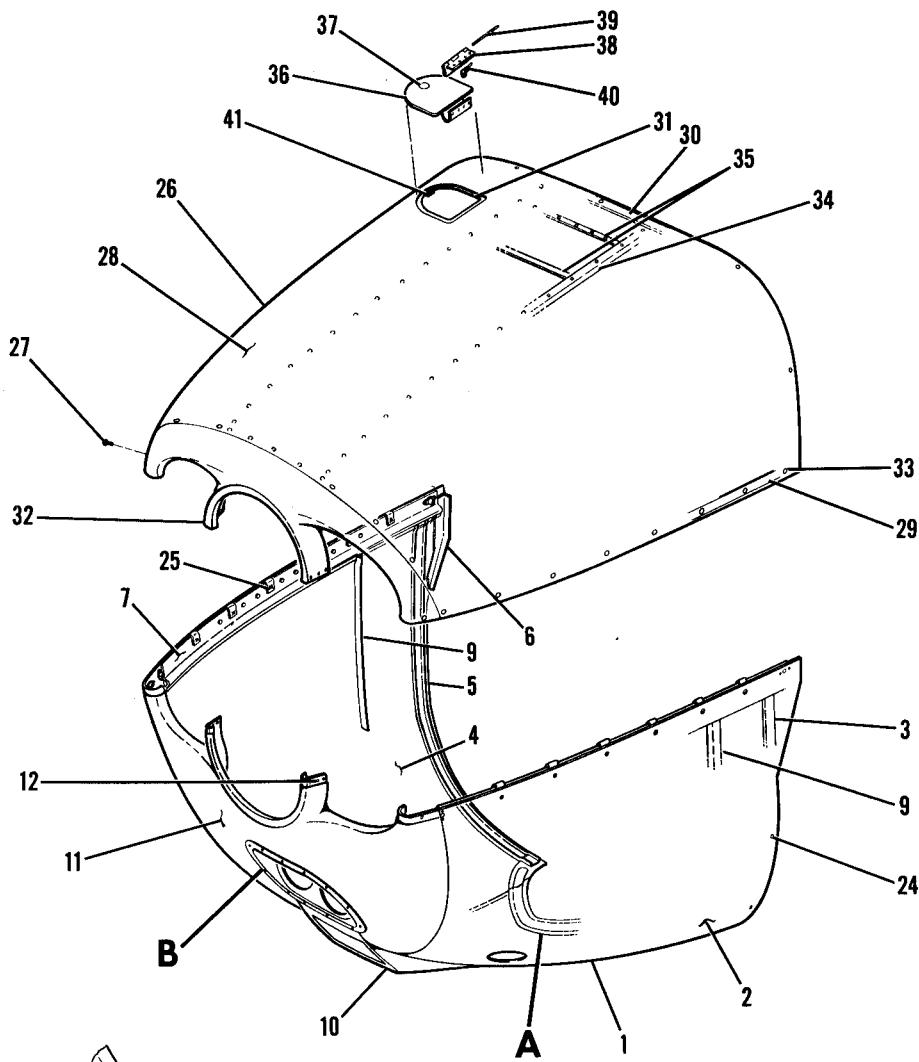

Detail B

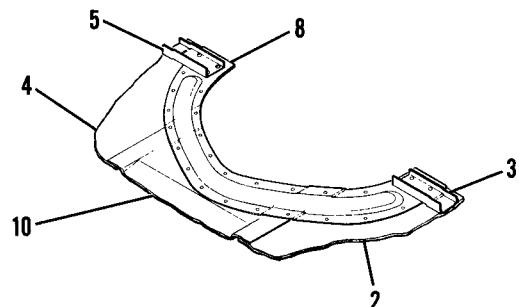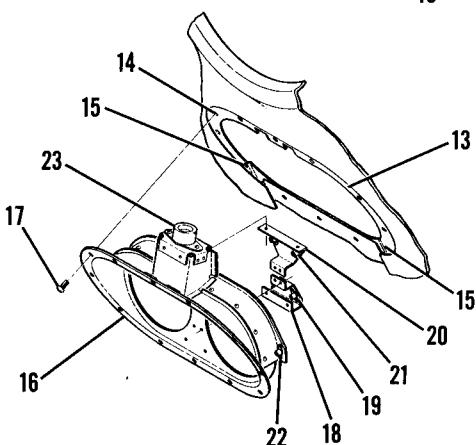

Detail A

Figure 67. Engine Cowl Assembly - Dual Landing Light

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
67 -	* 0552112-28	COWL ASSEMBLY-ENGINE	WITH DUAL LANDING LIGHT PROVISIONS						NP	
- 1	0552112-25	COWL ASSY-LWR							1	
- 3	0552010-93	SPOTWELD ASSY-LWR LH							1	
- 4	0552112-29	CHANNEL							1	
- 5	0552010-92	SPOTWELD ASSY-LWR RH							1	
- 6	0552151-1	CHANNEL							1	
- 7	0552010-94	DOUBLER							1	
- 8	055210-60	STIFFENER-RH							1	
- 9	0552143-1	STIFFENER-LH							1	
-10	0552010-54	DOUBLER-LWR COWL							1	
-11	0552010-91	STIFFENER							2	
-12	NAS697A08	AIR SCOOP							1	
-13	0552019-15	NOSE CAP ASSY-LWR							1	
-14	NAS681A08	NUTPLATE							10	
-15	NAS693A08	MOUNTING PLATE							1	
-16	0552139-1	NUTPLATE							10	
-17	NAS514P 832-8	SUPPORT ASSY-DUAL LANDING LIGHT							1	
		ATTACHING PARTS							1	
		SCREW							12	
		-----*								
-18	1752119-7	BRACKET ASSY-MOUNT							1	
-19	NAS697A08	NUTPLATE							2	
-20	1752119-4	BRACKET ASSY-MOUNT							1	
-21	NAS697A08	NUTPLATE							2	
-22	NAS697A08	NUTPLATE							2	
-23	S1115-29	SHOCKMOUNT							1	
		ATTACHING PARTS								
		SCREW							2	
		SPACER 3 MAX							AR	
		-----*								
-24	S1115-32	STUD							4	
	S1115-35	STUD							2	
	S1115-9	RING							6	
-25	S1115-19	RECEPTACLE							14	
-26	0552112-204	COWL ASSY-UPR							1	
		ATTACHING PARTS								
-27	AN515-8R8	SCREW							12	
		-----*								
-28	0552112-20	SPOTWELD ASSY-UPR							1	
-29	0552010-87	DOUBLER-LH							1	
	0552010-88	DOUBLER-RH							1	
-30	0552010-89	CHANNEL-UPR							1	
-31	1552004-32	DOUBLER-DOOR OPENING							1	
-32	0552019-10	NOSE CAP-UPR							1	
-33	S1115-32	STUD							19	
	S1115-9	RING							19	
-34	0552010-74	STIFFENER-LH							1	
	0552010-73	STIFFENER-RH							1	
-35	0552010-47	STIFFENER							2	
-36	1552004-28	DOOR ASSY-UPR COWL							1	
-37	KM610-064	LATCH-DOOR CLC							1	
-38	1552004-22	HINGE HALF							1	
	1552004-23	HINGE HALF							1	
-39	1552004-17	PIN-HINGE							1	
-40	1552010-1	SPRING							1	
-41	1552004-25	STRIKER							1	
		NOTE. *THIS FIGURE APPLIES TO AIRPLANES WITH COWL MOUNTED DUAL LANDING LIGHTS ONLY. FOR AIRPLANES WITH STANDARD COWL SEE FIG 65. FOR AIRPLANES WITH COWL MOUNTED SINGLE LANDING LIGHT SEE FIG 66.								

Engine










**OIL QUICK DRAIN VALVE****ENGINE MOUNT****HOUR METER SWITCH****UPR SHOCK MOUNT****LWR SHOCK MOUNT**

Figure 68. (Sheet 1 of 2) Engine Installation

Engine (Cont)



OIL COOLER

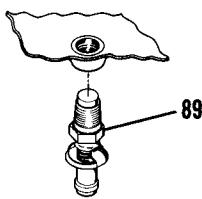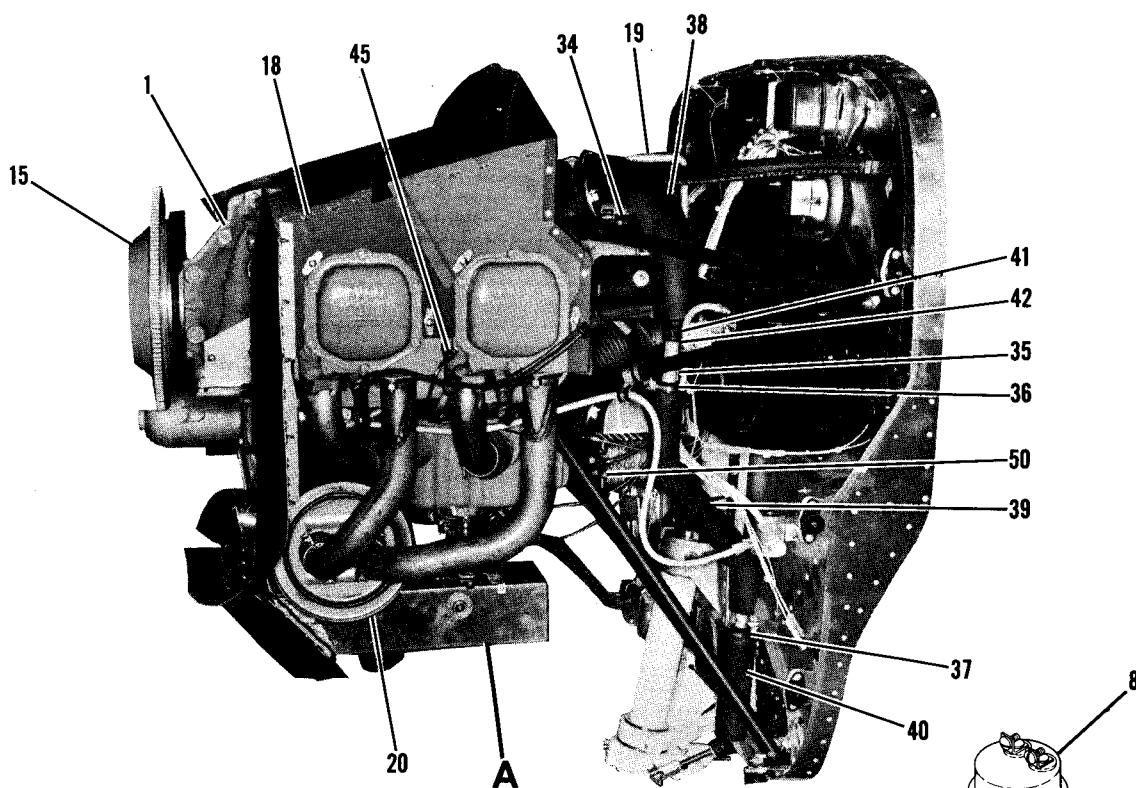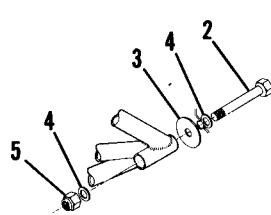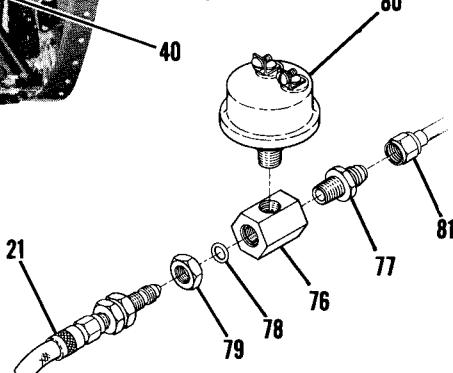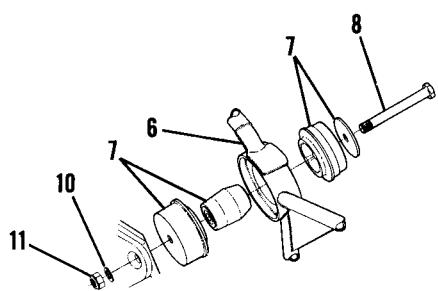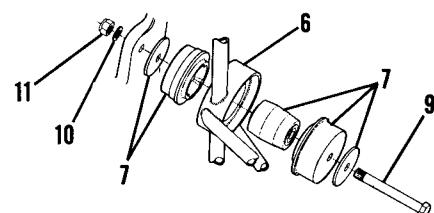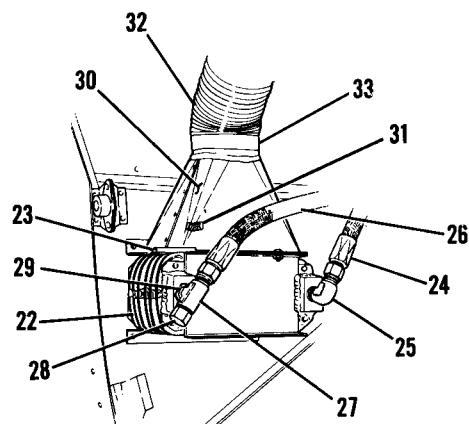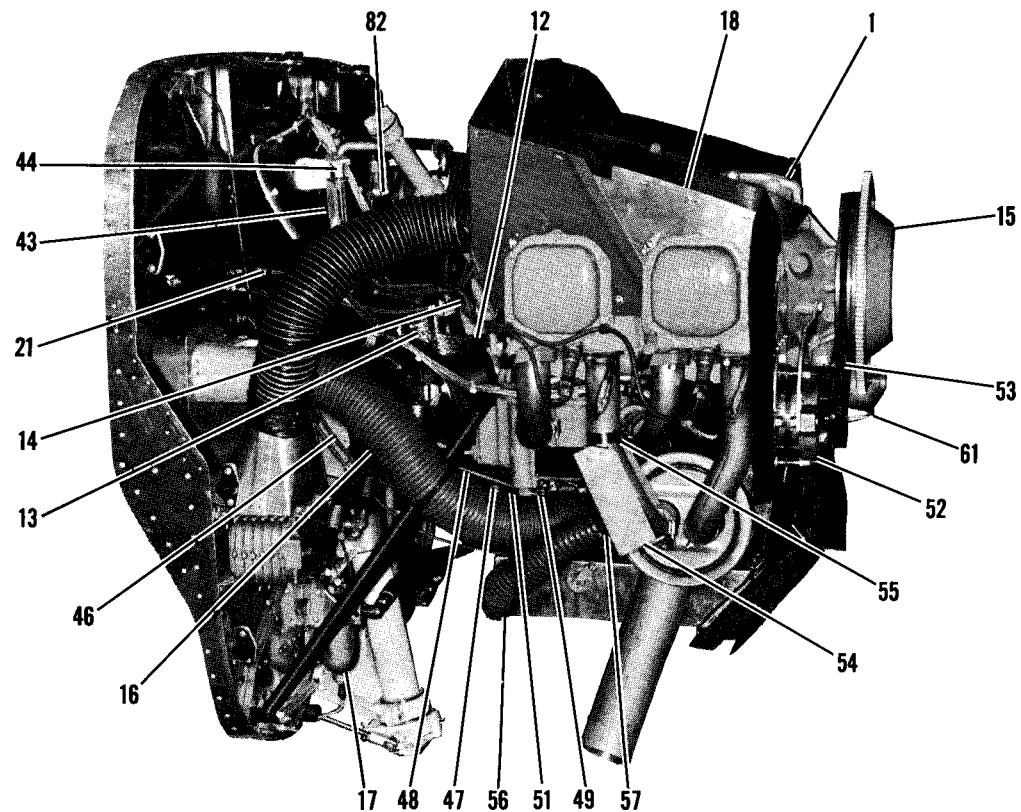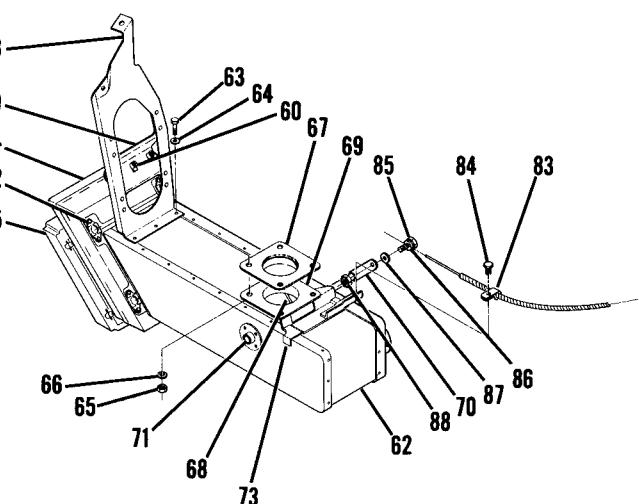

Detail A

Figure 68. (Sheet 2 of 2) Engine Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
68 -		ENGINE INSTALLATION							
- 1	0320E2D-ENPL4090	ENGINE ASSY LY	NP						
		ATTACHING PARTS	1						
- 2	AN6-23A	BOLT LOWER							2
	AN6-27A	BOLT UPPER							2
- 3	0550153-1	WASHER							4
- 4	AN960-616	WASHER							8
- 5	MS20365-624C	NUT							4
- 6	0551017-1	MOUNT ASSY-ENGINE							1
- 7	C299501-0101	KIT-SHOCK MOUNT							4
- 8	ANT-43A	BOLT UPPER							2
- 9	ANT-44A	BOLT LOWER							2
-10	AN960-716L	WASHER							4
-11	MS20365-720C	NUT							4

-12	0412007-8	STRAP-ENGINE GROUND							1
-13	AN742-12	CLAMP							1
	AN3-4A	BOLT							1
	AN960-10	WASHER							2
	MS21045L3	NUT							1
-14	AN4-11A	BOLT							1
	AN960-416	WASHER							1
	MS21042L4	NUT							1
-15	SEE FIG 64	PROPELLER & SPINNER INSTALLATION							1
-16	SEE FIG 74	HEATING & DEFROSTING SYSTEM							1
-17	SEE FIG 87	FUEL SYSTEM							1
-18	SEE FIG 71	BAFFLES INSTALLATION-ENGINE							1
-19	SEE FIG 91	VACUUM SYSTEM							1
-20	SEE FIG 70	EXHAUST STACK ASSY							1
-21	S1236-3-0184	HOSE ASSY-OIL PRESSURE							1
		ATTACHING PARTS							
	MS21919DG6	CLAMP ATTACH TO S1236-3-0184							1
	AN742D12	CLAMP ATTACH TO ENGINE MOUNT							1
	S1021Z10-8	SCREW							1
	NAS446-5-1	NUT							1

-22	0752037-3	ELBOW ASSY							1
	8406E	OIL COOLER SW							1
	8526250	OIL COOLER ALT HR							1
		ATTACHING PARTS							
-23	AN3-5A	BOLT							6
	AN960-10	WASHER							6
	MS21045L3	NUT							2

-24	S1167-6-C260	HOSE ASSY ENGINE TO COOLER							1
-25	MS20822-6-6	ELBOW							1
	AN816-6-6	UNION UPR END							1
-26	S1167-6-0210	HOSE ASSY COOLER TO ENGINE							1
-27	MS20825-6	TEE							1
	MS20823-6B	ELBOW UPR END							1
	AN912-2	REDUCER UPR END							1
-28	0556018-1	CAP ASSY							1
-29	AN912-2D	BUSHING-REDUCER							1
-30	1756001-1	DUCT ASSY-OIL COOLER							1
-31	SEE FIG 2	PLACARD							1
-32	S1053E24T	HOSE * IN LG BKI REF S1053E24T*							1
		ATTACHING PARTS							
-33	NAS398-50	CLAMP							2

-34	S1605-8	TACHOMETER SHAFT							1
	S1605-10	TACHOMETER SHAFT							1
									A B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
68 -35	0500118-70	BREATHER TUBE ATTACHING PARTS	1						
-36	MS21919DG12	CLAMP	2						
	AN3-5A	BOLT	1						
	AN960-10	WASHER	1						
	MS20365-1032C	NUT	1						
-37	MS21919DG12	CLAMP	1						
	S1021Z10-20	SCREW	1						
	NAS43HT3-32	SPACER	1						
	AN960-10	WASHER	1						
		-----*							
-38	0552011-11	INSULATION-BREATHER TUBE	1						
-39	0552011-12	INSULATION-BREATHER TUBE	1						
-40	0552011-13	INSULATION-BREATHER TUBE	1						
-41	S1495-12	HOSE 16.0 IN LG BKI REF S1495-12-16.0	1						
		ATTACHING PARTS							
-42	NAS397-18	CLAMP	2						
		-----*							
-43	1716013-1	BRACKET ATTACHING PARTS	1						
	AN741TD6	CLAMP	1						
	AN4-6A	BOLT	2						
	AN960-416	WASHER	2						
	MS21042L4	NUT	2						
		-----*							
-44	S1517-8	CONTROL ASSY-FUEL STRAINER	1						
-45	SEE FIG 90	PRIMING SYSTEM-3 CYLINDER	1						
-46		CONTROL ASSY-MIXTURE SEE INSTRUMENT PANEL	1						
		ATTACHING PARTS							
-47	S1485D3U	CLAMP	1						
	S1021Z10-8	SCREW	1						
	0450311-13	CLAMP	1						
	AN960-416	WASHER	2						
	MS21042L4	NUT	1						
		-----*							
-48		CONTROL ASSY-THROTTLE SEE INSTRUMENT PANEL	1						
		ATTACHING PARTS							
-49	AN3-7A	BOLT	1						
	AN970-3	WASHER	1						
	AN960-10	WASHER	2						
	MS21045L3	NUT	2						
	S1104-3	ROD END	1						
-50	AN315-3R	NUT	1						
	S351	CLAMP	1						
	AN3-7A	BOLT	2						
	MS21045L3	NUT	2						
	AN960-10	WASHER	2						
		-----*							
-51	0551019-5	SUPPORT ASSY-THROTTLE	1						
		ATTACHING PARTS							
	MS20074-04-21	BOLT	1						
	AN960-416L	WASHER	1						
		-----*							
-52	SEE FIG 96	ALTERNATOR INSTALLATION	1						
-53	S1597-1-37.5	BELT-ALTERNATOR	1						
-54	1750011-4	SHROUD ASSY	1						
		ATTACHING PARTS							
-55	AN7377TW56	CLAMP	2						
		-----*							
-56	S1053K16	DUCT-FLEXIBLE * IN LG BULK ITEM REF S1053K16-*	1						
		ATTACHING PARTS							
-57	NAS397-32	CLAMP	2						
		-----*							
-58	0555216-16	SUPPORT ASSY-AIRBOX	1						
-59	0555216-17	SUPPORT ASSY-BAFFLE	1						
-60	NAS1067A3	NUTPLATE	3						

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
68 -61	0552116-10	BRACKET ASSY-COWL SNUBBER -----	1	
-62	0552113-13	AIRBOX ASSY ----- ATTACHING PARTS -----	1	
-63	AN3-3A	BOLT -----	3	
-64	AN960-10	WASHER -----	3	
-65	AN315-4R	NUT -----	4	
-66	AN960-416	WASHER -----	4	
-67	0550198-1	STUD -----	4	
	21323	GASKET-AIRBOX LY -----	1	
		-----*		
	NAS1067A3	NUTPLATE -----	2	
-68	0550180-10	VALVE ASSEMBLY -----	1	
-69	0550180-13	COLLAR -----	1	
-70	0550180-16	ARM ASSY -----	1	
-71	0750113-1	BEARING HOUSING ASSY -----	1	
-72	S1853-1	RECEPTACLE -----	4	
-73	0552113-5	SUPPORT -----	1	
-74	0552130-11	SEAL ASSY-CARBURETOR AIR FILTER ----- ATTACHING PARTS -----	1	
	AN960D2L	WASHER -----	10	
		-----*		
-75	C294510-0301	FILTER-AIR -----	1	
	121615	FILTER-AIR AMA ALTERNATE FOR FLOATPLANE ONLY -----	1	
-76	1213158-3	ADAPTOR-OIL PRESSURE SWITCH -----	1	
-77	AN816-2D	UNION -----	1	
-78	MS28778-2	O-RING -----	1	
-79	AN924-3D	NUT -----	1	
-80	S1711-1	SWITCH-OIL PRESSURE -----	1	
-81	0500118-96	LINE-OIL PRESSURE TO INSTRUMENT PANEL -----	1	
-82	0750139	ADAPTOR-OIL TEMPERATURE GAGE -----	1	
	S1630-1	SENDING UNIT-OIL TEMPERATURE GAGE -----	1	
	AN900-10	GASKET -----	1	
-83	AN742D3	CLAMP -----	1	
-84	AN3-3A	BOLT -----	1	
	MS21045L3	NUT -----	1	
-85	0450311-5	CLAMP -----	1	
-86	AN960-10	WASHER -----	2	
-87	AN960-10L	WASHER -----	1	
-88	MS21045L3	NUT -----	1	
-89	S1951-4T	VALVE ASSY-OIL QUICK DRAIN -----	1	
		NOTE. *LENGTH TO BE DETERMINED LATER.		
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384		
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

A
B



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
69 -		*	ENGINE COMPONENTS & ASSOCIATED ACCESS	0-320-E2D ENGINE					NP	
- 1	4050	MAGNETO	RH	SLICK					1	
	4051	MAGNETO	LH	IMPULSE COUPLING	SLICK				1	
- 2	73820	GASKET-MAGNETO	LY						2	
- 3	77743	HARNESS ASSEMBLY-RH	LY						1	
	77745	HARNESS ASSEMBLY-LH	LY						1	
- 4	76211	STARTER	12V	LY					1	
- 5	C611501-0102	ALTERNATOR							1	
- 6	75380	LINK-ALTERNATOR ADJUSTING	LY						1	
- 7	C611001-0102	VOLTAGE REGULATOR							1	
- 8	78728-M/S	CARBURETOR	MARVEL-SCHEBLER MODEL MA4SPA						1	
- 9	66224	GASKET-CARBURETOR	LY						1	
-10	75148	FUEL PUMP	LY						1	
-11	60096	GASKET-FUEL PUMP	LY						1	
-12	C431002-0101	VACUUM PUMP							1	
-13	8313	GASKET-VACUUM PUMP	LY						1	
-14	61098	ADAPTER ASSEMBLY-VACUUM PUMP	LY						1	
-15	75906	GASKET-ROCKER BOX COVER	LY						4	
-16	68972	GASKET-OIL SUMP	LY						1	
-17	69116	GAGE ASSEMBLY-OIL LEVEL	LY						1	
	74068	SEAL RING-OIL GAGE	LY						1	
-18	SH15	SPARK PLUG							8	

NOTE. *THIS LISTING IS COMPILED TO PROVIDE PART NUMBERS OF COMMONLY USED ENGINE COMPONENTS & ASSOCIATED ACCESSORIES. RELATIONSHIP OF THESE PARTS TO ENGINE OR AIRCRAFT ASSEMBLIES IS NOT INDICATED BY INDENTION. THIS FIGURE IS NOT ILLUSTRATED. INDEX NUMBERS ARE PROVIDED FOR LOCATION OF LINE ON WHICH THE PART NUMBER APPEARS.

Engine (Cont)

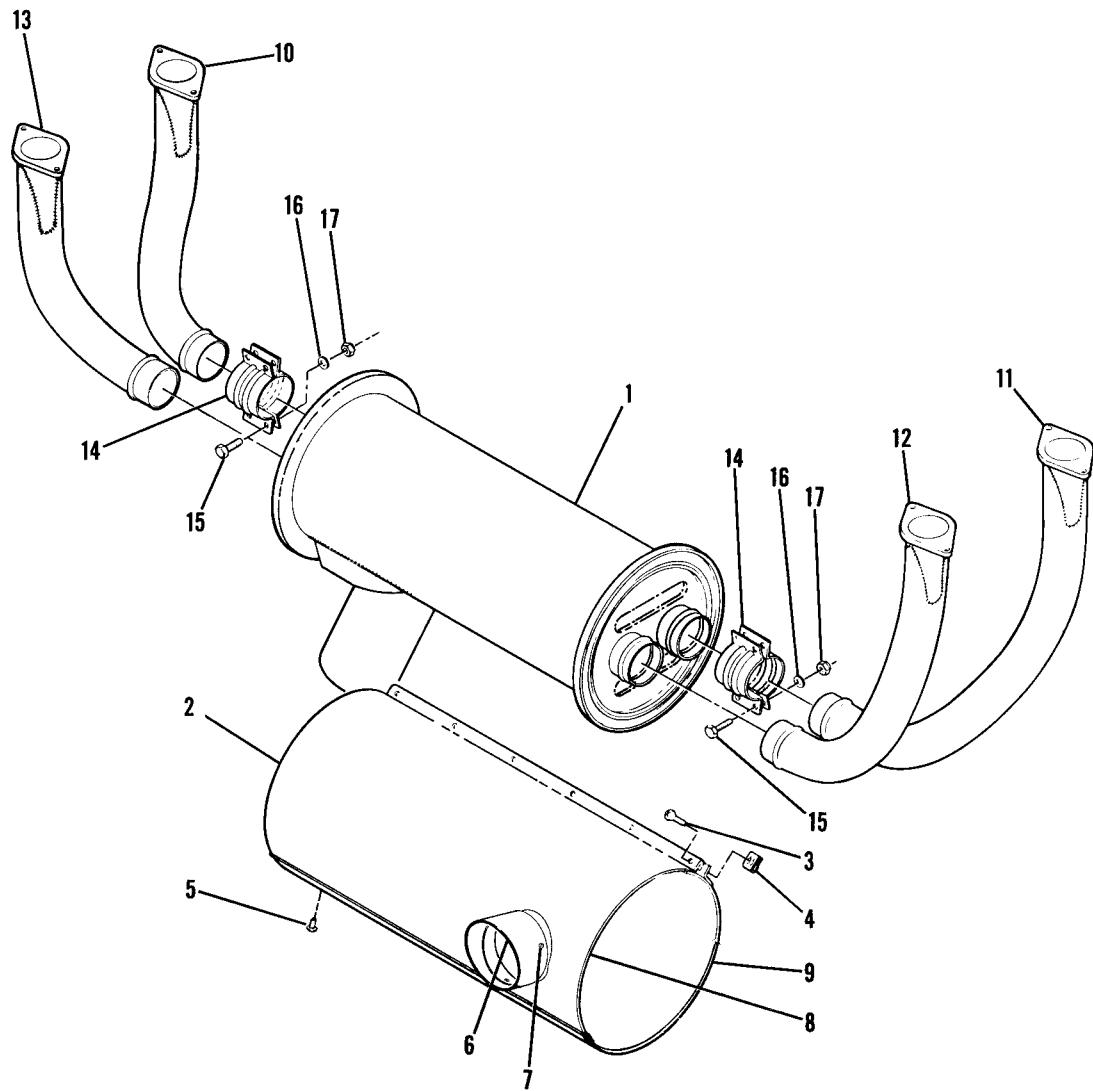


Figure 70. Exhaust System Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
70 -	1754001-16	EXHAUST SYSTEM ASSY -----	1	
- 1	1754001-15	MUFFLER ASSY -----	1	
- 2	0554001-5	SHROUD ASSY -----	1	
		ATTACHING PARTS		
- 3	S1021Z8-8	SCREW -----	6	
- 4	NAS395-14-3	NUT -----	6	
- 5	S1021Z8-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
- 6	0554003-1	COVER-SHROUD INLET -----	1	
- 7	S1021Z8-8	SCREW -----	4	
- 8	0554001-6	SHROUD-FWD -----	1	
- 9	0554001-7	SHROUD-AFT -----	1	
-10	1754007-1	RISER ASSY-RH AFT -----	1	
-11	1754008-1	RISER ASSY-LH AFT -----	1	
-12	1754009-1	RISER ASSY-LH FWD -----	1	
-13	1754010-1	RISER ASSY-RH FWD -----	1	
-14	0750161-25	CLAMP -----	8	
		ATTACHING PARTS		
-15	AN3-4A	BOLT -----	4	
-16	AN960-10	WASHER -----	4	
-17	MS21045L3	NUT -----	4	
		-----*		

Engine (Cont)

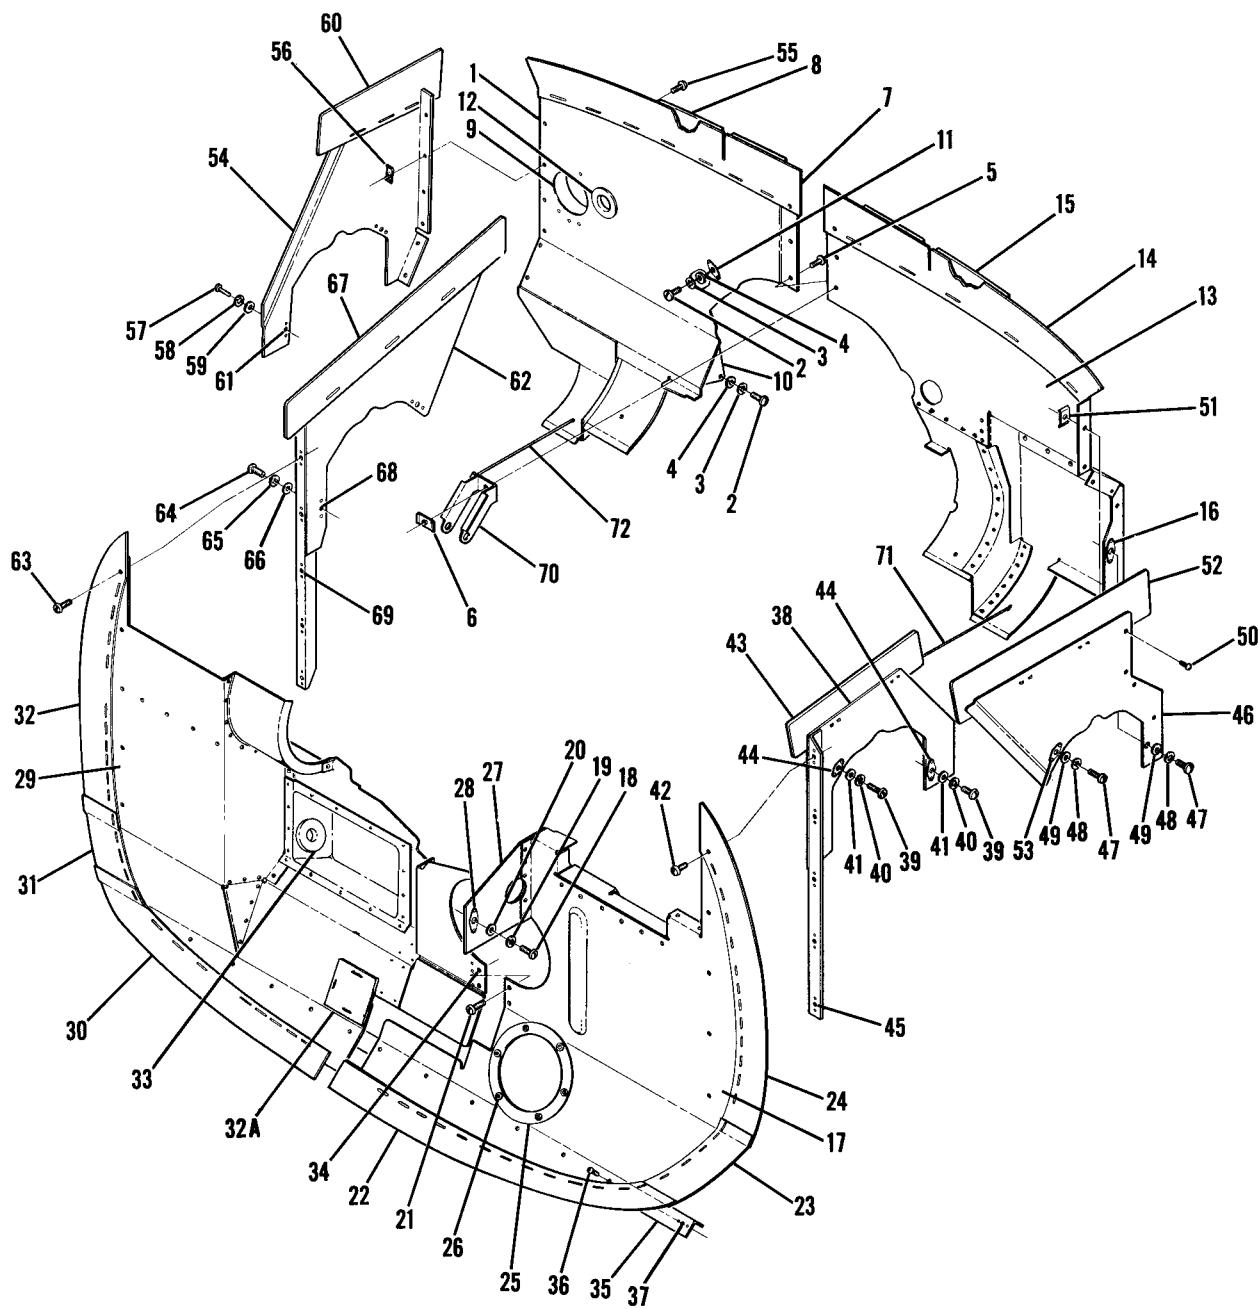


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
71 -		ENGINE BAFFLES INSTALLATION -----								NP	
- 1	0555206-12	BAFFLE ASSY-REAR RH ----- ATTACHING PARTS	1								
- 2	AN500-416-10	SCREW -----		2							
- 3	AN936A416	WASHER-LOCK -----		2							
- 4	AN960-416	WASHER -----		2							
- 5	S1021Z8-12	SCREW -----		3							
- 6	NAS446-4-3	NUT -----		3							
		-----*									
- 7	0555211-5	SEAL-BAFFLE -----	1								
- 8	0555206-11	SEAL-BAFFLE -----	1								
- 9	0713019-33	UNION -----	1								
-10	1755016-1	BRACKET -----	1								
-11	NAS463W416	SHIM-ANCHOR NUT -----		2							
-12	MS35489-15	GROMMET -----		1							
-13	0555211-7	BAFFLE ASSY-REAR LH -----		1							
-14	0555211-5	SEAL-BAFFLE -----	1								
-15	0555206-11	SEAL-BAFFLE -----	1								
-16	NAS463W416	SHIM-ANCHOR NUT -----		1							
	MS35489-15	GROMMET -----		1							
-17	0555217-1	BAFFLE ASSY-FORWARD VERTICAL LH ----- ATTACHING PARTS		1							
-18	AN500-416-10	SCREW -----		2							
-19	AN936A416	WASHER-LOCK -----		2							
-20	AN960-416	WASHER -----		2							
-21	AN525-10R6	SCREW -----		2							
		-----*									
-22	0555217-3	SEAL-BAFFLE LWR -----		1							
-23	0555217-4	SEAL-BAFFLE LH -----		1							
-24	0555217-5	SEAL-BAFFLE UPPER -----		1							
-25	0555217-6	SEAL-BAFFLE -----		1							
-26	AN960-2	WASHER -----		6							
-27	0555212-1	SUPPORT ASSY -----		1							
-28	NAS463W416	SHIM-ANCHOR NUT -----		2							
-29	0555216-200	BAFFLE ASSY-FORWARD VERTICAL RH WEU 0555216-202 -----		1							
	0555216-202	BAFFLE ASSY-FORWARD VERTICAL RH -----		1							A
-30	0555216-7	SEAL-BAFFLE LWR -----		1							B
-31	0555216-6	SEAL-BAFFLE RH -----		1							
-32	0555216-5	SEAL-BAFFLE UPPER -----		1							
-32A	0555216-201	SEAL-BAFFLE RH -----		1							
-33	MS35489-15	GROMMET -----		1							
-34	NAS1067A3	NUTPLATE -----		2							
-35	0555216-8	SUPPORT ASSY-FWD VERTICAL BAFFLES ----- ATTACHING PARTS		1							
-36	AN525-832R6	SCREW -----		10							
		-----*									
-37	NAS697A08	NUTPLATE -----		10							
-38	0555214-1	BAFFLE ASSEMBLY-LH #2 CYLINDER ----- ATTACHING PARTS		1							
-39	AN500-416-10	SCREW -----		2							
-40	AN936A416	WASHER-LOCK -----		2							
-41	AN960-416	WASHER -----		2							
-42	AN525-832R6	SCREW -----		5							
		-----*									
-43	0555214-4	SEAL-BAFFLE -----		1							
-44	NAS463W416	SHIM-ANCHOR NUT -----		2							
-45	NAS680A08	NUTPLATE -----		3							
	NAS697A08	NUTPLATE -----		2							
-46	0555215-1	BAFFLE ASSY-LH #4 CYLINDER ----- ATTACHING PARTS		1							
-47	AN500-416-10	SCREW -----		2							
-48	AN936A416	WASHER-LOCK -----		2							
-49	AN960-416	WASHER -----		2							
-50	S1021Z8-12	SCREW -----		4							
-51	NAS446-4-3	NUT -----		4							
		-----*									
-52	0555215-3	SEAL-BAFFLE -----		1							
-53	NAS463W416	SHIM-ANCHOR NUT -----		1							

CONTINUED ON NEXT PAGE

Winterization


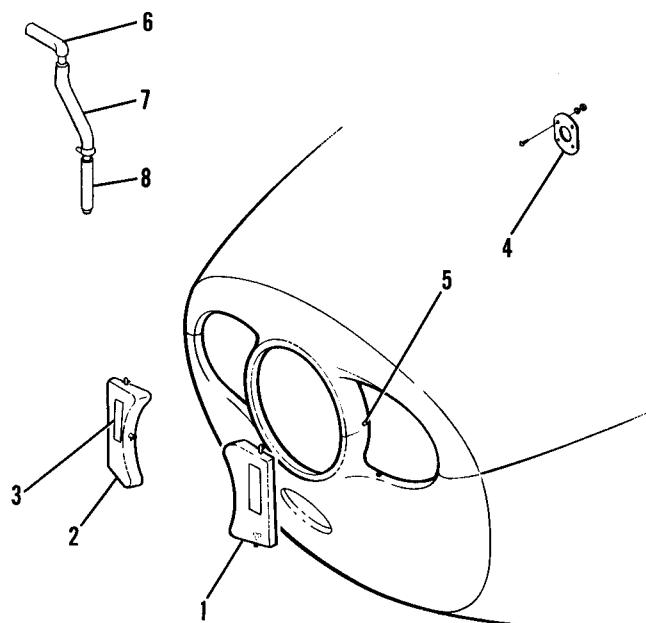



Figure 72. Winterization Equipment

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
72 - - 1	0552132-1	WINTERIZATION EQUIPMENT INSTL. -----	NP	
- 2	0552132-2	COVER ASSY-LH -----	1	
	2600-5W	COVER ASSY-RH -----	1	
	2600SW2	STUD CLC -----	3	
- 3	0552110-3	SPLIT WASHER CLC -----	3	
- 4	0552118-1	PLACARD-WINTERIZATION -----	2	
	AN525-10R6	COVER PLATE -----	1	
	AN960-10L	ATTACHING PARTS -----		
	MS21045L3	SCREW -----	4	
		WASHER -----	4	
		NUT -----	4	
		-----*		
- 5	212-12	RECEPTACLE CLC -----	6	
- 6	0505009-3	PLACARD-WINTERIZATION LOCATED ON INST PANEL -----	1	
- 7	0552011-11	INSULATION-BREATHER HOSE -----	1	
- 8	0552011-12	INSULATION-BREATHER TUBE -----	1	
	0552011-13	INSULATION-BREATHER TUBE -----	1	



Ventilation System

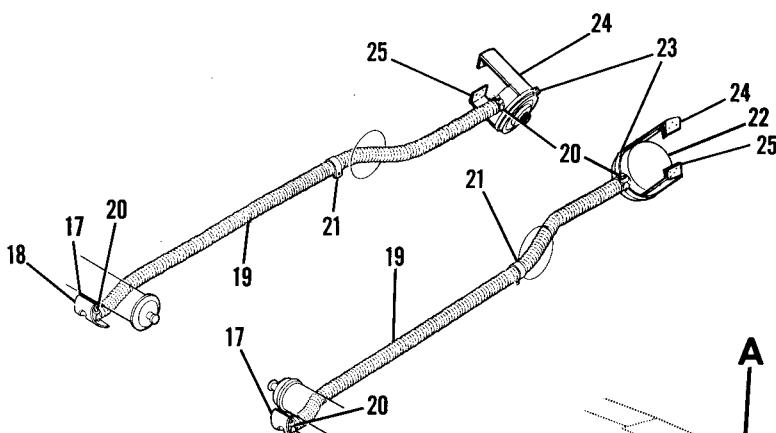


Detail A

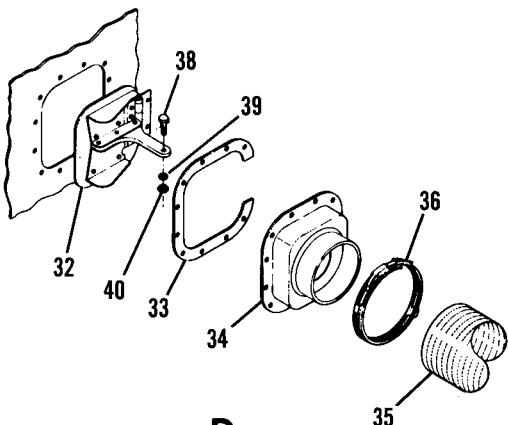

Detail D

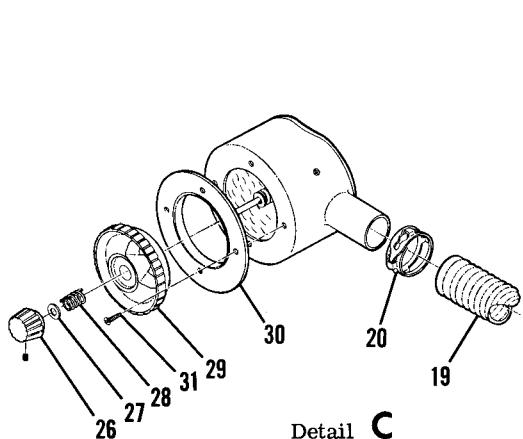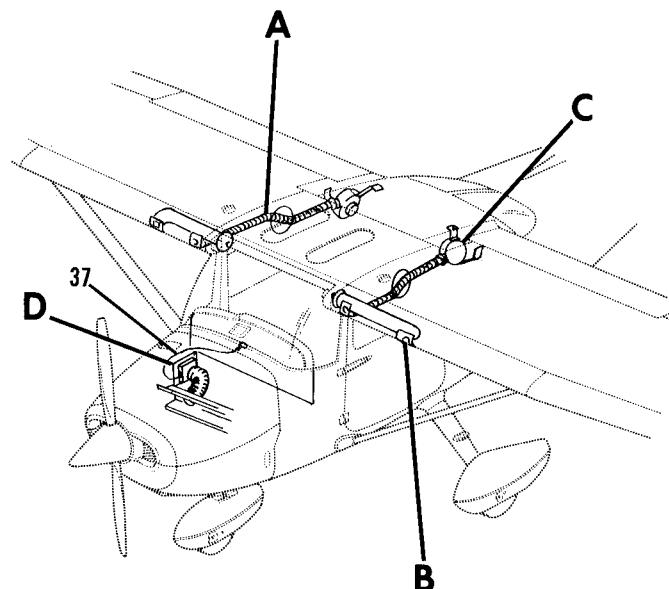

Detail C

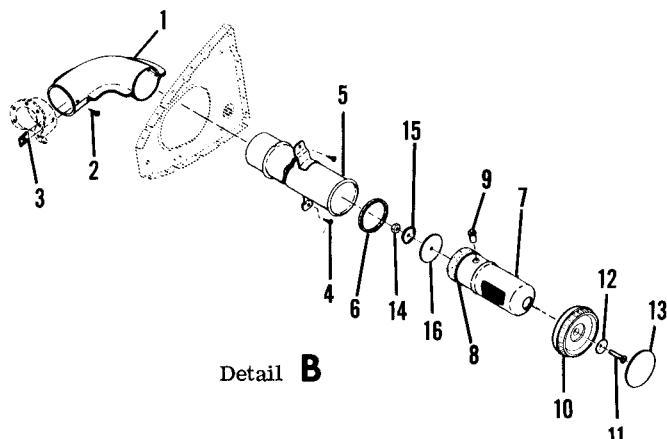

Detail B

Figure 73. Cabin Ventilation System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
73 -		1 2 3 4 5 6 7		
- 1	0413233	CABIN VENTILATION SYSTEM ----- ELBOW ASSY-CABIN AIR VENT ----- ATTACHING PARTS -----	NP 2	
- 2	S1021Z8-6	SCREW -----	1	
- 3	NAS446-4-3	NUTPLATE ----- -----*	1	
	0413163-207	OUTLET ASSY-LH ----- ATTACHING PARTS -----	1	
- 4	S1021Z8-6	SCREW ----- -----*	2	
- 5	0513263-4	TUBE ASSY-RH ----- TUBE ASSY-LH -----	1	
	0513263-1	WASHER-FELT -----	1	
- 6	0413163-7	OUTLET ASSY -----	1	
- 7	0413163-18	SEAL -----	1	
- 8	0413163-43	CATCH-BULLET -----	1	
- 9	S2024-1	KNOB -----	1	
- 10	S1834-1	SCREW -----	1	
- 11	AN507-1032R12	WASHER -----	1	
- 12	S2900D1032	INSERT -----	1	
- 13	S1834-2	NUT -----	1	
- 14	MS21044N3	WASHER -----	1	
- 15	0413228	WASHER -----	1	
- 16	S1450-5A24-040	AIR VENT INSTL-REAR SEAT -----	1	
- 17	0501030-1	ADAPTER ASSY ----- ATTACHING PARTS -----	NP 2	
	S1022Z8-8	SCREW -----	2	
	NAS696-6-3	NUT ----- -----*	2	
- 18	0700322-4	SEAL-AIR VENT ADAPTER -----	2	
- 19	S1053E8T	HOSE 40.50 IN LG BK1 REF S1053E8T40.50 ----- ATTACHING PARTS -----	2	
- 20	NAS397-18	CLAMP -----	2	
- 21	AN742D16	CLAMP -----	1	
	NAS395-19-3	NUT -----	1	
	S1021Z8-10	SCREW ----- -----*	1	
- 22	0710013-4	SILENCER ASSY-FRESH AIR VENT ----- ATTACHING PARTS -----	2	
	AN515-8R10	SCREW -----	1	
	AN960-8	WASHER -----	2	
	MS21044N08	NUT -----	1	
- 23	0710014-2	CLAMP -----	1	
- 24	0513420-1	BRACKET -----	1	
- 25	0513420-2	BRACKET ----- -----*	1	
- 26	S1728-1	KNOB-SILENCER -----	2	
- 27	AN960-10L	WASHER -----	1	
- 28	0710015-13	SPRING-SILENCER -----	1	
- 29	0713250-1	KNOB-SILENCER -----	1	
- 30	0710014-8	ESCUCHEON-SILENCER ----- ATTACHING PARTS -----	1	
- 31	S1023A6-6C	SCREW ----- -----*	4	
- 32	0713135-2	OUTSIDE AIR VENT INSTL-FORWARD ----- DOOR ASSY-SIDE AIR VENT -----	NP 1	
- 33	0713140-1	SEAL -----	1	
- 34	0713139-1	INLET -----	1	
- 35	S1053E24T	HOSE 15.0 IN LG BK1 REF S1053E24T15.0 -----	1	
- 36	NAS398-50	CLAMP -----	1	
- 37		CONTROL SEE INSTRUMENT PANEL -----	1	
- 38	0450311-5	CLAMP -----	1	
- 39	AN960-10L	WASHER -----	1	
- 40	MS21044N3	NUT -----	1	

Heating System





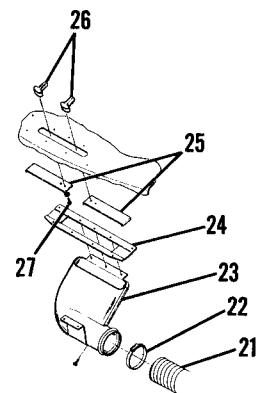



Figure 74. Cabin Heating & Defrosting System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
74 -		1 2 3 4 5 6 7		
- 1	0753011-1	CABIN HEATING & DEFROSTING SYSTEM INSTALLATION ----- VALVE ASSY-WARM AIR -----	NP	
- 2	0753010-1	SEAT-WARM AIR VALVE -----	1	
- 3	1253032-1	BODY ASSY-VALVE -----	1	
- 4	1253034-1	PLATE ASSY-VALVE -----	1	
- 5	1253040-1	SHIM -----	1	
- 6	1253033-1	REINFORCEMENT -----	1	
- 7	1253037-1	ARM-CONTROL ----- ATTACHING PARTS	1	
- 8	NAS561C2-8	ROLL PIN -----	1	
- 9	1253041-1	SPRING-WARM AIR VALVE -----	1	
- 10	S1239-48	-----*		
- 11	0450311-5	CONTROL ASSY-CABIN HEAT -----	1	
- 12	AN960-10L	ATTACHING PARTS		
- 13	MS21044N3	CLAMP -----	1	
- 14	S1053K24T	WASHER -----	1	
- 15	NAS398-50	NUT -----	1	
- 16	0513238-1	-----*		
- 17	0513456-1	HOSE * IN LG BKI REF S1053K24T* ----- ATTACHING PARTS	1	
- 18	S1021Z6-6	CLAMP -----	2	
- 19	1750011-4	-----*		
- 20	AN737TW56	SHROUD ASSY ----- ATTACHING PARTS	1	
- 21	S1053K16T	CLAMP -----	2	
- 22	NAS397-32	-----*		
- 23	SEE FIG 27	HOSE * IN LG BKI REF S1053K16* ----- ATTACHING PARTS	1	
- 24	S1053E16T	CLAMP -----	1	
- 25	NAS397-32	-----*		
- 26	0513386-1	DUCT ASSY-HEATER -----	1	
- 27	0513386-7	HOSE 24.00 IN LG BKI REF S1053E16T24.00 ----- ATTACHING PARTS	1	
- 28	S1021Z4-6C	CLAMP -----	2	
- 29	NAS446-1-3	-----*		
- 30	0513267-1	NOZZLE ASSY-DEFROSTER -----	1	
- 31	0713019-113	BRACKET DEFROSTER-NOZZLE -----	1	
- 32	0713019-112	ATTACHING PARTS		
- 33	0713019-111	SCREW -----	4	
- 34	S2198-3	NUT -----	4	
- 35	**	-----*		
- 36		VALVE GUIDE -----	1	
- 37		VALVE ASSY-LH -----	1	
- 38		VALVE ASSY-RH -----	1	
- 39		VALVE -----	2	
- 40		KNOB -----	2	
- 41		ATTACHING PARTS		
- 42		SCREW -----	2	
- 43		WASHER -----	2	
- 44		-----*		
- 45		DUCT 23.00 IN LG BKI REF S1110ET23.00 ----- ATTACHING PARTS	2	
- 46		CLAMP -----	2	
- 47		-----*		
NOTE. *LENGTH TO BE DETERMINED LATER.				
NOTE. **FOR REPLACEMENT OF THESE PARTS PRIOR TO SERIAL 17264380 & F17201385 ORDER 0713019-112 OR 0713019-113.				


Brake System

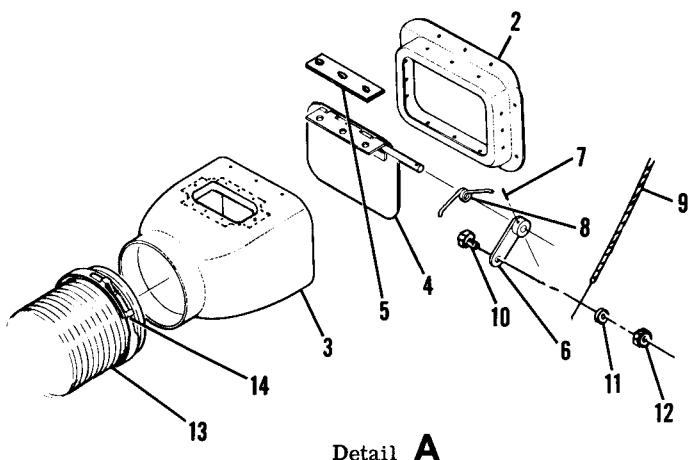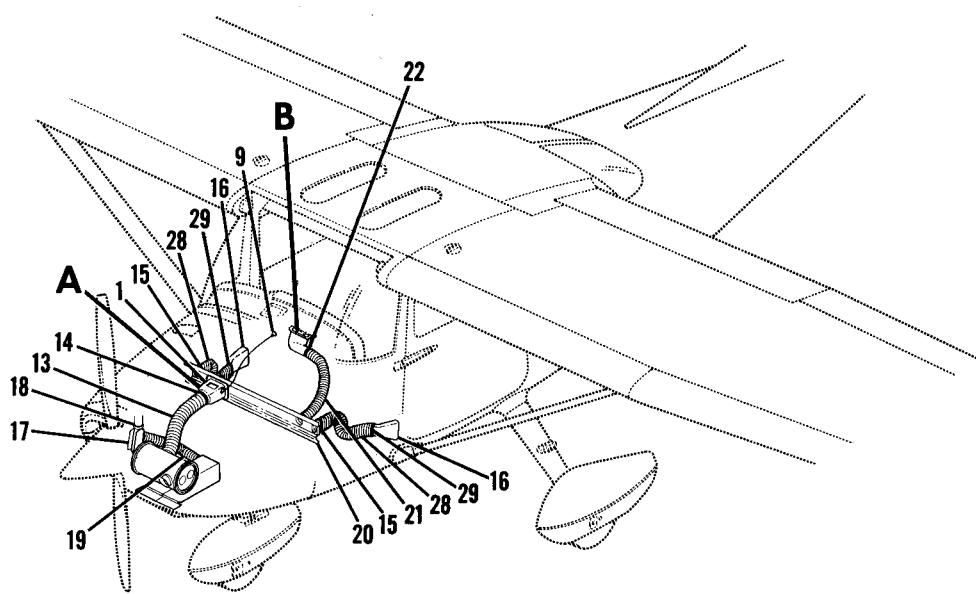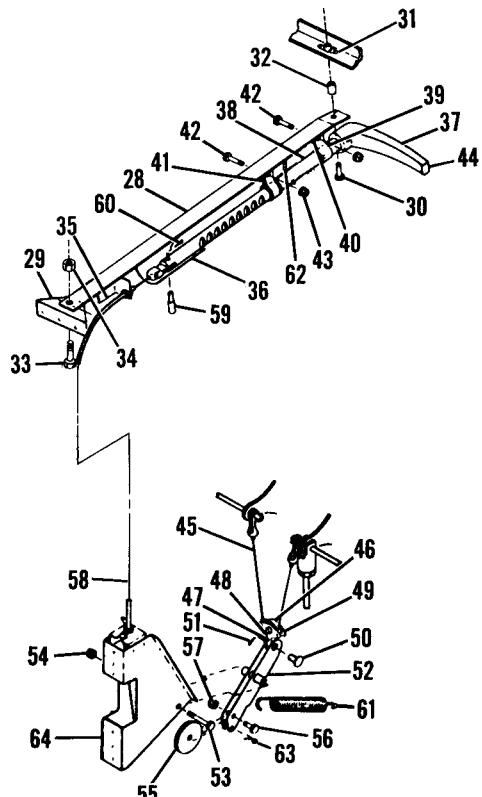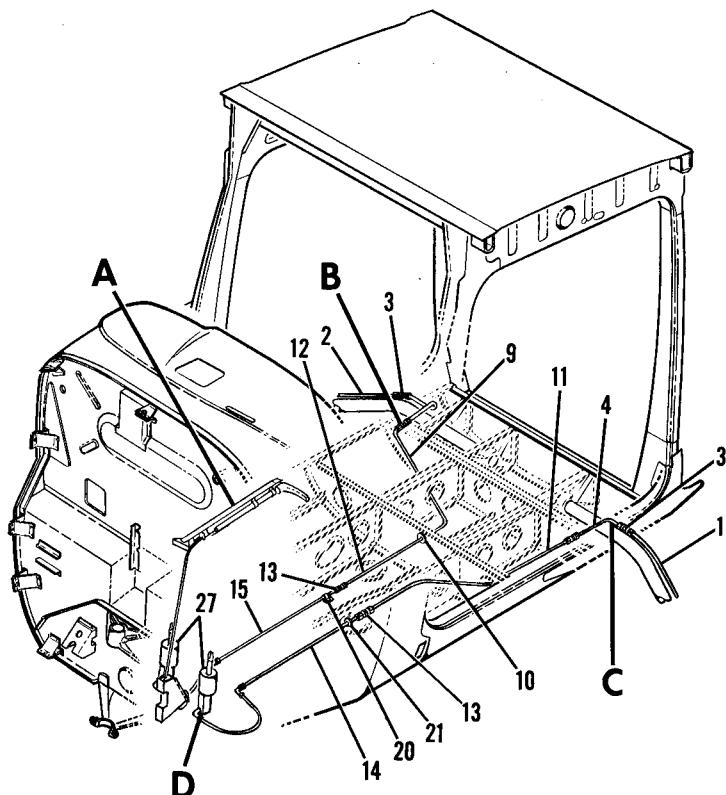


Detail A

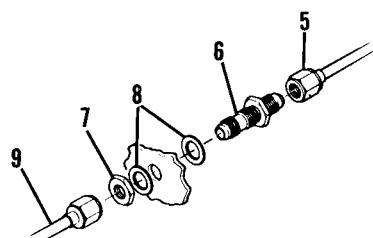

Detail B

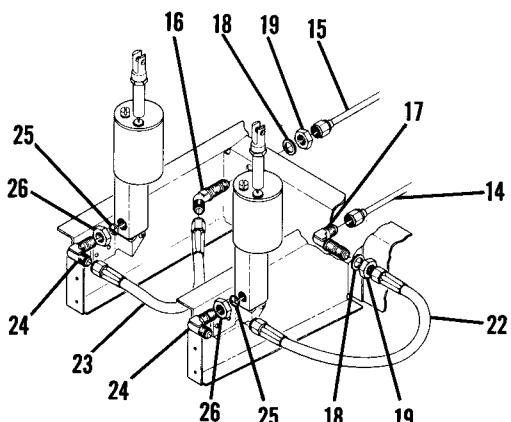

Detail D

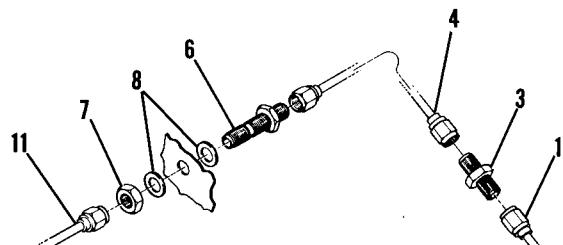

Detail C

Figure 75. Brake System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
75 -		BRAKE SYSTEM -----	NP	
- 1	0500118-126	LINE ASSEMBLY-BRAKE LH -----	1	
- 2	0500118-127	LINE ASSEMBLY-BRAKE RH -----	1	
- 3	AN815-3D	ATTACHING PARTS UNION -----	1	
- 4	0500118-128	-----*		
- 5	0500118-129	LINE ASSEMBLY-BRAKE LH -----	1	
- 6	AN832-3D	LINE ASSEMBLY-BRAKE RH -----	1	
- 7	AN924-3D	ATTACHING PARTS UNION -----	1	
- 8	AN960-716	NUT -----	1	
- 9	0500118-87	WASHER -----	2	
- 10	AN837-3D	-----*		
	AN924-3D	LINE ASSEMBLY-BRAKE RH -----	1	
	AN960-716	ATTACHING PARTS ELBOW -----	1	
- 11	0500118-86	NUT -----	1	
	S1486DG6U	WASHER -----	2	
	MS21919DG3	-----*		
	S1021Z8-8	LINE ASSEMBLY-BRAKE LH -----	1	
- 12	0500118-88	ATTACHING PARTS CLAMP -----	1	
- 13	AN815-3D	CLAMP -----	1	
- 14	0500118-90	SCREW -----	1	
- 15	0500118-89	-----*		
- 16	AN837-3D	LINE ASSEMBLY-BRAKE LH -----	1	
- 17	AN833-3D	LINE ASSEMBLY-BRAKE RH -----	1	
- 18	AN960-716	ATTACHING PARTS ELBOW-RH ONLY -----	1	
- 19	AN924-3D	ELBOW-LH ONLY -----	1	
- 20	S1153-1	WASHER -----	2	
	MS21919DG3	NUT -----	2	
	S1021Z8-8	BRACKET-RH ONLY -----	1	
- 21	MS35489-365	CLAMP-RH ONLY -----	1	
- 22	S1167C3-0100	SCREW-RH ONLY -----	1	
- 23	S1167-3-0085	-----*	2	
- 24	AN921-3D	GROMMET -----	1	
- 25	MS28778-3	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW LH -----	1	
- 26	AN924-3D	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW RH -----	1	
- 27	SEE FIG 75	ATTACHING PARTS ELBOW -----	1	
- 28	0713070-37	GASKET -----	1	
		NUT -----	1	
- 29	0713070-36	-----*		
- 30	AN520-10R12	MASTER BRAKE CYLINDER -----	2	
- 31	MS20364-1032C	PARKING BRAKE INSTALLATION -----	NP	
- 32	NAS43DD3-32	ANGLE -----	1	
- 33	AN3-3A	ATTACHING PARTS ANGLE -----	1	
- 34	MS21044N3	SCREW -----	1	
- 35	0713070-5	NUT -----	1	
- 36	0713070-4	-----*		
		ANGLE -----	1	
		RACK-POSITIONING -----	1	
		CONTINUED ON NEXT PAGE		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE						
			1	2	3	4	5	6	7	ON CODE
75 -37	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE ----- ATTACHING PARTS -----	1							
-38	0813156-4	HOUSING ASSEMBLY-BRAKE -----	1							
-39	0713070-25	CLAMP -----	1							
-40	0713070-32	SPACER -----	1							
-41	0713070-15	SPACER -----	1							
-42	AN3-6A	BOLT -----	2							
-43	MS21044N3	NUT -----	2							
		-----*								
-44	0811490-6	HANDLE-PARKING BRAKE -----	1							
	0813150-54	TUBE-PARKING BRAKE -----	1							
	NAS561-5-12	ROLL PIN EN -----	1							
-45	0510105-232	CABLE ASSEMBLY-PARKING BRAKE -----	1							
-46	S1710-1	PULLEY ----- ATTACHING PARTS -----	1							
-47	0713959-1	BRACKET ASSEMBLY -----	1							
-48	AN3-6A	BOLT -----	1							
	0411783	BUSHING -----	1							
	AN960-10L	WASHER -----	1							
	MS21044N3	NUT -----	1							
		-----*								
-49	MS24665-281	COTTER PIN CABLE GUARD -----	3							
-50	MS20392-4C13	PIN -----	1							
-51	MS24665-281	COTTER PIN -----	1							
-52	0713070-9	BELLCRANK ASSEMBLY ----- ATTACHING PARTS -----	1							
-53	AN3-13A	BOLT -----	1							
	0713070-19	SPACER -----	1							
-54	MS21044N3	NUT -----	1							
		-----*								
-55	S378-1L	PULLEY ----- ATTACHING PARTS -----	1							
-56	AN3-5A	BOLT -----	1							
-57	MS21044N3	NUT -----	1							
		-----*								
-58	0713070-28	TUBE ASSEMBLY ----- ATTACHING PARTS -----	1							
-59	0713070-6	POSITIONING ARM -----	1							
-60	MS24665-132	COTTER PIN -----	1							
		-----*								
-61	0713063	SPRING -----	1							
-62	0713070-24	CATCH -----	1							
	AN960-4	WASHER -----	1							
-63	MS24665-132	COTTER PIN -----	1							
-64	0713070-20	BRACKET ASSEMBLY -----	1							

This page intentionally left blank.

Control Pedals

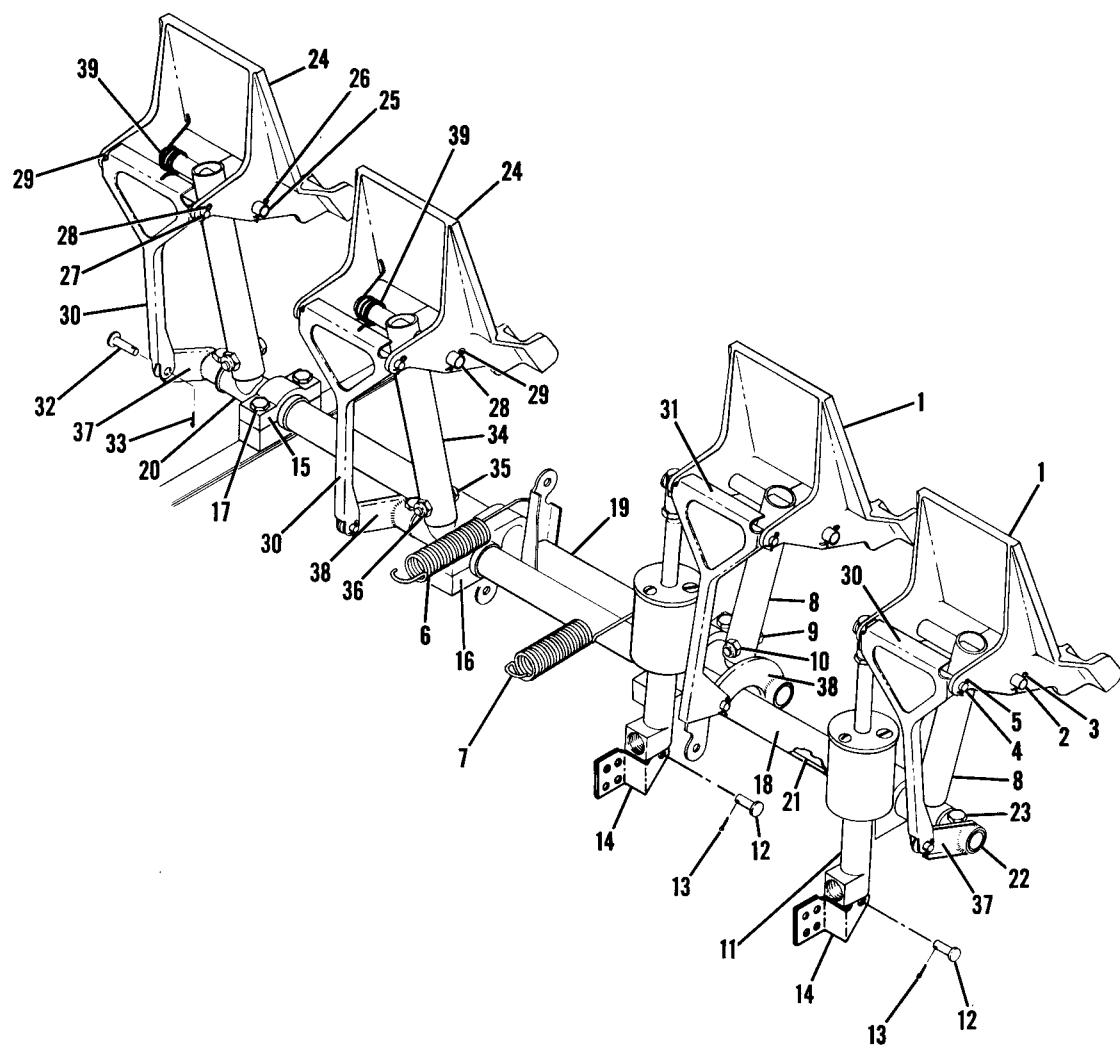


Figure 76. Brake & Rudder Pedals Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
76 -		PEDAL INSTALLATION-RUDDER & BRAKE LH -----							
- 1	1460320-1	PEDAL-BRAKE & RUDDER ----- ATTACHING PARTS	NP	2					
- 2	1460501-21	SHAFT -----		1					
- 3	MS24665-285	PIN-COTTER -----		2					
- 4	0411778-3	SHAFT -----		1					
- 5	MS24665-132	PIN-COTTER ----- -----*		2					
- 6	0310196-12	SPRING-BRAKE & RUDDER RETURN RH -----		1					
- 7	0310196-5	SPRING-BRAKE & RUDDER RETURN LH -----		1					
- 8	0411307	ARM-RUDDER BAR ----- ATTACHING PARTS		2					
- 9	AN3-11A	BOLT -----		1					
-10	MS21044N3	NUT -----		1					
-11	0541138-22	-----*							
-12	MS20392-2C15	CYLINDER ASSEMBLY-BRAKE ----- ATTACHING PARTS		2					
-13	MS24665-132	PIN -----		1					
-14	0713624-2	PIN-COTTER ----- -----*		1					
-15	S1674-1	ANCHOR-MASTER CYLINDER -----		2					
-16	S1675-1	BEARING-TORQUE TUBE -----		4					
-17	AN3-16A	BEARING-TORQUE TUBE ----- ATTACHING PARTS		4					
	AN960-10	BOLT -----		2					
	MS21044N3	WASHER -----		2					
		NUT -----		2					
-18	0411306-14	-----*							
-19	0411306-13	WELD ASSEMBLY -----		1					
-20	S1003-43A	WELD ASSEMBLY -----		1					
-21	0411565	BEARING -----		4					
-22	0411562	TUBE-DUAL BRAKE -----		2					
-23	AN3-10A	HUB-DUAL BRAKE ----- ATTACHING PARTS		4					
	MS21044N3	BOLT -----		1					
		NUT -----		1					
-24	1460320-1	-----*							
-25	1460501-21	PEDAL INSTALLATION-BRAKE & RUDDER RH -----							
-26	MS24665-285	PEDAL-BRAKE & RUDDER ----- ATTACHING PARTS							
-27	0411778-2	SHAFT -----		1					
-28	MS24665-132	PIN-COTTER -----		2					
-29	NAS42HT6-8	SHAFT -----		2					
	S1438-2	PIN-COTTER ----- -----*		1					
-30	0411564	SPACER -----		1					
-31	0411564-3	WASHER -----		AR					
-32	MS20392-2C15	-----*							
-33	MS24665-132	LINK-DUAL BRAKES -----		3					
	NAS43HT3-12	LINK-DUAL BRAKES ----- ATTACHING PARTS		1					
-34	0411307	PIN -----		1					
-35	AN3-11A	PIN-COTTER -----		1					
-36	MS21044N3	SPACER -----		1					
-37	0411563	-----*							
-38	0411573-1	ARM-RUDDER BAR ----- ATTACHING PARTS		2					
-39	1460505-1	BOLT -----		1					
		NUT -----		1					
		-----*							
		BELLCRANK ASSEMBLY -----		3					
		BELLCRANK ASSEMBLY -----		1					
		SPRING -----		2					

Brake Cylinder



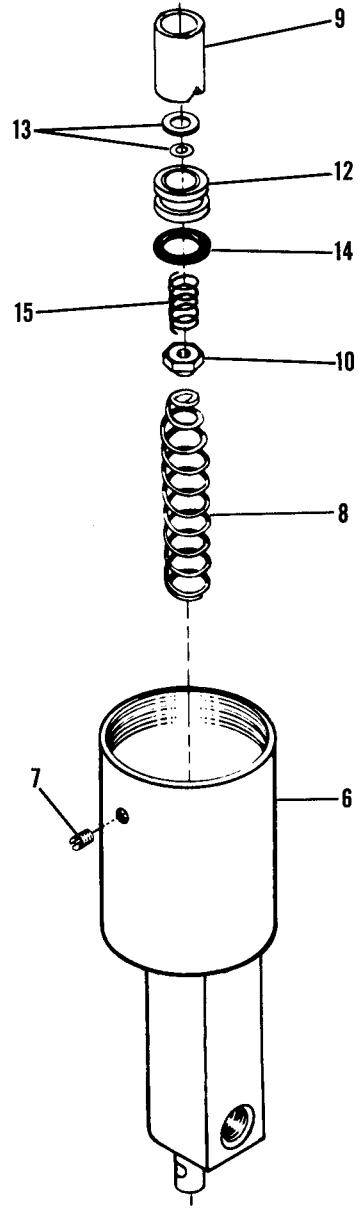


Figure 77. Master Brake Cylinder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
77 -	0541138-22	1 CYLINDER ASSEMBLY-MASTER BRAKE	2	
- 1	0541140	2 CLEVIS-ROD END	1	
- 2	AN316-4R	3 NUT-CHECK	1	
- 3	AN515-10R8	4 SCREW-MACHINE	1	
- 4	0541151	5 COVER-MASTER CYLINDER	1	
- 5	0541139	6 PLUG-FILLER	1	
- 6	0541184-2	7 BODY-MASTER CYLINDER	1	
- 7	AN565D6H3	8 SCREW	1	
- 8	0541148	9 SPRING-PISTON RETURN	1	
- 9	0541149	10 SLEEVE-PISTON ROD	1	
	0541138-5	11 PISTON ASSEMBLY-MASTER CYLINDER	1	
-10	22FH632	12 NUT SPS	1	
-11	0541144	13 ROD	1	
-12	0541143	14 PISTON	1	
-13	800-001-6	15 LOCK-O-SEAL PKSC	1	
-14	MS28775-110	16 O-RING	1	
-15	0541148-1	17 SPRING	1	

Flight Controls

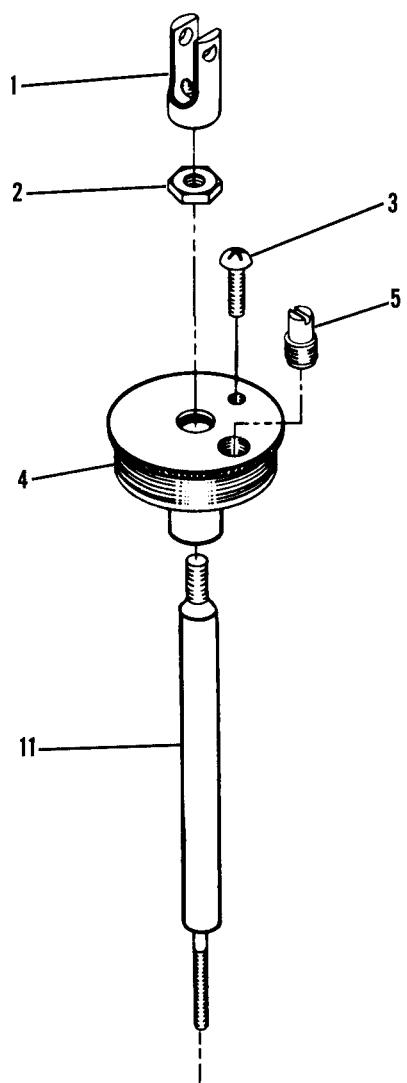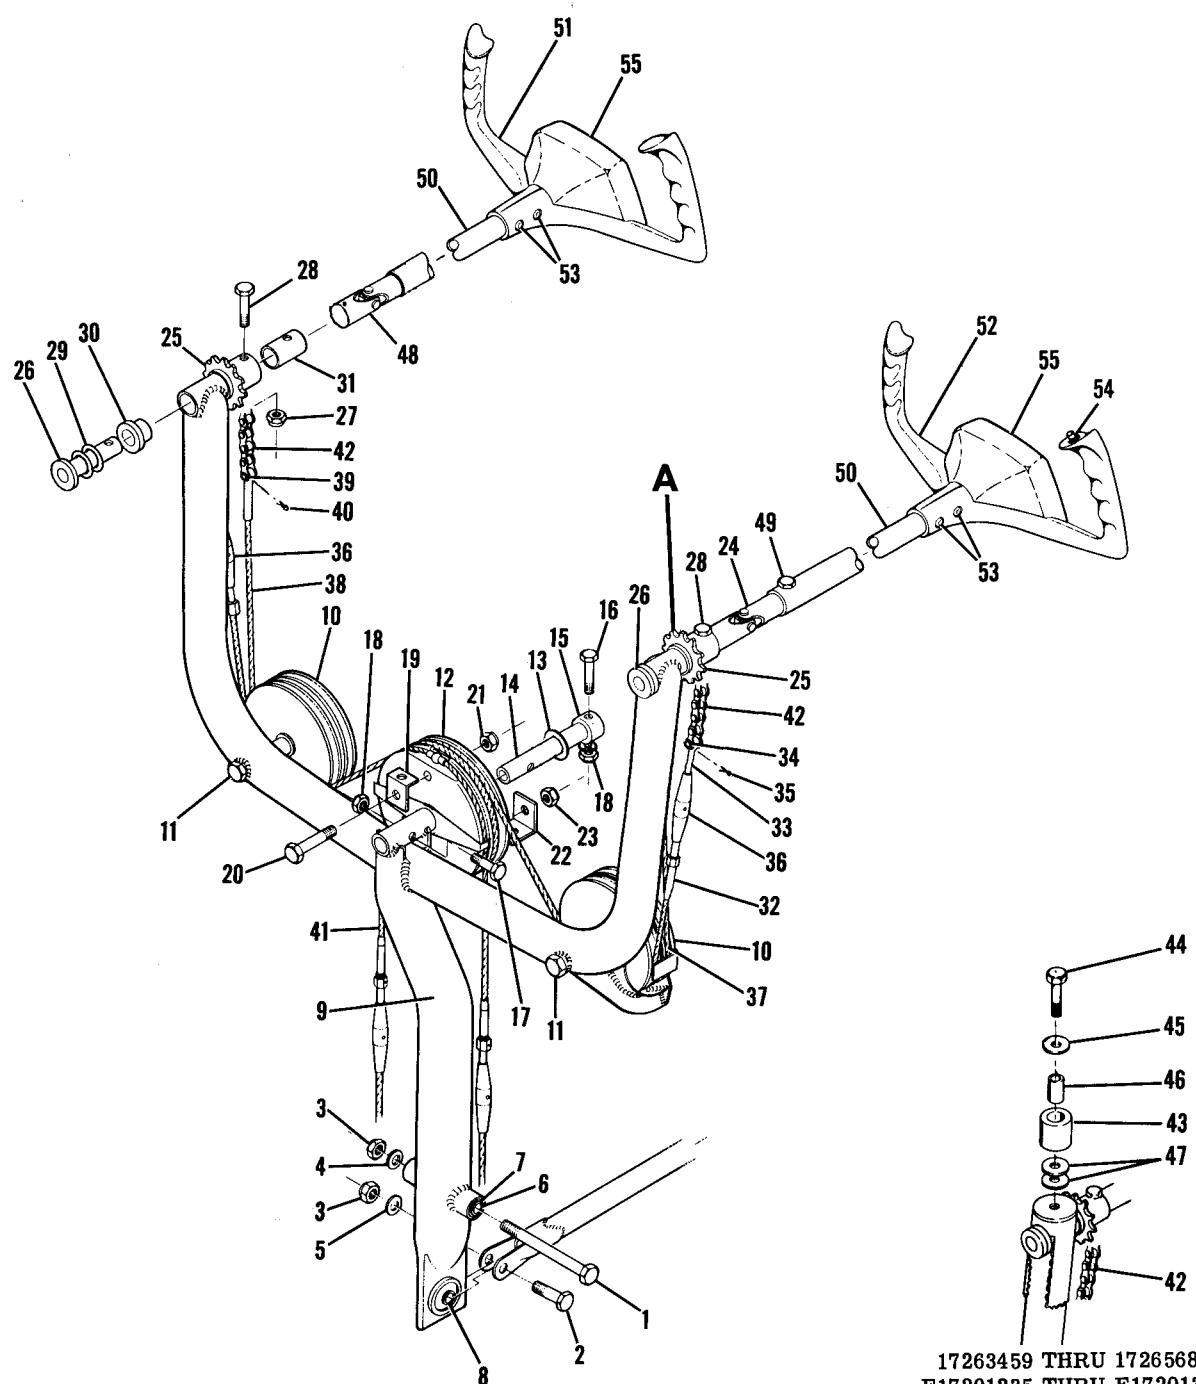

Detail A

Figure 78. Control Yoke Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
78 -	0560006-6	CONTROL YOKE INSTALLATION							
	0560015-1	YOKE ASSY-CONTROL							
		YOKE ASSY-CONTROL							
		ATTACHING PARTS							
- 1	AN4-31A	BOLT							
- 2	AN4-10A	BOLT							
- 3	MS21042L4	NUT							
- 4	AN960-416L	WASHER							
- 5	AN960-416	WASHER							
- 6	0513251-1	BUSHING							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
- 7	8610	BEARING TOR							
	S1997-6G10	BEARING							
- 8	AN200KS4	BEARING							
- 9	0511782-17	WELD ASSY-YOKE							
	0560014-1	WELD ASSY-YOKE							
-10	S378-4	PULLEY							
-11	AN4-30A	BOLT							
	MS21042L4	NUT							
-12	0511783-1	DRUM ASSY							
		ATTACHING PARTS							
-13	AN960-816L	WASHER							
-14	0511784-1	SHAFT							
-15	0511787-1	RETAINER							
-16	AN3-11A	BOLT							
	AN960-10	WASHER							
-17	AN3-10A	BOLT							
-18	MS21044N3	NUT							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-19	0511786-1	CLAMP							
		ATTACHING PARTS							
-20	AN3-13A	BOLT							
-21	MS21044N3	NUT							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-22	0511786-2	CLAMP							
		ATTACHING PARTS							
-23	AN3-12A	BOLT							
	MS21044N3	NUT							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-24	0411257	JOINT-UNIVERSAL							
	S1495-10	HOSE 1.12 IN LG							
-25	0511785-1	SPROCKET							
		ATTACHING PARTS							
-26	0511788-1	SHAFT							
-27	MS21044N3	NUT							
-28	AN3-11A	BOLT							
-29	AN960-816L	WASHER							
	AN960-816L	WASHER							
	AN960D816L	WASHER							
	0411221-2	WASHER							
-30	S1004-43A	BEARING							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-31	0511789-1	SPACER USE ONLY WHEN RH CONTROLS ARE NOT INSTALLED							
-32	0510105-213	CABLE ASSY							
	0510105-313	CABLE ASSY STAINLESS STEEL							
	0510105-241	CABLE ASSY							
	0510105-341	CABLE ASSY STAINLESS STEEL							
		ATTACHING PARTS							
-33	NAS228-35LH	TERMINAL							
-34	AN21-10	BOLT							
	AN960PD6L	WASHER							
	AN320-1	NUT							
-35	MS24665-5	PIN-COTTER							
-36	AN155832S	BARREL							
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
		CONTINUED ON NEXT PAGE							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	1	2	3	4	5	6	7
					1	2	3	4	5	6	7
78 -37	0510105-215	CABLE ASSY-LH -----	1	A							
	0510105-315	CABLE ASSY-LH STAINLESS STEEL -----	1	A							
	0510105-243	CABLE ASSY -----	1	B							
	0510105-343	CABLE ASSY STAINLESS STEEL -----	1	B							
-38	0510105-214	CABLE ASSY-RH -----	1	A							
	0510105-314	CABLE ASSY-RH STAINLESS STEEL -----	1	A							
	0510105-242	CABLE ASSY -----	1	B							
	0510105-342	CABLE ASSY STAINLESS STEEL ----- ATTACHING PARTS	1	B							
-39	AN21-10	BOLT -----	1								
	AN960PD6L	WASHER -----	1								
	AN320-1	NUT -----	1								
-40	MS24665-5	PIN-COTTER -----	1								
	AN155B32S	BARREL -----	1								
	---	---									
-41	0510105-216	CABLE ASSY -----	1	A							
	0510105-316	CABLE ASSY STAINLESS STEEL -----	1	A							
	0510105-244	CABLE ASSY -----	1	B							
	0510105-344	CABLE ASSY STAINLESS STEEL -----	1	B							
-42	0413372-5	CHAIN -----	2								
-43	N6-2	BEARING NYLO LH ONLY ----- ATTACHING PARTS	1	A							
-44	AN4-11A	BOLT LH ONLY -----	1								
-45	AN960D416L	WASHER LH ONLY -----	1								
-46	0513414-1	BUSHING LH ONLY -----	1								
-47	AN960PD416	WASHER LH ONLY -----	1								
	MS21042L4	NUT LH ONLY -----	1								
	---	---									
-48	0411257	JOINT-UNIVERSAL RH -----	1								
	S1495-10	HOSE 1.12 IN LG BULK ITEM -----	1								
	0513261-13	CONTROL WHEEL ASSY PILOT & CO-PILOT WITHOUT MIKE SWITCH -----	1								
	0513261-14	CONTROL WHEEL ASSY PILOT ONLY USE WITH MIKE SWITCH -----	1								
	---	ATTACHING PARTS									
-49	AN3-10A	BOLT -----	1								
	MS21044N3	NUT -----	1								
	---	---									
-50	0413213-23	TUBE-CONTROL -----	1								
-51	0513260-4	WHEEL-CONTROL PILOT & CO-PILOT WITHOUT MIKE SWITCH -----	1								
-52	0513260-5	WHEEL-CONTROL PILOT ONLY USED WITH MIKE SWITCH -----	1								
	---	ATTACHING PARTS									
-53	0413216-6	RIVET -----	2								
	---	---									
-54	S1985-1	SWITCH-MIKE -----	1								
	SEE FIG 2	PLACARDS-CONTROL WHEEL -----		AR							
-55	0514097-1	PAD-CONTROL WHEEL -----	1								
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
79 -		AILERON CONTROL SYSTEM	NP						
- 1	0510105-224	CABLE-AILERON CONTROL DIRECT	2						
	0510105-324	CABLE-AILERON CONTROL DIRECT STAINLESS STEEL	2						
- 2	0510105-13	CABLE-AILERON CONTROL CARRY THRU	1						
	0510105-113	CABLE-AILERON CONTROL CARRY THRU STAINLESS STEEL	1						
- 3	S378-4	PULLEY	2						
		ATTACHING PARTS							
- 4	MS21042L4	NUT	1						
- 5	NAS43HT4-22	SPACER	1						
- 6	NAS43HT4-43	SPACER	1						
- 7	AN4-21A	BOLT	1						

- 8	S378-4	PULLEY	2						
		ATTACHING PARTS							
- 9	MS21042L4	NUT	1						
-10	AN960-416L	WASHER	2						
-11	AN4-14A	BOLT	1						

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

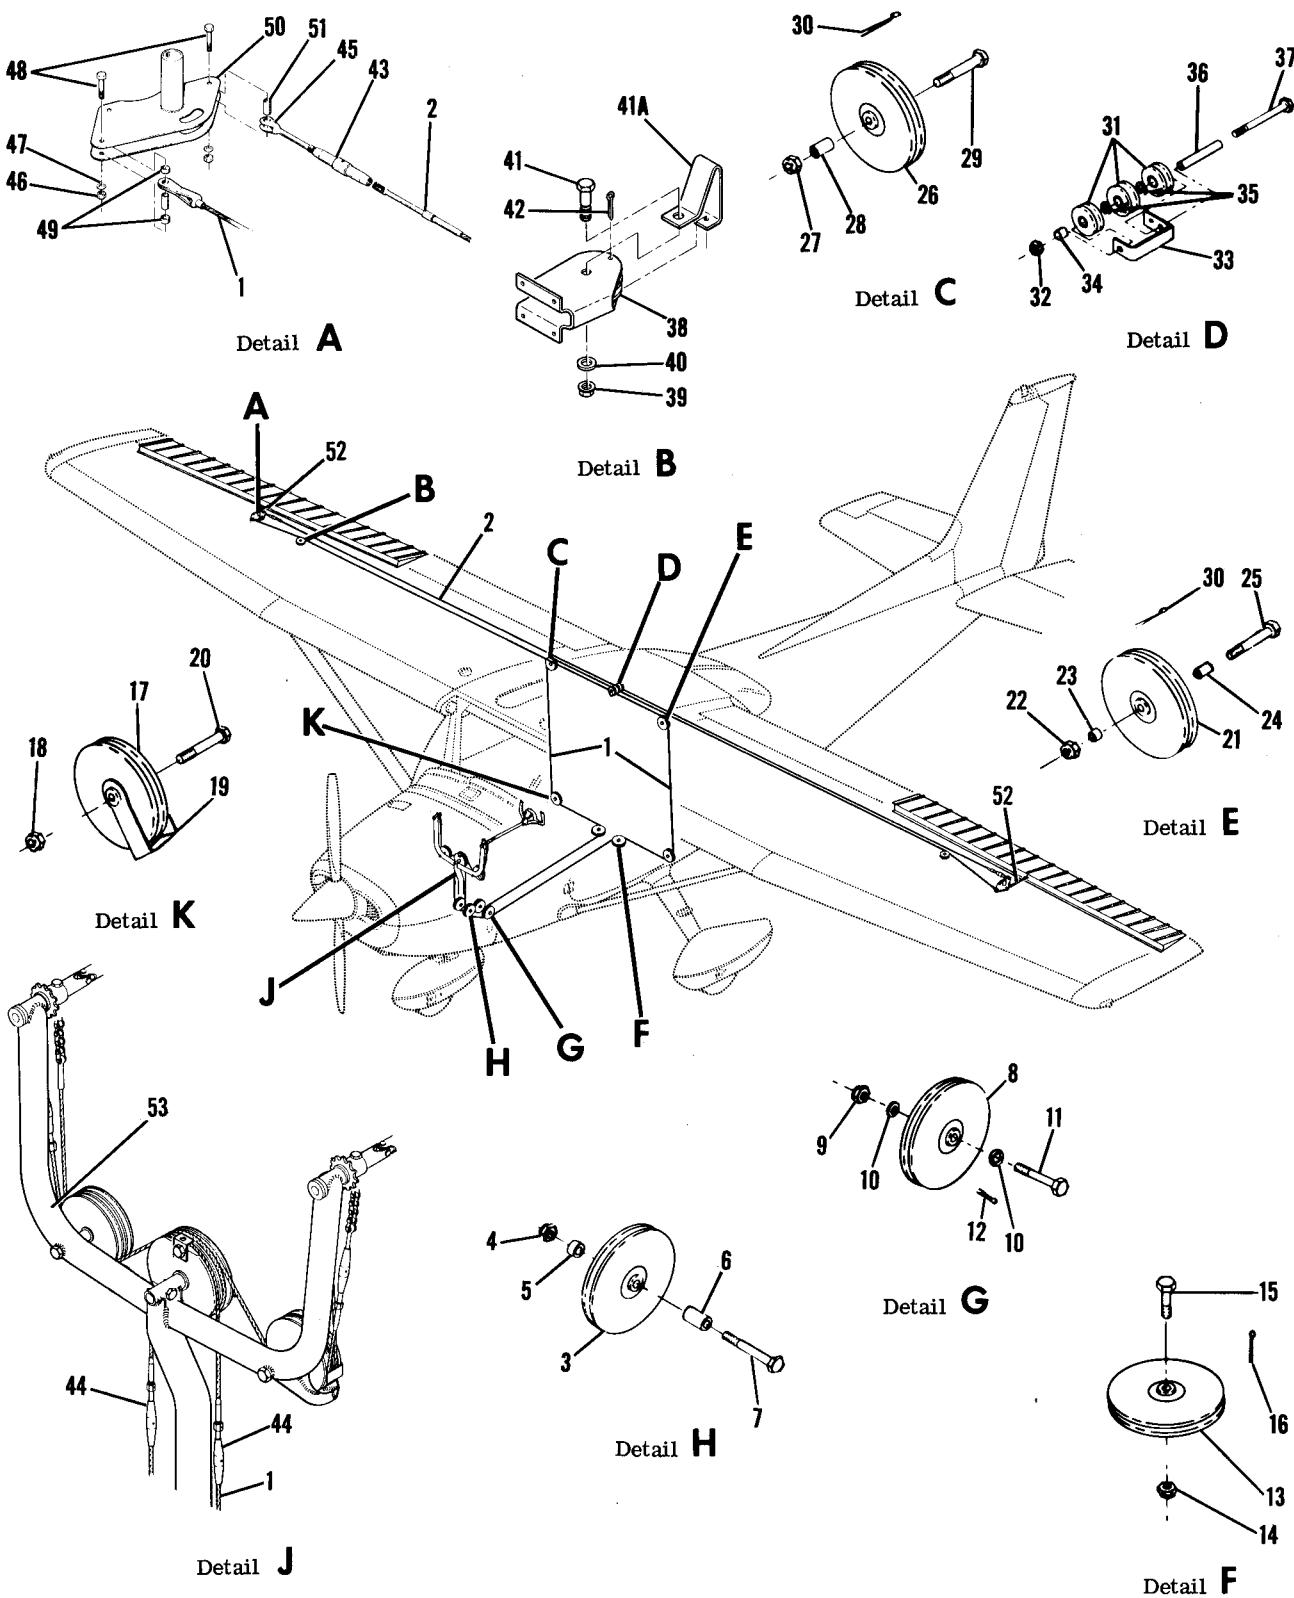


Figure 79. Aileron Control System








Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE				
			1	2	3	4	5	6
79 -12	MS24665-355	PIN-COTTER -----						
-13	S378-4	PULLEY -----	2					
-14		ATTACHING PARTS						
-15	MS21042L4	NUT -----						
-16	AN4-10A	BOLT -----	1					
-17		-----*	1					
-18	MS24665-136	PIN-COTTER -----						
-19	S378-4	PULLEY -----	2					
-20		ATTACHING PARTS						
-21	MS21042L4	NUT -----						
-22	0512135	GUARD-CABLE -----	1					
-23	AN4-21A	BOLT -----	1					
-24		-----*	1					
-25	S378-4	PULLEY -----						
-26		ATTACHING PARTS	1					
-27	MS21042L4	NUT -----						
-28	NAS43HT4-16	SPACER -----	4					
-29	NAS43HT4-28	SPACER -----	1					
-30	AN4-15A	BOLT -----	1					
-31		-----*	1					
-32	MS24665-140	PIN-COTTER -----						
-33	S394	PULLEY -----	4					
-34		ATTACHING PARTS	3					
-35	MS21044N3	NUT -----						
-36	0512136	GUARD-CABLE -----	1					
-37	NAS43HT4-16	SPACER -----	1					
-38	AN960-416	WASHER -----	1					
-39	AN4-15A	BUSHING -----	2					
-40		BOLT -----	1					
-41	0423016-1		1					
-42		GUARD-PULLEY -----	1					
-43		-----*	1					
-44	MS24665-134	PIN-COTTER -----						
-45	AN155B32L	BARREL-TURNBUCKLE -----	2					
-46	AN155B32S	BARREL-TURN BUCKLE -----	2					
-47	AN161-32LL	FORK -----	1					
-48	MS21044N3	NUT -----	4					
-49	AN310-3	NUT -----	4					
-50	AN960-10L	WASHER -----	4					
-51	AN3-7A	BOLT -----	4					
-52	AN3-7	BOLT -----	4					
-53	NAS43HT4-10	SPACER -----	6					
	MS24665-134	PIN-COTTER -----	4					
	0523223-1	BELLCRANK ASSEMBLY-AILERON RH	1					
	0523223	BELLCRANK ASSEMBLY-AILERON PUSH-PULL	1					
	0422280	BUSHING -----	2					
	0523218	ROD ASSEMBLY-AILERON PUSH-PULL	2					
	SEE FIG 78	CONTROL YOKE ASSEMBLY -----	1					
		A---172 SERIAL 17263459 THRU 17264785						
		F172 SERIAL F17201235 THRU F17201384						
		B---172 SERIAL 17264786 & ON						
		F172 SERIAL F17201385 & ON						

A
B
A
B
B

Flight Controls (Cont)

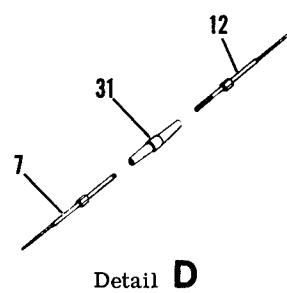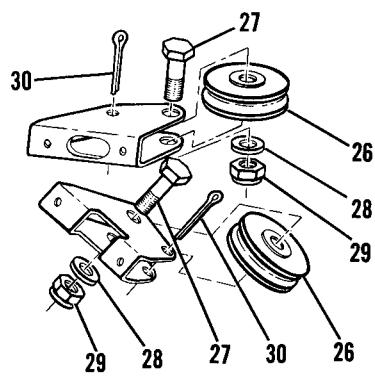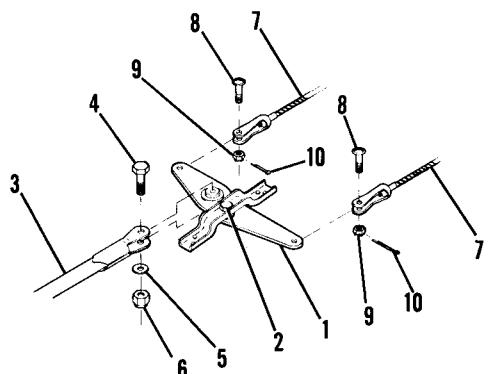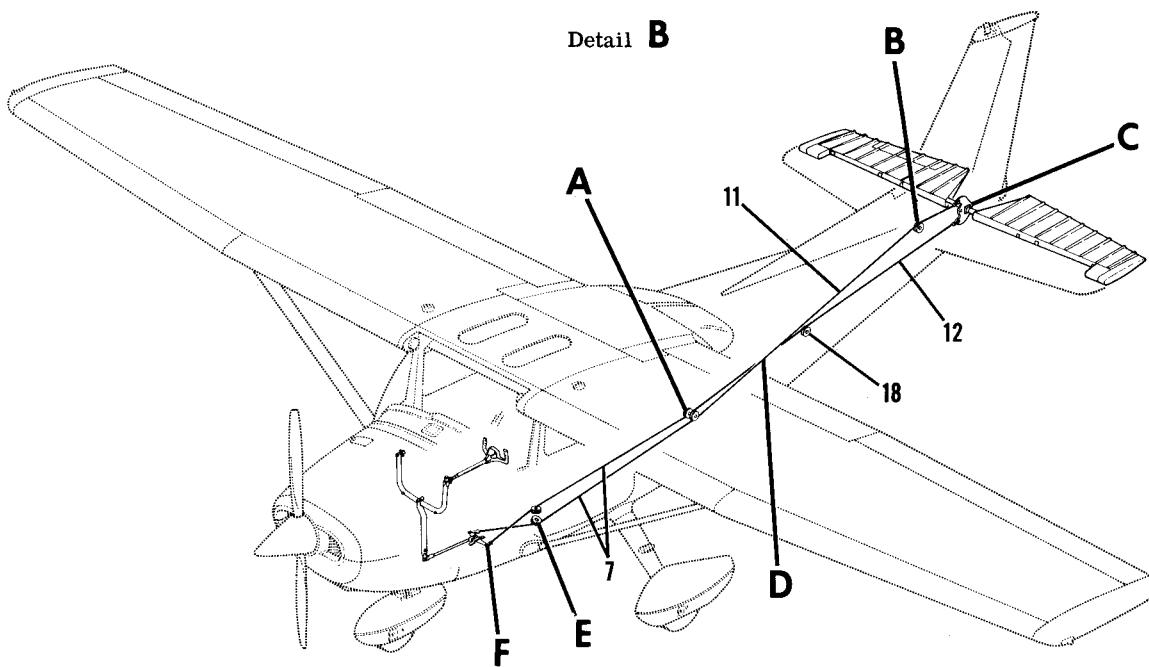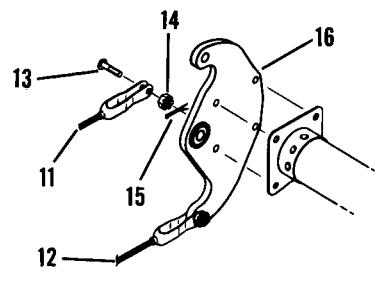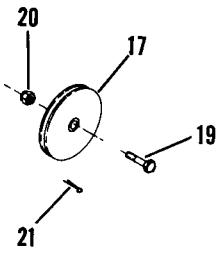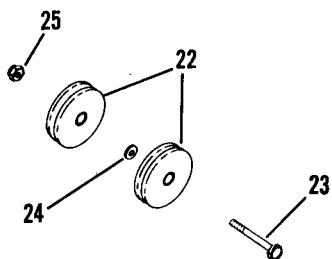

Detail F

Detail E

Detail D

Figure 80. Elevator Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
80 - - 1	0513370-1	ELEVATOR CONTROL SYSTEM ----- BELLCRANK-ELEVATOR FORWARD ----- ATTACHING PARTS	NP	
- 2	AN4-10A MS21042L4	BOLT ----- NUT ----- -----*	1 1 1	
- 3	0510161-12	TUBE-BELLCRANK TO CONTROL TEE ----- ATTACHING PARTS		1
- 4	AN4-10A	BOLT -----		2
- 5	AN960-416	WASHER -----		2
- 6	MS21042L4	NUT ----- -----*		2
- 7	0510105-208 0510105-308	CABLE-ELEVATOR FORWARD ----- CABLE-STAINLESS STEEL ELEVATOR FORWARD ----- ATTACHING PARTS		2 2
- 8	AN23-10	BOLT -----		2
- 9	AN310-3	NUT -----		2
-10	MS24665-134	PIN-COTTER ----- -----*		2
-11	0510105-209 0510105-309	CABLE-ELEVATOR AFT UPPER ----- CABLE-STAINLESS STEEL ELEVATOR AFT UPPER -----		1 1
-12	0510105-210 0510105-310	CABLE-ELEVATOR AFT LOWER ----- CABLE-STAINLESS STEEL ELEVATOR AFT LOWER ----- ATTACHING PARTS		1 1
-13	AN23-12	BOLT -----		2
-14	AN310-3	NUT -----		2
-15	MS24665-134	PIN-COTTER ----- -----*		2
-16	0534122-1	BELLCRANK-ELEVATOR REAR -----		1
-17	S378-3	PULLEY AFT UPPER -----		1
-18	S378-3L	PULLEY AFT LOWER ----- ATTACHING PARTS		1
-19	AN4-10A	BOLT -----		1
-20	MS21042L4	NUT -----		1
-21	MS24665-136	PIN-COTTER ----- -----*		1
-22	S378-3L	PULLEY ----- ATTACHING PARTS		2
-23	AN4-14A	BOLT -----		1
-24	AN960-416	WASHER -----		1
-25	MS21042L4	NUT ----- -----*		1
-26	MS20220-1	PULLEY ----- ATTACHING PARTS		2
-27	AN5-11A	BOLT -----		1
-28	AN960-516	WASHER -----		1
-29	MS21042L5	NUT -----		1
-30	MS24665-285	PIN-COTTER ----- -----*		1
-31	AN155832S	BARREL -----		2

Flight Controls (Cont)


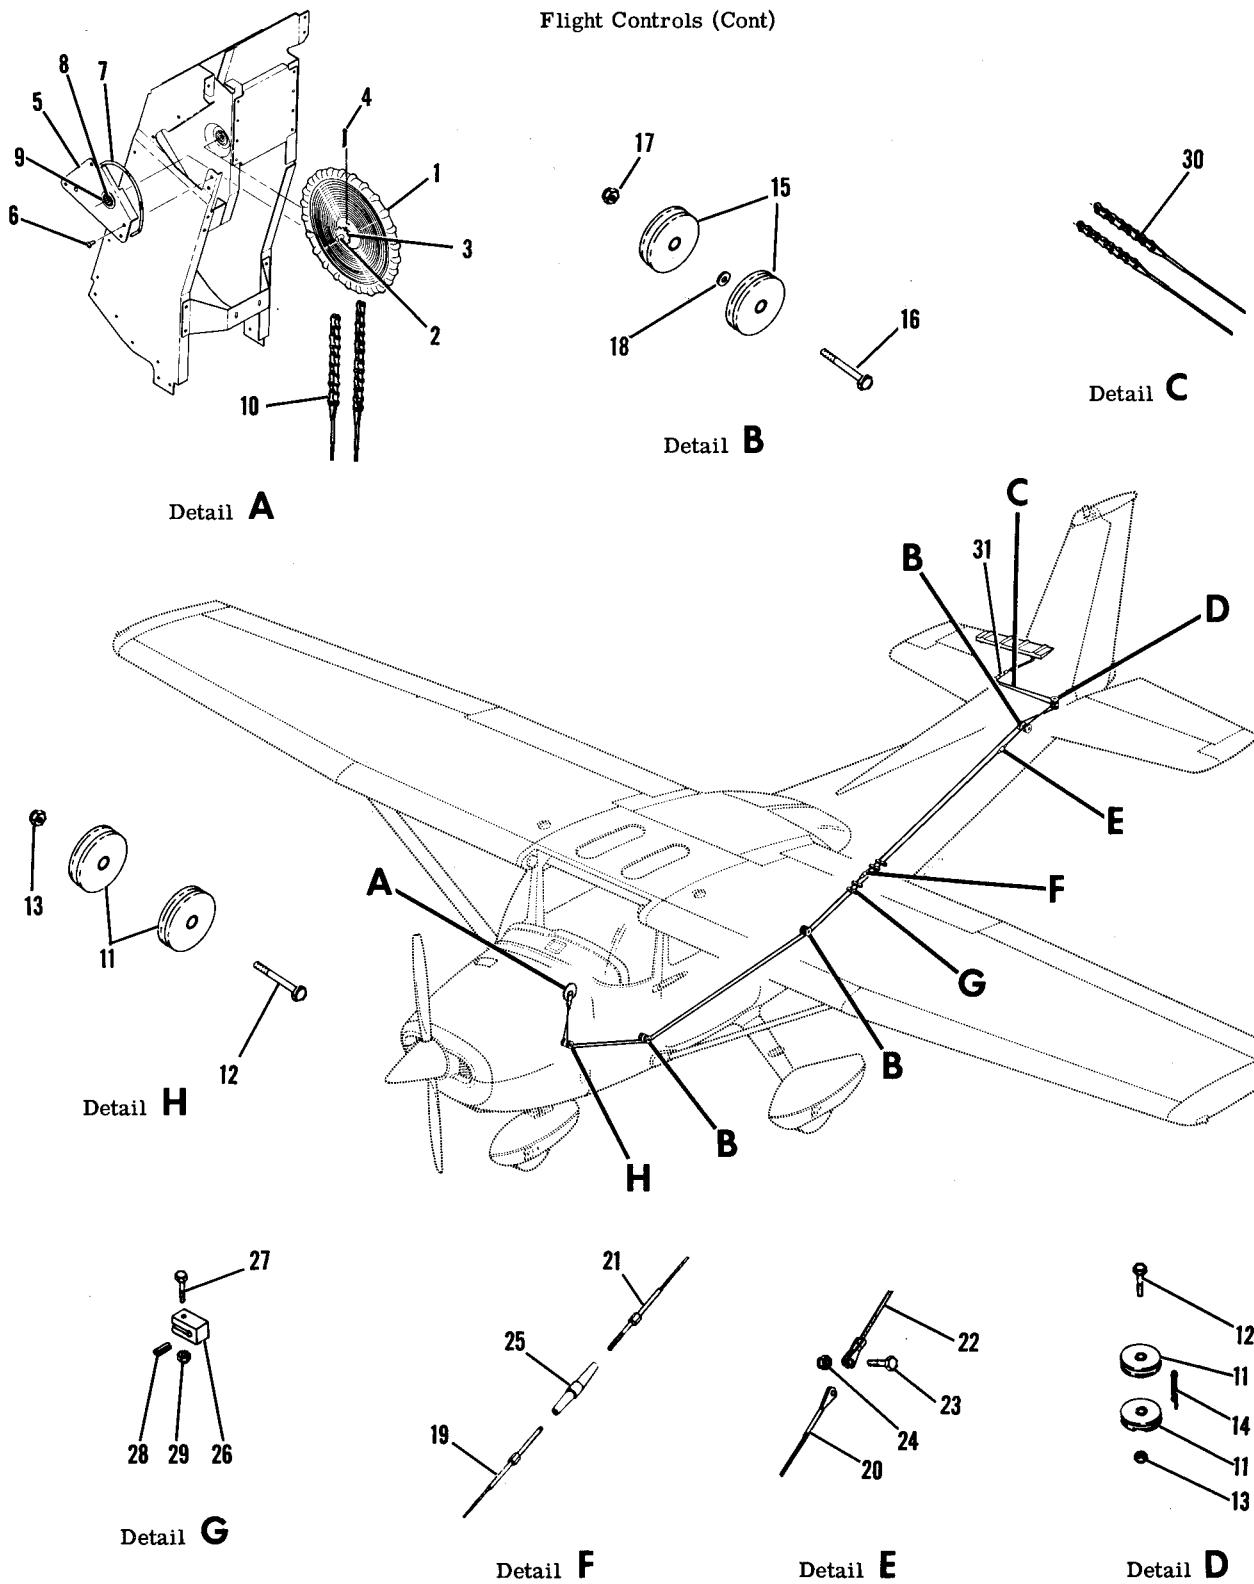



Figure 81. Elevator Trim Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
81 -		ELEVATOR TRIM CONTROL SYSTEM -----	NP	
- 1	0713656-1	WHEEL ASSEMBLY-TAB CONTROL -----	1	
- 2	0713656-3	SHAFT-TAB CONTROL -----	1	
- 3	0432134-1	SPROCKET -----	1	
		ATTACHING PARTS		
- 4	NAS561-3-8	PIN -----	2	
		-----*		
- 5	0713642-1	RETAINER ASSEMBLY-ELEVATOR TRIM -----	1	
		ATTACHING PARTS		
- 6	NAS220-5	SCREW -----	4	
		-----*		
- 7	0713642-3	INDICATOR-ELEVATOR TRIM -----	1	
		ATTACHING PARTS		
	0713032-1	BUSHING -----	1	
	0713032-2	COLLAR -----	1	
		-----*		
- 8	M451	BEARING TOR -----	1	
- 9	0411420	HOUSING -----	1	
-10	0432138-16	CHAIN-TAB CONTROL -----	1	
-11	S378-1	PULLEY -----	4	
		ATTACHING PARTS		
-12	AN3-10A	BOLT -----	1	
-13	MS21044N3	NUT -----	1	
-14	MS24665-355	COTTER PIN REAR PULLEYS ONLY -----	1	
		-----*		
-15	S378-1L	PULLEY -----	6	
		ATTACHING PARTS		
-16	AN3-10A	BOLT -----	1	
-17	MS21044N3	NUT -----	1	
-18	AN960-10L	WASHER TWO AFT PULLEYS ONLY -----	1	
		COTTER PIN FORWARD PULLEY ONLY -----	1	
		-----*		
-19	0510105-220	CABLE-TAB WHEEL TO TURNBUCKLE -----	1	
	0510105-320	CABLE-STAINLESS STEEL TAB WHEEL TO TURNBUCKLE -----	1	
-20	0510105-221	CABLE-TAB WHEEL TO DISCONNECT -----	1	
	0510105-321	CABLE-STAINLESS STEEL TAB WHEEL TO DISCONNECT -----	1	
-21	0510105-44	CABLE-TAB ACTUATOR TO TURNBUCKLE -----	1	
	0510105-144	CABLE-STAINLESS STEEL TAB ACTUATOR TO TURNBUCKLE -----	1	
-22	0510105-45	CABLE-TAB ACTUATOR TO DISCONNECT -----	1	
	0510105-145	CABLE-STAINLESS STEEL TAB ACTUATOR TO DISCONNECT -----	1	
		ATTACHING PARTS		
-23	AN3-5A	BOLT -----	1	A
	AN3-5	BOLT -----	1	B
-24	MS21044N3	NUT -----	1	A
	AN310-3	NUT -----	1	B
	MS24665-134	COTTER PIN -----	1	B
		-----*		
-25	AN155B8L	BARREL -----	1	
-26	0411523	BLOCK-ELEVATOR TAB STOP -----	1	
		ATTACHING PARTS		
-27	AN3-6A	BOLT -----	1	
-28	0411524	BUSHING -----	1	
-29	MS21044N3	NUT -----	1	
		-----*		
-30	0432138-6	CHAIN-CABLE TO TAB ACTUATOR -----	1	
-31	SEE FIG 19	ACTUATOR ASSEMBLY -----	1	
		A---172 SERIAL 17263459 THRU 17264202 F172 SERIAL F17201235 THRU F17201324 B---172 SERIAL 17264203 & ON F172 SERIAL F17201325 & ON		

Flight Controls (Cont)

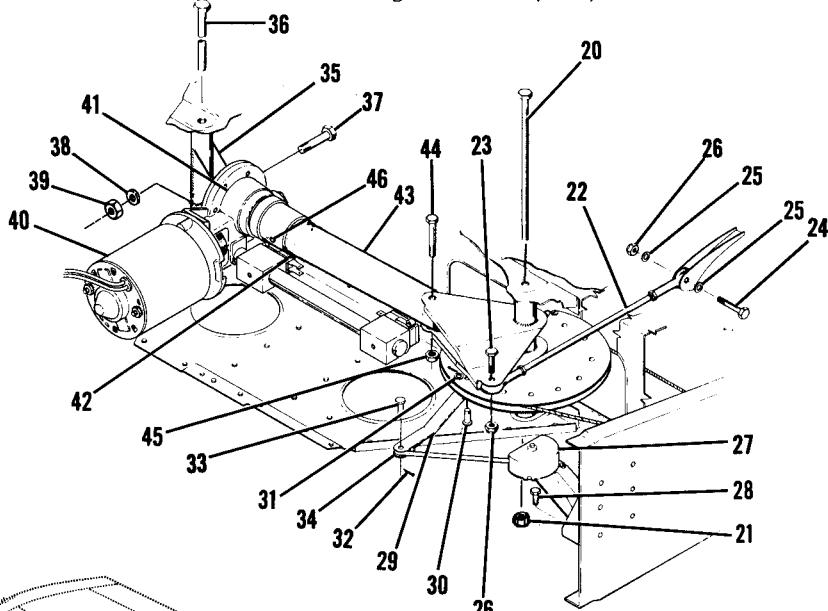

Detail A

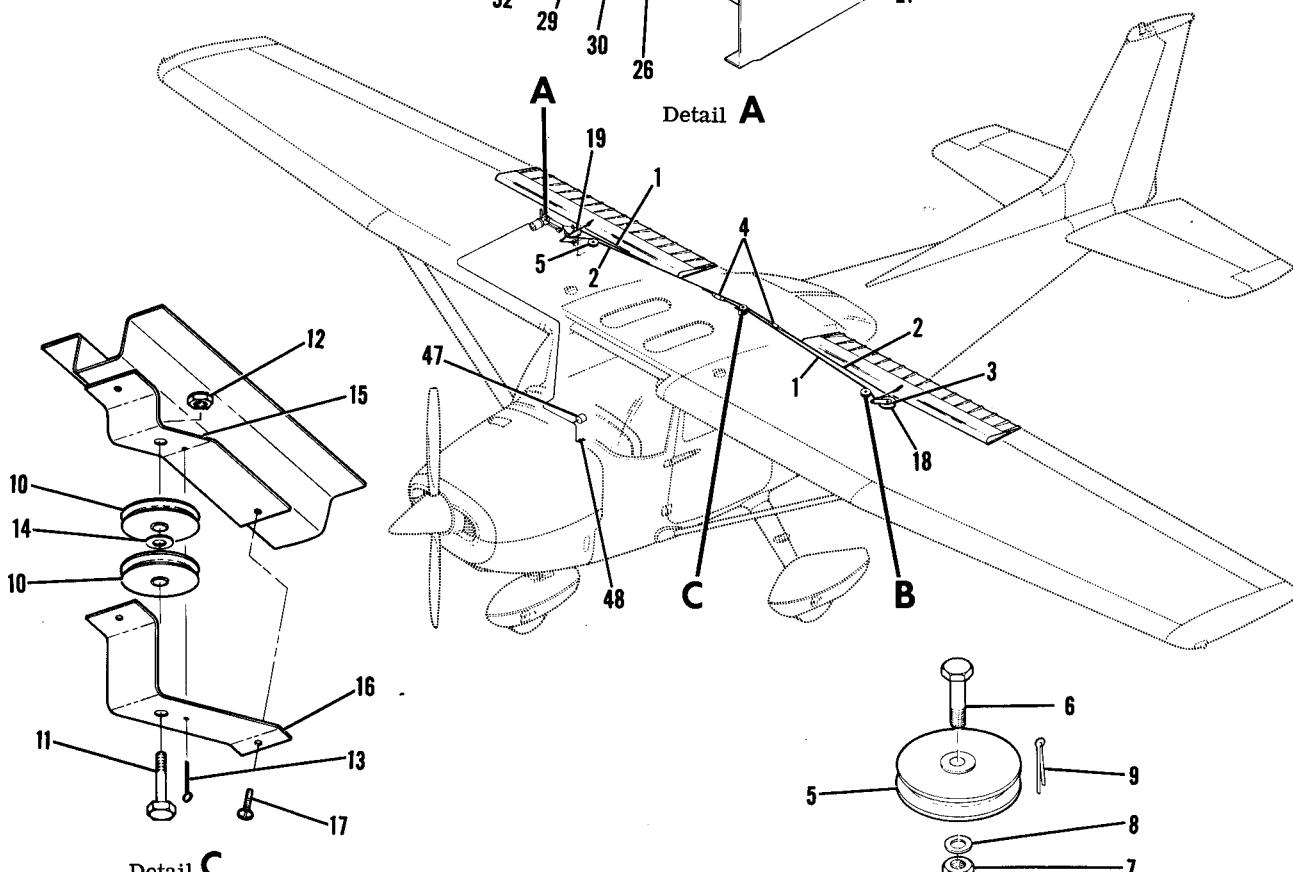

Detail B

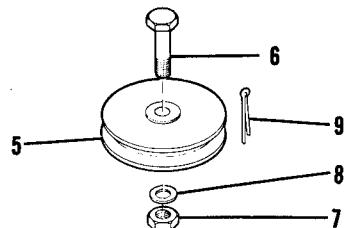



Figure 82. Flap Control System - Electric

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
82 -		FLAP CONTROL SYSTEM-ELECTRIC --		NP					
- 1	0510105-93	CABLE-FLAP RETRACT LH & DIRECT RH --		1					
	0510105-193	CABLE-FLAP STAINLESS STEEL --		1					
- 2	0510105-94	CABLE-FLAP RETRACT RH & DIRECT LH --		1					
	0510105-194	CABLE-FLAP STAINLESS STEEL --		1					
		ATTACHING PARTS							
- 3	MS20392-1C11	PIN --		2					
	MS24665-134	PIN-COTTER --		2					
- 4	AN155816S	BARREL --		1					
		----*							
- 5	S378-2	PULLEY --		2					
		ATTACHING PARTS							
- 6	AN3-7A	BOLT --		1					
- 7	MS21044N3	NUT --		1					
- 8	AN960-10	WASHER --		1					
		----*							
- 9	MS24665-134	PIN-COTTER --		1					
-10	S378-1L	PULLEY --		2					
		ATTACHING PARTS							
-11	AN3-10A	BOLT --		1					
-12	MS21044N3	NUT --		1					
-13	MS24665-285	PIN-COTTER --		1					
-14	AN960-10	WASHER --		1					
		----*							
-15	0512172-1	BRACKET-UPPER MOUNTING --		1					
-16	0512172-2	BRACKET-LOWER MOUNTING --		1					
		ATTACHING PARTS							
-17	AN520-10R6	SCREW --		2					
		----*							
-18	0760612-7	DRIVE PULLEY ASSY-LH --		1					
-19	0760612-1	DRIVE PULLEY ASSY-RH --		1					
		ATTACHING PARTS							
-20	AN4-60A	BOLT --		1					
	0523536	BUSHING --		1					
	0522629-1	WASHER --		2					
	AN960-416	WASHER --		2					
-21	MS21042L4	NUT --		1					
		----*							
	B610	BEARING TOR --		1					
-22	0523537	ROD ASSY --		1					
		ATTACHING PARTS							
-23	AN3-6A	BOLT --		1					
-24	AN3-11A	BOLT --		1					
-25	AN960-10	WASHER --		2					
-26	MS21044N3	NUT --		2					
		----*							
-27	C590501-0101	POSITION TRANSMITTER-FLAP --		1					
		ATTACHING PARTS							
-28	AN3-3A	BOLT --		2					
		----*							
-29	0510195-1	ARM ASSY-FLAP POSITION TRANSMITTER --		1					
		ATTACHING PARTS							
-30	MS20392-2C13	PIN --		1					
-31	AN960-10L	WASHER --		1					
-32	MS24665-132	PIN-COTTER --		2					
-33	MS20392-2C9	PIN --		1					
-34	NAS43003-12	SPACER --		1					
		----*							
-35	0760619-1	HINGE ASSY-FLAP MOTOR --		1					
		ATTACHING PARTS							
-36	AN4-56A	BOLT --		1					
	0523536	BUSHING --		1					
	MS21042L4	NUT --		1					
		----*							
	B610	BEARING TOR --		2					
		CONTINUED ON NEXT PAGE							


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
82 -	C301002-0301	ACTUATOR & MOTOR ASSY INTERNALLY FILTERED ----- ATTACHING PARTS	1	
-37	AN6-15A	BOLT -----	1	
-38	AN960-616	WASHER -----	1	
-39	MS21042L6	NUT -----	1	
		-----*		
-40	C301002-0103	MOTOR-FLAP ACTUATOR INTERNALLY FILTERED -----	1	
-41	C301002-0308	ACTUATOR & SWITCH BAR ASSY -----	1	
-42	U3L-3-D9	SWITCH ----- ATTACHING PARTS	2	
		SCREW -----	2	
		WASHER -----	2	
		-----*		
-43	C301001-0211 0760620-9	COUPLING-ACTUATOR ----- TUBE ASSY-FLAP ACTUATOR ----- ATTACHING PARTS	1 1	
-44	AN4-15A 0760614-1	BOLT -----	1	
-45	MS21042L4	BUSHING -----	1	
-46	AN565B428H4	NUT -----	1	
		SET SCREW -----	1	
		-----*		
-47	S1003-66A	BEARING -----	1	
-48		INDICATOR-FLAP SEE INSTRUMENT PANEL ----- SWITCH-FLAP SEE INSTRUMENT PANEL -----	1 1	

This page intentionally left blank.


Flight Controls (Cont)

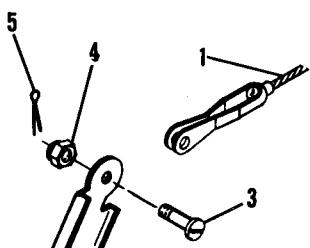



Detail A

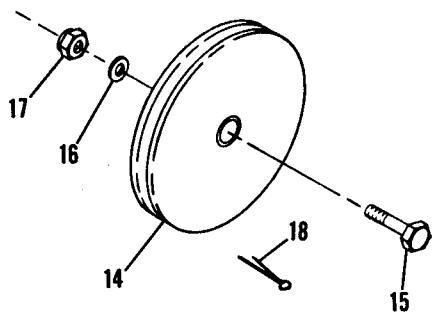


Detail B

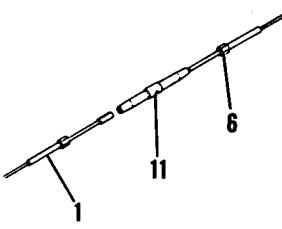

Detail C

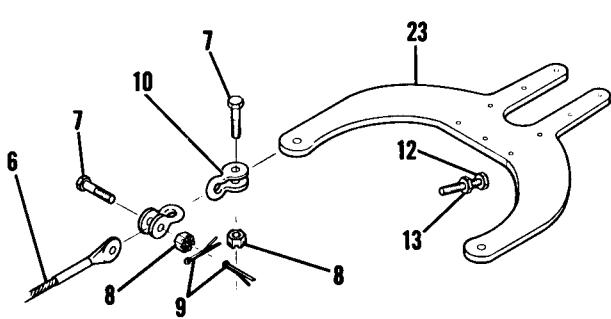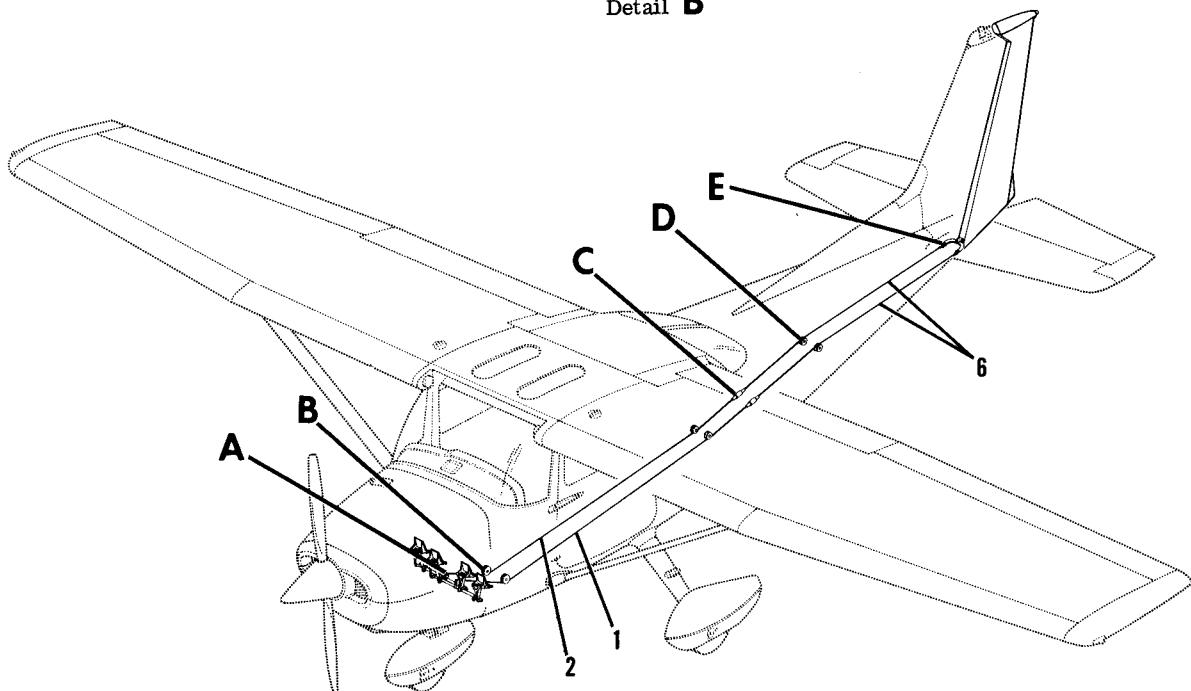

Detail E

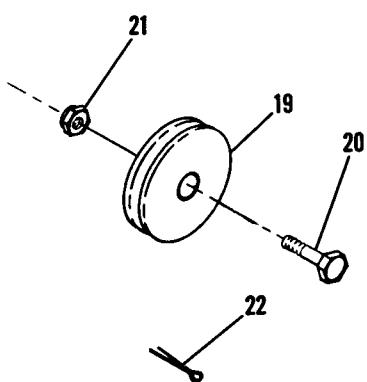

Detail D


172 SERIAL 17263459 THRU 17264202
F172 SERIAL F17201235 THRU F17201324

Figure 83. Rudder Control System


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
83 -		RUDDER CONTROL SYSTEM -----							
- 1	0510105-205	CABLE-FORWARD LH -----							
	0510105-305	CABLE-FORWARD LH STAINLESS STEEL -----							
- 2	0510105-206	CABLE-FORWARD RH -----							
	0510105-306	CABLE-FORWARD RH STAINLESS STEEL ----- ATTACHING PARTS							
- 3	AN23-10	BOLT -----							
- 4	AN310-3	NUT -----							
- 5	MS24665-134	COTTER PIN -----							
		-----*							
- 6	0510105-207	CABLE-AFT -----							
	0510105-307	CABLE-AFT STAINLESS STEEL ----- ATTACHING PARTS							
- 7	AN23-11	BOLT -----							
- 8	AN310-3	NUT -----							
- 9	MS24665-134	COTTER PIN -----							
-10	0533010-1	SHACKLE -----							
		-----*							
-11	AN155832S	BARREL -----							
-12	NAS428H3-6	BOLT-RUDDER STOP -----							
-13	AN315-3R	NUT-RUDDER STOP -----							
-14	S378-4	PULLEY ----- ATTACHING PARTS							
-15	AN4-14A	BOLT -----							
-16	AN960-416L	WASHER -----							
-17	MS21042L4	NUT -----							
		-----*							
-18	MS24665-355	COTTER PIN -----							
-19	S378-3L	PULLEY ----- ATTACHING PARTS							
-20	AN4-10A	BOLT -----							
-21	MS21042L4	NUT -----							
		-----*							
-22	MS24665-136	PIN-COTTER -----							
-23	SEE FIG 17	HORN-RUDDER -----							

A---172 SERIAL 17263459 THRU 17264202
 F172 SERIAL F17201235 THRU F17201324


Flight Controls (Cont)

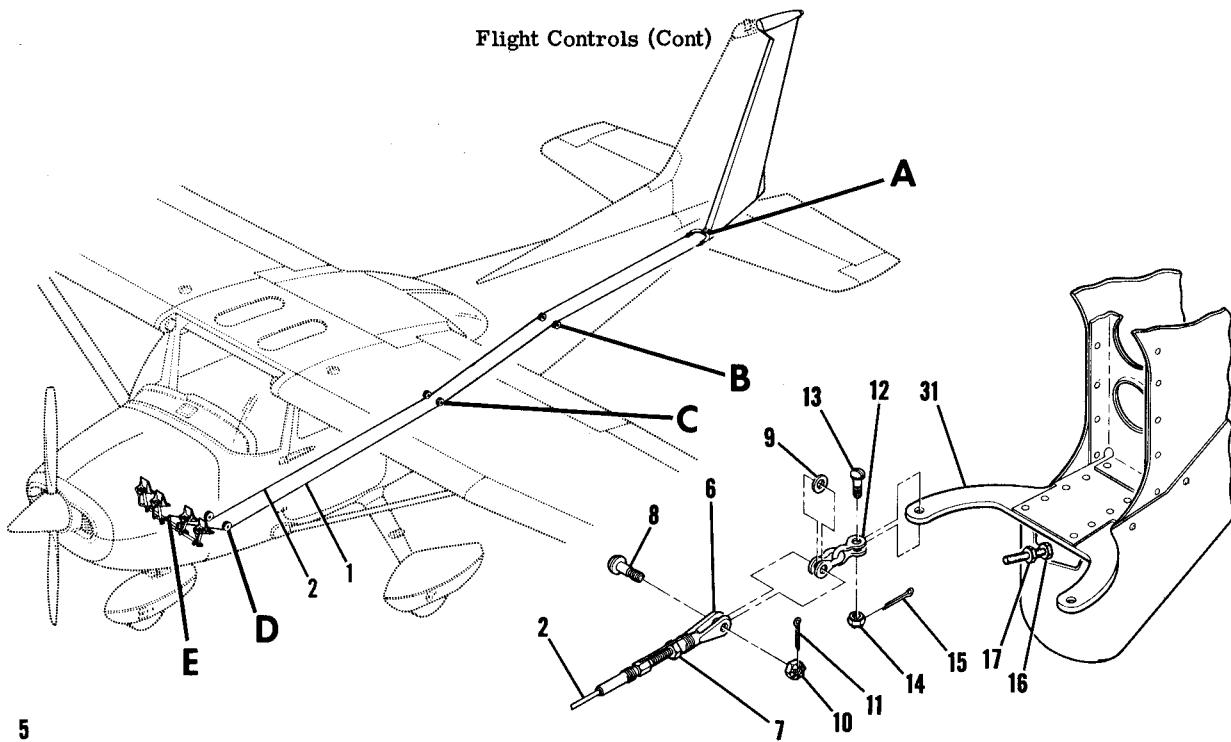


Detail A

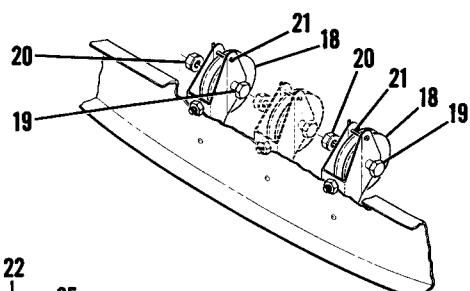

Detail E

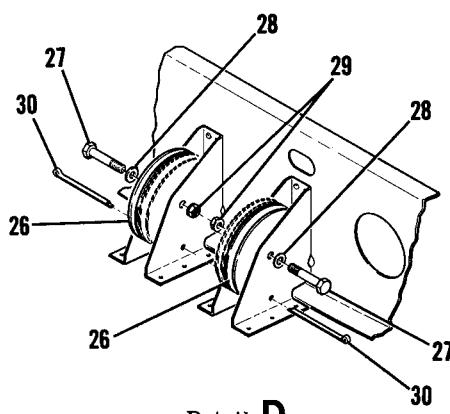

Detail D

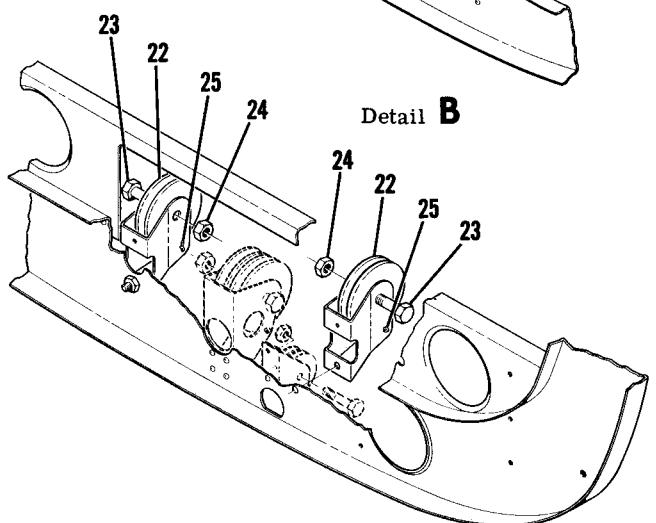


Detail B

Detail C


**172 SERIAL 17264203 & ON
F172 SERIAL F17201325 & ON**

Figure 83A. Rudder Control System



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
83A-		RUDDER CONTROL SYSTEM							
- 1	0510105-239	CABLE ASSY-LH							
	0510105-339	CABLE ASSY-LH STAINLESS STEEL	1						
- 2	0510105-238	CABLE ASSY-RH							
	0510105-338	CABLE ASSY-RH STAINLESS STEEL	1						
		ATTACHING PARTS							
- 3	AN23-10	BOLT							
- 4	AN310-3	NUT							
- 5	MS24665-134	COTTER PIN							
- 6	AN665-34R	CLEVIS USED WITH 1/4 INCH BOLT	1						
	MS27975-3	CLEVIS USED WITH 3/16 INCH BOLT	1						
- 7	AN315-4R	NUT							
- 8	AN24-12	BOLT 1/4 INCH THREADS	1						
	AN23-13	BOLT 3/16 INCH THREADS	1						
- 9	AN960-416L	WASHER USED WITH 1/4 INCH BOLT	1						
	AN960-10L	WASHER USED WITH 3/16 INCH BOLT	1						
-10	AN310-4	NUT USED WITH 1/4 INCH BOLT	1						
	AN310-3	NUT USED WITH 3/16 INCH BOLT	1						
-11	MS24665-134	COTTER PIN	1						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-12	0560016-1	SHACKLE ASSY USED WITH 1/4 INCH BOLT	2						
	054912-1	SHACKLE ASSY USED WITH 3/16 INCH BOLT	2						
		ATTACHING PARTS							
-13	AN23-10	BOLT							
-14	AN310-3	NUT							
-15	MS24665-134	COTTER PIN	1						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-16	NAS428H3-12	BOLT-RUDDER STOP	2						
-17	AN315-3R	NUT-RUDDER STOP	2						
-18	S378-3L	PULLEY	2						
		ATTACHING PARTS							
-19	AN4-10A	BOLT	1						
-20	MS21042L4	NUT	1						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-21	MS24665-136	COTTER PIN	2						
-22	S378-3L	PULLEY	2						
		ATTACHING PARTS							
-23	AN4-10A	BOLT	1						
-24	MS21042L4	NUT	1						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-25	MS24665-136	COTTER PIN	2						
-26	S378-4	PULLEY	2						
		ATTACHING PARTS							
-27	AN4-14A	BOLT	1						
-28	AN960-416L	WASHER							
-29	MS21042L4	NUT	2						
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
-30	MS24665-357	COTTER PIN	2						
-31	SEE FIG 17	HORN-RUDDER	1						
		A---172 SERIAL 17264203 & ON F172 SERIAL F17201325 & ON							

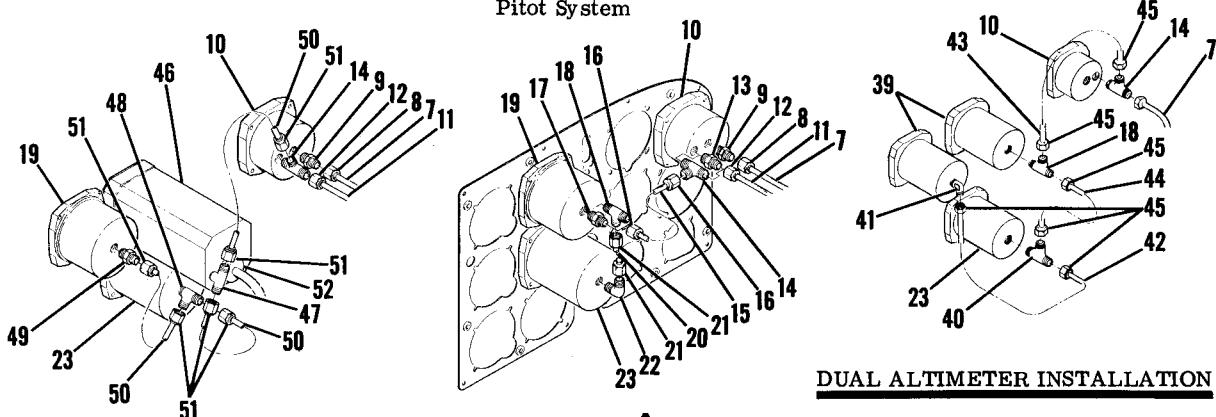

ENCODING ALTIMETER INSTALLATION
17263459 THRU 17265684
F17201235 THRU F17201384

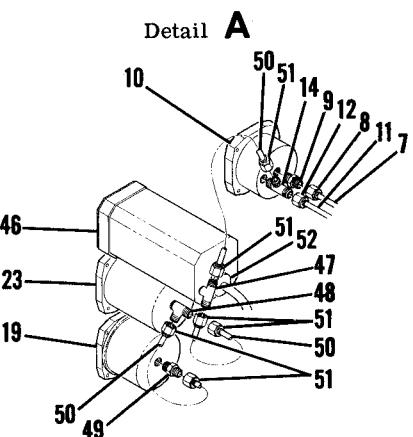

ENCODING ALTIMETER INSTALLATION
17265685 & ON
F17201385 & ON

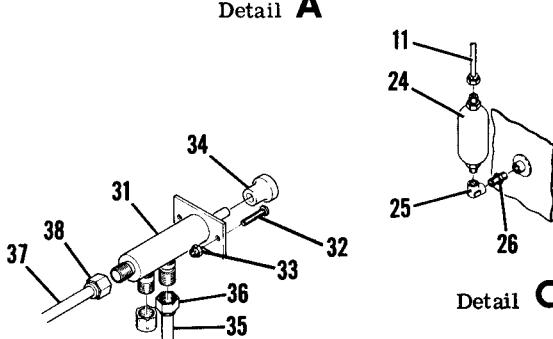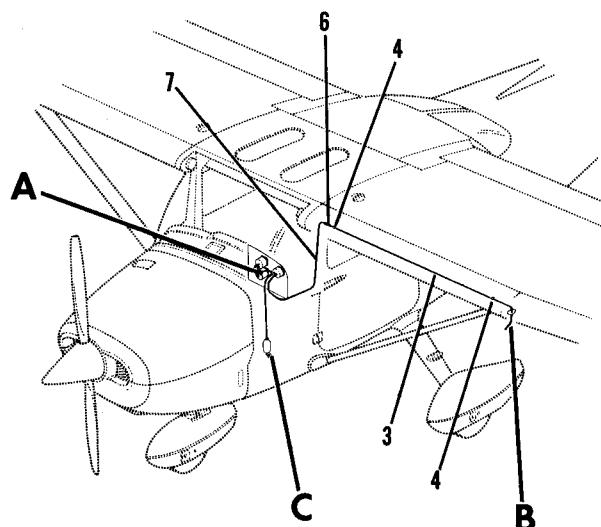

ALTERNATE STATIC SOURCE

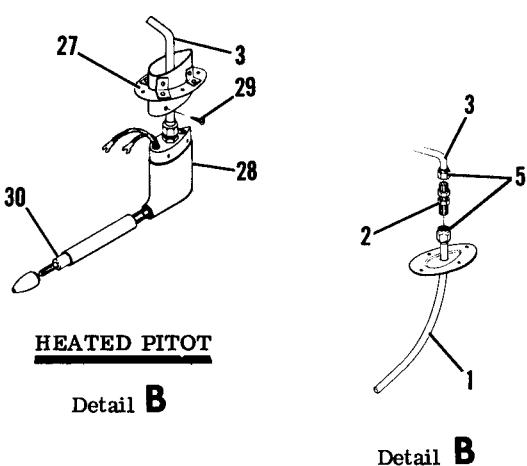


Figure 84. Pitot System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
84 -			PITOT SYSTEM								
- 1	0521103-4	3	TUBE ASSY-PITOT							NP	
			ATTACHING PARTS							1	
	S1021Z8-8		SCREW							4	

- 2	S1132-1		UNION							1	
- 3	S1071-1		TUBE-POLYETHYLENE 46.00 IN LG	BKI						1	
			ATTACHING PARTS								
- 4	ANT42D4		CLAMP							2	
	NAS395-16-3		NUT							1	
	MS21045L6		NUT							1	
	S1021Z8-8		SCREW							1	
	AN515-6R8		SCREW							1	

- 5	S1130-1		NUT							3	
	S1131-1		INSERT							3	
- 6	S1132-1		UNION							1	
- 7	S1071-1		TUBE-POLYETHYLENE 55.00 IN LG	BKI						1	
- 8	S1130-1		ATTACHING PARTS							2	
	S1131-1		NUT							2	
	S1133-1		INSERT							2	
- 9	S1133-1		CONNECTOR							1	
- 10			INDICATOR-AIRSPED	SEE INSTRUMENT PANEL						1	
			CIRCUIT BREAKER-PITOT HEAT	SEE INSTRUMENT PANEL						1	
- 11	S1071-1		TUBE-POLYETHYLENE 16.00 IN LG	BKI						1	
- 12	S1130-1		NUT							2	
	S1131-1		INSERT							2	
- 13	S1133-1		CONNECTOR							1	
- 14	S1139-1		TEE							1	
- 15	S1071-1		TUBE-POLYETHYLENE 9.00 IN LG	BKI						1	
- 16	S1130-1		NUT							2	
	S1131-1		INSERT							2	
- 17	S1133-1		CONNECTOR							1	
- 18	S1139-1		TEE							1	
- 19			ALTIMETER	SEE INSTRUMENT PANEL						1	
- 20	S1071-1		TUBE-POLYETHYLENE 9.00 IN LG	BKI						1	
- 21	S1130-1		NUT							2	
	S1131-1		INSERT							2	
- 22	S1135-1		ELBOW							1	
- 23			INDICATOR-VERTICAL SPEED	SEE INSTRUMENT PANEL						1	
- 24	S1258-1		SUMP ASSY-PITOT STATIC LINE							1	
- 25	AN916-1D		ELBOW							1	
- 26	AN911-1D		NIPPLE							1	
- 27	0721101-8		CONNECTOR ASSY							1	
			ATTACHING PARTS								
	S1021Z8-8		SCREW							4	

	NAS395-14-3		NUT							4	
- 28	0721105-27		PITOT TUBE ASSY	HEATED						1	
	0721105-30		PITOT TUBE ASSY	HEATED						1	
			ATTACHING PARTS							1	
- 29	AN507-640R4		SCREW							4	

- 30	0721105-5		HEATER ASSY							1	
			STATIC SOURCE INSTALLATION							NP	
- 31	2013142-1		VALVE ASSY							1	
			ATTACHING PARTS								
- 32	AN509-8R7		SCREW							2	
- 33	MS21044N08		NUT							2	

- 34	S1981-5		KNOB ASSY							1	
- 35	S1071-1		TUBE-POLYETHYLENE * IN LG	BKI						1	
- 36	S1130-1		NUT							2	
	S1131-1		INSERT							2	
			CONTINUED ON NEXT PAGE								

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
84 -37	S1071-1	TUBE-POLYETHYLENE * IN LG	BKI	REF S1071-1-* -----	1	
-38	S1130-1	NUT -----			2	
	S1131-1	INSERT -----			2	
-39		DUAL ALTIMETER INSTALLATION	F172 ONLY	-----	NP	
-40	S1139-1	ALTIMETER SEE INSTRUMENT PANEL	-----		2	
-41	S1135-1	TEE -----			1	
-42	S1071-1	ELBOW -----			1	
-43	S1071-1	TUBE-POLYETHYLENE * IN LG	BKI	REF S1071-1-* -----	1	
-44	S1071-1	TUBE-POLYETHYLENE * IN LG	BKI	REF S1071-1-* -----	1	
-45	S1130-1	TUBE-POLYETHYLENE * IN LG	BKI	REF S1071-1-* -----	1	
	S1131-1	NUT -----			6	
		INSERT -----			6	
-46	42540-3114	ENCODING ALTIMETER INSTALLATION	-----		NP	A
	42540-3214	ALTIMETER-ENCODING FEET & INCHES	ARC	-----	1	
	AN51586R7	ALTIMETER-ENCODING FEET & MILLIBARS	ARC	-----	1	
		ATTACHING PARTS				
		SCREW -----			3	
		-----*				
-47	S1138-1	TEE -----			1	
-48	S1139-1	TEE -----			1	
-49	S1133-1	CONNECTOR -----			1	
-50	S1071-1	TUBE * IN LG	BKI	REF S1071-1-* -----	3	
-51	S1130-1	NUT -----			6	
-52	S1131-1	INSERT -----			6	
		CABLE ASSY SEE CESSNA ELECTRONICS MANUAL	-----		1	
		NOTE. *LENGTH TO BE ADDED LATER.				
		NOTE. WHEN ORDERING THIS PART ALSO ORDER S1130-1 NUT.				
		A---172 SERIAL 17263459 & ON F172 SERIAL F17201385 & ON				

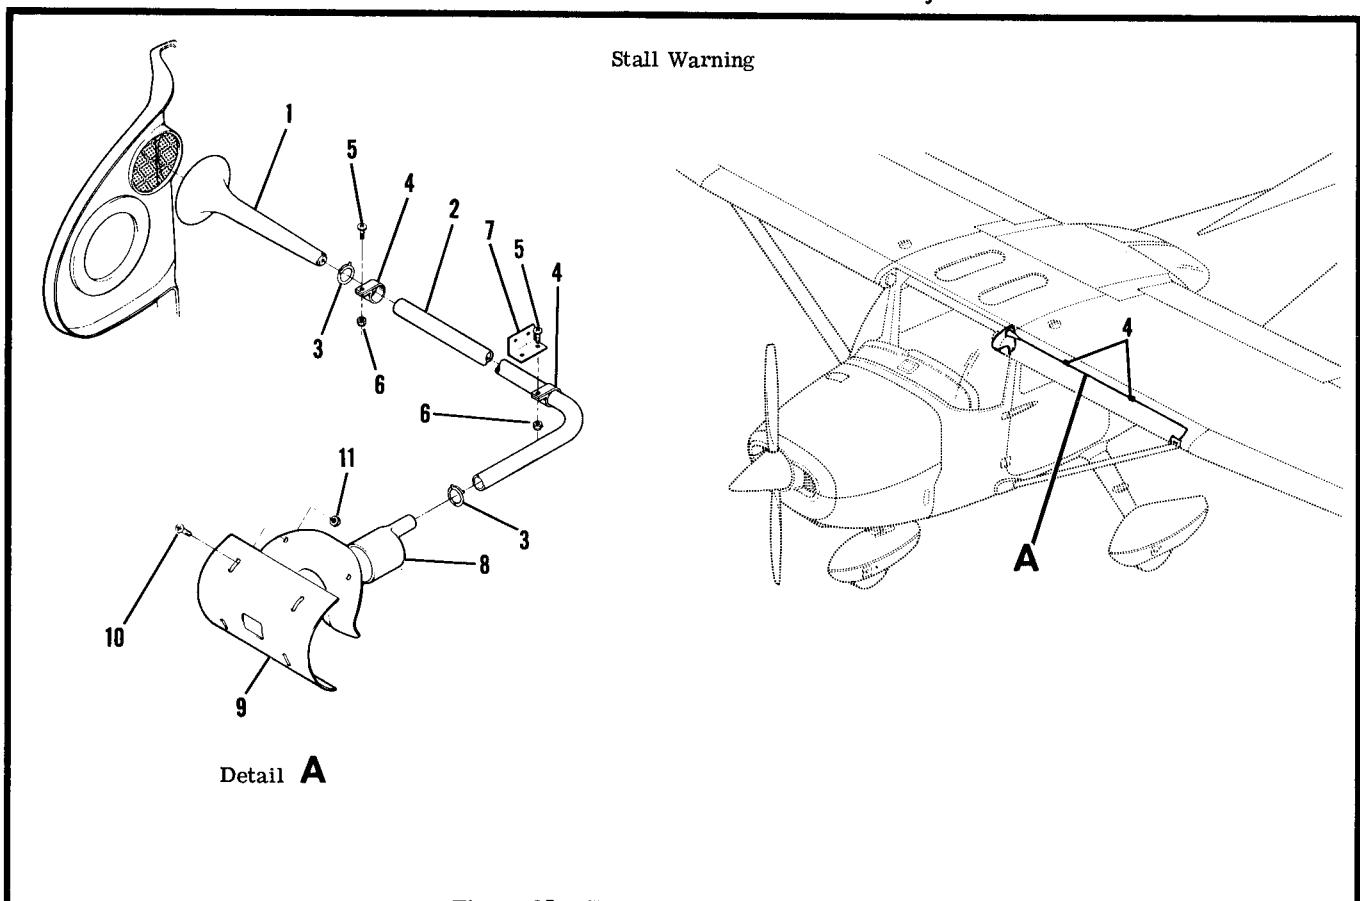


Figure 85. Stall Warning Horn Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
85 -		STALL WARNING HORN INSTALLATION -----	NP						
- 1	0413483-1	HORN ASSY-STALL WARNING -----	1						
- 2	S1071-4	TUBE 72.0 IN LG BKI REF S1071-4-72.0 -----	1						
- 3	S1494-8	ATTACHING PARTS -----							
- 4	AN742D8	CLAMP -----	2						
- 5	S1021Z6-6	CLAMP -----	4						
- 6	NAS395-12-3	SCREW -----	4						
- 7	0422292	NUT -----	4						
- 8	0413028-10	BRACKET -----	1						
	0413485-2	-----*							
- 9	0413028-9	SCOOP ASSY -----	1						
		SCREEN INSIDE SCOOP -----	1						
- 10	S1021Z8-8	SCOOP PLATE-STALL WARNING -----	1						
- 11	NAS395-18-1	ATTACHING PARTS -----							
		SCREW -----	4						
		NUT -----	4						
		-----*							

Oil Filter


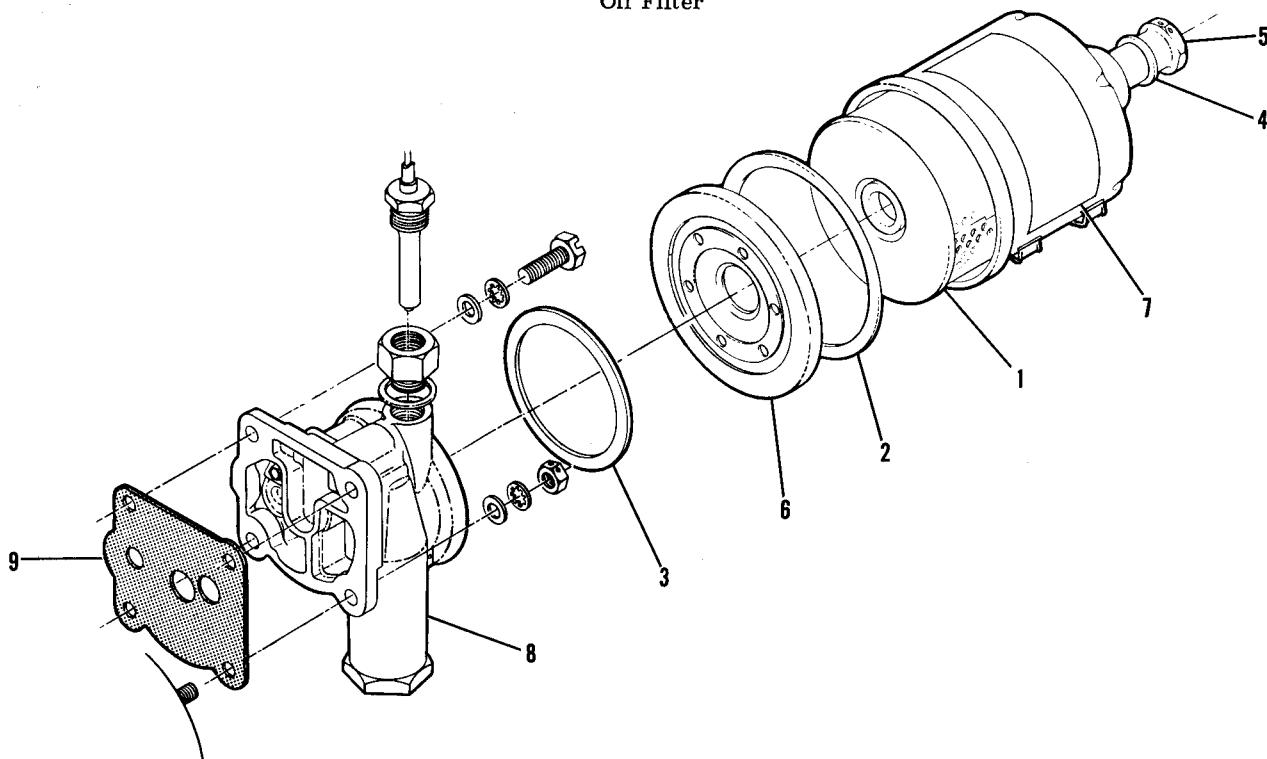


Figure 86. Oil Filter Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
86 -		OIL FILTER INSTALLATION -----	NP	
- 1	C294505-0101	OIL FILTER ASSY -----	1	
- 2	C294505-0102	FILTER ELEMENT KIT -----	1	
- 3	6436637	GASKET AC -----	1	
- 4	6436635	GASKET AC -----	1	
- 5	5579654	METAL GASKET AC -----	1	
- 6	6436916	STUD-CENTER AC -----	1	
- 7	6436989	LID-OIL FILTER AC -----	1	
- 8	1250410-3	PLACARD-OIL FILTER -----	1	
- 9	6439036	ADAPTER ASSY-OIL FILTER AC -----	1	
	*	GASKET-ADAPTER AC -----	1	
NOTE. *THIS ASSEMBLY INCLUDES GASKETS AND ATTACHING PARTS.				

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
87 -		FUEL SYSTEM -----							
- 1	0523559-12	LINE ASSEMBLY-VENT STANDARD -----	1						
	0523559-11	LINE ASSEMBLY-VENT LONG RANGE -----	1						
- 2	0512006-1	ANGLE -----	1						
	S1486DG6U	CLAMP -----	1						
	S1021Z8-8	SCREW -----	1						
		-----*							
- 3	MS35489-11	GROMMET -----	1						
- 4	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00 -----	4						
	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00 -----	2						
		LONG RANGE TANK ONLY							
		ATTACHING PARTS -----							
- 5	S1891-6	CLAMP -----	2						
		-----*							
- 6	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00 -----	2						
		ATTACHING PARTS -----							
- 7	S1891-6	CLAMP -----	2						
		-----*							
- 8	0500118-124	LINE ASSY-VENT -----	1						
- 9	0500118-123	LINE ASSY-VENT LONG RANGE TANKS -----	1						
		ATTACHING PARTS -----							
-10	0513399-1	BRACKET -----	2						
	MS21919DG6	CLAMP -----	2						
	AN520-10R8	SCREW -----	2						
	AN960-10	WASHER -----	2						
	MS21044N3	NUT -----	2						
		-----*							
-11	0422130	STRAINER-FUEL TANK -----	2						
-12	0500106-83	LINE ASSY-FUEL TANK -----	2						
-13	AN815-6D	UNION -----	2						
-14	0556020-1	LINE ASSY-FUEL LH UNION TO UNION -----	1						
-15	0556020-2	LINE ASSY-FUEL RH UNION TO UNION -----	1						
		ATTACHING PARTS -----							
-16	S1486DG6U	CLAMP TIN -----	1						
	S1021Z8-8	SCREW -----	1						
		-----*							
-17	AN815-6D	UNION -----	2						
-18	0500118-116	LINE ASSY-FUEL LH UNION TO UNION -----	1						
-19	0500118-117	LINE ASSY-FUEL RH UNION TO UNION -----	1						
		ATTACHING PARTS -----							
-20	S1486DG6U	CLAMP TIN -----	1						
	S1021Z8-8	SCREW -----	1						
-20A	MS35489-106	GROMMET -----	1						
		-----*							
-21	S292-12	SLEEVE * IN LG BULK ITEM REF S292-12-* -----	AR						
-22	0556020-3	LINE ASSY-FUEL -----	2						
-23	0556020-9	LINE ASSY-FUEL LONG RANGE TANK -----	2						
-24	AN824-6D	TEE LONG RANGE TANK -----	2						
-25	0500118-29	LINE ASSY-LH UNION TO UNION -----	1						
-26	0500118-30	LINE ASSY-RH UNION TO UNION -----	1						
		ATTACHING PARTS -----							
-27	S1154-1	BRACKET -----	1						
	S1486DG6U	CLAMP -----	1						
	S1021Z8-8	SCREW -----	1						
	S1021Z8-6	SCREW -----	1						
		-----*							
-28	0500118-33	LINE ASSY-LH UNION TO UNION -----	1						
-29	0500118-155	LINE ASSY-RH UNION TO UNION -----	1						
-30	AN815-6D	UNION -----	4						
-31	SEE FIG 89	VALVE ASSY-FUEL SELECTOR -----	1						
		ATTACHING PARTS -----							
-32	AN515-8R8	SCREW -----	2						
		-----*							
-33	0511253-1	BRACKET ASSY-FUEL SELECTOR VALVE -----	1						
	MS21044N08	NUTPLATE -----	2						
		CONTINUED ON NEXT PAGE							

Fuel System


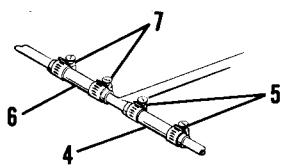


Detail A

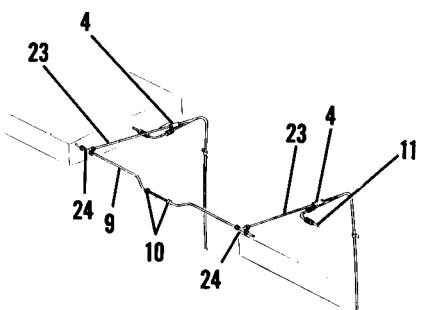

LONG RANGE TANK


Detail B

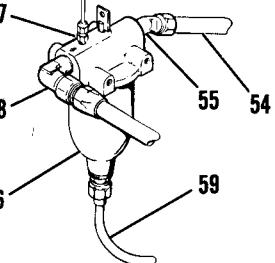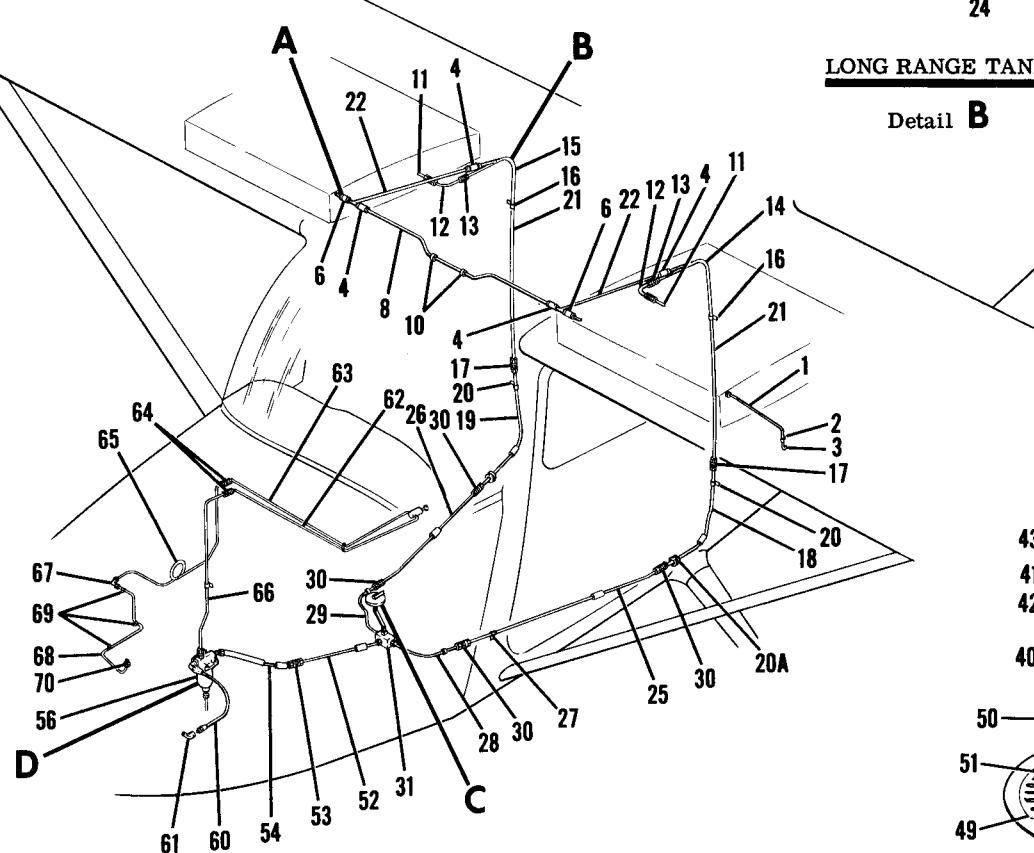

Detail D

FLOATPLANE ONLY

Detail D

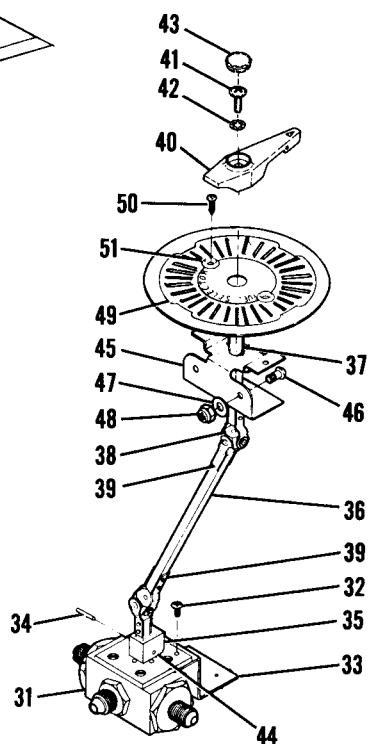

Detail C

Figure 87. Fuel System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE				
			1	2	3	4	5	6
87 -	0513382-16	DRIVE ASSY-FUEL SELECTOR ----- ATTACHING PARTS ----- PIN-SPRING ----- -----*	1					
-34	NAS561P3-8	HOUSING-POSITIONING BALL & SPRING ----- SHAFT-FUEL SELECTOR ----- SHAFT-FUEL SELECTOR ----- KNUCKLE ----- PIVOT-SHAFT ----- HANDLE-FUEL SELECTOR ----- ATTACHING PARTS ----- SCREW ----- WASHER ----- -----*	1					
-35	0513124-3	CAP -----	1					
-36	0513382-13	BALL-DETENT -----	1					
-37	0516008-1	SPRING -----	1					
-38	0513382-15	BRACKET-FUEL SELECTOR GUIDE ----- ATTACHING PARTS ----- SCREW ----- WASHER ----- NUT ----- -----*	2					
-39	0513382-14	PLACARD ASSY-FUEL SELECTOR VALVE ----- ATTACHING PARTS ----- SCREW ----- WASHER ----- -----*	8					
-40	0716623-2	LINE ASSY-FUEL SELECTOR VALVE TO UNION ----- UNION ----- LINE ASSY-UNION TO STRAINER ----- ELBOW ----- FUEL STRAINER & DRAIN CONTROL INSTALLATION ----- NIPPLE ----- ELBOW ----- LINE-STRAINER DRAIN ----- HOSE ASSY 24 IN LG BULK ITEM REF S1167-8-0240 ----- ELBOW ----- LINE ASSY-PRIMER ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-41	AN525-832P6	UNION ----- NUT ----- WASHER ----- -----*	1					
-42	AN936A8	LINE ASSY-PRIMER ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-43	0716624-1	ELBOW ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	1					
-44	S272-207	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	1					
-45	0513120-1	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	1					
-46	0500242-2	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	1					
-47	AN520-10R7	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	2					
-48	AN960-10	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	2					
-49	MS21044N3	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- WASHER ----- NUT ----- -----*	2					
-50	SEE FIG 2	PLACARD ASSY-FUEL SELECTOR VALVE ----- ATTACHING PARTS ----- SCREW ----- WASHER ----- -----*	1					
-51	S1023A6-6C	LINE ASSY-FUEL SELECTOR VALVE TO UNION ----- UNION ----- LINE ASSY-UNION TO STRAINER ----- ELBOW ----- FUEL STRAINER & DRAIN CONTROL INSTALLATION ----- NIPPLE ----- ELBOW ----- LINE-STRAINER DRAIN ----- HOSE ASSY 24 IN LG BULK ITEM REF S1167-8-0240 ----- ELBOW ----- LINE ASSY-PRIMER ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	2					
-52	S1067C1	UNION ----- NUT ----- WASHER ----- -----*	2					
-53	0500118-75	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-54	AN815-8D	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-55	0500118-74	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-56	MS20823-8D	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-57	SEE FIG 88	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-58	AN816-2D	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-59	MS20822-8D	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-60	0500118-95	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-61	S1167-8	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-62	8-4VTX-S	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-63	0500118-109	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
	0500118-110	S1155-2 ----- S1021Z8-8 ----- NAS446-4-3 ----- -----*	2					
-64	S1167-8	UNION ----- NUT ----- WASHER ----- -----*	2					
-65	8-4VTX-S	LINE ASSY-PRIMER ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	4					
-66	0500118-99	LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
	0500118-102	AN742D2 ----- S1021Z8-6 ----- NAS446-4-3 ----- -----*	1					
-67	AN821-2D	ELBOW ----- LINE ASSY-PRIMER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-68	1700121-96	LINE ASSY-PRIMER ----- TO CYLINDER ----- ATTACHING PARTS ----- CLAMP ----- SCREW ----- NUT ----- -----*	1					
-69	0550100-8	BRACKET ----- CLAMP ----- SCREW ----- -----*	3					
	S1485D2L		3					
	S1021Z8-5C		3					
-70	AN4022-1	JET ----- LINE ASSY-FIREWALL TO STRAINER ----- FLOATPLANE ONLY ----- CONTINUED ON NEXT PAGE	1					
-71	0500118-78		1					

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
87 -72	AN833-8D	ELBOW FLOATPLANE ONLY ----- ATTACHING PARTS	1	
-73	AN960D1216L	WASHER -----	2	
-74	AN924-8D	NUT -----	1	
-75	MS20823-8D	ELBOW FLOATPLANE ONLY -----	2	
-76	0513129	BRACKET-FUEL STRAINER FLOATPLANE ONLY -----	1	
-77	MS20074-03-04	BOLT FLOATPLANE ONLY -----	2	
-78	AN936A10	WASHER FLOATPLANE ONLY -----	2	
-79	AN970-3	WASHER FLOATPLANE ONLY -----	2	

This page intentionally left blank.

Fuel System (Cont)

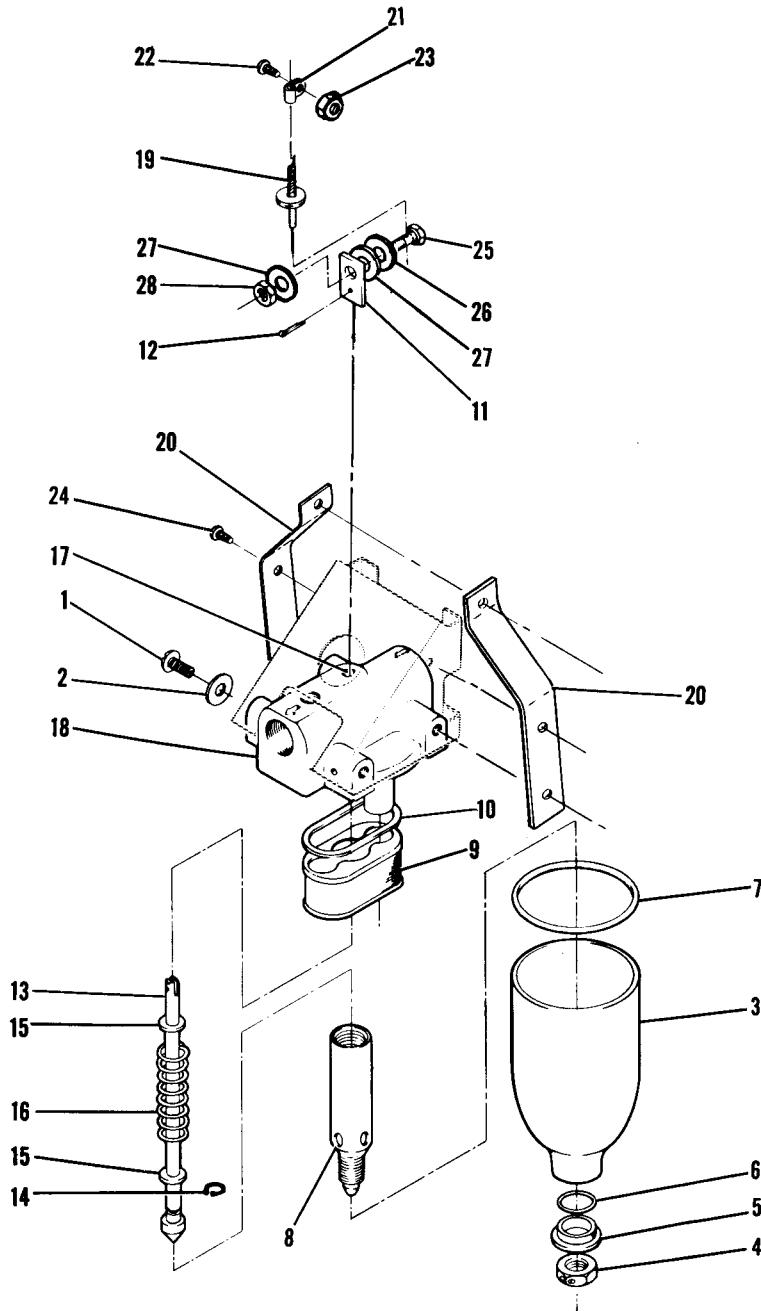


Figure 88. Fuel Strainer & Drain Control Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
88 -	0756005-1	FUEL STRAINER & DRAIN CONTROL INSTALLATION ----- STRAINER ASSEMBLY-FUEL ----- ATTACHING PARTS	NP						
- 1	AN515-10R8	SCREW -----	1						
- 2	AN936A10	WASHER -----	4						
- 3	0756008-1	-----*							
- 4	S1573-3	BOWL-FUEL STRAINER ----- ATTACHING PARTS	1						
- 5	0756015-1	NUT -----	1						
- 6	MS29513-111	WASHER -----	1						
- 7	MS29513-138	O RING ----- O RING -----	1						
- 8	0756011-1	-----*							
- 9	0756009-1	STANDPIPE -----	1						
-10	0756009-8	FILTER ASSEMBLY-FUEL STRAINER -----	1						
-11	0756014-1	GASKET -----	1						
-12	MS24665-132	PLATE ----- ATTACHING PARTS	1						
-13	0756010-1	COTTER PIN -----	1						
-14	MS16624-1025	-----*							
-15	0756014-2	PLUNGER -----	1						
-16	0756012-1	SNAP-RING -----	1						
-17	MS29513-10	WASHER -----	2						
-18	0756005-2	SPRING -----	1						
-19		O RING -----	1						
-20	0716136-1	TOP ASSEMBLY-FUEL STRAINER -----	1						
-21	MS9025-02	CONTROL-STRAINER DRAIN SEE INSTRUMENT PANEL ----- ATTACHING PARTS	1						
-22	AN742D3	BRACKET -----	1						
-23	AN520-10R8	CLAMP -----	1						
-24	AN520-10R10	CLAMP FLOATPLANE ONLY -----	1						
-25	MS21044N3	SCREW -----	1						
-26	MS20365-1032C	SCREW FLOATPLANE ONLY -----	1						
-27	S1021Z8-6	NUT -----	1						
-28	NAS446-4-3	NUT FLOATPLANE ONLY -----	1						
-29	0450311-3	SCREW -----	2						
-30	AN960-416	NUT -----	1						
-31	AN960-416L	CLAMP -----	1						
-32	MS21042L4	WASHER -----	1						
-33		WASHER -----	2						
-34		NUT -----	1						
-35		-----*							

Fuel System (Cont)

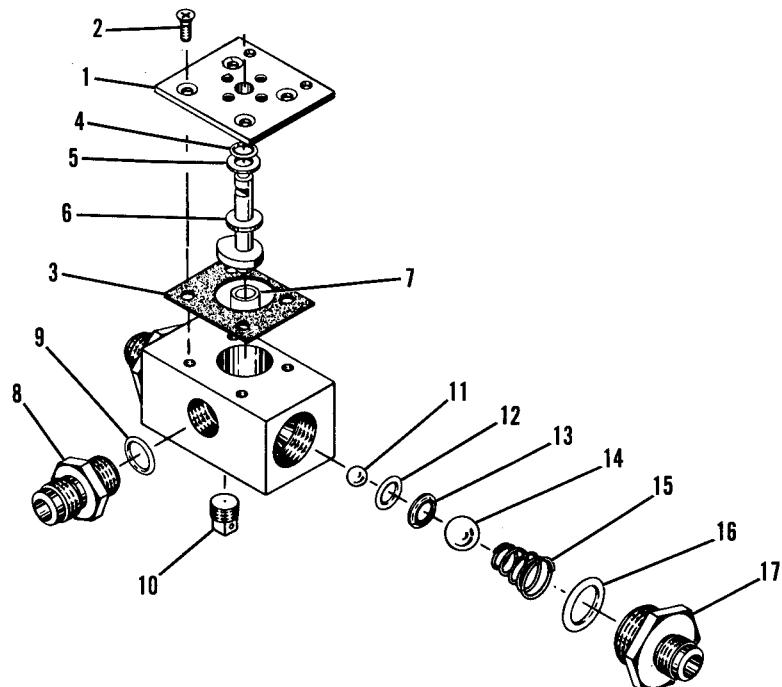


Figure 89. Fuel Selector Valve Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1	2
89 - - 1	0513120-8 0513122	VALVE ASSEMBLY-FUEL SELECTOR ----- COVER-FUEL VALVE ----- ATTACHING PARTS -----	1 1	
- 2	AN507-632R6	SCREW ----- -----*	4	
- 3	0513125	GASKET-FUEL COVER -----	1	
- 4	AF934-5	O RING -----	1	
- 5	MS29513-010	O RING ALT -----	1	
- 6	AN960C416L	WASHER -----	1	
- 7	0513123	CAM -----	1	
- 8	S1003-9A	BEARING -----	1	
- 9	0513126-1	NIPPLE -----	1	
- 10	AF934-9	O RING -----	1	
- 11	MS29513-111	O RING ALT -----	1	
- 12	MS20913-10	PLUG -----	1	
- 13	S272-209	BALL -----	1	
- 14	AF934-7	O RING -----	2	
- 15	MS29513-012	O RING ALT -----	2	
- 16	0513120-4	RETAINER -----	2	
- 17	S272-215	BALL -----	2	
- 18	0513120-2	SPRING -----	2	
- 19	AF934-14	O RING -----	2	
- 20	MS29513-116	O RING ALT -----	2	
- 21	0513120-3	NIPPLE -----	2	

Fuel System (Cont)

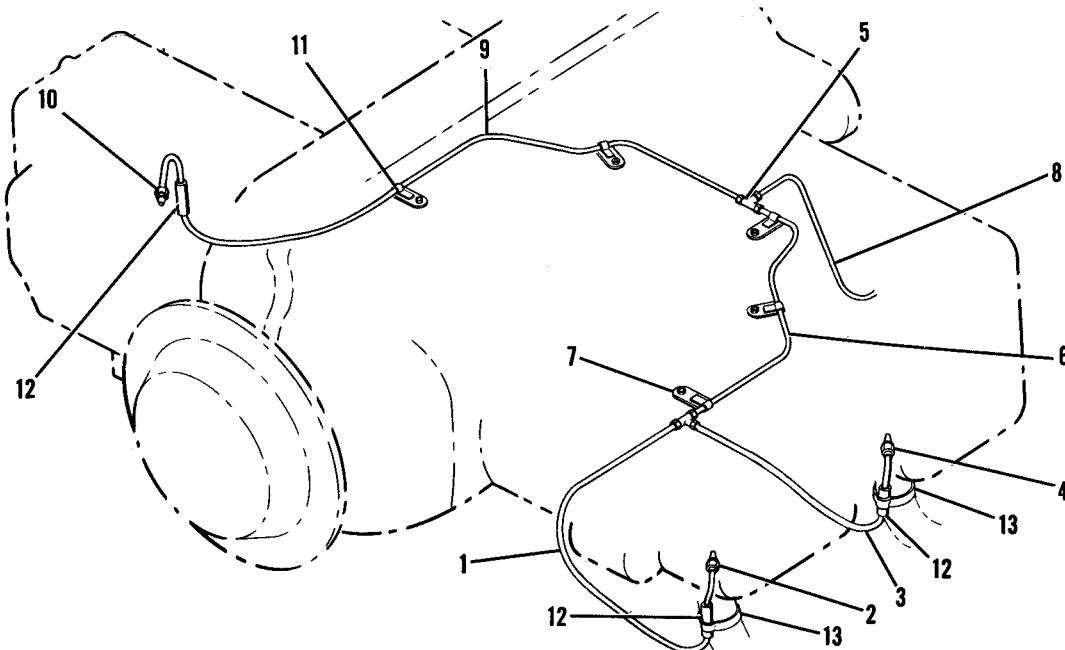


Figure 90. Three Cylinder Primer Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
.90 - - 1	1700121-100	FUEL PRIMER INSTALLATION-THREE CYLINDER ----- LINE ASSY-CYLINDER 2 TO TEE ----- ATTACHING PARTS	NP	1					
- 2	AN4022-1	JET-FUEL -----*-----		1					
- 3	1700121-101	LINE ASSY-CYLINDER 4 TO TEE ----- ATTACHING PARTS		1					
- 4	AN4022-1	JET-FUEL -----*-----		1					
- 5	AN824-2D	TEE -----		2					
- 6	1700121-95	LINE ASSY-TEE TO TEE ----- ATTACHING PARTS		1					
- 7	0550100-8 S1485D2 S1021Z8-8C	BRACKET ----- CLAMP ----- SCREW -----*-----		3	3	3			
- 8	SEE FIG 87	LINE ASSY -----		1					
- 9	1700121-94	LINE ASSY-CYLINDER 1 TO TEE ----- ATTACHING PARTS		1					
-10	AN4022-1	JET -----		1					
-11	0550100-8 S1485D2 S1021Z8-8C	BRACKET ----- CLAMP ----- SCREW -----*-----		2	2	2			
-12	S1949-1	TUBING-RUBBER .75 IN LG BULK ITEM REF S1949-1-0012 -----		3					
-13	71910	CLAMP LYC ----- ATTACHING PARTS		3					
	AN515-6-10 MS21045L06	SCREW ----- NUT -----*-----		1					

Vacuum System

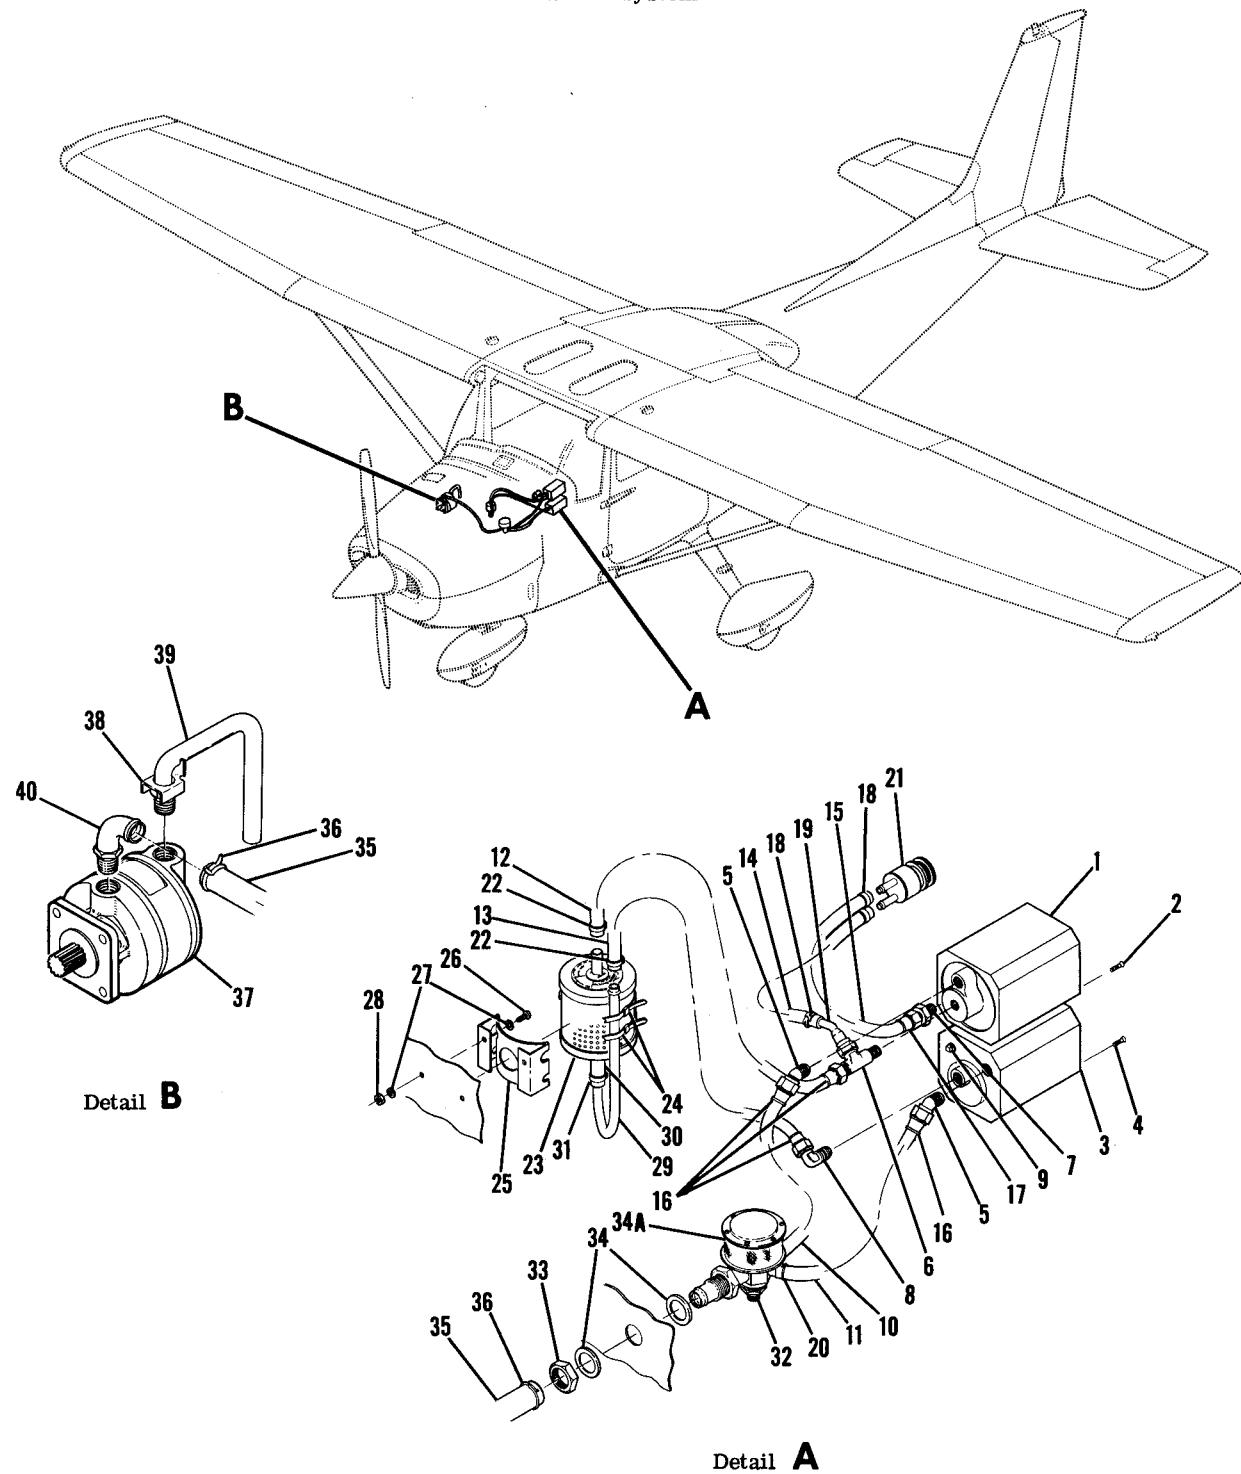


Figure 91. Vacuum System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
91 - - 1	C661076-0102 ** C661076-0101 ** C661076-0103 ** C661076-0105 **	VACUUM SYSTEM GYRO-HORIZON ----- GYRO-HORIZON ALT ----- GYRO-HORIZON ALT ----- GYRO-HORIZON ALT ----- ATTACHING PARTS							NP
- 2	AN51586R6	SCREW ----- -----*							4
- 3	C661075-0104 *** C661075-0101 *** C661075-0103 *** C661075-0106 *** 40760-104	GYRO-DIRECTIONAL ----- GYRO-DIRECTIONAL ALT ----- GYRO-DIRECTIONAL ALT ----- GYRO-DIRECTIONAL ALT ----- GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 ONLY ----- ATTACHING PARTS							1 1 1 1 1
- 4	AN51586RG	SCREW ----- -----*							3
- 5	MS20822-6D	ELBOW -----							2
- 6	MS20825-6D	TEE -----							1
- 7	AN816-4D	NIPPLE -----							3
- 8	MS20822-6D	ELBOW -----							1
- 9	MS20913-1D	PLUG -----							1
- 10	MS20913-2D	PLUG -----							1
- 11	S1495-6	HOSE 12.00 IN LG BKI REF S1495-6-12.00 ----- GYRO-HORIZON TO RELIEF VALVE							1
- 12	S1495-6	HOSE 12.00 IN LG BKI REF S1495-6-12.00 ----- GYRO-DIRECTIONAL TO RELIEF VALVE							1
- 13	S1495-6	HOSE 17.00 IN LG BKI REF S1495-6-17.00 ----- GYRO TO AIR FILTER							1
- 14	S1495-4	HOSE 18.50 IN LG BKI REF S1495-6-18.50 ----- GYRO TO AIR FILTER							1
- 15	S1495-4	HOSE 14.00 IN LG BKI REF S1495-4-14.00 ----- GYRO-HORIZON TO SUCTION GAGE							1
- 16	S1495-4	HOSE 16.00 IN LG BKI REF S1495-4-16.00 ----- GYRO-HORIZON TO SUCTION GAGE							1
- 17	S1497-6	FITTING -----							4
- 18	S1497-4	FITTING -----							1
- 19	NAS397-8	CLAMP -----							3
- 20	1713039-1	ELBOW ASSY -----							1
- 21	S1494-9	CLAMP -----							2
- 22	C668509-0101	GAGE-SUCTION -----							1
- 23	S2209-1	STA STRAP -----							2
- 24	C294502-0101	AIR FILTER ----- ATTACHING PARTS							1
- 25	S2209-3	STA STRAP ----- -----*							2
- 26	0513448-1	BRACKET-FILTER ----- ATTACHING PARTS							1
- 27	AN520-10R10	SCREW -----							2
- 28	AN960PD10L	WASHER -----							4
- 29	MS21044N3	NUT ----- -----*							2
- 30	0713533-1	U TUBE-FILTER -----							1
- 31	S1495-6	HOSE 2.00 IN LG BKI REF S1495-6-2.00 ----- AIR FILTER TO U TUBE							1
- 32	S2209-1	STA STRAP -----							2
- 33	C482001-0401	VALVE-RELIEF ----- ATTACHING PARTS							1
- 34	AN924-10D	NUT -----							1
- 34A	AN960PD1416L	WASHER ----- -----*							2
	C482001-0202	FILTER-RELIEF VALVE -----							1
		CONTINUED ON NEXT PAGE							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
91 -35	S1495-10	HOSE 19.00 IN LG BKI REF S1495-10-19.00 RELIEF VALVE TO VACUUM PUMP ATTACHING PARTS	1	
-36	S1494-16	CLAMP -----	2	
-37	C431003-0101 C431003-0301	PUMP-VACUUM -----	1	
-38	1250319-1	PUMP-VACUUM ALT -----	1	
-39	IK66-1	LOCATOR -----	1	
-40	IK1-6-10	TUBE-EXHAUST ABNE ----- FITTING ABNE -----	1	
		NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. ***THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		



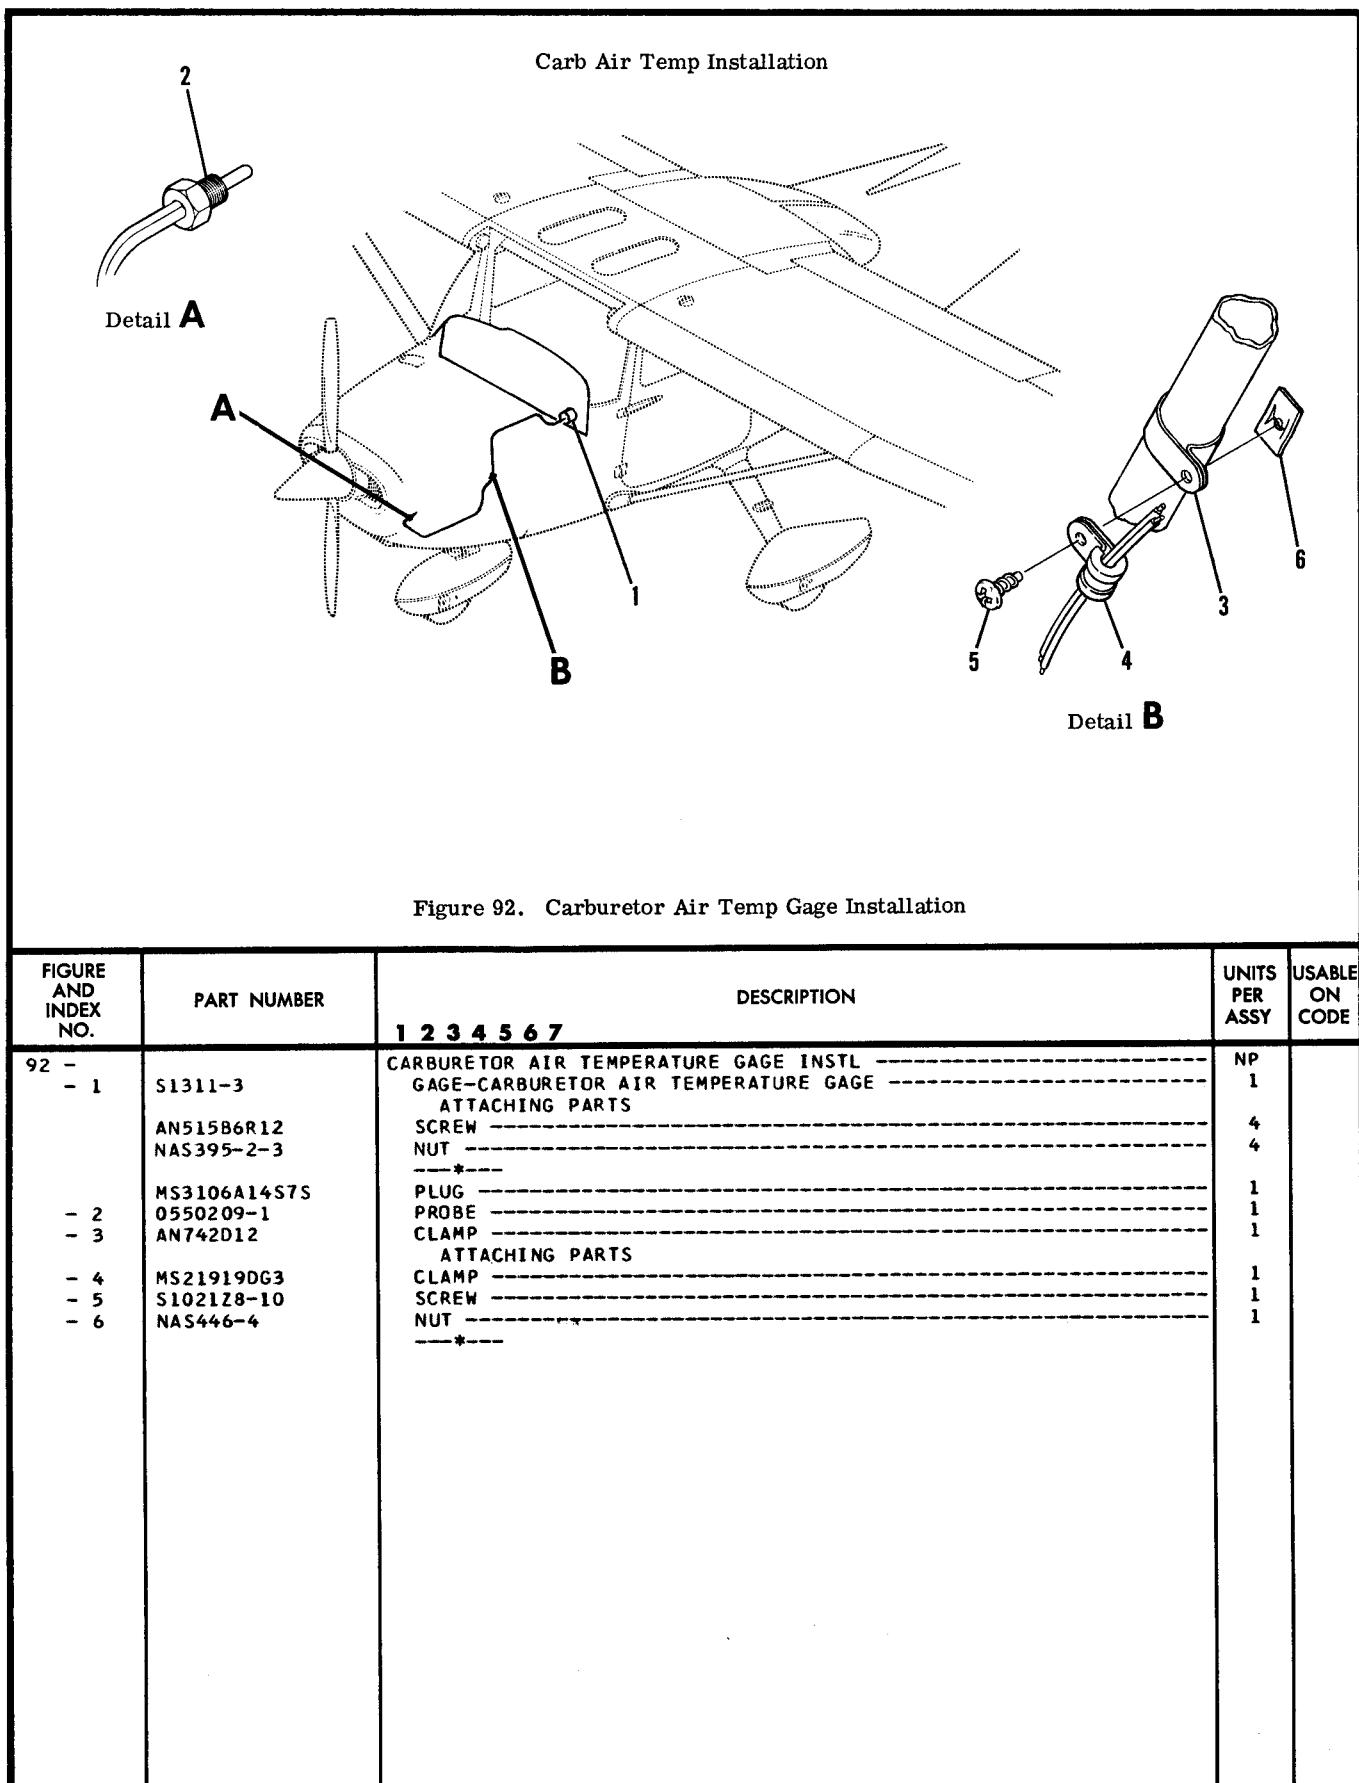


Figure 92. Carburetor Air Temp Gage Installation

Floatplane

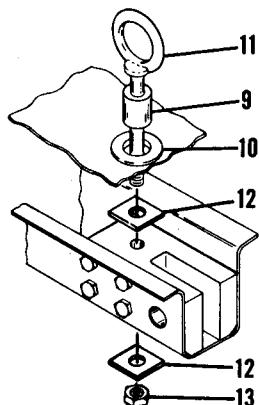

Detail A

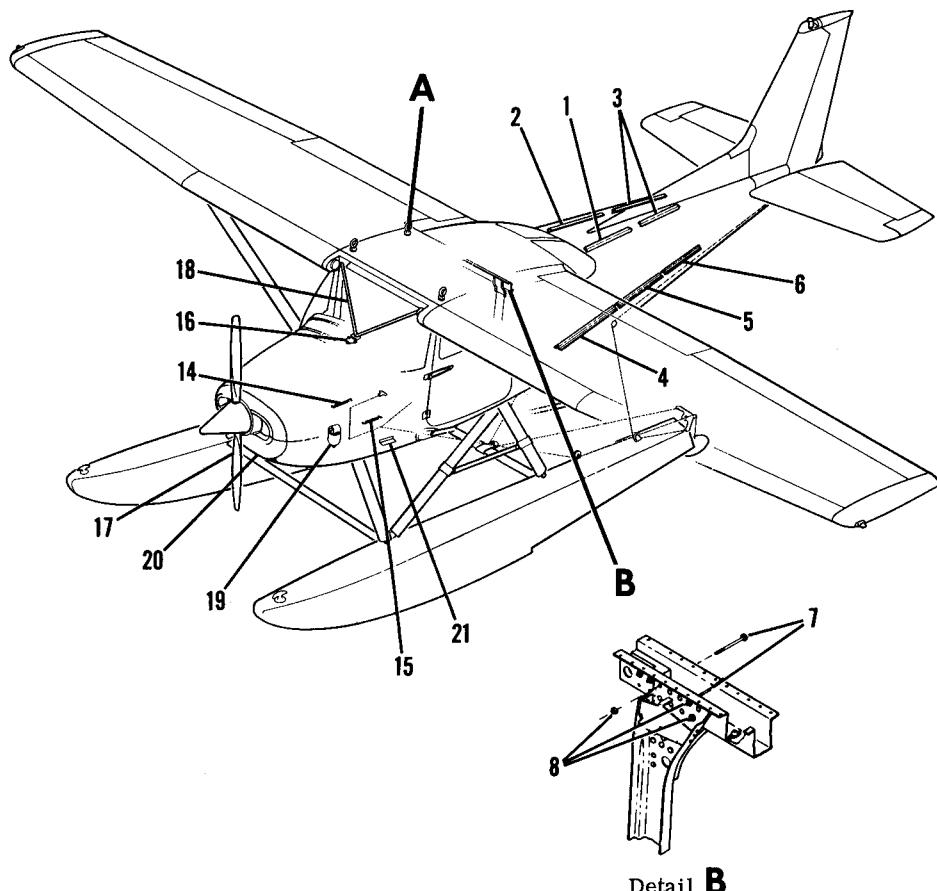

Detail B

Figure 93. Floatplane Fittings Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
93 -		FLOATPLANE FITTINGS INSTALLATION	NP						
- 1	0500044-29	STRINGER-TAILCONE LH	1						
- 2	0500044-30	STRINGER-TAILCONE RH	1						
- 3	0500044-31	STRINGER-TAILCONE	2						
- 4	0500044-32	STRINGER-TAILCONE	1						
- 5	0500044-33	STRINGER-TAILCONE	1						
- 6	0500044-34	STRINGER-TAILCONE	1						
- 7	AN3-20A	BOLT	8						
- 8	MS21044N3	NUT	8						
- 9	0541115-2	HOISTING PROVISIONS INSTALLATION	NP						
-10	MS35489-17	SPACER	1						
-11	0541115-3	GROMMET	1						
-12	0541115-4	EYE BOLT	1						
-13	MS21042L5	ATTACHING PARTS	2						
-14	0310196-12	PLATE	1						
-15	0310196-5	NUT	1						
-16	0500278-1	---	*						
-17	SEE FIG 64	SPRING-BRAKE & RUDDER RETURN RH	1						
-18	SEE FIG 95	SPRING-BRAKE & RUDDER RETURN LH	1						
-19	SEE FIG 88	SHIM-COMPASS	1						
-20	SEE FIG 65	PROPELLER INSTL	1						
-21	SEE FIG 63	STRUCTURE DETAILS-FLOATPLANE FUSELAGE	1						
		FUEL STRAINER INSTL	1						
		COWL ASSY	1						
		STEP & HANDLE INSTL	1						
NOTE. STAINLESS STEEL CABLES ARE REQUIRED ON FLOATPLANE									

Floatplane (Cont)

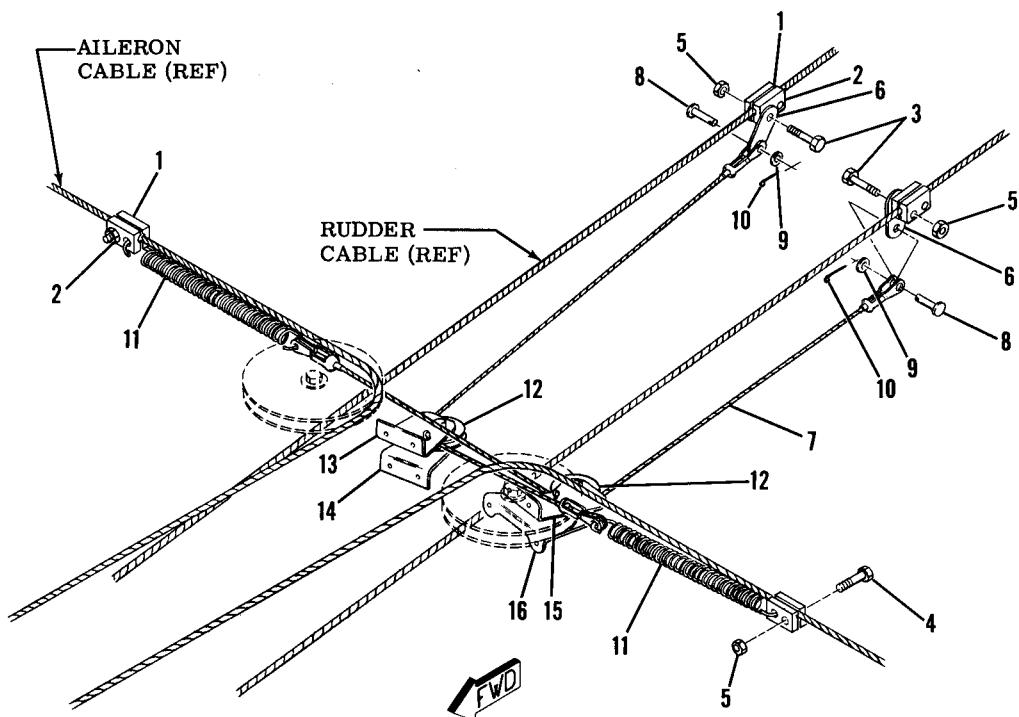


Figure 94. Rudder-Aileron Interconnect-Floatplane

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
94 -		RUDDER-AILERON INTERCONNECT INSTALLATION FLOATPLANE -----	NP	
- 1	1760015-1	CLAMP HALF-CABLE -----	4	
- 2	1760015-2	CLAMP HALF-CABLE -----	4	
- 3	AN3-6A	ATTACHING PARTS		
- 4	AN3-5A	BOLT -----	1	
- 5	NAS1022A3	BOLT -----	1	
- 6	0861520-2	NUT -----	1	
- 7	0510105-334	LINK -----	2	
- 8	AN23-9	CABLE ASSY -----	2	
- 9	AN310-3	ATTACHING PARTS		
- 10	MS24665-132	BOLT -----	1	
- 11	0560013-1	NUT -----	1	
- 12	S378-1	COTTER PIN -----	1	
		-----*		
		SPRING -----	2	
		PULLEY -----	2	
		ATTACHING PARTS		
		BOLT -----	1	
		NUT -----	1	
		COTTER PIN -----	2	
		-----*		
- 13	0511806-2	BRACKET-PULLEY -----	1	
- 14	0511806-4	BRACKET-PULLEY -----	1	
- 15	0511806-1	BRACKET-PULLEY -----	1	
- 16	0511806-3	BRACKET-PULLEY -----	1	

This page intentionally left blank.

Floatplane (Cont)


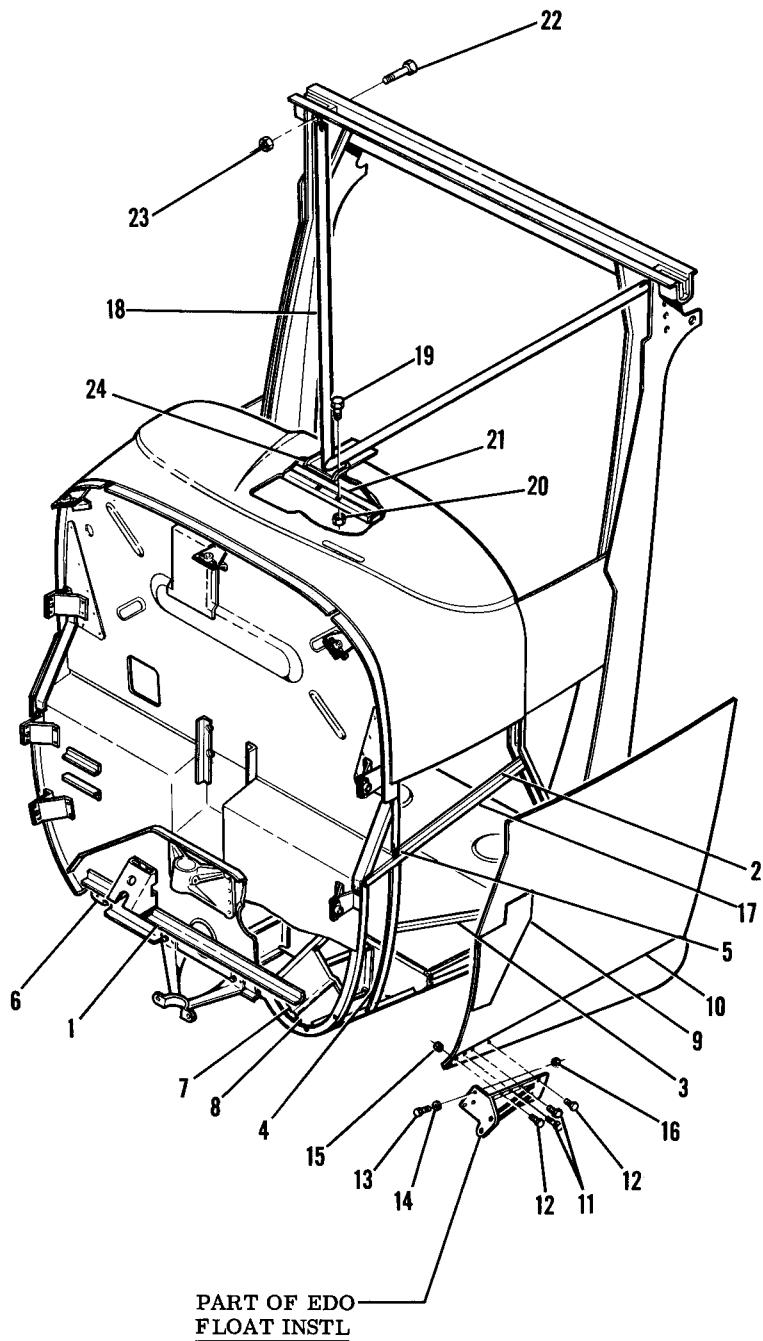


Figure 95. Floatplane Fuselage Structure Details

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
95 -		1 2 3 4 5 6 7		
- 1	0500044-6	STRUCTURE DETAILS-FLOATPLANE FUSELAGE	NP	
- 2	0500044-13	ANGLE-FIREWALL REINFORCEMENT	1	
	0500044-14	ANGLE-LH	1	
- 3	0500044-17	ANGLE-RH	1	
	0500044-18	ANGLE-LH	1	
- 4	0500044-15	ANGLE-RH	1	
	0500044-16	ANGLE-LH	1	
- 5	0500044-19	ANGLE-RH	1	
	0500044-21	SHIM	2	
- 6	0500044-20	BRACKET-ENGINE MOUNT ATTACHMENT LOWER LH	1	
- 7	0500044-7	BRACKET-ENGINE MOUNT ATTACHMENT LOWER RH	1	
	0500044-8	DOUBLER-FIREWALL LH	1	
- 8	0500044-5	DOUBLER-FIREWALL RH	1	
- 9	0500044-3	PLATE	2	
	0500044-4	DOUBLER-SKIN LH	1	
-10	0500044-12	DOUBLER-SKIN RH	1	
-11	AN3-4A	DOUBLER-SKIN	2	
-12	AN3-5A	BOLT	10	
-13	AN4-6A	BOLT	6	
-14	AN960-416	BOLT	4	
-15	MS21044N3	WASHER	4	
-16	MS21042L4	NUT	16	
-17	0500044-24	NUT	4	
	0500044-25	ANGLE-LH	1	
-18	0513003-24	ANGLE-RH	1	
		BRACE ASSEMBLY	1	
		ATTACHING PARTS	1	
-19	AN4-5A	BOLT	2	
-20	MS21042L4	NUT	2	
-21	0513193-3	DOUBLER	1	
-22	AN3-20A	BOLT	4	
-23	MS21044N3	NUT	4	
		---	4	
-24	0514049-1	COVER-BRACE ATTACH	1	
	0515037-1	COVER-BRACE ATTACH USED WITH POST LIGHTS	1	A
		A---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON		

Electrical Equipment

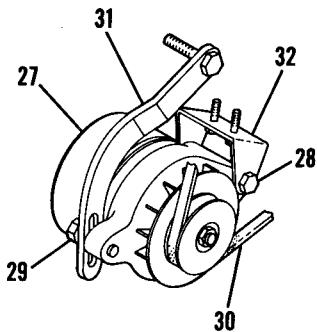

Detail A

36

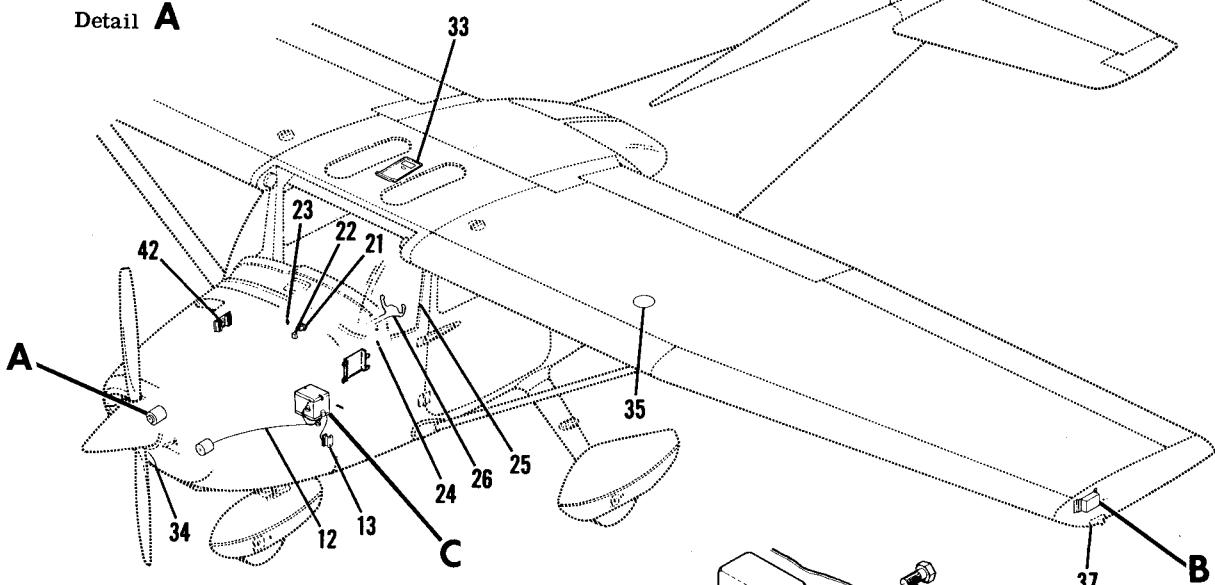
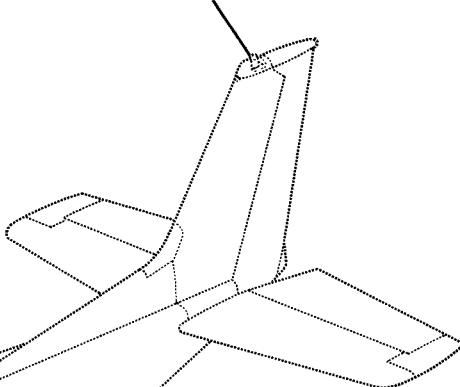


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
96 -		ELECTRICAL EQUIPMENT INSTALLATION	NP						
- 1	0511319-201 *	BATTERY KIT 25 A. H. -----	1						
- 2	0412007-1	STRAP-BATTERY GROUND ----- ATTACHING PARTS	1						
	AN4-5A	BOLT -----	1						
	AN970-4	WASHER -----	1						
		-----*							
- 3	S1660-1	CONTACTOR-BATTERY -----	1						
	S1579-1	CONTACTOR-BATTERY ----- ATTACHING PARTS	1	A	B				
- 4	AN3-3A	BOLT -----	2						
	AN960-10L	WASHER -----	2						
	MS21045L3	NUT -----	2						
	MS21042L3	NUT -----	2	A	B				
		-----*							
	S1807-2	COVER-CONTACTOR TERMINAL -----	2						
- 5	0770728-1	DIODE ASSY-CONTACTOR -----	1						
- 6	S1090-22	FUSE HOLDER-CLOCK -----	1						
	S1090-23	CAP-FUSE -----	1						
	S1091-1	FUSE-CLOCK -----	1						
- 7	S1090-2	FUSE HOLDER-EXTERNAL POWER -----	1						
	S1090-11	CAP-FUSE -----	1						
	S1091-5	FUSE-EXTERNAL POWER -----	1						
- 8	20H3P	DIODE SATA ----- ATTACHING PARTS	1						
	LN1032X	NUT-NYLON -----	1						
	S1438-2	WASHER-NYLON -----	1						
		-----*							
	6F20D	DIODE AFE ALT -----	1						
	1N1344A	DIODE SPD ALT -----	1						
	43-1761	MOUNTING HARDWARE SPD USED WITH 6F20D & 1N1344A -----	1						
- 9	0712031-1	BRACKET-MOUNTING -----	1						
- 10	0500062-PA11	CABLE-BATTERY CONTACTOR TO BATTERY -----	1						
	0570101-PA4	CABLE-BATTERY CONTACTOR TO BATTERY -----	1	B					
- 11	0500062-PA23	CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR -----	1	A					
	0570101-PA6	CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR -----	1	B					
- 12	0500062DA10	CABLE-STARTER CONTACTOR TO STARTER -----	1	A					
	0570101-KA7	CABLE-STARTER CONTACTOR TO STARTER -----	1	B					
- 13	SEE FIG 104	GROUND SERVICE PLUG INSTALLATION -----	1						
- 14	S1660-1	CONTACTOR-EXTERNAL POWER ----- ATTACHING PARTS	1						
- 15	AN3-3A	BOLT -----	2						
	AN960-10L	WASHER -----	2						
	MS21045L3	NUT -----	2	A	B				
	MS21042L3	NUT -----	2						
		-----*							
- 16	S1807-1	COVER-CONTACTOR TERMINAL -----	2						
	S2209-2	STRAP -----	2						
- 17	0500062-PC7	CABLE-RECEPTACLE TO CONTACTOR -----	1						
	0570101-PC1	CABLE-RECEPTACLE TO CONTACTOR -----	1	B					
- 18	S1991-1	CONTACTOR-STARTER ----- ATTACHING PARTS	1						
- 19	AN4-3A	BOLT -----	2						
		-----*							
	S1807-1	COVER-CONTACTOR TERMINAL -----	2						
- 20	0500062-PA18	CABLE CONTACTOR TO BATTERY CONTACTOR -----	1						
	0570101-PC5	CABLE CONTACTOR TO BATTERY CONTACTOR -----	1	B					
- 21	C611001-0102	VOLTAGE REGULATOR ----- ATTACHING PARTS	2						
	AN520-416R8	SCREW -----	2						
		-----*							
	C6A/B10A730A	HOUSING-PLUG ECWS -----	1						
- 22	0770038-2	FILTER-NOISE ----- ATTACHING PARTS	1						
	AN520-10R8	SCREW -----	2						
		-----*							
		CONTINUED ON NEXT PAGE							

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	1	2	3	4	5	6	7
					1	2	3	4	5	6	7
96 -23	S1095-5	SHIELD HALF ----- ATTACHING PARTS -----	2								
	AN515-8R6	SCREW -----	2								
	NAS557-10A	-----*									
-24	C593001-0101	GROMMET -----	1								
-25	SEE FIG 102	OVERTOWTAGE SENSOR -----	1								
-26	SEE FIG 103	MAP LIGHT INSTALLATION-DOOR POST -----	1								
-27	C611501-0102	MAP LIGHT INSTALLATION-CONTROL WHEEL -----	1								
		ALTERNATOR ----- ATTACHING PARTS -----	1								
-28	AN7-42A	BOLT -----	1								
	MS20365-720C	NUT -----	1								
-29	0750220-1	BOLT -----	1								
	S1450-6-14-080	WASHER -----	1								
		-----*									
	S2114-2	NIPPLE AT ALT BAT TERMINAL -----	1								
	S2093-2	COVER ALT BAT TERMINAL -----	1								
	S2114-2	NIPPLE ALT FIELD TERMINAL -----	1								
-30	S1597-1-37.5	BELT-ALTERNATOR -----	1								
-31	LW10729	LINK-ALTERNATOR BELT ADJUSTMENT LY -----	1								
-32	76906	BRACKET-ALTERNATOR MOUNTING LY -----	1								
-33	SEE FIG 97	INSTRUMENT PANEL LIGHT INSTALLATION -----	1								
-34	SEE FIG 98	LANDING LIGHT INSTALLATION -----	1								
-35	SEE FIG 100	COURTESY LIGHT INSTALLATION -----	1								
-36	SEE FIG 101	FLASHING BEACON INSTALLATION -----	1								
-37	SEE FIG 3	NAVIGATION LIGHT INSTALLATION -----	1								
-38	C622007-0101	POWER SUPPLY-STROBE LIGHT ----- ATTACHING PARTS -----	2								
-39	AN520-10R7	SCREW -----	4								
		-----*									
-40	1620075-3	BRACKET ASSY -----	4								
-41	NAS686A3K	NUTPLATE -----	2								
-42	1570166-1	DIMMING ASSY-TRANSISTORIZED LIGHT ----- ATTACHING PARTS -----	1								
-43	AN520-10R6	SCREW -----	4								
	AN960-10L	WASHER -----	4								
	MS21045L3	NUT -----	4	A							
		-----*									
-44	2N3055	TRANSISTOR RCA ----- ATTACHING PARTS -----	2								
-45	S1021Z6-8	SCREW -----	2								
	AN960-10L	WASHER -----	2								
		-----*									
	34003-55-3410	TERMINAL BLOCK LIGHT DIMMING ENTC ----- ATTACHING PARTS -----	1	B							
	AN515-8R7	SCREW -----	2								
	MS21044N08	NUT -----	2								
		-----*									
-46	S1917-1	RELAY-SPLIT BUS BAR ----- ATTACHING PARTS -----	1								
-47	AN4-5A	BOLT -----	2								
-48	MS21042L4	NUT -----	2	A							
-49	AN960-416L	WASHER -----	2	A							
		-----*									
-50	SEE FIG 23	BRACKET-RELAY & DIMMING MOUNTING -----	1	B							
		NOTE. *THIS KIT INCLUDES DRY BATTERY & ELECTROLYTE.									
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384									
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON									

This page intentionally left blank.

Electrical Equipment (Cont)

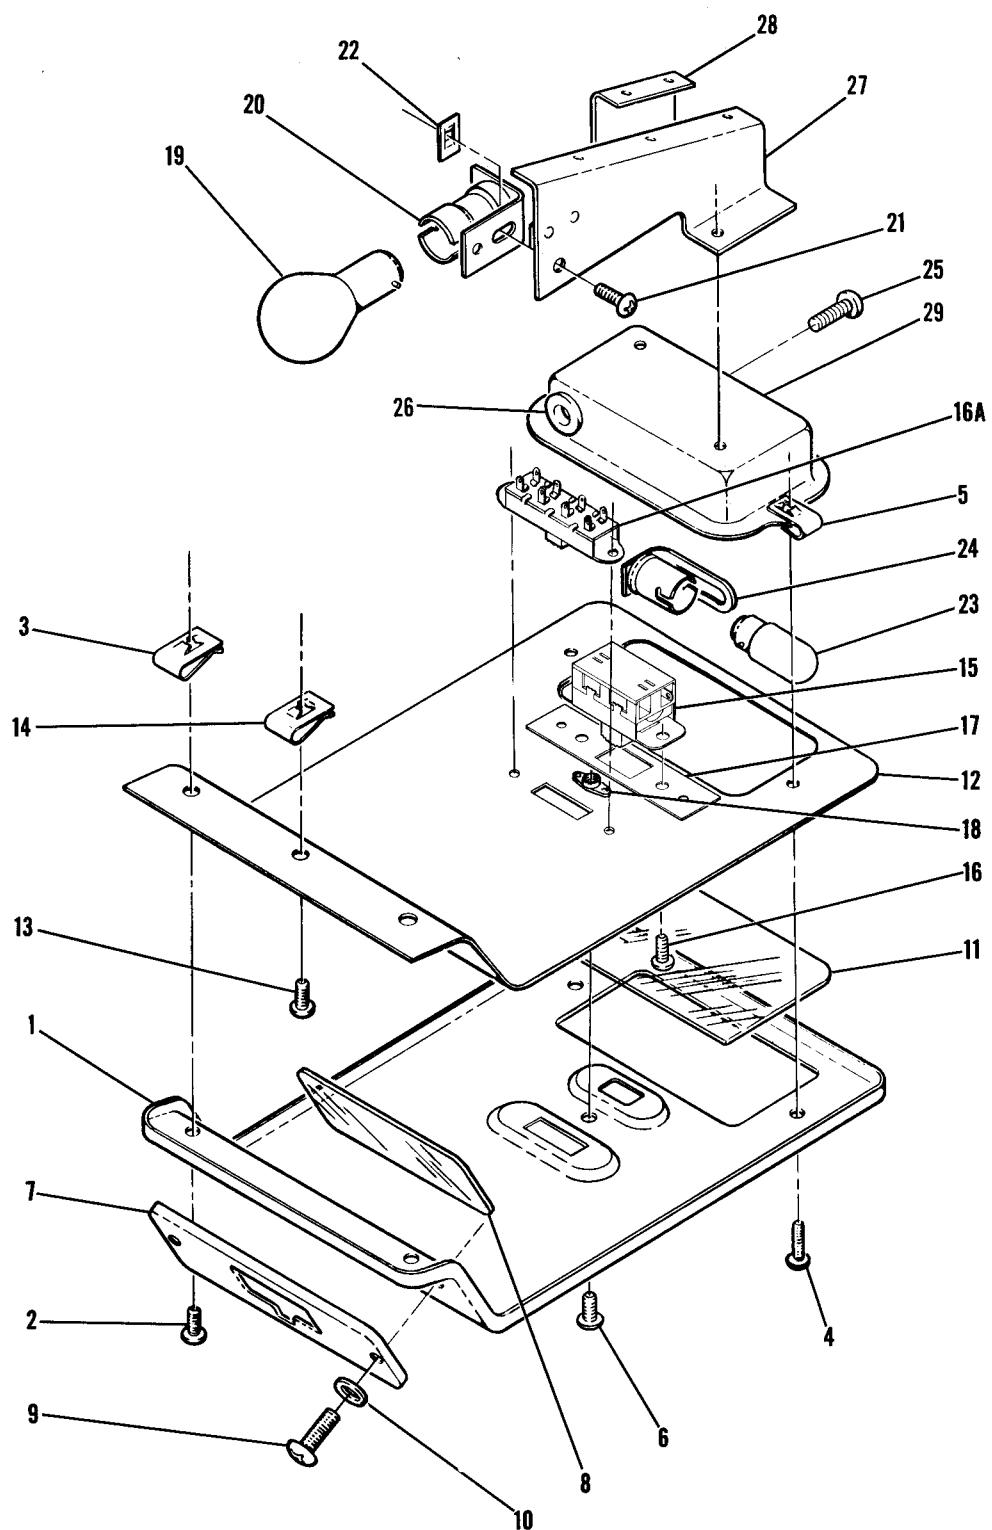


Figure 97. Instrument Panel Lights Installation

Cessna illustrated parts catalog

MODEL 172 & F172

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
97 -			INSTRUMENT PANEL LIGHT INSTALLATION -----							NP	
- 1	0414013-13	□	COVER ASSY -----							1	A
	0414013-19	□	COVER ASSY -----							1	B
	041403-17	□	COVER ASSY ----- USED WITH POST LIGHTS -----							1	B
- 2	S1021Z6-8		ATTACHING PARTS -----							2	
- 3	NAS395-3-3		SCREW -----							2	
- 4	S1021Z4-8		NUT -----							2	
- 5	NAS395-1-3		SCREW -----							2	
- 6	S1021Z8-10		NUT -----							2	
			SCREW -----							1	
- 7	0414013-12	□	-----*							1	A
	0414013-15	□	SHIELD -----							1	B
- 8	0414013-4		SHIELD -----							1	
- 9	AN515-6R10		LENS-INSTRUMENT LIGHT -----							1	
-10	AN960D8L		SCREW -----							2	
-11	0413141-1		WASHER -----							2	
-12	0513454-1		LENS-OVERHEAD CONSOLE -----							1	
	0513454-2		SUPPORT ASSY-OVERHEAD CONSOLE -----							1	
			SUPPORT ASSY-OVERHEAD CONSOLE ----- USED WITH POST LIGHTS -----							1	B
-13	S1021Z6-8		ATTACHING PARTS -----							1	
-14	NAS395-3-3		SCREW -----							1	
			NUT -----							1	
-15	S1831-1		-----*							1	
			SWITCH-DOME LIGHT -----							1	
			ATTACHING PARTS -----							1	
-16	AN505-4R4		SCREW -----							2	
			-----*							1	
-16A	S1501-1		SWITCH-POST LIGHTS -----							1	
-17	0513451-1		SPACER -----							1	
-18	S1863-3		NUTPLATE -----							1	
-19	MS15584-2		BULB-INSTRUMENT PANEL LIGHT -----							1	
-20	0513208-1		SOCKET -----							1	
			ATTACHING PARTS -----							1	
-21	S1021Z8-6		SCREW -----							2	
-22	NAS446-4-1		NUT -----							2	
			-----*							1	
-23	S1876-1		BULB-OVERHEAD CONSOLE -----							1	
-24	0413138		SOCKET -----							1	
			ATTACHING PARTS -----							1	
-25	S1021Z4-4		SCREW -----							2	
	NAS395-1-3		NUT -----							2	
			-----*							1	
-26	MS35489-4		GROMMET -----							1	
	0413495-1		BRACKET ASSY -----							1	
-27	0413495-2		BRACKET-LH -----							1	
-28	0413495-3		BRACKET-RH -----							1	
-29	0413140-5		REFLECTOR -----							1	
			NOTE. □ THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.								
			A---172 SERIAL 17263459 THRU 17265629 F172 SERIAL F17201235 THRU F17201384								
			B---172 SERIAL 17265630 & ON F172 SERIAL F17201385 & ON								

Electrical Equipment (Cont)

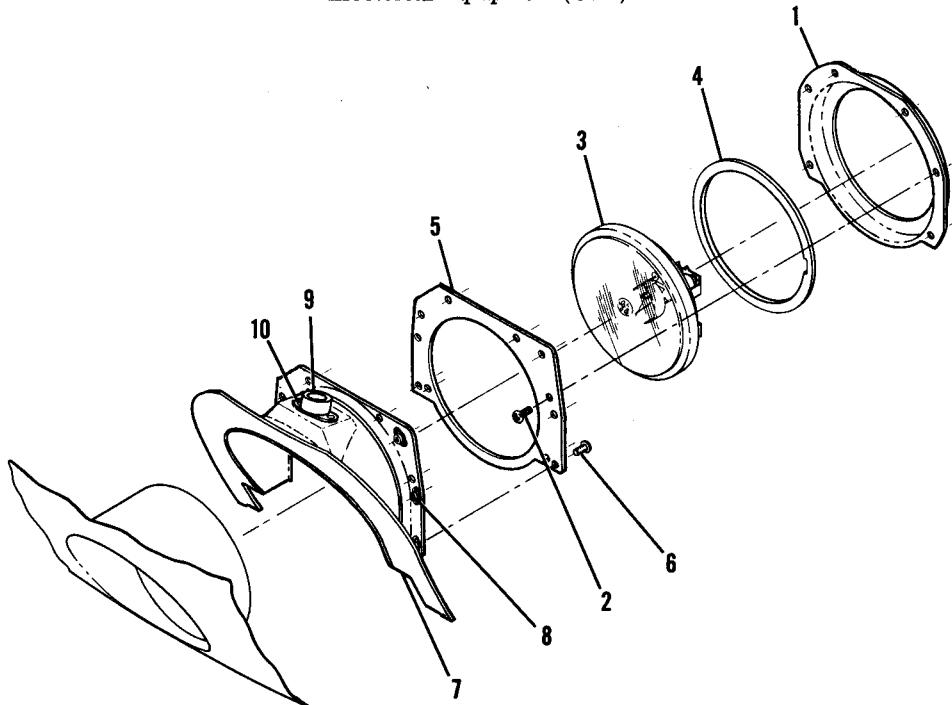


Figure 98. Landing Lights Installation - Single

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1	
98 - - 1	1752111-3	LANDING LIGHT INSTALLATION-SINGLE ----- BRACKET ASSY-LANDING LIGHT AFT ----- ATTACHING PARTS -----	NP	
- 2	AN520-10R8	SCREW ----- -----*	1	
- 3	4522	LAMP-LANDING GE -----	6	
- 4	1752113-1	GASKET -----	1	
- 5	1752110-3	BRACKET-LANDING LIGHT FWD ----- ATTACHING PARTS -----	1	
- 6	AN520-10R8	SCREW ----- -----*	5	
- 7	0552133-5	SUPPORT DOUBLER ASSY-LANDING LIGHT -----	1	
- 8	NAS697A3	NUTPLATE -----	5	
- 9	S1115-29	SHOCKMOUNT ----- ATTACHING PARTS -----	1	
-10	AN515-8-6 0752058-3	SCREW ----- SHIM ----- -----*	2	AR

Electrical Equipment (Cont)

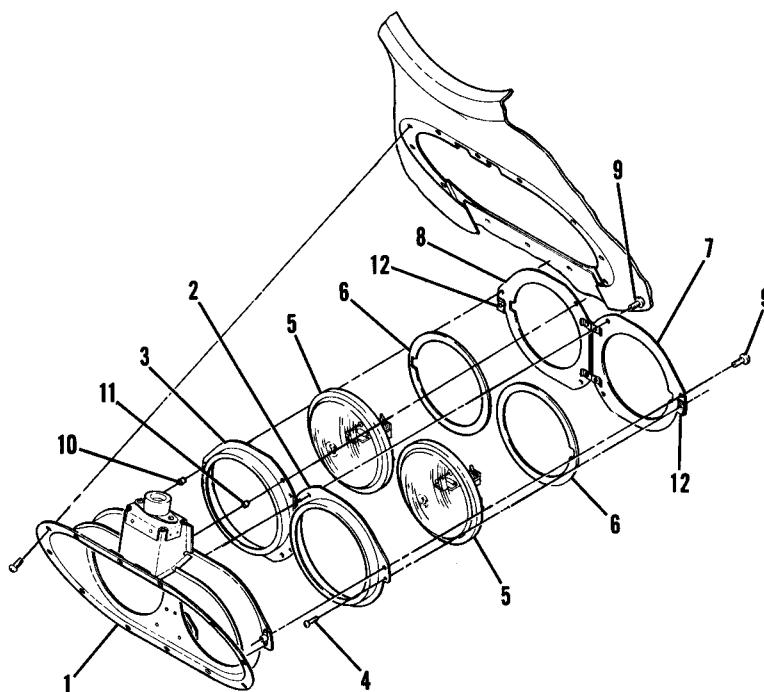


Figure 99. Landing Lights Installation - Dual

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
99 -		1 2 3 4 5 6 7		
- 1	SEE FIG 67	LANDING LIGHT INSTALLATION-DUAL -----	NP	
- 2	1752118-1	SUPPORT ASSEMBLY-LANDING LIGHT -----	1	
- 3	1752118-2	BRACKET-LH -----	1	
- 4	S1021Z6-8	BRACKET-RH ----- ATTACHING PARTS SCREW ----- -----*	3	
- 5	4509	LAMP-LANDING GE -----	2	
- 6	0752646-1	GASKET -----	AR	
- 7	1752118-3	PLATE ASSEMBLY-LH -----	1	
- 8	1752118-4	PLATE ASSEMBLY-RH ----- ATTACHING PARTS SCREW -----	1	
- 9	AN515-8R8 NAS620-8L NAS620-8	SCREW MAXIMUM 2 ----- SCREW ALT MAXIMUM 2 -----	3	AR
- 10	NAS43D03-7	SPACER RH ONLY -----	AR	
- 11	NAS43D03-16	SPACER RH ONLY -----	1	
- 12	NAS448-1-3	-----*----- NUT -----	3	

Electrical Equipment (Cont)

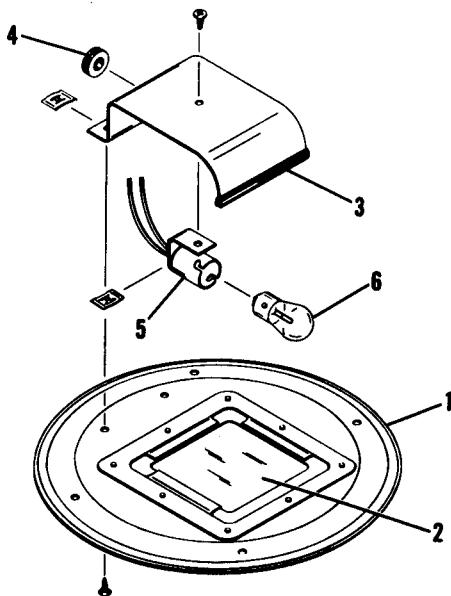


Figure 100. Courtesy Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
100 - - 1	0521101-2 S1021Z8-6	COURTESY LIGHT INSTALLATION PLATE ASSEMBLY-COURTESY LIGHT ATTACHING PARTS SCREW -----*	NP 2 4	
- 2	0521101-6 0700616-1 S1021Z6-8 AN515-6R5 NAS446-2-3 MS21045L06	LENS-COURTESY LIGHT SHIELD ASSEMBLY-COURTESY LIGHT ATTACHING PARTS SCREW SCREW NUT NUT -----*	1 2	
- 3 - 4 - 5	S1055-1 MS35489-134 0513208-1 S1021Z6-6 NAS446-2-3	CHANNEL 2.25 IN LONG BKI REF S1055-1-2.25 GROMMET SOCKET ASSEMBLY ATTACHING PARTS SCREW NUT -----*	1 1 1	
- 6	MS15584-2	BULB-COURTESY LIGHT	2	

This page intentionally left blank.

Electrical Equipment (Cont)

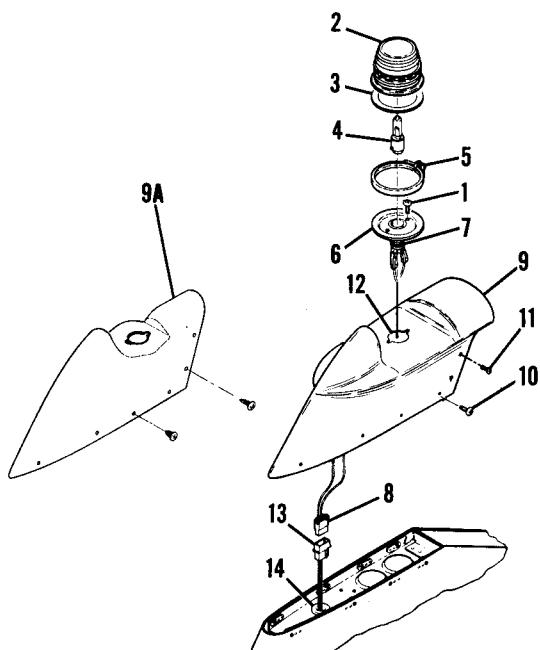
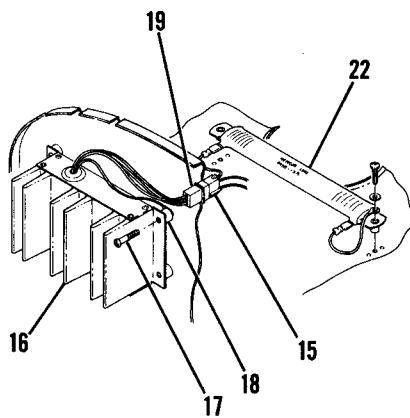
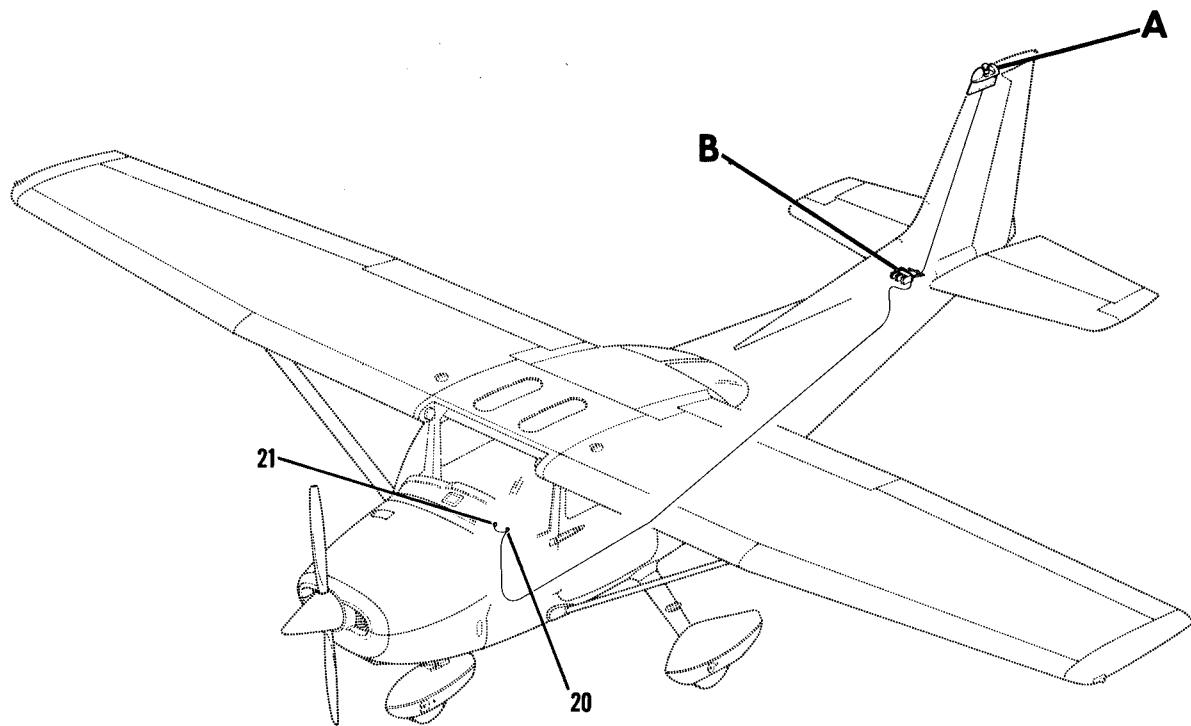


Figure 101. Flashing Beacon Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
101 -	C621001-0106	FLASHING BEACON LIGHT INSTALLATION ----- LIGHT ASSY-FLASHING BEACON ----- ATTACHING PARTS -----	NP	
- 1	AN515-8R8	SCREW ----- -----*	1	
- 2	C17325	DOME-FLASHING BEACON AESC -----	1	
- 3	C17330	GASKET AESC -----	1	
- 4	40-14	BULB-FLASHING BEACON AESC -----	1	
- 5	C17326	CLAMP ASSY AESC -----	1	
- 6	C17331-6	PLATE-MOUNTING AESC -----	1	
- 7	C17313	SOCKET ASSY AESC -----	1	
- 8	S1638-1	HOUSING-PLUG -----	1	
- 9	0531013-2	TIP ASSY-FIN -----	1	
- 9A	0531033-3	TIP ASSY-FIN ----- ATTACHING PARTS -----	1	A
-10	S1021Z6-4	SCREW -----	8	
-11	S1021Z6-6	SCREW ----- -----*	4	B
-12	NAS680A08	NUTPLATE -----	2	
-13	S1638-2	HOUSING-CAP -----	1	
-14	MS35489-13	GROMMET -----	1	
-15	S1638-1	HOUSING-PLUG -----	1	
-16	C594502-0101	FLASHER ASSY-BEACON LIGHT ----- ATTACHING PARTS -----	1	
-17	AN515-8R8	SCREW -----	4	
-18	NAS43DD3-16	SPACER -----	4	
-19	MS21044N08	NUT -----	3	
-20	S1638-2	HOUSING-CAP -----	2	
-21	OR95-1.5	CIRCUIT BREAKER SEE INSTRUMENT PANEL ----- SWITCH SEE INSTRUMENT PANEL -----	1	
-22	AN515-8R11	RESISTOR ----- ATTACHING PARTS ----- SCREW ----- -----*	1	
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON				

Electrical Equipment (Cont)



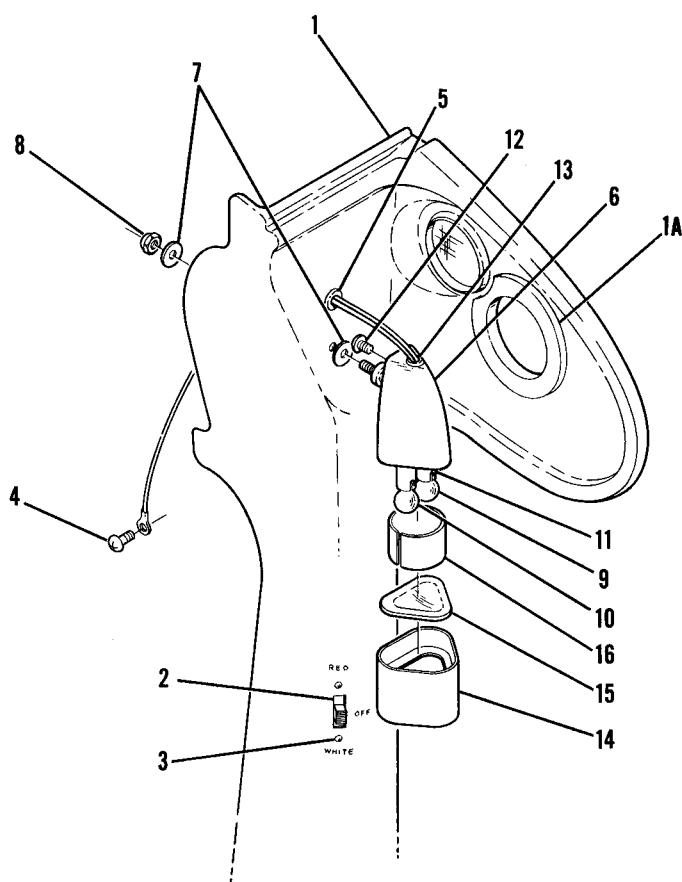


Figure 102. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
102 -		MAP LIGHT INSTALLATION	NP	
- 1	0413484-19	SHIELD ASSY-FRONT DOOR POST	1	A
	0413484-13	SHIELD ASSY-FRONT DOOR POST	1	B
- 1A	0415023-3	SCUTCHEON ASSY	1	B
- 2	S1501-1	SWITCH	1	
- 3	AN515-3R6	ATTACHING PARTS	2	
	AN340-3	SCREW	2	
		NUT		
- 4	S1021Z4-4	-----*		
- 5	MS35489-4	SCREW GROUND WIRE	1	
- 6	1470089-14	GROMMET	1	
		MAPLIGHT ASSY	1	
		ATTACHING PARTS		
- 7	AN970-3	WASHER	2	
- 8	MS21045L3	NUT	1	
- 9	S1876-1	-----*		
-10	S1876-3	BULB-MAP LIGHT	1	
-11	IDI-757	RED	1	
		SOCKET ASSY ISES	1	
		ATTACHING PARTS		
-12	AN515-6R8	SCREW	1	
-13	MS35489-1	-----*		
-14	0700148-1	GROMMET	1	
-15	1470089-18	HOOD-MAPLIGHT	1	
-16	1470089-17	LENS-MAP LIGHT	1	
		TUBE-EXPANDER	1	
NOTE. <input checked="" type="checkbox"/> THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.				
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON				

Electrical Equipment (Cont)

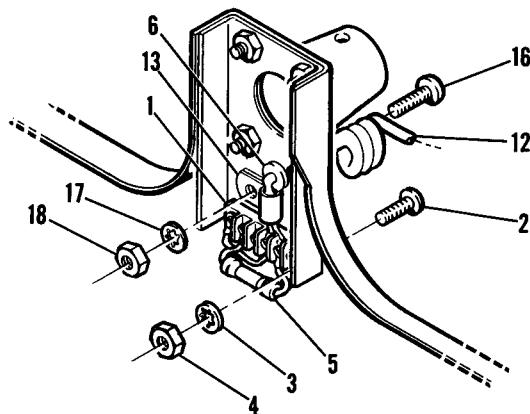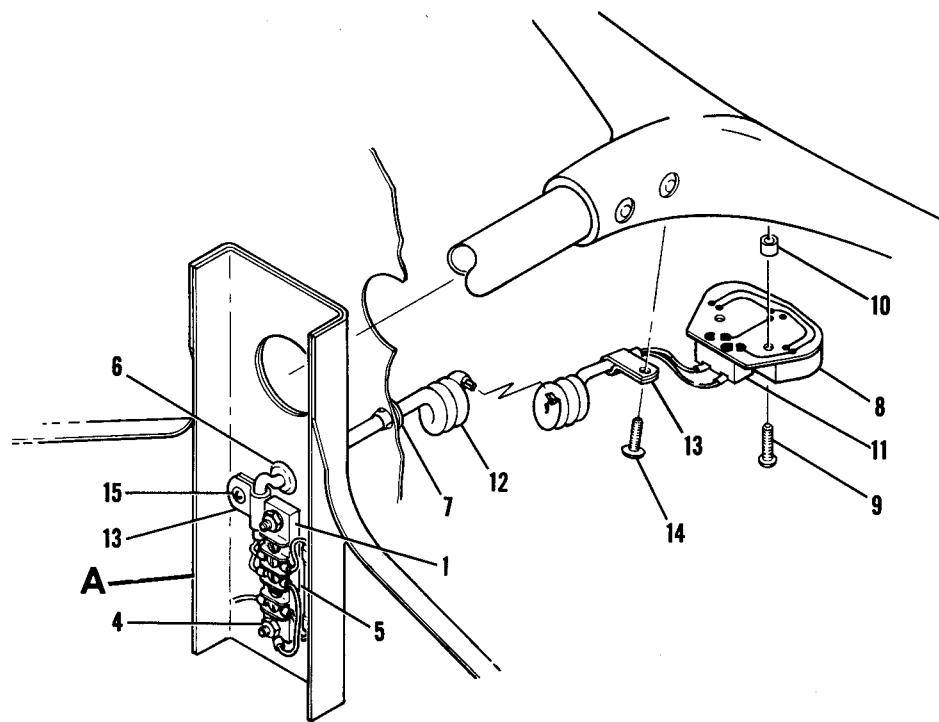

17265685 & ON
F17201385 & ON

Detail A

Figure 103. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE					
			1	2	3	4	5	6	7
103 -		MAP LIGHT INSTALLATION-CONTROL WHEEL -----	NP						
- 1	351-11-05-001	BLOCK-TERMINAL CIN ----- ATTACHING PARTS	1						
- 2	AN515-4R10	SCREW -----		2					
NAS43DD0-6	SPACER -----			2					
- 3	AN936A4	WASHER -----		2					
- 4	AN340-4	NUT -----		2					
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
- 5	1570141-1	FUSE ASSY -----		1					
- 6	MS35489-33	GROMMET -----		1					
- 7	K375-125	BUSHING-SNUB HEMA -----		1					
- 8	0570088-3	LIGHT ASSY-MAP ----- ATTACHING PARTS		1					
- 9	AN515-2R12	SCREW -----		2					
S1959-1	INSERT -----			2					
-10	NAS43DD0-15	SPACER -----		2					
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
	SEE FIG 2	PLACARD-MAP LIGHT -----		1					
-11	0570095-1	COVER-TERMINAL BOARD -----		1					
-12	8409	CABLE-RETRACTILE BDN ----- ATTACHING PARTS		1					
-13	S1155-3	CLAMP -----			2				
-14	AN515-8R5	SCREW -----			1				
S1959-2	INSERT -----				1				
AN960-8L	WASHER -----				1				
-15	AN515-8R6	SCREW -----			1				
-16	AN515-8R14	SCREW -----			1				
NAS43DD3-24	SPACER -----				1				
-17	AN936A8	WASHER -----			1				
-18	AN340-8	NUT -----			1				
		-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
		A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384							
		B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON							

Electrical Equipment (Cont)

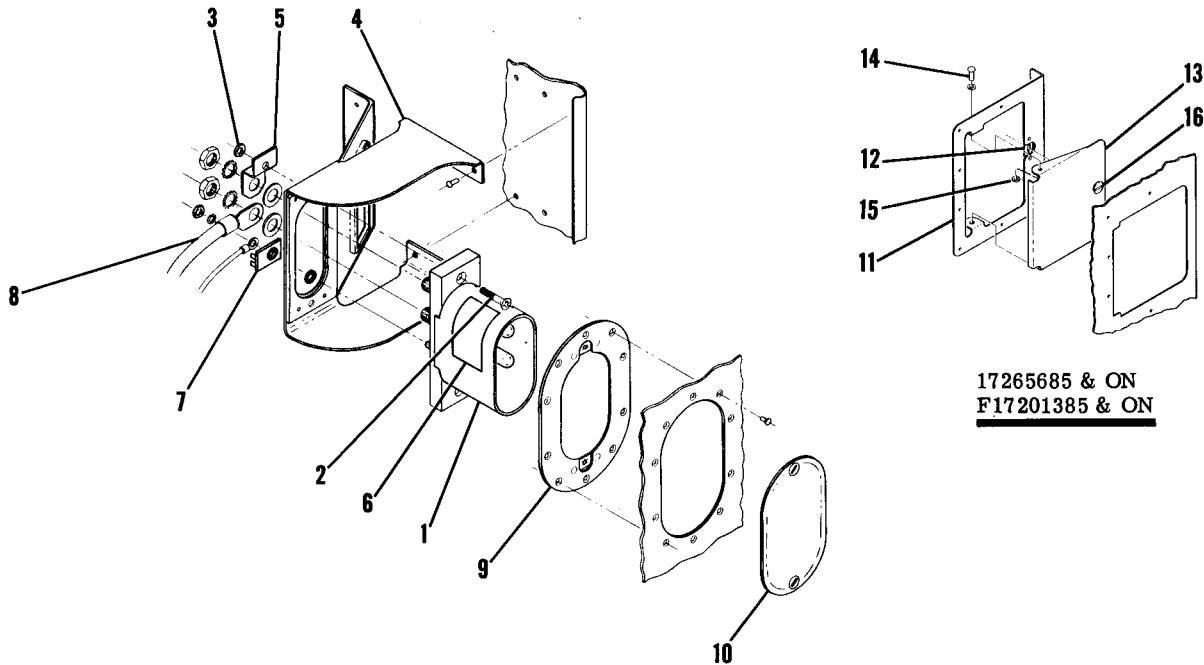


Figure 104. Ground Service Plug Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
1 2 3 4 5 6 7				
104 -		GROUND SERVICE PLUG INSTALLATION -----		
- 1	AN2552-3A	RECEPTACLE-GROUND SERVICE PLUG -----	1	
- 2	AN510-10R14	ATTACHING PARTS -----	2	
- 3	MS21045L3	SCREW -----	2	
- 4	0553005-5	NUT -----		
- 5	0553010-1	-----*		
- 6	SEE FIG 2	BRACKET-MOUNTING -----	1	
- 7	1570043-3	STRAP-GROUND -----	1	
- 8	0500062-PC7	PLACARD-POLARITY -----	1	
	0570101-PC1	DIODE BOARD ASSY -----	1	
- 9	0752610-1	CABLE-RECEPTACLE TO CONTACTOR -----	1	
	S1115-19	CABLE-RECEPTACLE TO CONTACTOR -----	1	A
-10	0752611-1	DOUBLER ASSY -----	1	B
	S1115-30	RECEPTACLE-STUD -----	2	
	S1115-9	DOOR ASSY-GROUND SERVICE PLUG -----	1	
-11	0552161-2	STUD -----	2	
-12	S1115-19	RING -----	2	
-13	0552161-4	DOUBLER ASSY -----	1	B
		RECEPTACLE -----	1	B
		DOOR ASSY -----	1	B
		ATTACHING PARTS -----		
-14	MS20450C8-5	RIVET -----	2	
-15	AN960XC4L	WASHER -----	2	
		-----*		
-16	S1115-1	STUD -----	1	
	S1115-9	RING -----	1	
A---172 SERIAL 17263459 THRU 17265684 F172 SERIAL F17201235 THRU F17201384 B---172 SERIAL 17265685 & ON F172 SERIAL F17201385 & ON				

**NUMERICAL INDEX**

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
AF934-14	89 - 16	AN3-3A	75 - 33	AN340B6	58A-39
AF934-5	89 - 4	AN3-3A	82 - 28	AN340B6	58A-45
AF934-7	89 - 12	AN3-3A	96 - 4	AN340B6	58A-47
AF934-9	89 - 9	AN3-3A	96 - 15	AN365-428	43 - 14
AN155B16S	82 - 4	AN3-4	42 - 36	AN4-10A	24 - 59
AN155B32L	79 - 43	AN3-4A	14 - 31	AN4-10A	78 - 2
AN155B32S	78 - 36	AN3-4A	24 - 37	AN4-10A	79 - 15
AN155B32S	78 - 40	AN3-4A	63 - 2	AN4-10A	79 - 41
AN155B32S	79 - 44	AN3-4A	68 - 13	AN4-10A	80 - 2
AN155B32S	80 - 31	AN3-4A	70 - 15	AN4-10A	80 - 4
AN155B32S	83 - 11	AN3-4A	95 - 11	AN4-10A	80 - 19
AN155B88L	81 - 25	AN3-5	81 - 23	AN4-10A	83 - 20
AN161-32LL	79 - 45	AN3-5A	23 - 15	AN4-10A	83A-19
AN200KS4	78 - 8	AN3-5A	24 - 44	AN4-10A	83A-23
AN21-10	78 - 34	AN3-5A	68 - 23	AN4-11A	17 - 1
AN21-10	78 - 39	AN3-5A	68 - 36	AN4-11A	20 - 11
AN23-10	80 - 8	AN3-5A	75 - 56	AN4-11A	68 - 14
AN23-10	83 - 3	AN3-5A	81 - 23	AN4-11A	78 - 44
AN23-10	83A - 3	AN3-5A	94 - 4	AN4-13A	57 - 1
AN23-10	83A-13	AN3-5A	94 - 12	AN4-14A	20 - 2
AN23-11	37 - 5	AN3-5A	95 - 12	AN4-14A	79 - 11
AN23-11	83 - 7	AN3-6	20 - 6	AN4-14A	80 - 23
AN23-12	80 - 13	AN3-6A	14 - 8	AN4-14A	83 - 15
AN23-13	83A - 8	AN3-6A	75 - 42	AN4-14A	83A-27
AN23-15A	53 - 25	AN3-6A	75 - 48	AN4-15A	79 - 25
AN23-15A	55 - 17	AN3-6A	81 - 27	AN4-15A	79 - 29
AN23-16A	53 - 2	AN3-6A	82 - 23	AN4-15A	82 - 44
AN23-16A	55 - 26	AN3-6A	94 - 3	AN4-17A	57 - 10
AN23-17	37 - 5	AN3-7	79 - 48	AN4-21A	79 - 7
AN23-19A	53 - 38	AN3-7A	13 - 13	AN4-21A	79 - 20
AN23-20A	54 - 90	AN3-7A	68 - 49	AN4-22A	39 - 9
AN23-40A	55 - 20	AN3-7A	68 - 50	AN4-3A	96 - 19
AN23-9	94 - 8	AN3-7A	79 - 48	AN4-30A	78 - 11
AN24-12	83A - 8	AN3-7A	82 - 6	AN4-31	37 - 39
AN24-13A	53 - 29	AN3H3A	38 - 43	AN4-31	38 - 29
AN24-13A	53 - 30	AN310-3	38 - 36	AN4-31	38 - 46
AN24-16A	53 - 31	AN310-3	79 - 46	AN4-31A	78 - 1
AN24-18A	56 - 6	AN310-3	80 - 9	AN4-36A	43 - 12
AN24-31A	56 - 17	AN310-3	80 - 14	AN4-42A	13 - 3
AN2552-3A	104 - 1	AN310-3	81 - 24	AN4-42A	13 - 9
AN256F8	66 - 18	AN310-3	83 - 4	AN4-5	61 - 7
AN26-9A	61 - 158	AN310-3	83 - 8	AN4-5A	55 - 1
AN3-10A	14 - 20	AN310-3	83A - 4	AN4-5A	56 - 1
AN3-10A	37 - 7	AN310-3	83A-10	AN4-5A	95 - 19
AN3-10A	55 - 13	AN310-3	83A-14	AN4-5A	96 - 2
AN3-10A	76 - 23	AN310-3	94 - 9	AN4-5A	96 - 47
AN3-10A	78 - 17	AN310-4	37 - 39	AN4-56A	82 - 36
AN3-10A	78 - 49	AN310-4	38 - 30	AN4-6A	61 - 2
AN3-10A	81 - 12	AN310-4	38 - 47	AN4-6A	61 - 12
AN3-10A	81 - 16	AN310-4	83A-10	AN4-6A	61 - 150
AN3-10A	82 - 11	AN310-5	37 - 18	AN4-6A	61 - 17
AN3-11A	14 - 10	AN310-5	37 - 29	AN4-6A	61 - 20
AN3-11A	23 - 31	AN315-3R	18 - 2	AN4-6A	61 - 32
AN3-11A	76 - 9	AN315-3R	68 - 49	AN4-6A	61 - 36
AN3-11A	76 - 35	AN315-3R	83 - 13	AN4-6A	68 - 43
AN3-11A	78 - 16	AN315-3R	83A-17	AN4-6A	95 - 13
AN3-11A	78 - 28	AN315-4R	45 - 25	AN4-60A	14 - 2
AN3-11A	82 - 24	AN315-4R	47 - 25	AN4-60A	82 - 20
AN3-12A	78 - 22	AN315-4R	68 - 65	AN4-7A	20 - 12
AN3-13A	75 - 53	AN315-4R	83A - 7	AN4-7A	55 - 1
AN3-13A	78 - 20	AN316-4R	13 - 18	AN4-7A	56 - 1
AN3-16A	76 - 17	AN316-4R	14 - 14	AN4H21A	44 - 25
AN3-17A	54 - 2	AN316-4R	77 - 2	AN4022-1	87 - 70
AN3-20A	24 - 6	AN316-6R	37 - 10	AN4022-1	90 - 2
AN3-20A	29 - 6	AN316-6R	37 - 14	AN4022-1	90 - 4
AN3-20A	29 - 10	AN320-1	78 - 34	AN4022-1	90 - 10
AN3-20A	93 - 7	AN320-1	78 - 39	AN415-2	36 - 4
AN3-20A	95 - 22	AN320-3	20 - 8	AN43DD1-54	58A-39
AN3-21A	24 - 2	AN320-3	37 - 5	AN5-10A	16 - 1
AN3-21A	79 - 37	AN340-3	102 - 3	AN5-10A	37 - 4
AN3-3A	32 - 95	AN340-4	103 - 4	AN5-11A	80 - 27
AN3-3A	63 - 4	AN340-8	103 - 18	AN5-13A	42 - 17
AN3-3A	68 - 63	AN340B6	58 - 47	AN5-14A	42 - 17
AN3-3A	68 - 84	AN340B6	58A-19	AN5-23A	18 - 6

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
AN5-31A	37 - 2	AN515-8R14	103 - 16	AN520-10R12	75 - 30
AN5-4A	18 - 3	AN515-8R4	37 - 41	AN520-10R36	10 - 19
AN5-47	37 - 17	AN515-8R4	42 - 24	AN520-10R36	11 - 2
AN5-47A	38 - 4	AN515-8R5	103 - 14	AN520-10R6	22 - 31
AN5-5A	16 - 5	AN515-8R6	25 - 11	AN520-10R6	34 - 2
AN5-51A	37 - 24	AN515-8R6	32 - 68	AN520-10R6	82 - 17
AN5-6A	8 - 7	AN515-8R6	42 - 33	AN520-10R6	96 - 43
AN500-416-10	71 - 2	AN515-8R6	49 - 19	AN520-10R7	32 - 91
AN500-416-10	71 - 18	AN515-8R6	54 - 82	AN520-10R7	87 - 46
AN500-416-10	71 - 39	AN515-8R6	63A - 5	AN520-10R7	96 - 39
AN500-416-10	71 - 47	AN515-8R6	63A - 8	AN520-10R8	4 - 4
AN500-416-10	71 - 57	AN515-8R6	96 - 23	AN520-10R8	10 - 21
AN500-416-10	71 - 64	AN515-8R6	103 - 15	AN520-10R8	11 - 4
AN500A8-4	53 - 1	AN515-8R7	23 - 61	AN520-10R8	17 - 17
AN500A8-4	54 - 1	AN515-8R7	96 - 45	AN520-10R8	18 - 44
AN505-4R4	97 - 16	AN515-8R8	5 - 46	AN520-10R8	35 - 5
AN507-1032R10	42 - 9	AN515-8R8	6 - 46	AN520-10R8	45 - 1
AN507-1032R10	45 - 63	AN515-8R8	15 - 15	AN520-10R8	46 - 1
AN507-1032R10	46 - 49	AN515-8R8	15 - 15	AN520-10R8	47 - 1
AN507-1032R10	47 - 63	AN515-8R8	19 - 10	AN520-10R8	47 - 1
AN507-1032R12	73 - 11	AN515-8R8	49 - 17	AN520-10R8	54 - 39
AN507-1032R14	60 - 51	AN515-8R8	51 - 18	AN520-10R8	54 - 66
AN507-632R12	3 - 30	AN515-8R8	57 - 5	AN520-10R8	60 - 49
AN507-632R6	89 - 2	AN515-8R8	57 - 7	AN520-10R8	87 - 10
AN507-632R8	3 - 21	AN515-8R8	58 - 27	AN520-10R8	88 - 22
AN507-632R8	3 - 29	AN515-8R8	58 - 76	AN520-10R8	96 - 22
AN507-640R4	84 - 29	AN515-8R8	65 - 23	AN520-10R8	98 - 2
AN507-832R14	53 - 6	AN515-8R8	66 - 22	AN520-10R8	98 - 6
AN507-832R14	55 - 16	AN515-8R8	67 - 23	AN520-416R8	96 - 21
AN5078832R14	60 - 44	AN515-8R8	67 - 27	AN525-10R10	32 - 71
AN5078832R8	60 - 36	AN515-8R8	87 - 32	AN525-10R12	50 - 23
AN509-10R10	49 - 5A	AN515-8R8	99 - 9	AN525-10R12	60 - 26
AN509-8R15	20 - 24	AN515-8R8	101 - 1	AN525-10R14	60 - 21
AN509-8R7	84 - 32	AN515-8R8	101 - 17	AN525-10R6	34 - 9
AN510-10R14	104 - 2	AN515B6RG	91 - 4	AN525-10R6	63A - 10
AN51084R6	60 - 42	AN515B6R10	58 - 36	AN525-10R6	71 - 21
AN515-10R8	77 - 3	AN515B6R10	58A - 24	AN525-10R6	72 - 4
AN515-10R8	88 - 1	AN515B6R12	58 - 37	AN525-10R7	17 - 17A
AN515-2R12	103 - 9	AN515B6R12	58 - 46	AN525-10R8	32 - 3
AN515-3R6	102 - 3	AN515B6R12	58A - 35	AN525-10R8	34 - 14
AN515-4-9	82 - 42	AN515B6R12	58A - 35	AN525-10R8	45 - 1
AN515-4R	46 - 25	AN515B6R12	58A - 45	AN525-10R8	45 - 47
AN515-4R10	103 - 2	AN515B6R12	58A - 47	AN525-10R8	46 - 1
AN515-4R6	17 - 19	AN515B6R12	92 - 1	AN525-10R8	47 - 47
AN515-6-10	90 - 13	AN515B6R16	58 - 38	AN525-832P6	87 - 41
AN515-6R10	58 - 44	AN515B6R16	58 - 41	AN525-832R10	42 - 61
AN515-6R10	58 - 45	AN515B6R16	58 - 47	AN525-832R10	58B - 2
AN515-6R10	58A - 32	AN515B6R16	58 - 49	AN525-832R20	60 - 28
AN515-6R10	97 - 9	AN515B6R16	58A - 25	AN525-832R6	45 - 21
AN515-6R14	58 - 37	AN515B6R16	58A - 28	AN525-832R6	47 - 18
AN515-6R18	58A - 39	AN515B6R16	58A - 33	AN525-832R6	48 - 8
AN515-6R18	58A - 41	AN515B6R16	58A - 36	AN525-832R6	71 - 36
AN515-6R5	58 - 56	AN515B6R6	58 - 44	AN525-832R6	71 - 42
AN515-6R5	59 - 9	AN515B6R6	58 - 45	AN525-832R6	71 - 63
AN515-6R5	100 - 2	AN515B6R6	58A - 31	AN525-832R7	48 - 12
AN515-6R6	5 - 44	AN515B6R6	58A - 32	AN525-832R7	64 - 6
AN515-6R6	6 - 44	AN515B6R6	91 - 2	AN525-832R8	49 - 18
AN515-6R6	42 - 35	AN515B6R7	84 - 46	AN525-832R9	22 - 19
AN515-6R6	42 - 42	AN515B6R8	23 - 37	AN52510R10	42 - 57
AN515-6R6	58 - 63	AN515B6R8	58 - 50	AN535-2-3	21 - 12
AN515-6R8	58 - 29	AN515B6R8	58A - 19	AN565B2H3	58 - 91B
AN515-6R8	58A - 20	AN515B6R8	58A - 38	AN565B2H3	58A - 70
AN515-6R8	84 - 4	AN515B6R8	58A - 47	AN565B428H4	82 - 46
AN515-6R8	102 - 12	AN515B8R4	58 - 62	AN565D6H3	77 - 7
AN515-8-6	98 - 10	AN515B8R4	74 - 27	AN6-15A	82 - 37
AN515-8R10	73 - 22	AN520-10R10	10 - 16	AN6-23A	68 - 2
AN515-8R11	101 - 22	AN520-10R10	11 - 17	AN6-27A	68 - 2
AN515-8R12	45 - 61	AN520-10R10	49 - 5	AN6-6A	24 - 51
AN515-8R12	46 - 47	AN520-10R10	88 - 22	AN6-6A	42 - 44
AN515-8R12	47 - 61	AN520-10R10	91 - 26	AN6227-5	19 - 12
AN515-8R13	58 - 92	AN520-10R12	37 - 34	AN6227B18	41 - 9
AN515-8R13	58 - 92A	AN520-10R12	42 - 41	AN6227B26	38 - 9
AN515-8R13	58A - 77	AN520-10R12	42 - 53	AN6227B32	38 - 23
AN515-8R13	58A - 78	AN520-10R12	51 - 12	AN6227B5	38 - 12

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
AN6227B6	41 - 3	AN936A416	71 - 48	AN960-10L	74 - 11
AN6227B6	41 - 7	AN936A416	71 - 58	AN960-10L	75 - 48
AN6230B2	43 - 21	AN936A416	71 - 65	AN960-10L	79 - 47
AN6230B2	44 - 31	AN936A6	58A-39	AN960-10L	81 - 18
AN6230B3	38 - 15	AN936A6	58A-41	AN960-10L	82 - 31
AN6230B6	38 - 24	AN936A6	58A-45	AN960-10L	83A- 9
AN665-34R	83A- 6	AN936A68	58 - 47	AN960-10L	96 - 4
AN7-24A	3 - 4	AN936A68	58 - 50	AN960-10L	96 - 15
AN7-42A	96 - 28	AN936A68	58A-35	AN960-10L	96 - 43
AN7-43A	68 - 8	AN936A68	58A-38	AN960-10L	96 - 45
AN7-44A	68 - 9	AN936A616	53 - 32	AN960-2	71 - 26
AN737TW56	68 - 55	AN936A8	37 - 41	AN960-4	48 - 4
AN737TW56	74 - 18	AN936A8	42 - 25	AN960-4	75 - 62
AN741TD6	68 - 43	AN936A8	58 - 22	AN960-4L	56 - 23
AN742-12	68 - 13	AN936A8	58A-15	AN960-416	13 - 6
AN742D12	68 - 21	AN936A8	74 - 27	AN960-416	13 - 11
AN742D12	92 - 3	AN936A8	87 - 42	AN960-416	14 - 6
AN742D16	73 - 21	AN936A8	103 - 17	AN960-416	17 - 3
AN742D2	87 - 66	AN936B6	45 - 19	AN960-416	20 - 3
AN742D3	68 - 83	AN936B6	46 - 20	AN960-416	20 - 13
AN742D3	88 - 21	AN936B6	47 - 20	AN960-416	30 - 2
AN742D4	84 - 4	AN936B8	48 - 9	AN960-416	30 - 7
AN742D8	36 - 13	AN94086	58A-41	AN960-416	30 - 10
AN742D8	85 - 4	AN944-101A	38 - 27	AN960-416	30 - 11
AN8-17A	15 - 3	AN944-101A	38 - 40	AN960-416	39 - 10
AN8-23A	3 - 1	AN960-10	13 - 15	AN960-416	43 - 13
AN8-25A	15 - 2	AN960-10	14 - 11	AN960-416	55 - 2
AN815-3D	75 - 3	AN960-10	23 - 33	AN960-416	56 - 2
AN815-3D	75 - 13	AN960-10	24 - 3	AN960-416	57 - 2
AN815-6D	87 - 13	AN960-10	24 - 7	AN960-416	57 - 11
AN815-6D	87 - 17	AN960-10	24 - 45	AN960-416	61 - 4
AN815-6D	87 - 30	AN960-10	29 - 7	AN960-416	61 - 8
AN815-8D	87 - 53	AN960-10	29 - 11	AN960-416	61 - 14
AN816-2D	68 - 77	AN960-10	32 - 3	AN960-416	61 - 22
AN816-2D	87 - 57	AN960-10	37 - 34	AN960-416	61 - 33
AN816-4D	91 - 7	AN960-10	42 - 54	AN960-416	61 - 37
AN816-6-6	68 - 25	AN960-10	54 - 72	AN960-416	68 - 14
AN821-2D	87 - 67	AN960-10	54 - 87	AN960-416	68 - 43
AN824-2D	90 - 5	AN960-10	60 - 27	AN960-416	68 - 47
AN824-6D	87 - 24	AN960-10	68 - 13	AN960-416	68 - 66
AN825-832R6	46 - 18	AN960-10	68 - 23	AN960-416	71 - 4
AN832-2D	87 - 64	AN960-10	68 - 36	AN960-416	71 - 20
AN832-3D	75 - 6	AN960-10	68 - 37	AN960-416	71 - 41
AN833-3D	75 - 17	AN960-10	68 - 49	AN960-416	71 - 49
AN833-8D	87 - 72	AN960-10	68 - 50	AN960-416	71 - 59
AN837-3D	75 - 10	AN960-10	68 - 64	AN960-416	71 - 66
AN837-3D	75 - 16	AN960-10	68 - 86	AN960-416	78 - 5
AN900-10	68 - 82	AN960-10	70 - 16	AN960-416	79 - 35
AN901-5A	38 - 14	AN960-10	76 - 17	AN960-416	79 - 40
AN911-1D	84 - 26	AN960-10	78 - 16	AN960-416	80 - 5
AN912-2	68 - 27	AN960-10	82 - 8	AN960-416	80 - 24
AN912-2D	68 - 29	AN960-10	82 - 14	AN960-416	82 - 20
AN916-1D	84 - 25	AN960-10	82 - 25	AN960-416	88 - 26
AN921-3D	75 - 24	AN960-10	87 - 10	AN960-416	95 - 14
AN924-10D	91 - 33	AN960-10	87 - 47	AN960-416L	37 - 39
AN924-2D	27 - 33	AN960-10L	20 - 7	AN960-416L	38 - 34
AN924-2D	87 - 64	AN960-10L	35 - 5	AN960-416L	38 - 51
AN924-3D	27 - 42	AN960-10L	37 - 5	AN960-416L	43 - 23
AN924-3D	68 - 79	AN960-10L	38 - 38	AN960-416L	43 - 26
AN924-3D	75 - 7	AN960-10L	53 - 8	AN960-416L	44 - 21
AN924-3D	75 - 10	AN960-10L	53 - 39	AN960-416L	44 - 26
AN924-3D	75 - 19	AN960-10L	54 - 3	AN960-416L	54 - 20
AN924-3D	75 - 26	AN960-10L	54 - 5	AN960-416L	63 - 5
AN924-6D	10 - 14	AN960-10L	54 - 40	AN960-416L	68 - 51
AN924-6D	11 - 22	AN960-10L	54 - 60	AN960-416L	78 - 4
AN924-8D	87 - 74	AN960-10L	54 - 67	AN960-416L	79 - 10
AN936A10	87 - 78	AN960-10L	54 - 91	AN960-416L	83 - 16
AN936A10	88 - 2	AN960-10L	55 - 14	AN960-416L	83A- 9
AN936A4	82 - 42	AN960-10L	55 - 23	AN960-416L	83A-28
AN936A4	103 - 3	AN960-10L	60 - 23	AN960-416L	88 - 27
AN936A4	53 - 31	AN960-10L	68 - 87	AN960-416L	96 - 49
AN936A416	71 - 3	AN960-10L	72 - 4	AN960-516	8 - 9
AN936A416	71 - 19	AN960-10L	73 - 27	AN960-516	15 - 10
AN936A416	71 - 40	AN960-10L	73 - 39	AN960-516	16 - 2


illustrated parts catalog
MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
AN960-516	18 - 3	A1638-29	40 - 13	C253001-0101	49 - 8
AN960-516	37 - 4	A1638-30	44 - 17	C262001-0201	43 - 30
AN960-516	80 - 28	A1663-022-1	45 - 16	C262001-0202	39 - 12
AN960-516	87 - 64	A1663-022-1	46 - 16	C262003-0101	43 - 30
AN960-516L	16 - 3	A1663-022-1	47 - 16	C262003-0102	44 - 1
AN960-516L	37 - 26	A2108A	17 - 21	C262003-0102	39 - 12
AN960-516L	42 - 18	A2109-3	17 - 22	C262003-0102	40 - 1
AN960-6	58 - 63	A2513-38	64 - 2	C262004-0101	40 - 1
AN960-616	42 - 46	A2513-66	40 - 12	C262004-0102	44 - 1
AN960-616	61 - 27	A2973-6	64 - 4	C262023-0101	39 - 13
AN960-616	68 - 4	A30010	44 - 9	C262023-0101	40 - 2
AN960-616	82 - 38	A30011	44 - 12	C262023-0102	43 - 31
AN960-616L	42 - 45	A30013	44 - 13	C262023-0102	44 - 2
AN960-716	3 - 6	A30014	44 - 11	C291502-0103	58 - 76
AN960-716	42 - 14	A30015	44 - 10	C291502-0103	58A-75
AN960-716	75 - 8	A30021	44 - 30	C292501-0104	58 - 90D
AN960-716	75 - 10	A30023	44 - 20	C292501-0104	58A-50
AN960-716	75 - 18	A30030	44 - 32	C294502-0101	91 - 23
AN960-716L	68 - 10	A30040	44 - 34	C294505-0101	86 -
AN960-8	22 - 27	A30047	40 - 5	C294505-0102	86 - 1
AN960-8	22 - 32	A30048	40 - 4	C294510-0301	68 - 75
AN960-8	32 - 36A	A30078-1	40 - 11	C299501-0101	68 - 7
AN960-8	54 - 98	A30078-2	40 - 6	C299505-0102	58 - 74
AN960-8	73 - 22	A30079-1	44 - 4	C299505-0102	58A-67
AN960-8L	22 - 19	A30079-2	44 - 8	C30019	44 - 18
AN960-8L	103 - 14	A30085	44 - 33	C30041	44 - 19
AN960-816	3 - 3	A30087	44 - 24	C30057	40 - 10
AN960-816	15 - 5	A30087	44 - 28	C301001-0211	82 - 42
AN960-816L	78 - 13	A39070	43 - 10	C301002-0103	82 - 40
AN960-816L	78 - 29	A4513-1	17 - 20	C301002-0301	82 - 36
AN960-816L	78 - 29	A6204-8Z3	7 - 12	C301002-0308	82 - 41
AN960C416L	89 - 5	A7512-12	3 - 22	C30163	44 - 7
AN960C616L	55 - 12	B30024	44 - 27	C30163-1	44 - 6
AN960D10L	10 - 16	B30026	44 - 24	C30172	40 - 8
AN960D10L	63 - 2	B30026	44 - 28	C30172-1	40 - 7
AN960D10L	63 - 4	B30027	44 - 23	C421001-0101	60 - 47
AN960D1216L	87 - 73	B30076	44 - 5	C421001-0102	60 - 48
AN960D2L	68 - 74	B30077	40 - 9	C431002-0101	69 - 12
AN960D4L	18 - 30	B30089	44 - 29	C431003-0101	91 - 37
AN960D416L	78 - 45	B30195	44 - 15	C431003-0301	91 - 37
AN960D516L	45 - 68	B44160	38 - 27	C482001-0202	91 - 34A
AN960D516L	46 - 54	B610	13 - 8	C482001-0401	91 - 32
AN960D516L	47 - 68	B610	14 - 7	C590501-0101	82 - 27
AN960D6L	58 - 57	B610	78 - 7	C592001-0201	63A- 1
AN960D6L	58 - 92B	B610	82 - 21	C593001-0101	96 - 24
AN960D616	27 - 42	B610	82 - 36	C594502-0101	101 - 16
AN960D8L	58 - 92	B610-0H	13 - 8	C6AB10A730A	96 - 21
AN960D8L	58 - 92A	B610-P	13 - 8	C611001-0102	69 - 7
AN960D8L	58A-77	CM2692-20-1S	14 - 40	C611001-0102	96 - 21
AN960D8L	58A-78	CM2692-28-1S	5 - 37	C611501-0102	69 - 5
AN960D8L	97 - 10	CM2692-28-1S	6 - 37	C611501-0102	96 - 27
AN960D816L	78 - 29	CM2692-28-1S	9 - 12	C621001-0106	101 -
AN960PD10L	91 - 27	CR163-4-8	13 - 28	C622001-0201	3 - 20
AN960PD1416L	91 - 34	CR763	45 - 40	C622001-0401	17 - 18
AN960PD4	49 - 38	CR763	47 - 40	C622003-0105	2 - 7
AN960PD416	78 - 47	C1-C2	1 - 1	C622003-0105	58 - 93
AN960PD6L	78 - 34	C109	37 - 12	C622006-0101	3 - 24
AN960PD6L	78 - 39	C156001-0104	4 - 6	C622006-0102	3 - 26
AN960XC4L	104 - 15	C156001-0104	10 - 8	C622006-0103	3 - 27
AN970-3	63 - 3	C156001-0104	11 - 14	C622006-0105	3 - 25
AN970-3	68 - 49	C161001-0306	64 - 1	C622007-0101	96 - 38
AN970-3	87 - 79	C161001-0307	64 - 1	C660501-0101	60 - 43
AN970-3	102 - 7	C161001-0308	64 - 1	C661003-0504	58 - 37
AN970-4	96 - 2	C161001-0309	64 - 1	C661003-0504	58A-35
AN970-5	60 - 8	C163001-0104	43 -	C661011-0105	58A-33
A1257A	3 - 23	C163003-0101	44 - 2	C661011-0106	58A-33
A1274-8Z-3	4 - 11	C163003-0201	40 - 2	C661012-0101	58 - 47
A1280-2	3 - 24	C163030-0111	43 - 14	C661025-0102	58 - 47
A1280-3	3 - 24	C163032-0105	44 - 18	C661025-0102	58A-33
A1635-73	44 - 16	C17313	101 - 7	C661060-0109	58 - 38
A1636-23	40 - 3	C17325	101 - 2	C661061-0106	58 - 39
A1636-24	44 - 14	C17326	101 - 5	C661064-0102	58A-25
A1638-1	44 - 18	C17330	101 - 3	C661065-0102	58A-26
A1638-11	64 - 3	C17331-6	101 - 6	C661071-0101	58 - 47

~~C~~
cessna illustrated parts catalog

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
C661071-0101	58A-33	L4858-1	58A-74	MS20822-8D	87 - 58
C661071-0102	58A-33	MS15002-3	38 - 53	MS20823-6B	68 - 27
C661071-0102	58 - 47	MS15584-2	97 - 19	MS20823-8D	87 - 55
C661075-0101	58 - 45	MS15584-2	100 - 6	MS20823-8D	87 - 75
C661075-0101	58A-32	MS16624-1025	88 - 14	MS20825-6	68 - 27
C661075-0101	91 - 3	MS16624-1262	42 - 2	MS20825-6D	91 - 6
C661075-0102	58 - 45	MS16624-1275	38 - 54	MS20913-1D	91 - 9
C661075-0103	58 - 45	MS16624-81	19 - 5	MS20913-10	89 - 10
C661075-0103	58A-32	MS16625-118	41 - 2	MS20913-2D	91 - 9
C661075-0103	91 - 3	MS20074-03-04	87 - 77	MS21042L3	96 - 4
C661075-0104	58 - 45	MS20074-04-21	68 - 51	MS21042L3	96 - 15
C661075-0104	58A-32	MS20220-1	80 - 26	MS21042L4	13 - 4
C661075-0104	91 - 3	MS20253P1	59 - 13	MS21042L4	13 - 12
C661075-0105	58 - 45	MS20364-1032C	45 - 33	MS21042L4	14 - 3
C661075-0106	58A-32	MS20364-1032C	46 - 33	MS21042L4	17 - 4
C661075-0106	91 - 3	MS20364-1032C	47 - 33	MS21042L4	20 - 4
C661075-0107	58A-32	MS20364-1032C	75 - 31	MS21042L4	20 - 14
C661076-0101	58 - 44	MS20364-624C	37 - 8	MS21042L4	23 - 26
C661076-0101	58A-31	MS20364-720C	42 - 15	MS21042L4	30 - 2
C661076-0101	91 - 1	MS20365-1018C	42 - 5	MS21042L4	30 - 7
C661076-0102	58 - 44	MS20365-1032C	23 - 15	MS21042L4	30 - 10
C661076-0102	58A-31	MS20365-1032C	68 - 36	MS21042L4	30 - 11
C661076-0102	91 - 1	MS20365-1032C	88 - 23	MS21042L4	38 - 11
C661076-0103	58 - 44	MS20365-328	39 - 11	MS21042L4	43 - 25
C661076-0103	58A-31	MS20365-428A	40 - 14	MS21042L4	44 - 22
C661076-0103	91 - 1	MS20365-624C	68 - 5	MS21042L4	45 - 74
C661076-0104	58 - 44	MS20365-632	58A-20	MS21042L4	46 - 60
C661076-0105	58A-31	MS20365-720C	3 - 5	MS21042L4	47 - 74
C661076-0105	91 - 1	MS20365-720C	68 - 11	MS21042L4	56 - 20
C661080-0101	58 - 49	MS20365-720C	96 - 28	MS21042L4	57 - 3
C661080-0101	58A-36	MS20365-820C	3 - 2	MS21042L4	57 - 12
C664501-0103	58 - 63	MS20365-820C	15 - 5	MS21042L4	61 - 5
C664502-0101	58A-45	MS20365BB832C	60 - 38	MS21042L4	61 - 10
C664508-0101	58 - 36	MS20392-1C11	82 - 3	MS21042L4	61 - 15
C664508-0101	58A-24	MS20392-1C15	45 - 22	MS21042L4	61 - 15E
C668001-0105	58 - 64	MS20392-1C15	46 - 22	MS21042L4	61 - 21
C668001-0105	58A-44	MS20392-1C15	47 - 22	MS21042L4	61 - 34
C668020-0102	58 - 50	MS20392-1C21	54 - 76	MS21042L4	63 - 5
C668020-0102	58A-38	MS20392-1C23	53 - 44	MS21042L4	68 - 14
C668507-0101	60 - 52	MS20392-1C39	49 - 3A	MS21042L4	68 - 43
C668509-0101	58 - 48	MS20392-1C49	49 - 3	MS21042L4	68 - 47
C668509-0101	58A-39	MS20392-1C67	48 - 2	MS21042L4	78 - 3
C668509-0101	91 - 21	MS20392-1C7	56 - 22	MS21042L4	78 - 11
C669504-0103	58 - 52	MS20392-1C9	45 - 23	MS21042L4	78 - 47
C669505-0101	58 - 55	MS20392-1C9	46 - 23	MS21042L4	79 - 4
C669511-0102	58A-39	MS20392-1C9	47 - 23	MS21042L4	79 - 9
C669512-0102	58A-41	MS20392-1C9	53 - 53	MS21042L4	79 - 14
C733001-0101	60 - 2	MS20392-2C11	54 - 4	MS21042L4	79 - 18
C733001-0103	60 - 5	MS20392-2C13	82 - 30	MS21042L4	79 - 22
D30256	44 - 3	MS20392-2C15	76 - 12	MS21042L4	79 - 27
EC1239A-8	1 - 10	MS20392-2C15	76 - 32	MS21042L4	79 - 39
EC2216B/A	1 - 148	MS20392-2C17	54 - 60	MS21042L4	80 - 2
EC776	1 - 12	MS20392-2C37	54 - 71	MS21042L4	80 - 6
EC880	1 - 2	MS20392-2C43	53 - 42	MS21042L4	80 - 20
FC6446	43 - 27	MS20392-2C59	54 - 85	MS21042L4	80 - 25
H323-3-1-1	51 - 20	MS20392-2C71	55 - 18	MS21042L4	82 - 21
H323-3-1-1	51 - 45	MS20392-2C9	82 - 33	MS21042L4	82 - 36
H559-3-1	51 - 20	MS20392-3C17	54 - 22	MS21042L4	82 - 45
H559-3-1	51 - 45	MS20392-3C49	54 - 19	MS21042L4	83 - 17
IDI-757	102 - 11	MS20392-4C13	75 - 50	MS21042L4	83 - 21
IK1-6-10	91 - 40	MS20392-4C17	45 - 70	MS21042L4	83A-20
IK66-1	91 - 39	MS20392-4C17	46 - 56	MS21042L4	83A-24
KM610-064	65 - 33	MS20392-4C17	47 - 70	MS21042L4	83A-29
KM610-064	66 - 31	MS20392-4C47	45 - 67	MS21042L4	88 - 28
KM610-064	67 - 37	MS20392-4C47	46 - 53	MS21042L4	95 - 16
KM610-64	37 - 38	MS20392-4C47	47 - 67	MS21042L4	95 - 20
KM610-64	42 - 49	MS20426AD10	15 - 9	MS21042L4	96 - 48
K375-125	103 - 7	MS20426AD10-30	15 - 7	MS21042L5	8 - 8
LN1032X	96 - 8	MS20435-4	37 - 11	MS21042L5	15 - 10
LOCTITE 5381	1 - 14A	MS20450C8-5	104 - 14	MS21042L5	16 - 4
LOCTITE 8721	1 - 14C	MS20822-3D	42 - 31	MS21042L5	18 - 4
LP4-17AM	43 - 22	MS20822-6-6	68 - 25	MS21042L5	23 - 54
LW10729	96 - 31	MS20822-6D	91 - 5	MS21042L5	37 - 2
L4858-1	58 - 66	MS20822-6D	91 - 8	MS21042L5	37 - 27

Cessna illustrated parts catalog

MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
MS21042L5	38 - 5	MS21044N3	76 - 23	MS24665-132	75 - 63
MS21042L5	42 - 19	MS21044N3	76 - 36	MS24665-132	76 - 5
MS21042L5	60 - 16	MS21044N3	78 - 18	MS24665-132	76 - 13
MS21042L5	80 - 29	MS21044N3	78 - 21	MS24665-132	76 - 28
MS21042L5	93 - 13	MS21044N3	78 - 23	MS24665-132	76 - 33
MS21042L6	24 - 52	MS21044N3	78 - 27	MS24665-132	82 - 32
MS21042L6	61 - 15C	MS21044N3	78 - 49	MS24665-132	88 - 12
MS21042L6	82 - 39	MS21044N3	79 - 32	MS24665-132	94 - 10
MS21044N08	19 - 11	MS21044N3	79 - 46	MS24665-134	37 - 19
MS21044N08	22 - 19	MS21044N3	81 - 13	MS24665-134	37 - 39
MS21044N08	22 - 27	MS21044N3	81 - 17	MS24665-134	38 - 31
MS21044N08	25 - 12	MS21044N3	81 - 24	MS24665-134	38 - 48
MS21044N08	32 - 36A	MS21044N3	81 - 29	MS24665-134	54 - 21
MS21044N08	53 - 7	MS21044N3	82 - 7	MS24665-134	79 - 42
MS21044N08	54 - 83	MS21044N3	82 - 12	MS24665-134	79 - 49A
MS21044N08	55 - 16	MS21044N3	82 - 26	MS24665-134	80 - 10
MS21044N08	63A - 6	MS21044N3	87 - 10	MS24665-134	80 - 15
MS21044N08	63A - 9	MS21044N3	87 - 48	MS24665-134	81 - 24
MS21044N08	64 - 10	MS21044N3	88 - 23	MS24665-134	82 - 3
MS21044N08	73 - 22	MS21044N3	91 - 28	MS24665-134	82 - 9
MS21044N08	84 - 33	MS21044N3	93 - 8	MS24665-134	83 - 5
MS21044N08	87 - 33	MS21044N3	95 - 15	MS24665-134	83 - 9
MS21044N08	96 - 45	MS21044N3	95 - 23	MS24665-134	83A - 5
MS21044N08	101 - 18	MS21045L06	58 - 29	MS24665-134	83A - 11
MS21044N3	10 - 20	MS21045L06	58 - 37	MS24665-134	83A - 15
MS21044N3	11 - 3	MS21045L06	58 - 59	MS24665-136	37 - 31
MS21044N3	11 - 6	MS21045L06	58 - 62	MS24665-136	79 - 16
MS21044N3	13 - 14	MS21045L06	58 - 63	MS24665-136	80 - 21
MS21044N3	13 - 21	MS21045L06	59 - 9	MS24665-136	83 - 22
MS21044N3	14 - 9	MS21045L06	90 - 13	MS24665-136	83A - 21
MS21044N3	14 - 21	MS21045L06	100 - 2	MS24665-136	83A - 25
MS21044N3	22 - 33	MS21045L3	37 - 7	MS24665-136	94 - 12
MS21044N3	23 - 34	MS21045L3	37 - 34	MS24665-140	79 - 30
MS21044N3	24 - 4	MS21045L3	68 - 13	MS24665-281	45 - 69
MS21044N3	24 - 8	MS21045L3	68 - 23	MS24665-281	46 - 55
MS21044N3	24 - 38	MS21045L3	68 - 49	MS24665-281	47 - 69
MS21044N3	24 - 46	MS21045L3	68 - 50	MS24665-281	75 - 49
MS21044N3	29 - 8	MS21045L3	68 - 84	MS24665-281	75 - 51
MS21044N3	29 - 12	MS21045L3	68 - 88	MS24665-285	76 - 3
MS21044N3	32 - 3	MS21045L3	70 - 17	MS24665-285	76 - 26
MS21044N3	32 - 91	MS21045L3	72 - 4	MS24665-285	80 - 30
MS21044N3	32 - 95	MS21045L3	96 - 4	MS24665-285	81 - 18
MS21044N3	34 - 9	MS21045L3	96 - 15	MS24665-285	82 - 13
MS21044N3	35 - 5	MS21045L3	96 - 43	MS24665-351	42 - 22
MS21044N3	42 - 10	MS21045L3	102 - 8	MS24665-355	79 - 12
MS21044N3	42 - 11	MS21045L3	104 - 3	MS24665-355	81 - 14
MS21044N3	42 - 37	MS21045L6	84 - 4	MS24665-355	83 - 18
MS21044N3	42 - 55	MS21919DG12	68 - 36	MS24665-357	83A - 30
MS21044N3	45 - 2	MS21919DG12	68 - 37	MS24665-362	42 - 43
MS21044N3	45 - 2	MS21919DG3	42 - 28	MS24665-5	78 - 35
MS21044N3	46 - 2	MS21919DG3	75 - 11	MS24665-5	78 - 40
MS21044N3	46 - 2	MS21919DG3	75 - 20	MS25082B2	58 - 22
MS21044N3	47 - 2	MS21919DG3	92 - 4	MS25082B2	58A - 15
MS21044N3	47 - 2	MS21919DG6	68 - 21	MS25237-330	58B - 4
MS21044N3	49 - 6	MS21919DG6	87 - 10	MS25237-330	58B - 6
MS21044N3	53 - 25	MS24665-132	20 - 8A	MS27975-3	83A - 6
MS21044N3	54 - 3	MS24665-132	37 - 5	MS28775-110	77 - 14
MS21044N3	55 - 15	MS24665-132	38 - 37	MS28778-2	68 - 78
MS21044N3	55 - 17	MS24665-132	45 - 24	MS28778-3	75 - 25
MS21044N3	55 - 25	MS24665-132	46 - 24	MS28778-4	10 - 6
MS21044N3	60 - 25	MS24665-132	47 - 24	MS28778-4	11 - 12
MS21044N3	63 - 2	MS24665-132	48 - 3	MS29513-010	89 - 4
MS21044N3	63 - 4	MS24665-132	49 - 4	MS29513-012	89 - 12
MS21044N3	63A - 11	MS24665-132	53 - 42	MS29513-10	88 - 17
MS21044N3	73 - 14	MS24665-132	53 - 45	MS29513-111	88 - 6
MS21044N3	73 - 40	MS24665-132	53 - 53	MS29513-111	89 - 9
MS21044N3	74 - 12	MS24665-132	54 - 6	MS29513-116	89 - 16
MS21044N3	75 - 34	MS24665-132	54 - 60	MS29513-138	88 - 7
MS21044N3	75 - 43	MS24665-132	54 - 73	MS3106A14S7S	92 - 1
MS21044N3	75 - 48	MS24665-132	54 - 77	MS35489-1	102 - 13
MS21044N3	75 - 54	MS24665-132	54 - 88	MS35489-106	87 - 20A
MS21044N3	75 - 57	MS24665-132	55 - 19	MS35489-111	87 - 3
MS21044N3	76 - 10	MS24665-132	56 - 24	MS35489-118	22 - 46
MS21044N3	76 - 17	MS24665-132	75 - 60	MS35489-12	36 - 10

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
MS35489-13	101 - 14	NAS220-8	4 - 3	NAS43HT3-34	47 - 44
MS35489-134	100 - 4	NAS220-8	32 - 36A	NAS43HT3-42A	23 - 32
MS35489-15	71 - 12	NAS220-9	22 - 27	NAS43HT3-45	45 - 32
MS35489-15	71 - 16	NAS221-15	45 - 31	NAS43HT3-45	46 - 32
MS35489-15	71 - 33	NAS221-15	46 - 31	NAS43HT4-10	61 - 13
MS35489-17	60 - 18	NAS221-15	47 - 31	NAS43HT4-10	79 - 49
MS35489-17	93 - 10	NAS221-8	13 - 20	NAS43HT4-16	79 - 23
MS35489-20	23 - 43	NAS221-9	42 - 11	NAS43HT4-16	79 - 34
MS35489-33	58 - 23	NAS228-35LH	78 - 33	NAS43HT4-18	61 - 3
MS35489-33	58A-15	NAS295M4	26 - 7	NAS43HT4-22	61 - 28
MS35489-33	103 - 6	NAS388-10-7P	45 - 59	NAS43HT4-22	79 - 5
MS35489-36S	75 - 21	NAS388-10-7P	47 - 59	NAS43HT4-28	79 - 24
MS35489-4	58 - 17	NAS388-10-74	46 - 45	NAS43HT4-43	79 - 6
MS35489-4	58A-11	NAS395-1-3	97 - 5	NAS43HT4-46	79 - 28
MS35489-4	97 - 26	NAS395-1-3	97 - 25	NAS446-1	51 - 4
MS35489-4	102 - 5	NAS395-12-3	85 - 6	NAS446-1-3	74 - 23
MS35489-6	60 - 39	NAS395-14-3	5 - 13	NAS446-2-3	50 - 30
MS35489-9	5 - 6	NAS395-14-3	6 - 14	NAS446-2-3	58 - 94
MS35489-9	6 - 6	NAS395-14-3	7 - 15	NAS446-2-3	59 - 7
MS9025-02	88 - 21	NAS395-14-3	7 - 15A	NAS446-2-3	100 - 2
MX25A	1 - 14	NAS395-14-3	9 - 9	NAS446-2-3	100 - 5
M31A832R6C	49 - 13	NAS395-14-3	9 - 11	NAS446-4	92 - 6
M451	81 - 8	NAS395-14-3	14 - 37	NAS446-4	97 - 22
NAS1022A3	94 - 5	NAS395-14-3	18 - 25	NAS446-4-1	7 - 11
NAS1022A3	94 - 12	NAS395-14-3	22 - 36	NAS446-4-3	28 - 3
NAS1067A3	68 - 60	NAS395-14-3	23 - 20	NAS446-4-3	28 - 6
NAS1067A3	68 - 67	NAS395-14-3	35 - 13	NAS446-4-3	28 - 9
NAS1067A3	71 - 34	NAS395-14-3	70 - 4	NAS446-4-3	36 - 15
NAS1080C8	30 - 2	NAS395-14-3	84 - 27	NAS446-4-3	50 - 13
NAS1080C8	30 - 7	NAS395-16-3	84 - 4	NAS446-4-3	51 - 30
NAS1080C8	30 - 10	NAS395-18-1	85 - 11	NAS446-4-3	51 - 32
NAS1080C8	30 - 11	NAS395-19-3	73 - 21	NAS446-4-3	70 - 5
NAS1329-08K75	45 - 54	NAS395-2-3	58 - 46	NAS446-4-3	71 - 6
NAS1329-08K75	47 - 54	NAS395-2-3	92 - 1	NAS446-4-3	71 - 51
NAS1329A06K120	3 - 30	NAS395-3-3	23 - 42	NAS446-4-3	71 - 56
NAS1329A06K120	5 - 47	NAS395-3-3	45 - 20	NAS446-4-3	73 - 3
NAS1329A06K120	6 - 47	NAS395-3-3	46 - 21	NAS446-4-3	87 - 63
NAS1329A08-75	15 - 16	NAS395-3-3	47 - 21	NAS446-4-3	87 - 66
NAS1329A08-75	15 - 16	NAS395-3-3	97 - 3	NAS446-4-3	88 - 24
NAS1428-8	30 - 7	NAS395-3-3	97 - 14	NAS446-4-3	68 - 21
NAS1428-8	30 - 10	NAS395-4-3	58 - 35	NAS446-5-1	50 - 32
NAS1428-8	30 - 11	NAS395-4-3	58A-18	NAS446-5-3	99 - 12
NAS1428-9	30 - 2	NAS397-16	37 - 15	NAS448-1-3	71 - 11
NAS144-13	30 - 2	NAS397-18	68 - 42	NAS463W416	71 - 16
NAS144-13	30 - 7	NAS397-18	73 - 20	NAS463W416	71 - 28
NAS144-13	30 - 10	NAS397-32	68 - 57	NAS463W416	71 - 44
NAS144-13	30 - 11	NAS397-32	74 - 19	NAS463W416	71 - 53
NAS144-14	30 - 2	NAS397-32	74 - 22	NAS463W416	71 - 61
NAS144-14	30 - 7	NAS397-8	91 - 18	NAS463W416	71 - 68
NAS144-14	30 - 10	NAS398-50	68 - 33	NAS464-3-22	38 - 35
NAS144-14	30 - 11	NAS398-50	73 - 36	NAS464P4A12	61 - 30
NAS144-17	23 - 26	NAS398-50	74 - 14	NAS464P4A8	61 - 30
NAS178-8-10	30 - 11	NAS42HT6-8	76 - 29	NAS464P7LA44	42 - 13
NAS178-8-7	24 - 32	NAS428H3-12	83A-16	NAS514P1032-14	45 - 44
NAS178-8-7	24 - 53	NAS428H3-16	18 - 1	NAS514P1032-14	47 - 44
NAS178-8-8	30 - 7	NAS428H3-6	83 - 12	NAS514P428-10	45 - 73
NAS178-8-8	30 - 10	NAS43DD0-15	103 - 10	NAS514P428-10	46 - 59
NAS178-8-9	30 - 2	NAS43DD0-6	103 - 2	NAS514P428-10	47 - 73
NAS179-8	24 - 33	NAS43DD1-22	58A-45	NAS514P832-8	67 - 17
NAS179-8	24 - 54	NAS43DD1-42	58 - 58	NAS520-10R6	32 - 88
NAS179-8	30 - 2	NAS43DD1-54	58A-41	NAS557-10A	28 - 7
NAS179-8	30 - 7	NAS43DD3-12	82 - 34	NAS557-10A	96 - 23
NAS179-8	30 - 10	NAS43DD3-16	99 - 11	NAS557-12A	28 - 7
NAS179-8	30 - 11	NAS43DD3-16	101 - 18	NAS557-3A	28 - 1
NAS220-10	22 - 27	NAS43DD3-18	54 - 86	NAS557-4A	28 - 4
NAS220-11	54 - 97	NAS43DD3-19	60 - 31	NAS557-8A	28 - 7
NAS220-12	4 - 3	NAS43DD3-24	103 - 16	NAS561-P3-10	55 - 9
NAS220-12	4 - 3	NAS43DD3-26	60 - 30	NAS561-3-14	48 - 15
NAS220-12	22 - 27	NAS43DD3-32	75 - 32	NAS561-3-16	54 - 78
NAS220-4	45 - 28	NAS43DD3-7	99 - 10	NAS561-3-8	53 - 50
NAS220-4	46 - 28	NAS43DD3-8	60 - 24	NAS561-3-8	81 - 4
NAS220-4	47 - 28	NAS43HT3-12	76 - 33	NAS561-5-12	75 - 44
NAS220-5	81 - 6	NAS43HT3-32	68 - 37	NAS561C2-8	74 - 7
NAS220-8	4 - 3	NAS43HT3-34	45 - 44		

Cessna illustrated parts catalog

MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
NAS561C3-10	53 - 55	NAS680A4	27 - 36	S1021A10-10	8 - 5
NAS561P3-6	56 - 15	NAS680A4	29 - 20	S1021A10-16	60 - 3
NAS561P3-8	45 - 42	NAS680A4	30 - 17	S1021A4-6	18 - 30
NAS561P3-8	47 - 42	NAS680A4	32 - 28	S1021A4-6	50 - 17
NAS561P3-8	53 - 48	NAS680A5	35 - 16	S1021A4-6	51 - 38
NAS561P3-8	56 - 26	NAS681A08	67 - 14	S1021A4-6	53 - 19
NAS561P3-8	87 - 34	NAS682A08	29 - 19	S1021A4-6	53 - 21
NAS561P4-10	54 - 37	NAS682A08	58 - 10	S1021A4-6	53 - 25B
NAS561P4-10	54 - 62	NAS682A08	58 - 12	S1021A4-6	54 - 15
NAS561P4-12	54 - 30	NAS684A08	8 - 29	S1021A4-6	54 - 17
NAS561P4-12	54 - 37	NAS684A08	32 - 64	S1021A4-6	54 - 25
NAS561P4-12	54 - 42	NAS684A08	58B- 2	S1021A4-6	54 - 28
NAS561P4-12	54 - 62	NAS686A08	5 - 41	S1021A4-6	54 - 28A
NAS561P4-12	54 - 64	NAS686A08	57 - 8	S1021Z10-10	50 - 32
NAS561P4-14	41 - 8	NAS686A08	57 - 18	S1021Z10-20	68 - 37
NAS561P4-15	54 - 45	NAS686A3	42 - 58	S1021Z10-8	42 - 30
NAS561P4-8	54 - 74	NAS686A3K	96 - 41	S1021Z10-8	68 - 21
NAS561P6-12	54 - 34	NAS693A08	67 - 15	S1021Z10-8	68 - 47
NAS561P6-18	54 - 53	NAS696-6-3	73 - 17	S1021Z4-4	45 - 7
NAS561P6-18	54 - 57	NAS696A06L	42 - 33	S1021Z4-4	46 - 6
NAS561P6-22	54 - 55	NAS696A08	7 - 23	S1021Z4-4	47 - 7
NAS561P6-28	54 - 50	NAS696A08	42 - 33	S1021Z4-4	49 - 21
NAS561P8-18	54 - 51	NAS696A3	23 - 62	S1021Z4-4	50 - 26
NAS620-8	99 - 9	NAS697A08	26 - 2	S1021Z4-4	97 - 25
NAS620-8L	99 - 9	NAS697A08	45 - 35	S1021Z4-4	102 - 4
NAS679A08	54 - 99	NAS697A08	45 - 50	S1021Z4-6	50 - 1
NAS680A06	23 - 39	NAS697A08	46 - 35	S1021Z4-6	50 - 15
NAS680A08	5 - 5	NAS697A08	46 - 39	S1021Z4-6	50 - 21
NAS680A08	5 - 17	NAS697A08	47 - 35	S1021Z4-6	50 - 27
NAS680A08	6 - 5	NAS697A08	47 - 50	S1021Z4-6	50 - 37
NAS680A08	6 - 17	NAS697A08	65 - 18	S1021Z4-6	51 - 5
NAS680A08	6 - 18	NAS697A08	66 - 18	S1021Z4-6	58 - 97
NAS680A08	6 - 41	NAS697A08	67 - 12	S1021Z4-6C	50 - 28
NAS680A08	8 - 3	NAS697A08	67 - 19	S1021Z4-6C	50 - 29
NAS680A08	8 - 3	NAS697A08	67 - 21	S1021Z4-6C	50 - 30
NAS680A08	8 - 28	NAS697A08	67 - 22	S1021Z4-6C	74 - 23
NAS680A08	9 - 23	NAS697A08	71 - 37	S1021Z4-8	51 - 4
NAS680A08	9 - 24	NAS697A08	71 - 45	S1021Z4-8	97 - 4
NAS680A08	9 - 25	NAS697A08	71 - 69	S1021Z6-10	50 - 8
NAS680A08	23 - 61	NAS697A08K	32 - 34	S1021Z6-12C	58 - 92B
NAS680A08	27 - 41	NAS697A3	10 - 23	S1021Z6-4	16 - 26A
NAS680A08	42 - 33	NAS697A3	27 - 32	S1021Z6-4	16 - 28
NAS680A08	42 - 55	NAS697A3	32 - 95A	S1021Z6-4	23 - 41
NAS680A08	58 - 6	NAS697A3	34 - 3	S1021Z6-4	55 - 34
NAS680A08	58 - 11	NAS697A3	45 - 53	S1021Z6-4	56 - 10
NAS680A08	58 - 14	NAS697A3	46 - 42	S1021Z6-4	56 - 10
NAS680A08	58A-12	NAS697A3	47 - 53	S1021Z6-4	101 - 10
NAS680A08	58B- 2	NAS697A3	98 - 8	S1021Z6-6	16 - 26A
NAS680A08	71 - 45	NAS697A4	32 - 49	S1021Z6-6	16 - 28
NAS680A08	71 - 69	NAS697A4K	27 - 37	S1021Z6-6	17 - 15
NAS680A08	101 - 12	NAS698A06L	23 - 39	S1021Z6-6	42 - 61
NAS680A3	14 - 32	NAS698A08	48 - 13	S1021Z6-6	45 - 18
NAS680A3	23 - 62	NAS698A08	48 - 19	S1021Z6-6	46 - 19
NAS680A3	24 - 10	NAS698A3	18 - 39	S1021Z6-6	47 - 19
NAS680A3	24 - 19	NAS698A4	17 - 8	S1021Z6-6	51 - 8
NAS680A3	24 - 29	NAS75-3-009	37 - 5	S1021Z6-6	51 - 22
NAS680A3	32 - 72	NAS75-5-231	38 - 6	S1021Z6-6	51 - 27
NAS680A3	32 - 85	NAS77-3-23	38 - 41	S1021Z6-6	59 - 2
NAS680A3	32 - 86	NAS77-6-88	38 - 39	S1021Z6-6	74 - 16
NAS680A3	32 - 87	NAS77-6-88	38 - 52	S1021Z6-6	85 - 5
NAS680A3	32 - 93A	N6-2	78 - 43	S1021Z6-6	100 - 5
NAS680A3	34 - 4	OR95-1.5	101 - 22	S1021Z6-6	101 - 11
NAS680A3	34 - 8	PN-3A	20 - 54	S1021Z6-8	51 - 30
NAS680A3	34 - 11	PN3A	19 - 14	S1021Z6-8	51 - 32
NAS680A3	34 - 12	R561	44 - 34	S1021Z6-8	59 - 6
NAS680A3	58 - 5	S-1021A-10-10	8 - 25	S1021Z6-8	59 - 14
NAS680A3	58A-13	SH15	69 - 18	S1021Z6-8	96 - 45
NAS680A3	60 - 49	SK175-9	38 - 3	S1021Z6-8	97 - 2
NAS680A3	64 - 8	S1003-29A	18 - 27	S1021Z6-8	97 - 13
NAS680A3K	32 - 31	S1003-29A	18 - 29	S1021Z6-8	99 - 4
NAS680A3K	42 - 59	S1003-43A	76 - 20	S1021Z6-8	100 - 2
NAS680A4	22 - 19	S1003-66A	82 - 46	S1021Z6-88	58 - 35
NAS680A4	23 - 62	S1003-9A	89 - 7	S1021Z6-88	58A-18
NAS680A4	24 - 57	S1004-43A	78 - 30	S1021Z8-10	73 - 21

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
S1021Z8-10	92 - 5	S1053E8T	1 - 19	S1115-32	66 - 28
S1021Z8-10	97 - 6	S1053E8T	73 - 19	S1115-32	67 - 24
S1021Z8-12	71 - 5	S1053K10T	1 - 19	S1115-32	67 - 33
S1021Z8-12	71 - 50	S1053K12T	1 - 19	S1115-35	65 - 19
S1021Z8-12	71 - 55	S1053K16	68 - 56	S1115-35	66 - 19
S1021Z8-5C	87 - 69	S1053K16T	74 - 19	S1115-35	67 - 24
S1021Z8-6	3 - 16	S1053K20T	1 - 19	S1115-9	65 - 19
S1021Z8-6	28 - 3	S1053K24T	1 - 19	S1115-9	65 - 29
S1021Z8-6	28 - 6	S1053K24T	74 - 13	S1115-9	66 - 19
S1021Z8-6	28 - 9	S1053K24W	1 - 19	S1115-9	66 - 28
S1021Z8-6	36 - 14	S1053K28W	1 - 19	S1115-9	67 - 24
S1021Z8-6	51 - 42	S1053K32T	1 - 19	S1115-9	67 - 33
S1021Z8-6	57 - 9	S1055-1	1 - 21	S1115-9	104 - 10
S1021Z8-6	70 - 5	S1055-1	22 - 11	S1115-9	104 - 16
S1021Z8-6	73 - 2	S1055-1	100 - 3	S1116-1	1 - 43
S1021Z8-6	73 - 4	S1066C1	51 - 40	S1117-24	42 - 21
S1021Z8-6	87 - 27	S1067B1	58A-80	S1130-1	84 - 5
S1021Z8-6	87 - 66	S1067B1	58B- 2	S1130-1	84 - 8
S1021Z8-6	88 - 24	S1067C1	87 - 51	S1130-1	84 - 12
S1021Z8-6	97 - 21	S1071-1	1 - 22	S1130-1	84 - 16
S1021Z8-6	100 - 1	S1071-1	84 - 3	S1130-1	84 - 21
S1021Z8-8	3 - 17	S1071-1	84 - 7	S1130-1	84 - 36
S1021Z8-8	4 - 11	S1071-1	84 - 11	S1130-1	84 - 38
S1021Z8-8	7 - 11	S1071-1	84 - 15	S1130-1	84 - 45
S1021Z8-8	14 - 39	S1071-1	84 - 20	S1130-1	84 - 51
S1021Z8-8	18 - 24	S1071-1	84 - 35	S1131-1	84 - 5
S1021Z8-8	18 - 47	S1071-1	84 - 37	S1131-1	84 - 8
S1021Z8-8	21 - 9	S1071-1	84 - 42	S1131-1	84 - 12
S1021Z8-8	45 - 56	S1071-1	84 - 43	S1131-1	84 - 16
S1021Z8-8	47 - 56	S1071-1	84 - 44	S1131-1	84 - 21
S1021Z8-8	50 - 13	S1071-1	84 - 50	S1131-1	84 - 36
S1021Z8-8	70 - 3	S1071-3	1 - 22	S1131-1	84 - 38
S1021Z8-8	70 - 7	S1071-4	1 - 22	S1131-1	84 - 45
S1021Z8-8	75 - 11	S1071-4	36 - 12	S1131-1	84 - 51
S1021Z8-8	75 - 20	S1071-4	85 - 2	S1132-1	84 - 2
S1021Z8-8	84 - 1	S1071-5	1 - 22	S1132-1	84 - 6
S1021Z8-8	84 - 4	S1078-1	1 - 7	S1133-1	84 - 9
S1021Z8-8	84 - 27	S1078-1	3 - 37	S1133-1	84 - 13
S1021Z8-8	85 - 10	S1078-2	1 - 8	S1133-1	84 - 17
S1021Z8-8	87 - 2	S1078-3	1 - 9	S1133-1	84 - 49
S1021Z8-8	87 - 16	S1084-1	1 - 23	S1135-1	84 - 22
S1021Z8-8	87 - 20	S1084-1	49 - 14	S1135-1	84 - 41
S1021Z8-8	87 - 27	S1090-11	96 - 7	S1138-1	84 - 47
S1021Z8-8	87 - 63	S1090-2	96 - 7	S1139-1	84 - 14
S1021Z8-8C	90 - 7	S1090-22	96 - 6	S1139-1	84 - 18
S1021Z8-8C	90 - 11	S1090-23	96 - 6	S1139-1	84 - 40
S1022A4-6	51 - 23	S1091-1	96 - 6	S1139-1	84 - 48
S1022A4-6	51 - 40	S1091-5	96 - 7	S1153-1	75 - 20
S1022Z6-108	58 - 94	S1093-1	14 - 41	S1154-1	87 - 27
S1022Z8-6	3 - 32	S1095-1	28 - 2	S1155-2	87 - 63
S1022Z8-8	3 - 35	S1095-2	28 - 5	S1155-3	103 - 13
S1022Z8-8	3 - 39	S1095-4	28 - 8	S1161-1	33 - 7
S1022Z8-8	73 - 17	S1095-5	28 - 8	S1166-1	32 - 18
S1023A6-6C	73 - 31	S1095-5	96 - 23	S1167-3-0085	75 - 23
S1023A6-6C	87 - 50	S1095-6	28 - 8	S1167-6-C260	68 - 24
S1023A6-8B	58A-80	S1104-3	68 - 49	S1167-6-0210	68 - 26
S1023A6-8B	58B- 2	S1106-3	13 - 17	S1167-8	87 - 60
S1026BG	1 - 18	S1106-3	14 - 13	S1167C3-0100	75 - 22
S1026BG10.90X	74 - 29	S11065-21	38 - 20	S1209-1	32 - 77
S1047-1	1 - 20	S1110ET	1 - 24	S1216-4	58 - 72
S1047-2	1 - 20	S1110ET	74 - 28	S1216-4	58A-69
S1050-1	1 - 48	S1115-1	104 - 16	S1230-15	58 - 75
S1050-2	1 - 48	S1115-19	65 - 20	S1230-15	58A-66
S1050-3	1 - 48	S1115-19	66 - 20	S1234-12	58 - 73
S1053E10T	1 - 19	S1115-19	67 - 25	S1234-12	58A-68
S1053E12T	1 - 19	S1115-19	104 - 9	S1236-3-0184	68 - 21
S1053E16T	74 - 21	S1115-19	104 - 12	S1239-47	58 - 70
S1053E20T	1 - 19	S1115-29	65 - 21	S1239-47	58A-72
S1053E24T	1 - 19	S1115-29	67 - 23	S1239-48	58 - 69
S1053E24T	68 - 32	S1115-29	98 - 9	S1239-48	58A-73
S1053E24T	73 - 35	S1115-30	104 - 10	S1239-48	74 - 9
S1053E28T	1 - 19	S1115-32	65 - 19	S1258-1	84 - 24
S1053E32T	1 - 19	S1115-32	65 - 29	S1273-1	51 - 18
S1053E7T	1 - 19	S1115-32	66 - 19	S1291-10	32 - 57

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
S1291-8	7 -13	S1450-309-032	42 -57	S1635-1	1 -35
S1291-8	7 -24	S1450-4-10-032	56 -19	S1635-2	1 -35
S1311-3	58 -46	S1450-4A11-.063	60 -33	S1635-3	1 -35
S1311-3	58A-46	S1450-4H12-050	63 - 5	S1636-1	1 -36
S1311-3	92 - 1	S1450-5-12-035	37 -30	S1636-2	1 -36
S1320-5	58 -62	S1450-5-14-063	60 -10	S1636-3	1 -36
S1320-5	58A-37	S1450-5A15-050	37 -25A	S1637-1	1 -37
S1346-1	1 -25	S1450-5A20-063	18 - 5	S1637-2	1 -38
S1346-1	45 - 5	S1450-5A20-080	18 - 5	S1638-1	1 -39
S1346-1	46 - 7	S1450-5A20-100	18 - 5	S1638-1	101 - 8
S1346-1	47 - 5	S1450-5A24-040	60 -53	S1638-1	101 -15
S1356	1 -44	S1450-5A24-040	73 -16	S1638-2	1 -40
S1357-3	60 -22	S1450-6-14-080	96 -29	S1638-2	101 -13
S1359-8	49 - 7	S1483-1	47 -41	S1638-2	101 -19
S1360-10L	58 -85	S1483-2	45 -41	S1640-12	1 -41
S1360-10L	58 -88	S1485D2	90 - 7	S1640-15	1 -41
S1360-10L	58 -89	S1485D2	90 -11	S1640-6	1 -41
S1360-10L	58 -90	S1485D2L	87 -69	S1640-9	1 -41
S1360-10L	58A-63	S1485D3U	68 -47	S1641-12	1 -42
S1360-10L	58A-64	S148526L	42 -29	S1641-15	1 -42
S1360-10L	58A-65	S1486DG6U	75 -11	S1641-6	1 -42
S1360-15L	58 -87	S1486DG6U	87 - 2	S1641-9	1 -42
S1360-15L	58A-59	S1486DG6U	87 -16	S1660-1	96 - 3
S1360-20L	58 -90A	S1486DG6U	87 -20	S1660-1	96 -14
S1360-5L	58 -84	S1486DG6U	87 -27	S1661-2	58 -72
S1360-5L	58 -86	S1494-16	91 -36	S1661-2	58A-68
S1360-5L	58 -90C	S1494-8	36 -16	S1674-1	76 -15
S1360-5L	58A-57	S1494-8	85 - 3	S1675-1	76 -16
S1360-5L	58A-58	S1494-9	91 -20	S1704-1	54 -89
S1360-5L	58A-60	S1495-10	1 -33	S1710-1	75 -46
S1360-5L	58A-61	S1495-10	78 -24	S1711-1	68 -80
S1360-5L	58A-62	S1495-10	78 -48	S1713-1	2 -28
S1362-2	45 -64	S1495-10	91 -35	S1714-1	2 -27
S1362-2	46 -50	S1495-12	68 -41	S1728-1	73 -26
S1362-2	47 -64	S1495-4	1 -33	S1740-6	58A-74
S1362-24	45 -65	S1495-4	91 -14	S1746AA-5	61 -18
S1362-24	46 -51	S1495-4	91 -15	S1746AA13	61 -11
S1362-24	47 -65	S1495-6	1 -33	S1746B-5	61 -18
S1362-25	45 -62	S1495-6	87 - 4	S1746BB-5	61 -18
S1362-25	46 -48	S1495-6	87 - 4	S1746BB13	61 -11
S1362-25	47 -62	S1495-6	87 - 6	S1746B13	61 -11
S1366-1	1 -26	S1495-6	91 -10	S1746B5	61 -18
S1366-2	1 -26	S1495-6	91 -11	S1746CC-5	61 -18
S1366-3	1 -26	S1495-6	91 -12	S1746CC13	61 -11
S1378-1	1 -27	S1495-6	91 -13	S1746CC5	61 -18
S1378-2	1 -27	S1495-6	91 -30	S1746DD-5	61 -18
S1389-1	1 -28	S1495-8	1 -33	S1746DD13	61 -11
S1389-1	31 - 4	S1497-4	91 -17	S1746EE5	61 -18
S1389-2	1 -28	S1497-6	91 -16	S1746FF5	61 -18
S1389-2	31 - 6	S1501-1	97 -16A	S1746GG5	61 -18
S1389-3	1 -28	S1501-1	102 - 2	S1746HH5	61 -18
S1389-4	1 -28	S1517-8	68 -44	S1746T-5	61 -18
S1389-4	31 - 2	S1558-1	58 -62	S1746T13	61 -11
S1389-5	1 -28	S1558-1	58 -64	S1771-1	58 -72
S1389-6	1 -28	S1558-1	58A-44	S1771-1	58A-69
S1389-7	1 -28	S1573-3	88 - 4	S1776-1	23 -50
S1397-6	2 -18	S1579-1	96 - 3	S1807-1	96 -16
S1398-1	1 -29	S1588-1	10 -17	S1807-1	96 -19
S1398-2	1 -30	S1588-1	11 -17	S1807-2	96 - 4
S1413N2	58 -37	S1590-4A	23 -58	S1809-1	62 - 2
S1413N2	58A-35	S1596-60L	58 -90B	S1819-3	14 -13
S1415-1	1 -31	S1596-60L	58A-56	S1823-3	37 -13
S1415-1	18 -30	S1597-1-37.5	68 -53	S1824-1	58 -82
S1426-2	62 - 3	S1597-1-37.5	96 -30	S1831-1	97 -15
S1438-2	76 -29	S1605-10	58A-38	S1834-1	73 -10
S1438-2	96 - 8	S1605-10	68 -34	S1834-2	73 -13
S1441-1	1 -32	S1605-8	58 -50	S1839-1	32 -22
S1441-1	36 - 5	S1605-8	68 -34	S1839-2	32 -20
S1441-1	36 - 6	S1611-1	1 -34	S1839-3	32 -21
S1441-1	51 -21	S1613-3-75	42 -40	S1843-1	58 -91A
S1441-2	1 -32	S1613-3-75	45 -45	S1843-1	58A-49
S1441-3	1 -32	S1614	1 -45	S1853-1	68 -72
S1450-10-15-063	42 - 4	S1628-329	38 -22	S1860-2A	7 -12
S1450-3A14-.050	60 -37			S1862-1A	16 -20


Cessna illustrated parts catalog

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
S1862-1A	17 - 16	S1994-1-1	58A-49	S2209-1	91 - 22
S1862-1A	59 - 4	S1995-4	58 - 91B	S2209-1	91 - 31
S1862-2	7 - 12	S1995-4	58A-70	S2209-2	96 - 16
S1862-2	23 - 55	S1997-6G10	78 - 7	S2209-3	91 - 24
S1863-2A	32 - 98A	S2013-2	54 - 43	S2234-1	58A-29
S1863-2A	59 - 3	S2013-2	54 - 68	S2240AA103	61 - 1
S1863-3	5 - 5	S2014-2	54 - 43	S2240AA108	61 - 11
S1863-3	6 - 5	S2014-2	54 - 68	S2240AA201	61 - 25
S1863-3	7 - 4	S202RB	1 - 16	S2240BB103	61 - 1
S1863-3	16 - 7	S202RB	35 - 12	S2240BB108	61 - 11
S1863-3	16 - 9	S202RB	3 - 33	S2240BB201	61 - 25
S1863-3	22 - 45	S202VW	1 - 16	S2240B103	61 - 1
S1863-3	23 - 56	S2024-1	73 - 9	S2240B108	61 - 11
S1863-3	24 - 30	S2091-5	58 - 91B	S2240B108	61 - 11
S1863-3	97 - 18	S2091-5	58A-69	S2240B108	61 - 11
S1863-3A	23 - 57	S2092-1	1 - 49	S2240B201	61 - 25
S1863-3A	27 - 35	S2092-1	51 - 23	S2240B201	61 - 25
S1863-3A	32 - 98	S2092-1	51 - 24	S2240CC103	61 - 1
S1863-4	27 - 34	S2092-1	51 - 38	S2240CC103	61 - 1
S1876-1	97 - 23	S2092-1	51 - 40	S2240CC108	61 - 11
S1876-1	102 - 9	S2092-2	1 - 50	S2240CC108	61 - 11
S1876-3	102 - 10	S2092-2	51 - 24	S2240CC201	61 - 25
S1878-1	34 - 16	S2092-2	58A-21	S2240CC201	61 - 25
S1878-1	51 - 28	S2092-3	1 - 49	S2240DD103	61 - 1
S1878-1	51 - 34	S2092-3	58 - 19	S2240DD108	61 - 11
S1891-6	87 - 5	S2092-3	58 - 23	S2240DD201	61 - 25
S1891-6	87 - 7	S2092-3	58A-15	S2240EE103	61 - 1
S1894-1	588 - 7	S2092-30	1 - 50	S2240EE108	61 - 11
S1895-1	59 - 5	S2092-31	1 - 49	S2240EE201	61 - 25
S1898-2	50 - 3	S2092-4	1 - 50	S2240FF103	61 - 1
S1914-11	56 - 7	S2092-4	58 - 21	S2240FF108	61 - 11
S1914-8	53 - 9	S2092-4	58 - 30	S2240FF201	61 - 25
S1914-8	53 - 40	S2092-4	58A-10	S2240GG103	61 - 1
S1914-8	54 - 92	S2092-4	58A-16	S2240GG108	61 - 11
S1917-1	96 - 46	S2092-4	58A-23	S2240GG201	61 - 25
S1933-1	45 - 3	S2092-4	58B - 3	S2240HH103	61 - 1
S1933-1	46 - 3	S2092-4	58B - 5	S2240HH108	61 - 11
S1933-1	47 - 3	S2093-2	96 - 29	S2240HH201	61 - 25
S1938-1	18 - 48	S2106-2	12 - 2	S2240T103	61 - 1
S1948-2	50 - 18	S2107-1	12 - 1	S2240T108	61 - 11
S1948-2	50 - 19	S2108-1	45 - 48A	S2240T201	61 - 25
S1948-2	50 - 31	S2108-1	47 - 48A	S225-1	3 - 17
S1948-2-1	1 - 47	S2114-2	96 - 29	S225-1	21 - 7
S1948-2-10	1 - 47	S2114-2	96 - 29	S225-3	14 - 38
S1948-2-11	1 - 47	S2122-1	58 - 90B	S226-3	22 - 35
S1948-2-12	1 - 47	S2122-1	58A-65	S237-2	7 - 14
S1948-2-13	1 - 47	S2127-1	6 - 11	S237-2	7 - 14
S1948-2-14	1 - 47	S2127-1	6 - 12	S237-2	9 - 8
S1948-2-15	1 - 47	S2135-1	58 - 65	S237-2	32 - 97A
S1948-2-16	1 - 47	S2135-1	58A-76	S237-4	14 - 36
S1948-2-17	1 - 47	S2138-1	42 - 3	S272-207	87 - 44
S1948-2-18	1 - 47	S2160-1	58 - 79	S272-209	89 - 11
S1948-2-19	1 - 47	S2160-1	58 - 80	S272-215	89 - 14
S1948-2-2	1 - 47	S2160-1	58 - 81	S290D1032	73 - 12
S1948-2-20	1 - 47	S2160-1	58 - 82	S290D832	3 - 35
S1948-2-3	1 - 47	S2160-1	58A-51	S290D832	3 - 40
S1948-2-4	1 - 47	S2160-1	58A-52	S292-1	1 - 17
S1948-2-5	1 - 47	S2160-1	58A-53	S292-11	1 - 17
S1948-2-6	1 - 47	S2160-1	58A-54	S292-12	1 - 17
S1948-2-7	1 - 47	S2160-4	58 - 78	S292-12	87 - 21
S1948-2-8	1 - 47	S2160-4	58A-55	S292-14	1 - 17
S1948-2-9	1 - 47	S2160-5	58 - 78	S292-16	1 - 17
S1949-1	90 - 12	S2161-1	58 - 82	S292-2	1 - 17
S1951-4T	68 - 89	S2161-1	58A-54	S292-28	1 - 17
S1957-2	51 - 13	S2161-2	58 - 83	S292-3	1 - 17
S1959-1	103 - 9	S2161-2	58A-55	S292-4	1 - 17
S1959-2	103 - 14	S2191-8-4	37 - 41	S292-5	1 - 17
S1981-5	58 - 71	S2191-8-4	42 - 24	S292-6	1 - 17
S1981-5	58A-71	S2195-2	45 - 48A	S292-8	1 - 17
S1981-5	84 - 34	S2195-2	47 - 48A	S327-2	23 - 20
S1982-1	58 - 66	S2195-2	50 - 7	S329	3 - 16
S1985-1	78 - 54	S2198-3	74 - 26	S330-2	9 - 10
S1991-1	96 - 18	S2199-7	8	S338-7	30 - 14
S1994-1-1	58 - 91	S2199-8	8	S339-P2	30 - 14

C
cessna illustrated parts catalog

MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
S350	10 - 16	0411185-5	47 - 48B	0413531-59	58 - 24
S350	11 - 17	0411185-6	45 - 48B	0414013-12	97 - 7
S351	68 - 50	0411185-6	47 - 48B	0414013-13	97 - 1
S354-3	28 - 10	0411185-7	45 - 48B	0414013-15	97 - 7
S372-2	24 - 56	0411185-7	47 - 48B	0414013-19	97 - 1
S378-1	81 - 11	0411221-2	78 - 29	0414013-4	97 - 8
S378-1	94 - 12	0411257	78 - 24	0414014-1	22 - 11
S378-1L	75 - 55	0411257	78 - 48	0414014-2	22 - 11
S378-1L	81 - 15	0411306-13	76 - 19	041403-17	97 - 1
S378-1L	82 - 10	0411306-14	76 - 18	0415010-1	61 - 29
S378-2	82 - 5	0411307	76 - 8	0415023-1	50 - 5A
S378-3	80 - 17	0411307	76 - 34	0415023-3	50 - 4A
S378-3L	79 - 38	0411420	26 - 7	0415023-3	102 - 1A
S378-3L	80 - 18	0411420	81 - 9	0417010-2	48 - 1
S378-3L	80 - 22	0411523	81 - 26	0422130	87 - 11
S378-3L	83 - 19	0411524	81 - 28	0422229-16	8 - 22
S378-3L	83A-18	0411562	76 - 22	0422280	13 - 7
S378-3L	83A-22	0411563	76 - 37	0422280	79 - 51
S378-4	78 - 10	0411564	76 - 30	0422291	7 - 3
S378-4	79 - 3	0411564-3	76 - 31	0422292	7 - 8
S378-4	79 - 8	0411565	76 - 21	0422292	85 - 7
S378-4	79 - 13	0411573-1	76 - 38	0422344	23 - 54
S378-4	79 - 17	0411579-3	45 - 15	0422344	35 - 16
S378-4	79 - 21	0411579-3	46 - 15	0422406-1	8 - 19
S378-4	79 - 26	0411579-3	47 - 15	0422406-2	8 - 19
S378-4	83 - 14	0411680	32 - 40	0422411-1	8 - 18
S378-4	83A-26	0411778-2	76 - 27	0422411-2	8 - 18
S394	79 - 31	0411778-3	76 - 4	0422412-1	8 - 15
S51-10	1 - 15	0411783	75 - 48	0422412-2	8 - 15
S51-12	1 - 15	0411897-3	58A-47	0422414-1	8 - 17
S51-16	1 - 15	0412007-1	96 - 2	0422414-2	8 - 17
S51-32	1 - 15	0412007-8	68 - 12	0423016-1	79 - 41A
S51-4	1 - 15	0412467	32 - 94A	0426011-4	4 - 7
S51-6	1 - 15	0412467	35 - 6	0426011-4	4 - 8
S51-8	1 - 15	0412496	24 - 9	0426011-4	10 - 9
U3L-3-D9	82 - 42	0413028-10	85 - 8	0426011-4	11 - 15
XH99608F1099	51 - 17	0413028-9	85 - 9	0426011-5	4 - 5
01	60 - 4	0413138	97 - 24	0426013-1	10 - 22
0310196-12	76 - 6	0413140-5	97 - 29	0426013-1	11 - 5
0310196-12	93 - 14	0413141-1	97 - 11	0426013-2	4 - 5
0310196-5	76 - 7	0413163-18	73 - 7	0426015-1	10 - 7
0310196-5	93 - 15	0413163-207	73 - 3	0426015-1	11 - 13
0310295	19 - 2	0413163-43	73 - 8	0426209-3	5 - 43
0310297-1	19 - 3	0413163-7	73 - 6	0426209-3	6 - 43
0310298-1	19 - 4	0413213-23	78 - 50	0432123	18 - 31
0310332	19 - 7	0413216-6	78 - 53	0432126	18 - 43
0310362-5	19 - 13	0413228	73 - 15	0432134-1	81 - 3
0310422-1	19 - 9	0413233	73 - 1	0432138-16	81 - 10
0311319-1	32 - 67	0413247	10 - 17	0432138-6	81 - 30
0311319-1	49 - 19	0413247	11 - 17	0432155	18 - 23
0311319-2	32 - 68	0413247	58 - 22	0433007	17 - 18
0311623-1	49 - 20	0413247-0	58A-15	0442017-7	38 - 10
0320E2D-ENPL4090	68 - 1	0413307-18	36 - 11	0442506-1	38 - 28
0334128-3	20 - 53	0413307-21	36 - 3	0442506-2	38 - 45
0400123-1	50 - 32	0413307-6	36 - 8	0442506-8	38 - 42
0400210-2	2 - 12	0413307-7	36 - 9	0442506-9	38 - 44
0400210-2	58 - 95A	0413354-1	36 - 7	0442512-1	41 -
0400213-4	2 - 24	0413372-5	78 - 42	0450227-12	71 - 71
0400213-5	2 - 25	0413483-1	85 - 1	0450227-15	71 - 72
0405031-1	2 - 29	0413484-13	102 - 1	0450286	23 - 48
0405031-2	2 - 30	0413484-18	50 - 4	0450286	27 - 8
0405031-3	2 - 31	0413484-19	102 - 1	0450311-13	68 - 47
0405031-4	2 - 32	0413484-22	50 - 4	0450311-3	88 - 25
0405037-1	2 - 34	0413485-2	85 - 8	0450311-5	68 - 85
0405037-2	2 - 34	0413495-1	97 - 26	0450311-5	73 - 38
0405037-3	2 - 35	0413495-2	97 - 27	0450311-5	74 - 10
0405037-4	2 - 35	0413495-3	97 - 28	0450314	7 - 10
0411030-5	51 - 4	0413517-12	60 - 41	0453003-1	27 - 9
0411030-6	51 - 3	0413517-13	60 - 40	0453003-12	27 - 9A
0411129	24 - 5	0413522-2	58 - 19	0453003-14	27 - 10
0411174-3	22 - 11	0413522-2	58A-10	0453003-9	27 - 10
0411185-4	45 - 488	0413523-4	58 - 22	0453003-9	27 - 10
0411185-4	47 - 488	0413523-4	58A-15	0500044-10	27 - 12
0411185-5	45 - 488	0413530-1	31 - 7	0500044-12	95 - 10

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0500044-13	95 - 2	0500210-97	51 - 14	0510105-221	81 - 20
0500044-14	95 - 2	0500210-99	51 - 16	0510105-224	79 - 1
0500044-15	95 - 4	0500228-2	60 - 7	0510105-232	75 - 45
0500044-16	95 - 4	0500228-3	60 - 11	0510105-238	83A - 2
0500044-17	95 - 3	0500228-5	60 - 9	0510105-239	83A - 1
0500044-18	95 - 3	0500229-2	32 - 72	0510105-241	78 - 32
0500044-19	95 - 5	0500233-14	51 - 33	0510105-242	78 - 38
0500044-20	95 - 6	0500242-2	87 - 45	0510105-243	78 - 37
0500044-21	95 - 5	0500276-1	63 - 4	0510105-244	78 - 41
0500044-23	27 - 13	0500276-2	63 - 4	0510105-305	83 - 1
0500044-24	95 - 17	0500278-1	93 - 16	0510105-306	83 - 2
0500044-25	95 - 17	0500310-1	60 - 35	0510105-307	83 - 6
0500044-29	93 - 1	0500312-2	60 - 32	0510105-308	80 - 7
0500044-3	95 - 9	0500313-1	60 - 34	0510105-309	80 - 11
0500044-30	93 - 2	0500403-1	51 - 26	0510105-310	80 - 12
0500044-31	93 - 3	0501019-1	60 - 19	0510105-313	78 - 32
0500044-32	93 - 4	0501022-1	60 - 20	0510105-314	78 - 38
0500044-33	93 - 5	0501030-1	73 - 17	0510105-315	78 - 37
0500044-34	93 - 6	0501046-3	29 - 20	0510105-316	78 - 41
0500044-35	27 - 14	0501046-4	61 - 35	0510105-320	81 - 19
0500044-37	27 - 9A	0505006-1	2 - 17	0510105-321	81 - 20
0500044-38	27 - 9A	0505009-3	2 - 13	0510105-324	79 - 1
0500044-4	95 - 9	0505009-3	58 - 96	0510105-334	94 - 7
0500044-5	95 - 8	0505009-3	72 - 5	0510105-338	83A - 2
0500044-6	95 - 1	0505011-1	2 - 6	0510105-339	83A - 1
0500044-7	95 - 7	0505038-1	2 - 45	0510105-341	78 - 32
0500044-8	95 - 7	0505038-2	2 - 45	0510105-342	78 - 38
0500044-9	27 - 11	0505038-3	2 - 46	0510105-343	78 - 37
0500062-PA11	96 - 10	0505042-2	58 - 95	0510105-344	78 - 41
0500062-PA18	96 - 20	0505043-1	2 - 16	0510105-44	81 - 21
0500062-PA23	96 - 11	0505044-3	2 - 33	0510105-45	81 - 22
0500062-PC7	96 - 17	0505044-4	2 - 33	0510105-93	82 - 1
0500062-PC7	104 - 8	0505049-3	2 - 21	0510105-94	82 - 2
0500062DA10	96 - 12	0505051-1	2 - 36	0510110	24 - 36
0500106-83	87 - 12	0505051-2	2 - 37	0510128	25 - 13
0500118-102	87 - 65	0505051-3	2 - 38	0510161-12	80 - 3
0500118-109	87 - 62	0505051-4	2 - 39	0510164	32 - 94
0500118-110	87 - 63	0505051-6	2 - 40	0510195-1	82 - 29
0500118-116	87 - 18	0505051-7	2 - 36	0510201-5	22 - 34
0500118-117	87 - 19	0505051-8	2 - 37	0510205-10	61 - 6
0500118-123	87 - 9	0505053-1	2 - 1A	0510205-9	61 - 6
0500118-124	87 - 8	0505053-16	2 - 3A	0510211-1	61 - 9
0500118-126	42 - 27	0505053-17	2 - 3A	0510212-1	32 - 23
0500118-126	75 - 1	0505053-18	2 - 3A	0510212-1	32 - 70
0500118-127	42 - 27	0505053-2	2 - 1A	0511000-22	22 - 18
0500118-127	75 - 2	0505053-3	2 - 1A	0511000-23	22 - 18
0500118-128	75 - 4	0505053-4	2 - 2A	0511000-6	22 - 17
0500118-129	75 - 5	0505053-5	2 - 2A	0511000-7	22 - 17
0500118-155	87 - 29	0505053-6	2 - 2A	0511000-73	22 - 19
0500118-29	87 - 25	0505053-7	2 - 2A	0511000-74	22 - 19
0500118-30	87 - 26	0505053-8	2 - 2A	0511000-75	22 - 13
0500118-33	87 - 28	0505053-9	2 - 2A	0511033-30	50 - 28
0500118-70	68 - 35	0505057-2	2 - 41	0511033-7	50 - 30
0500118-74	87 - 54	0505057-3	2 - 42	0511037-1	22 - 14
0500118-75	87 - 52	0505057-4	2 - 43	0511037-2	22 - 14
0500118-78	87 - 71	0505057-5	2 - 44	0511116-12	22 - 20
0500118-86	75 - 11	0505057-8	2 - 41	0511116-13	22 - 21
0500118-87	75 - 9	0510105-113	79 - 2	0511150	22 - 44
0500118-88	75 - 12	0510105-13	79 - 2	0511150-1	22 - 44
0500118-89	75 - 15	0510105-144	81 - 21	0511162-9	24 - 1
0500118-90	75 - 14	0510105-145	81 - 22	0511165	60 - 13
0500118-95	87 - 59	0510105-193	82 - 1	0511237-1	45 - 11
0500118-96	58 - 61	0510105-194	82 - 2	0511237-2	46 - 12
0500118-96	68 - 81	0510105-205	83 - 1	0511237-2	47 - 12
0500118-99	87 - 66	0510105-206	83 - 2	0511238-1	45 - 12
0500210-108	50 - 9	0510105-207	83 - 6	0511238-2	46 - 11
0500210-131	50 - 11	0510105-208	80 - 7	0511238-2	47 - 11
0500210-135	50 - 19	0510105-209	80 - 11	0511239-1	45 - 14
0500210-44	50 - 20	0510105-210	80 - 12	0511239-2	46 - 14
0500210-48	50 - 33	0510105-213	78 - 32	0511239-2	47 - 14
0500210-49	50 - 34	0510105-214	78 - 38	0511239-3	45 - 14
0500210-5	49 - 16	0510105-215	78 - 37	0511239-4	46 - 14
0500210-76	# 51 - 35	0510105-216	78 - 41	0511239-4	47 - 14
0500210-95	51 - 15	0510105-220	81 - 19	0511242-1	53 - 1

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0511242-1	54 - 1	0511800-5	22 - 4	0512037-6	32 - 46
0511243-4	22 - 25	0511801-4	22 - 3	0512037-7	32 - 47
0511243-5	22 - 24	0511803-23	45 - 4	0512039-12	32 - 70
0511243-6	22 - 23	0511803-24	46 - 4	0512039-4	32 - 70
0511252-1	26 - 9	0511803-26	47 - 4	0512039-7	32 - 68
0511253-1	87 - 33	0511803-41	45 - 4	0512039-8	32 - 69
0511254-1	22 - 37	0511803-42	46 - 4	0512040-1	32 - 54
0511258-1	48 - 7	0511806-1	94 - 15	0512040-2	32 - 55
0511260-3	48 - 17	0511806-2	94 - 13	0512040-4	32 - 56
0511260-4	48 - 17	0511806-3	94 - 16	0512041-4	32 - 99
0511261-2	48 - 16	0511806-4	94 - 14	0512041-5	32 - 99
0511261-3	48 - 14	0511807-1	30 - 15	0512045-3	32 - 95A
0511261-4	48 - 5	0511808-1	30 - 16	0512058-1	22 - 40
0511261-5	48 - 6	0512001-10	35 - 10	0512058-2	22 - 41
0511262-1	32 - 2	0512001-7	35 - 7	0512059-1	32 - 97
0511262-2	32 - 2	0512001-8	35 - 8	0512060-1	32 - 89
0511264-1	48 - 10	0512001-9	35 - 9	0512064-1	32 - 57
0511266-1	48 - 11	0512006-1	87 - 2	0512065-1	32 - 77A
0511280-1	45 - 10	0512008-4	35 - 14	0512065-2	32 - 76
0511280-2	46 - 10	0512008-9	35 -	0512065-3	32 - 23
0511280-2	47 - 10	0512009-10	35 - 15	0512065-4	32 - 76
0511280-3	45 - 13	0512010-19	32 - 82	0512065-5	32 - 23
0511280-4	46 - 13	0512010-21	32 - 83	0512066-1	32 - 64
0511280-4	47 - 13	0512010-24	32 - 80	0512100-11	32 - 8
0511291-1	22 - 22	0512010-3	32 - 78	0512100-12	32 - 9
0511291-2	22 - 22	0512010-4	32 - 81	0512100-13	32 - 14
0511292-3	22 - 43	0512011-1	32 - 92A	0512100-14	32 - 15
0511295-3	22 - 38	0512012-2	32 - 92	0512100-19	32 - 10
0511319-201	96 - 1	0512013-1	32 - 96	0512100-20	32 - 11
0511461-1	45 - 8	0512014-2	32 - 96A	0512100-26	32 - 7
0511461-1	46 - 8	0512015-1	32 - 93A	0512100-7	32 - 12
0511461-1	47 - 8	0512015-11	32 - 85	0512100-8	32 - 13
0511463-1	45 - 6	0512015-2	32 - 83	0512100-9	32 - 19
0511463-1	46 - 5	0512015-3	32 - 86	0512107-13	32 - 74
0511463-1	47 - 6	0512015-4	32 - 87	0512122	29 - 9
0511464-1	45 - 9	0512015-7	32 - 84	0512123	3 - 7
0511464-1	46 - 9	0512015-8	32 - 84	0512124-15	30 - 7
0511464-1	47 - 9	0512016-3	32 - 91A	0512124-78	29 - 5
0511469-1	45 - 10	0512016-5	32 - 90	0512124-79	29 - 13
0511469-2	46 - 10	0512016-7	32 - 91A	0512124-80	29 - 14
0511469-2	47 - 10	0512017-1	32 - 88	0512132-15	30 - 18
0511479-2	22 - 27	0512019-1	32 - 93	0512132-17	30 - 19
0511480-12	22 - 26	0512020-3	32 - 58	0512132-4	30 - 18
0511480-13	22 - 22	0512020-4	32 - 59	0512132-4	30 - 20
0511484-2	22 - 6	0512021-3	32 - 24	0512132-5	30 - 21
0511486-1	22 - 42	0512021-4	32 - 26	0512134-2	30 - 24
0511486-2	22 - 42	0512022-1	32 - 29	0512134-3	30 - 24
0511486-5	22 - 39	0512022-3	32 - 30	0512135	79 - 19
0511493-1	24 - 55	0512023-1	32 - 32	0512136	79 - 33
0511496-1	24 - 47	0512023-2	32 - 33	0512137	29 - 16
0511497-5	22 - 28	0512023-4	32 - 35	0512138	79 - 36
0511498-1	22 - 29	0512023-5	32 - 34	0512139-2	29 - 15
0511499-1	22 - 30	0512025-1	29 - 4	0512139-3	29 - 15
0511777-1	30 - 1	0512026-13	32 - 36	0512143	35 - 3
0511782-17	78 - 9	0512026-16	32 - 36	0512143-1	35 - 4
0511783-1	78 - 12	0512027-1	21 - 4	0512146	21 - 6
0511784-1	78 - 14	0512027-2	21 - 5	0512146-1	21 - 6
0511785-1	78 - 25	0512028-1	32 - 37	0512156	35 - 11
0511786-1	78 - 19	0512028-2	32 - 38	0512157-2	35 - 2
0511786-2	78 - 22	0512029-1	32 - 38	0512157-6	35 - 1
0511787-1	78 - 15	0512029-2	32 - 40	0512159-3	35 - 13
0511788-1	78 - 26	0512029-3	32 - 41	0512160-2	32 - 95
0511789-1	78 - 31	0512029-4	32 - 42	0512160-3	32 - 91
0511794-3	30 -	0512029-5	32 - 43	0512160-5	35 - 5
0511795-1	30 - 2	0512029-6	32 - 43	0512165-1	35 - 13
0511795-2	30 - 4	0512030-25	32 - 19	0512169-3	61 - 23
0511795-3	30 - 3	0512031-9	55 - 7	0512169-4	61 - 23
0511796-13	30 - 11	0512032-4	32 - 44	0512172-1	82 - 15
0511796-14	30 - 13	0512034-11	32 - 73	0512172-2	82 - 16
0511796-9	30 - 12	0512034-13	32 - 73	0512176-1	32 - 52
0511797-2	22 - 11	0512034-42	32 - 75	0512176-2	32 - 53
0511798-3	22 - 7	0512037-3	32 - 47	0512177-1	32 - 50
0511798-4	22 - 8	0512037-4	32 - 48	0512177-2	32 - 51
0511799-3	22 - 9	0512037-5	32 - 45	0512178-1	32 - 52

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0512178-2	32 - 53	0513065-5	57 - 17	0513137-1	23 - 36
0512180-5	32 - 16	0513065-6	57 - 17	0513137-2	23 - 36
0512180-6	32 - 17	0513066-1	58 - 9	0513193-3	95 - 21
0512180-7	32 - 16	0513066-3	58 - 13	0513208-1	97 - 20
0512180-8	32 - 17	0513067-2	58 - 7	0513208-1	100 - 5
0512181-1	32 - 25	0513068-1	58 - 2	0513230-12	31 - 1
0512181-2	32 - 25	0513068-1	58A - 2	0513230-14	31 - 1
0512183-1	29 - 17	0513068-2	58 - 3	0513230-18	31 - 5
0512183-2	29 - 18	0513068-2	58A - 3	0513235-1	23 - 22
0512184-1	21 - 13	0513069-5	58 - 4	0513238-1	74 - 15
0512184-2	21 - 14	0513070-10	58 - 1	0513251-1	78 - 6
0512185-1	21 - 15	0513071-11	58 - 22	0513253-1	36 - 1
0512186-12	29 - 3	0513072-3	58 - 26	0513260-4	78 - 51
0512186-13	29 - 2	0513076-43	58 - 77	0513260-5	78 - 52
0512186-14	29 -	0513077-28	58 - 33	0513261-13	78 - 48
0512186-5	29 - 1	0513077-8	58 - 31	0513261-14	78 - 48
0512186-6	29 - 2	0513078-1	58 - 16	0513280-1	58A - 9
0512187-1	30 - 22	0513084-1	58A-15	0513312-1	22 - 16
0512187-2	30 - 23	0513085-1	59 - 13	0513312-1	31 - 3
0512188-1	32 - 27	0513085-12	59 - 16	0513316-12	58 - 8
0512188-2	32 - 27	0513085-2	59 - 17	0513316-21	59 - 11
0512189-3	32 - 49	0513085-3	59 - 15	0513316-22	59 - 12
0512190-1	32 - 39	0513087-1	58A - 6	0513316-6	58 - 15
0512192-1	32 - 4	0513087-2	58A - 8	0513320-8	59 - 1
0512193-1	34 - 1	0513087-3	58A - 7	0513322-1	23 - 19
0512193-10	34 - 12	0513088-1	58A - 1	0513325-3	23 - 29
0512193-3	34 - 9	0513088-7	58A - 4	0513325-4	23 - 29
0512193-5	34 - 10	0513088-9	58A - 5	0513326-2	23 - 38
0512193-6	34 - 11	0513089-1	23 - 35	0513327-1	27 - 38
0512194-1	34 - 6	0513090-1	58A-48	0513327-2	27 - 39
0512194-2	34 - 7	0513092-1	58A-77	0513328-2	36 - 2
0512194-4	34 - 8	0513092-2	58A-78	0513348-1	50 - 12
0512194-6	34 - 5	0513093-1	58A-23	0513352-1	27 - 4
0512195-6	34 - 13	0513093-2	58A-16	0513358-1	25 - 4A
0512195-8	34 - 15	0513093-5	58A-17	0513359-1	25 - 5
0512198-1	32 - 36	0513094-3	58B - 3	0513359-2	25 - 6
0512198-2	32 - 36A	0513094-5	58B - 5	0513360-1	25 - 7
0512199-1	32 - 62	0513095-1	58A-21	0513360-2	25 - 8
0512199-2	32 - 62	0513095-15	58A-22	0513361-1	25 - 9
0512200-1	49 - 2A	0513096-1	23 - 62	0513362-14	23 - 8
0512201-1	32 - 47A	0513100-1	27 - 30	0513362-15	23 - 13
0513000-10	23 - 17	0513109-10	27 - 19	0513362-18	23 - 51
0513000-9	23 - 18	0513109-11	27 - 15	0513362-19	23 - 52
0513003-24	95 - 18	0513109-12	27 - 16	0513362-25	23 - 7
0513006-110	24 - 13	0513109-15	27 - 20	0513362-3	23 - 9
0513006-111	24 - 23	0513109-21	50 - 29	0513362-30	23 - 53
0513006-145	24 - 41	0513109-23	27 - 21	0513362-31	23 - 51
0513006-148	24 - 22	0513109-24	27 - 20	0513362-32	23 - 59
0513006-149	24 - 12	0513109-29	27 - 22	0513362-33	23 - 60
0513006-22	24 - 26	0513109-4	27 - 2	0513362-38	23 - 11
0513006-25	24 - 18	0513109-50	27 - 24	0513362-4	23 - 10
0513006-26	24 - 28	0513109-56	27 - 23	0513362-9	23 - 12
0513006-42	24 - 15	0513109-64	27 - 5	0513363-1	25 - 1
0513006-43	24 - 25	0513109-69	27 - 26	0513363-2	25 - 2
0513006-8	24 - 16	0513109-7	27 - 15	0513364-1	25 - 3
0513007-29	24 - 20	0513109-70	27 - 27	0513364-2	25 - 3
0513007-30	24 - 31	0513109-72	27 - 25	0513365-1	26 - 4
0513007-31	24 - 11	0513109-8	27 - 17	0513366-1	26 - 6
0513007-32	24 - 21	0513109-9	27 - 18	0513367-1	26 - 5
0513007-35	24 - 11	0513120-1	87 - 44	0513368-10	26 - 10
0513007-36	24 - 21	0513120-2	89 - 15	0513368-2	26 - 1
0513011-11	36 -	0513120-3	89 - 17	0513368-201	26 -
0513038-7	23 - 23	0513120-4	89 - 13	0513368-4	26 - 3
0513038-8	23 - 23	0513120-8	89 -	0513368-8	26 - 11
0513052-16	58 - 66	0513122	89 - 1	0513369-1	23 - 24
0513052-3	58A-74	0513123	89 - 6	0513369-2	23 - 24
0513053-1	23 - 21	0513124-3	87 - 35	0513370-1	24 - 58
0513053-4	23 - 21	0513125	89 - 3	0513370-1	80 - 1
0513054-4	23 - 22	0513126-1	89 - 8	0513372-1	25 - 14
0513057-1	51 - 31	0513129	87 - 76	0513372-2	25 - 14
0513057-2	51 - 31	0513132-1	23 - 27		
0513058-1	51 - 30	0513132-2	23 - 27		
0513058-2	51 - 30	0513132-3	23 - 28		
0513063-1	24 - 57	0513132-4	23 - 28		

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0513373-14	24 -	0514036-1	54 - 36	0514110-1	54 - 18
0513373-15	24 - 31A	0514042-1	57 - 4	0514110-1	55 - 32
0513373-16	24 - 39	0514043-2	53 - 55	0514110-1	56 - 11
0513373-17	24 -	0514049-1	95 - 24	0514112-2	53 - 18
0513373-2	24 - 34	0514051-1	54 - 45	0514113-1	50 - 21
0513374-1	24 - 35	0514051-2	54 - 45	0514120-1	50 - 25
0513374-5	24 - 40	0514052-1	53 - 41	0514121-1	54 - 61
0513375-1	23 - 5	0514060-5	54 - 35	0514121-2	54 - 36
0513375-2	23 - 5	0514062-11	50 - 1	0514122-1	# 53 -
0513376-1	25 - 10	0514062-12	50 - 1	0514122-2	# 53 - 22
0513378-1	23 - 44	0514064-1	□ 50 - 27	0514122-3	# 53 - 1
0513380-2	51 - 42	0514066-1	53 - 43	0514122-4	# 53 - 23
0513382-13	87 - 36	0514067-1	50 - 2	0514122-5	# 53 - 10
0513382-14	87 - 39	0514068-2	□ 50 - 8	0514122-6	# 53 - 24
0513382-15	87 - 38	0514089-1	54 - 44	0514122-7	# 53 - 11
0513382-16	87 - 33	0514090-4	54 - 84	0514123-1	# 54 -
0513385-7	60 - 54	0514097-1	78 - 55	0514123-10	54 - 24
0513385-9	60 - 54	0514099-1	53 - 15	0514123-12	54 - 23
0513386-1	23 - 49	0514099-1	54 - 12	0514123-2	# 54 -
0513386-1	74 - 23	0514099-2	53 - 16	0514123-4	# 54 - 1
0513386-7	74 - 23	0514099-2	54 - 13	0514123-5	# 54 - 18
0513387-1	27 - 7	0514099-3	53 - 14	0514123-6	# 54 - 18
0513392-5	58 - 62	0514099-3	54 - 11	0514123-8	# 54 - 7
0513392-5	58 - 64	0514100-1	# 53 - 13	0514123-9	54 - 8
0513392-5	58A-44	0514100-1	# 54 - 10	0514124-1	# 56 -
0513395-1	63 - 1	0514101-1	54 - 25	0514124-2	# 56 - 12
0513395-2	63 - 1	0514101-2	54 - 25	0514124-3	# 56 - 13
0513399-1	22 - 12	0514102-1	# 54 - 14	0514124-4	# 56 - 3
0513399-1	87 - 10	0514102-7	# 53 - 20	0514124-5	# 56 - 8
0513411-1	23 - 30	0514103-1	# 55 -	0514124-6	# 56 - 9
0513414-1	78 - 46	0514103-10	# 55 - 29	0514124-7	# 56 - 14
0513419-1	50 - 10	0514103-11	# 55 - 3	0514125-1	# 55 -
0513420-1	73 - 24	0514103-12	# 55 - 4	0514125-10	# 55 - 29
0513420-2	73 - 25	0514103-2	# 55 -	0514125-11	# 55 - 3
0513425-1	50 - 6	0514103-3	# 55 - 19	0514125-12	# 55 - 4
0513426-1	22 - 10	0514103-4	# 55 - 19	0514125-2	# 55 -
0513427-1	58 - 28	0514103-5	55 - 30	0514125-3	# 55 - 19
0513429-1	63 - 6	0514103-6	55 - 31	0514125-4	# 55 - 19
0513429-2	63 - 6	0514103-7	55 - 5	0514125-5	# 55 - 30
0513434-4	58 - 92B	0514103-8	55 - 6	0514125-6	# 55 - 31
0513434-5	58 - 92	0514103-9	# 55 - 28	0514125-7	# 55 - 5
0513437-2	60 - 29	0514104-1	# 53 -	0514125-8	# 55 - 6
0513438-1	□ 59 - 8	0514104-2	# 53 - 22	0514125-9	# 55 - 28
0513438-8	59 - 10	0514104-3	# 53 - 1	0515002-10	# 57 - 16
0513445-13	□ 58 - 20	0514104-4	# 53 - 23	0515002-9	# 57 - 14
0513445-23	□ 58 - 34	0514104-5	# 53 - 10	0515003-2	# 58 - 97
0513445-24	□ 58 - 34	0514104-6	# 53 - 24	0515003-4	# 58A-79
0513445-36	□ 58 - 30	0514104-7	# 53 - 11	0515005-17	# 51 - 1
0513446-3	58 - 25	0514105-1	# 54 -	0515005-18	# 51 - 2
0513446-5	□ 58 - 25	0514105-10	# 54 - 24	0515005-19	# 45 - 3
0513448-1	91 - 25	0514105-12	# 54 - 23	0515005-20	# 46 - 3
0513451-1	97 - 17	0514105-2	# 54 -	0515005-22	# 47 - 3
0513453-1	22 - 5	0514105-4	# 54 - 1	0515005-45	# 47 - 3
0513454-1	97 - 12	0514105-5	# 54 - 18	0515005-5	# 51 - 9
0513454-2	97 - 12	0514105-6	# 54 - 18	0515005-6	# 51 - 10
0513454-3	58 - 92A	0514105-8	# 54 - 7	0515008-1	# 50 - 22
0513456-1	74 - 16	0514105-9	# 54 - 8	0515009-1	# 51 - 45
0513839-6	58 - 30	0514106-1	# 56 -	0515010-10	# 50 - 17
0514007-11	56 - 28	0514106-2	# 56 - 12	0515012-1	# 51 - 19
0514024-1	50 - 26	0514106-3	# 56 - 13	0515012-2	# 51 - 22
0514024-2	50 - 26	0514106-4	# 56 - 3	0515014-1	# 50 - 18
0514026-2	54 - 48	0514106-5	# 56 - 8	0515015-1	# 51 - 23
0514026-4	54 - 58	0514106-6	# 56 - 9	0515016-2	# 51 - 36
0514027-21	54 - 69	0514106-7	# 56 - 14	0515016-3	# 51 - 37
0514028-5	54 - 52	0514107-1	# 57 -	0515016-4	# 51 - 38
0514028-6	54 - 51	0514107-2	# 57 - 15	0515016-5	# 51 - 39
0514029-2	54 - 3	0514107-3	# 57 - 13	0515018-1	# 51 - 15
0514030-4	54 - 29	0514107-4	# 57 -	0515019-3	# 51 - 24
0514032-1	54 - 59	0514107-5	# 57 - 15	0515020-1	# 51 - 5
0514033-1	54 - 38	0514107-6	# 57 - 13	0515025-2	# 24 - 20
0514033-2	54 - 65	0514108-1	# 55 - 33	0515025-2	# 24 - 31
0514034-1	54 - 49	0514108-2	# 55 - 34	0515026-6	# 50 - 5
0514035-17	54 - 46	0514109-1	# 56 - 10	0515026-8	# 50 - 5
0514035-18	54 - 47	0514110-1	# 53 - 22	0515027-1	# 50 - 16

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0515027-2	□ 50 - 16	0522617-16	4 - 1	0523028-3	7 -
0515028-1	□ 51 - 6	0522629-1	13 - 5	0523028-4	7 -
0515028-2	□ 51 - 7	0522629-1	14 - 5	0523028-5	7 - 1
0515030-1	□ 50 - 37	0522629-1	82 - 20	0523028-6	7 - 1
0515031-1	50 - 36	0522630-3	5 - 25	0523028-7	7 - 1
0515032-1	# 51 - 1	0522630-3	6 - 24	0523028-8	7 - 1
0515032-2	# 51 - 2	0522630-4	5 - 26	0523029-1	7 - 15
0515032-3	# 45 - 3	0522630-4	6 - 25	0523029-2	7 - 15
0515032-4	# 46 - 3	0523003-62	9 - 7	0523029-3	7 - 16
0515032-5	# 51 - 9	0523010-1	5 - 4	0523029-4	7 - 16
0515032-6	# 51 - 10	0523010-1	6 - 4	0523030-1	7 - 25
0515034-1	58B- 1	0523010-2	5 - 4	0523030-2	7 - 25
0515034-6	58B- 1	0523010-2	6 - 4	0523031-1	7 - 17
0515035-1	61 - 15A	0523011-1	5 -	0523031-2	7 - 17
0515036-1	□ 51 - 15	0523011-10	9 - 6	0523032-1	7 - 18
0515037-1	95 - 24	0523011-11	9 - 6	0523032-2	7 - 18
0516008-1	87 - 37	0523011-12	9 - 16	0523033-1	7 - 19
0517002-1	45 - 55	0523011-13	6 -	0523033-2	7 - 19
0517002-1	47 - 55	0523011-14	6 -	0523034-1	7 - 20
0517011-1	48 - 18	0523011-17	9 - 2	0523034-2	7 - 20
0517012-1	48 -	0523011-18	9 - 2	0523035-1	7 - 21
0517012-2	48 -	0523011-19	9 - 14	0523035-2	7 - 21
0517013-1	45 - 51	0523011-2	5 -	0523036-1	7 - 22
0517013-2	46 - 40	0523011-20	9 - 14	0523036-2	7 - 22
0517013-2	47 - 51	0523011-3	9 - 13	0523037-1	8 - 36
0517014-1	45 - 49	0523011-31	5 -	0523037-2	8 - 35
0517014-1	46 - 38	0523011-32	5 -	0523037-3	8 - 33
0517014-1	47 - 49	0523011-33	9 - 1	0523037-4	8 - 31
0517015-1	45 - 52	0523011-34	9 - 1	0523038-1	9 - 22
0517015-1	46 - 41	0523011-35	6 -	0523038-10	9 - 18
0517015-1	47 - 52	0523011-36	6 -	0523038-11	9 - 19
0517018-1	45 - 72	0523011-39	9 - 2	0523038-12	9 - 19
0517018-2	46 - 58	0523011-4	9 - 13	0523038-13	9 - 22
0517018-2	47 - 72	0523011-40	9 - 2	0523038-14	9 - 22
0517018-3	45 - 54A	0523011-5	9 - 1	0523038-15	9 - 24
0517018-3	46 - 42A	0523011-6	9 - 1	0523038-16	9 - 24
0517018-3	47 - 53A	0523011-7	9 - 15	0523038-17	9 - 25
0517018-3	47 - 66	0523011-8	9 - 5	0523038-18	9 - 25
0517018-4	45 - 66	0523011-9	9 - 5	0523038-19	9 - 17
0517018-4	46 - 52	0523014-1	8 - 2	0523038-2	9 - 22
0517018-5	45 - 71	0523014-2	8 - 2	0523038-20	9 - 17
0517018-5	46 - 57	0523014-3	8 - 2	0523038-21	9 - 18
0517018-5	47 - 71	0523014-4	8 - 2	0523038-22	9 - 18
0517019-1	45 - 13	0523015-1	8 - 1	0523038-23	9 - 19
0517019-2	46 - 13	0523015-2	8 - 1	0523038-24	9 - 19
0517019-2	47 - 13	0523016-1	8 - 10	0523038-3	9 - 24
0517019-3	45 - 14	0523017-1	8 - 13	0523038-4	9 - 24
0517019-4	46 - 14A	0523017-2	8 - 13	0523038-5	9 - 25
0517019-4	47 - 14A	0523018-1	8 -	0523038-6	9 - 25
0517019-5	45 - 14A	0523018-2	8 -	0523038-7	9 - 17
0517019-6	46 - 14	0523018-3	8 -	0523038-8	9 - 17
0517019-6	47 - 14	0523018-4	8 -	0523038-9	9 - 18
0517021-1	45 - 21	0523019-1	8 - 12	0523039-1	9 - 3
0517021-1	46 - 21	0523020-1	8 - 11	0523039-2	9 - 4
0517021-1	47 - 21	0523020-2	8 - 11	0523040-1	8 - 30
0517021-4	45 - 26	0523020-3	8 - 11	0523040-2	8 - 30
0517021-4	46 - 26	0523020-4	8 - 11	0523041-1	8 - 19
0517021-4	47 - 26	0523021-1	8 - 14	0523041-2	8 - 19
0517021-5	45 - 27	0523021-2	8 - 14	0523041-3	8 - 21
0517021-5	46 - 27	0523021-3	8 - 14	0523041-4	8 - 21
0517021-5	47 - 27	0523021-4	8 - 14	0523042-1	8 - 26
0520005-3	3 - 36	0523022-1	8 - 16	0523043-1	8 - 32
0520008	3 - 31	0523022-2	8 - 16	0523043-2	8 - 32
0520008-1	3 - 31	0523023-1	5 - 7	0523044-1	8 - 34
0520015-5	3 - 34	0523023-1	6 - 7	0523044-2	8 - 34
0520015-6	3 - 34	0523025-1	5 - 12	0523045-1	9 - 21
0520016-1	3 - 38	0523025-1	6 - 13	0523045-2	9 - 21
0520016-2	3 - 38	0523026-5	7 - 2	0523045-5	9 - 20
0521101-2	100 - 1	0523026-6	7 - 2	0523046-1	9 - 20
0521101-6	100 - 2	0523027-1	7 - 6	0523046-2	8 - 23
0521103-4	84 - 1	0523027-2	7 - 7	0523047-1	15 - 14
0522150-1	15 - 13	0523027-3	7 - 5	0523047-2	15 - 14
0522150-2	15 - 13	0523028-1	7 -	0523048-1	7 - 15A
0522617-15	4 - 1	0523028-2	7 -		

Cessna illustrated parts catalog

MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0523218	13 - 12	0523519-14	5 - 11	0523800-13	13 - 34
0523218	79 - 52	0523519-14	5 - 11	0523800-6	13 - 31
0523218-2	13 - 16	0523519-15	5 - 10	0523800-7	13 - 31
0523219-2	5 - 37	0523519-16	5 - 10	0523800-8	13 - 32
0523219-2	6 - 37	0523519-19	6 - 11	0523800-9	13 - 32
0523219-3	5 - 37	0523519-20	6 - 12	0523806	13 - 22
0523219-3	6 - 37	0523519-21	6 - 10	0523806-1	13 - 22
0523219-4	5 - 37	0523519-22	6 - 10	0523807	13 - 39
0523219-4	6 - 37	0523519-22	6 - 11	0523808	13 - 23
0523219-5	5 - 37	0523521-26	4 - 2	0523809	13 - 24
0523219-5	6 - 37	0523521-27	4 - 2	0523809-1	13 - 24
0523221	13 - 2	0523521-6	4 - 10	0523810	13 - 25
0523222	13 - 10	0523522	5 - 8	0523811	13 - 26
0523223	13 - 1	0523522	10 - 1	0523811-1	13 - 26
0523223	79 - 50	0523522-1	5 - 9	0523813-1	13 - 35
0523223-1	13 - 1	0523522-1	6 - 9	0523813-6	13 - 37
0523223-1	79 - 50	0523522-1	10 - 3	0523813-7	13 - 38
0523230	5 - 31	0523522-1	11 - 9	0523813-8	13 - 36
0523230	6 - 31	0523522-10	6 - 8	0523814-6	13 - 30
0523230-1	5 - 31	0523522-10	11 - 8	0523901-13	14 - 27
0523230-1	6 - 31	0523522-5	5 - 8	0523901-14	14 - 26
0523230-4	5 - 31	0523522-5	10 - 2	0523901-2	14 - 33
0523230-4	6 - 31	0523522-7	5 - 9	0523901-3	14 - 33
0523230-5	5 - 31	0523522-7	6 - 9	0523901-35	14 - 14
0523230-5	6 - 31	0523522-7	10 - 4	0523901-36	14 - 34
0523231-13	5 - 14	0523522-7	11 - 10	0523901-37	14 - 29
0523231-13	6 - 15	0523522-8	6 - 8	0523901-38	14 - 14
0523232-6	5 - 13	0523522-8	11 - 7	0523901-39	14 - 34
0523232-6	6 - 14	0523524	8 - 4	0523901-6	14 - 35
0523233-11	5 - 15	0523524	8 - 24	0523901-7	14 - 35
0523233-11	6 - 16	0523536	14 - 4	0523911	14 - 22
0523233-22	5 - 21	0523536	82 - 20	0523911-1	14 - 22
0523233-22	6 - 20	0523536	82 - 36	0523912	14 - 23
0523233-3	5 - 22	0523537	14 - 7	0523912-1	14 - 24
0523233-3	6 - 21	0523537	82 - 22	0523914	14 - 28
0523306	8 - 6	0523537-2	14 - 12	0523918	14 - 30
0523307	15 - 4	0523539-10	6 - 23	0523919	14 - 17
0523406-1	8 - 20	0523539-2	5 - 23	0523920	14 - 16
0523406-2	8 - 20	0523539-3	5 - 23	0523921	14 - 15
0523407	5 - 27	0523539-4	5 - 24	0523922	14 - 18
0523407	6 - 26	0523539-5	5 - 24	0523923	14 - 25
0523407-1	5 - 28	0523539-7	6 - 22	0526000-18	11 - 1
0523407-1	6 - 27	0523539-8	6 - 22	0526000-19	11 - 1
0523409	8 - 27	0523539-9	6 - 23	0526007-203	10 - 18
0523505-5	6 - 18	0523540-2	4 - 9	0526007-44	10 - 18
0523505-6	6 - 18	0523552-2	10 - 10	0530010-5	18 - 45
0523508-16	5 - 16	0523552-2	11 - 18	0530010-6	18 - 46
0523508-28	6 - 19	0523554-1	10 - 11	0530011-2	35 - 15
0523508-29	6 - 19	0523554-1	11 - 19	0531001-3	17 - 38
0523508-37	5 - 16	0523554-2	10 - 12	0531006-10	16 - 26
0523509-18	5 - 18	0523554-2	11 - 20	0531006-105	17 - 26A
0523509-18	6 - 29	0523556-1	10 - 13	0531006-107	17 - 25A
0523510-19	5 - 30	0523556-1	11 - 21	0531006-108	17 -
0523510-19	6 - 30	0523557-1	10 - 16	0531006-110	16 -
0523510-20	5 - 30	0523557-1	11 - 16	0531006-112	17 - 6
0523510-20	6 - 30	0523558-1	4 - 11	0531006-112	17 - 14A
0523511-14	5 - 32	0523559-11	11 - 24	0531006-13	16 - 12
0523511-14	6 - 32	0523559-11	87 - 1	0531006-15	16 - 13
0523511-15	5 - 33	0523559-12	10 - 24	0531006-16	16 - 11
0523511-15	6 - 33	0523559-12	87 - 1	0531006-18	16 - 15
0523512-19	5 - 34	0523560-1	6 - 17	0531006-19	16 - 16
0523512-19	6 - 34	0523606-17	15 - 1	0531006-20	16 - 17
0523512-22	5 - 35	0523606-18	15 - 1	0531006-203	16 -
0523512-22	6 - 35	0523606-4	15 - 12	0531006-23	16 - 18
0523513-13	5 - 36	0523606-5	15 - 11	0531006-21	16 - 18
0523513-13	6 - 36	0523608-2	15 - 8	0531006-24	17 - 31
0523513-14	5 - 36	0523613-1	15 - 10	0531006-25	17 - 32
0523513-14	6 - 36	0523614-1	15 - 6	0531006-28	17 - 29
0523514-7	5 - 38	0523619-1	4 - 11	0531006-29	17 - 28
0523514-7	6 - 38	0523800	13 - 19	0531006-30	17 - 26
0523515-7	5 - 39	0523800-1	13 - 19	0531006-32	17 - 27
0523515-7	6 - 39	0523800-10	13 - 33	0531006-39	16 - 22
0523517-3	5 - 20	0523800-11	13 - 33	0531006-44	16 - 23
0523517-4	5 - 19	0523800-12	13 - 34	0531006-49	16 - 24

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0531006-5	16 - 10	0532001-82	20 - 18	0541220-2	42 - 56
0531006-54	16 - 21	0532001-83	20 - 17	0541221-1	42 - 52
0531006-55	17 - 6	0532001-84	20 - 46	0541221-2	37 - 33
0531006-58	17 - 37	0532001-85	20 - 45	0541222-1	42 - 51
0531006-68	17 - 5	0532001-86	20 - 27	0541222-5	37 - 36
0531006-69	17 - 13	0532001-87	20 - 28	0541223-13	37 - 37
0531006-70	17 - 35	0532001-88	20 - 19	0541223-13	42 - 48
0531006-71	17 - 30	0532001-89	20 - 22	0541223-16	42 - 47
0531006-79	17 - 36	0532001-90	20 - 20	0541223-17	42 - 47
0531006-80-791	17 - 34	0532001-91	20 - 21	0541224-1	42 - 61
0531006-81	17 -	0532001-92	20 - 43	0541224-2	42 - 61
0531006-85	17 - 25	0532001-93	18 - 20	0541226-1	42 - 38
0531006-87	16 - 14	0532001-94-791	20 - 25	0542100-6	41 - 1
0531006-9	16 - 25	0532001-95	20 - 44	0542101-1	41 - 5
0531006-95	16 - 8	0532001-96	18 - 32	0542102-3	41 - 6
0531006-96	16 - 6	0532001-97	18 - 37	0542118-5	41 - 4
0531008-1	17 - 33	0532001-98	18 - 36	0543000-6	38 - 13
0531012-2	33 - 6	0532001-99	18 - 7	0543001	37 - 20
0531013-1	16 - 27	0532006-1	18 - 40	0543003	37 - 22
0531013-2	101 - 9	0532104	17 - 2	0543008-2	38 - 1
0531014-1	16 - 19	0532104	18 - 27	0543013-1	23 - 25
0531015-5	33 - 5	0532104	18 - 29	0543016-1	23 - 14
0531018-1	17 - 11	0532105-3	20 - 29	0543018-1	37 - 3
0531018-2	17 - 12	0532105-4	20 - 30	0543022-1	37 - 6
0531018-3	17 - 10	0532105-6	18 - 26	0543022-2	37 - 6
0531018-4	17 - 9	0532105-9	18 - 28	0543023	37 - 9
0531018-6	17 - 7	0532107-1	20 - 23	0543027-2	23 - 16
0531018-7	17 - 8	0533009-1-791	17 - 14	0543027-3	23 - 16
0531019-3	33 - 3	0533010-1	83 - 10	0543029	38 - 25
0531019-4	33 - 4	0533011-1	17 - 24	0543032-2	2 - 4
0531019-8	33 - 1	0533134-1	17 - 24A	0543036-1	38 - 14
0531019-9	33 - 2	0534122-1	20 - 1	0543037-1	37 - 21
0531020-1	32 - 99A	0534122-1	80 - 16	0543042-1	37 - 4
0531033-1	16 - 26A	0534126-1	20 - 33	0543042-2	37 - 4
0531033-3	101 - 9A	0534126-2	20 - 34	0543047-1	38 - 32
0531034-1	16 - 19A	0541115-2	60 - 17	0543047-1	38 - 49
0531105-10	20 - 31	0541115-2	93 - 9	0543048-1	38 - 33
0531105-11	20 - 32	0541115-3	60 - 14	0543048-1	38 - 50
0532001-100-791	20 - 26	0541115-3	93 - 11	0543062-200	38 -
0532001-101	20 - 48	0541115-4	60 - 15	0543062-201	38 - 2
0532001-13	18 - 8	0541115-4	93 - 12	0543063-7	37 - 39
0532001-14	18 - 9	0541138-22	76 - 11	0543079-3	37 - 23
0532001-15	18 - 10	0541138-22	77 -	054912-1	83A-12
0532001-16	18 - 11	0541138-5	77 - 9	0550100-8	87 - 69
0532001-17	18 - 12	0541139	77 - 5	0550100-8	90 - 7
0532001-20	18 - 38	0541140	77 - 1	0550100-8	90 - 11
0532001-202	18 - 2	0541143	77 - 12	0550153-1	68 - 3
0532001-21	18 - 14	0541144	77 - 11	0550180-10	68 - 68
0532001-22	18 - 15	0541148	77 - 8	0550180-13	68 - 69
0532001-23	18 - 16	0541148-1	77 - 15	0550180-16	68 - 70
0532001-28	20 - 15	0541149	77 - 9	0550198-1	68 - 66
0532001-29	20 - 16	0541151	77 - 4	0550209-1	92 - 2
0532001-30	20 - 36	0541184-2	77 - 6	0550236-8	64 - 5
0532001-31	20 - 37	0541191-1	42 - 34	0550321-10	64 - 9
0532001-32	20 - 38	0541191-2	42 - 34	0550321-4	64 - 7
0532001-33	20 - 39	0541193-7	42 - 32	0551017-1	68 - 6
0532001-35	20 - 40	0541193-8	42 - 32	0551019-5	68 - 51
0532001-42	20 - 49	0541195-5	30 - 5	0552004-32	65 - 27
0532001-43	20 - 50	0541195-6	30 - 6	0552010-47	65 - 31
0532001-44	20 - 51	0541196-1	30 - 8	0552010-47	66 - 36
0532001-45	20 - 35	0541196-2	30 - 9	0552010-47	67 - 35
0532001-47	20 - 5	0541198-10	42 - 6	0552010-54	65 - 14
0532001-48	20 - 52	0541198-9	42 - 6	0552010-54	66 - 14
0532001-50	18 - 22	0541199-1	42 - 12	0552010-54	67 - 9
0532001-7	18 - 33	0541202-4	42 - 1	0552010-60	65 - 11
0532001-73	20 - 10	0541207-3	37 - 35	0552010-60	66 - 11
0532001-74	18 - 17	0541211-1	42 - 8	0552010-60	67 - 7
0532001-75	18 - 18	0541212-1	42 - 7	0552010-68	65 - 13
0532001-76	18 - 19	0541212-2	42 - 7	0552010-68	66 - 13
0532001-77	18 - 13	0541218-1	42 - 60	0552010-69	65 - 5
0532001-78	18 - 21	0541218-2	42 - 60	0552010-69	66 - 5
0532001-8	18 - 34	0541219-1	42 - 50	0552010-70	65 - 9
0532001-80	20 - 47	0541219-2	42 - 50	0552010-73	65 - 30
0532001-81	18 - 35	0541220-1	42 - 56	0552010-73	66 - 29

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0552010-73	67 - 34	0552143-1	66 - 12	0700162-3	58A-30
0552010-74	65 - 30	0552143-1	67 - 8	0700162-4	58A-30
0552010-74	66 - 29	0552151-1	65 - 10	0700162-6	58 - 43
0552010-74	67 - 34	0552151-1	66 - 10	0700162-6	58A-30
0552010-87	65 - 26	0552151-1	67 - 6	0700162-7	58A-30
0552010-87	66 - 25	0552151-70	66 - 9	0700164-6	62 - 1
0552010-87	67 - 29	0552154-1	2 - 26	0700189-10	58 - 42
0552010-88	65 - 26	0552161-2	104 - 11	0700322-4	73 - 18
0552010-88	66 - 25	0552161-4	104 - 13	0700616-1	100 - 2
0552010-88	67 - 29	0553005-5	104 - 4	0700633-5	54 - 54
0552010-89	65 - 25	0553006-201	27 - 3	0700668-13	51 - 43
0552010-89	66 - 24	0553006-202	27 - 1	0700668-14	51 - 44
0552010-89	67 - 30	0553006-203	27 -	0705042-1	45 - 57
0552010-91	65 - 15	0553006-4	27 - 40	0705042-1	46 - 43
0552010-91	66 - 15	0553007-2	27 - 33	0705042-1	47 - 57
0552010-91	67 - 10	0553010-1	104 - 5	0705048-17	2 - 8A
0552010-92	65 - 8	0554001-5	70 - 2	0705048-18	2 - 8A
0552010-92	66 - 8	0554001-6	70 - 8	0705048-2	2 - 8
0552010-92	67 - 5	0554001-7	70 - 9	0705048-3	2 - 8
0552010-93	65 - 4	0554003-1	70 - 6	0710013-4	73 - 22
0552010-93	66 - 4	0555204-4	71 - 60	0710014-2	73 - 23
0552010-93	67 - 3	0555204-5	71 - 54	0710014-8	73 - 30
0552010-94	65 - 11	0555206-11	71 - 8	0710015-13	73 - 28
0552010-94	66 - 11	0555206-11	71 - 15	0710312-2	55 - 8
0552010-94	67 - 7	0555206-12	71 - 1	0711001-59	45 - 13
0552010-95	65 - 16	0555211-5	71 - 7	0711001-59	46 - 13
0552010-95	66 - 16	0555211-5	71 - 14	0711001-59	47 - 13
0552011-11	68 - 38	0555211-7	71 - 13	0711021-11	45 - 46
0552011-11	72 - 6	0555212-1	71 - 27	0711021-11	47 - 46
0552011-12	68 - 39	0555213-1	71 - 62	0711021-12	45 - 47
0552011-12	72 - 7	0555213-4	71 - 67	0711021-12	47 - 47
0552011-13	68 - 40	0555214-1	71 - 38	0711021-9	45 - 48
0552011-13	72 - 8	0555214-4	71 - 43	0711021-9	47 - 48
0552019-10	66 - 27	0555215-1	71 - 46	0711050-23	45 - 35
0552019-10	67 - 32	0555215-3	71 - 52	0711050-24	47 - 35
0552019-12	66 - 17	0555216-16	68 - 58	0711050-5	45 - 38
0552019-13	67 - 13	0555216-17	68 - 59	0711050-6	47 - 38
0552019-15	67 - 11	0555216-200	71 - 29	0711050-7	45 - 39
0552019-4	65 - 17	0555216-201	71 - 32A	0711050-7	47 - 39
0552019-6	65 - 28	0555216-202	71 - 29	0711051-1	45 - 36
0552110-3	2 - 14	0555216-5	71 - 32	0711051-1	47 - 36
0552110-3	72 - 3	0555216-6	71 - 31	0711051-2	45 - 36
0552112-18	65 - 22	0555216-7	71 - 30	0711051-2	47 - 36
0552112-20	65 - 24	0555216-8	71 - 35	0711051-5	45 - 37
0552112-20	66 - 23	0555217-1	71 - 17	0711051-5	47 - 37
0552112-20	67 - 28	0555217-3	71 - 22	0711083-1	61 - 16
0552112-204	66 - 21	0555217-4	71 - 23	0711083-1	61 - 19
0552112-204	67 - 26	0555217-5	71 - 24	0711084-7	32 - 59
0552112-206	66 - 1	0555217-6	71 - 25	0711084-8	32 - 60
0552112-207	66 - 1	0556018-1	68 - 28	0711101-10	32 - 62
0552112-25	65 - 2	0556020-1	87 - 14	0711101-11	32 - 62
0552112-25	66 - 2	0556020-2	87 - 15	0711101-34	32 - 66
0552112-25	67 - 2	0556020-3	87 - 22	0711101-35	32 - 65
0552112-28	67 - 1	0556020-9	87 - 23	0711101-36	32 - 63
0552112-29	65 - 6	0560006-6	78 -	0711101-43	32 - 63
0552112-29	66 - 6	0560013-1	94 - 11	0711101-45	32 - 65
0552112-29	67 - 4	0560014-1	78 - 9	0711101-8	32 - 61
0552112-30	65 - 1	0560015-1	78 -	0711102	49 - 2
0552112-31	65 - 7	0560016-1	83A-12	0711111-1	49 - 9
0552112-31	66 - 7	0570088-3	103 - 8	0711121-2	60 - 12
0552112-32	65 - 1	0570095-1	103 - 11	0711667-1	53 - 5
0552112-9	65 - 3	0570101-KA7	96 - 12	0711667-1	55 - 24
0552112-9	66 - 3	0570101-PA4	96 - 10	0711668-1	53 - 4
0552113-13	68 - 62	0570101-PA6	96 - 11	0711668-1	55 - 22
0552113-5	68 - 73	0570101-PC1	96 - 17	0711705-1	49 - 10
0552115-1	65 - 21	0570101-PC1	104 - 8	0711707-4	49 - 15
0552116-10	68 - 61	0570101-PC5	96 - 20	0711709-1	49 - 11
0552118-1	72 - 4	0593000-4	20 - 9	0711709-2	49 - 12
0552130-11	68 - 74	0700103-131	50 - 35	0712009-2	61 - 24
0552132-1	72 - 1	0700122-12	60 - 50	0712031-1	96 - 9
0552132-2	72 - 2	0700122-13	60 - 50	0713002-3	23 - 40
0552133-5	98 - 7	0700148-1	102 - 14	0713011-12	60 - 51
0552139-1	67 - 16	0700162-1	58 - 40	0713019-111	74 - 25
0552143-1	65 - 12	0700162-1	58A-27	0713019-112	74 - 24

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
0713019-113	74 - 24	0720005-3	6 - 28	0760131-1	58 - 68
0713019-33	71 - 9	0721100-5	6 - 18	0760131-5	58A-20
0713032-1	81 - 7	0721101-8	84 - 27	0760131-6	58 - 67
0713032-2	81 - 7	0721105-27	84 - 28	0760131-6	58A-19
0713046	50 - 14	0721105-30	84 - 28	0760612-1	82 - 19
0713047	2 - 5	0721105-5	84 - 30	0760612-7	14 - 1
0713047	21 - 12	0721107-1	5 - 42	0760612-7	82 - 18
0713054-1	24 - 48	0721107-1	6 - 42	0760614-1	82 - 44
0713054-2	24 - 48	0721107-2	5 - 42	0760619-1	82 - 35
0713063	75 - 61	0721107-2	6 - 42	0760620-9	82 - 43
0713070-15	75 - 41	0721111-29	6 - 17	0770038-2	96 - 22
0713070-19	75 - 53	0721111-30	6 - 17	0770728-1	96 - 5
0713070-20	75 - 64	0722200-1	5 - 40	0811490-6	75 - 44
0713070-24	75 - 62	0722200-1	6 - 40	08125	39 - 4
0713070-25	75 - 39	0722200-2	5 - 40	0813150-54	75 - 44
0713070-28	75 - 58	0722200-2	6 - 40	0813150-55	75 - 37
0713070-32	75 - 40	0722202-1	7 - 9	0813156-4	75 - 38
0713070-36	75 - 29	0723200-10	5 - 48	08231	39 - 7
0713070-37	75 - 28	0723200-10	6 - 48	0841200-15	38 - 19
0713070-4	75 - 36	0723200-11	5 - 48	0841200-19	38 - 16
0713070-5	75 - 35	0723200-11	6 - 48	0841200-25	38 - 18
0713070-6	75 - 59	0723200-12	5 - 48	0861520-2	94 - 6
0713070-9	75 - 52	0723200-12	6 - 48	1/16X.62TYPE3	19 - 15
0713102-1	25 - 4	0723200-5	5 - 45	1N1344A	96 - 8
0713135-2	23 - 45	0723200-5	6 - 45	1007	1 - 4
0713135-2	73 - 32	0723200-6	5 - 45	1024A-8	1 - 3
0713139-1	23 - 47	0723200-6	6 - 45	1195-0061	60 - 6
0713139-1	73 - 34	0723200-9	5 - 48	1200127-1	51 - 25
0713140-1	23 - 46	0723200-9	6 - 48	1200136-1	54 - 56
0713140-1	73 - 33	0723201-1	3 - 28	1200138-2	54 - 41
0713248-3	24 - 17	0723201-2	3 - 28	1200138-2	54 - 63
0713248-4	24 - 27	0723201-3	3 - 28	1200159-3	54 - 61
0713250-1	73 - 29	0723201-4	3 - 28	1200503-1	53 - 51
0713495-13	24 - 42	0723600-6	15 - 7	1200504-3	53 - 49
0713495-14	24 - 42	0723600-6	15 - 9	1205001-127	2 - 1
0713495-17	24 - 50	0724115-2	13 - 29	1205001-128	2 - 1
0713495-53	24 - 60	0734102-3	20 - 41	1205001-129	2 - 2
0713495-54	24 - 61	0734102-4	20 - 42	1205001-130	2 - 2
0713495-55	24 - 49	0741047-2	42 - 43	1205001-131	2 - 2
0713495-65	24 - 43	0741048-8	42 - 23	1205001-132	2 - 2
0713495-66	24 - 43	0742410-27	37 - 28	1205001-133	2 - 3
0713496-3	24 - 14	0742410-8	37 - 32	1205001-134	2 - 3
0713496-4	24 - 24	0743009-1	37 - 25	1205001-147	2 - 1
0713496-7	24 - 14	0743009-1	38 - 7	1205001-148	2 - 2
0713496-8	24 - 24	0743011-8	38 - 27	1205001-149	2 - 2
0713533-1	91 - 29	0743612-1	38 - 8	1205001-156	2 - 3
0713624-2	25 - 4A	0743627-3	37 - 40	1205004-1	2 - 19
0713624-2	76 - 14	0743627-4	37 - 40	1205024-1	2 - 11
0713641-3	26 - 8	0750032-1	28 - 10	1205085-2	2 - 20
0713642-1	81 - 5	0750113-1	68 - 71	1210040-10	46 - 36
0713642-3	81 - 7	0750139	68 - 82	1210040-23	46 - 37
0713656-1	81 - 1	0750161-25	70 - 14	1210040-8	46 - 37
0713656-3	81 - 2	0750220-1	96 - 29	1211203-1	51 - 25
0713757-1	27 - 28	0752037-3	68 - 21	1213004-2	58 - 94
0713959-1	75 - 47	0752058-3	67 - 23	1213158-3	68 - 76
0714010-1	54 - 26	0752058-3	98 - 10	1213327-19	58 - 21
0714010-2	54 - 26	0752610-1	104 - 9	1213379-9	588 - 4
0715026-1	57 - 6	0752611-1	104 - 10	1213379-9	588 - 6
0715039-3	# 51 - 11	0752646-1	99 - 6	1214062-5	53 - 17
0715039-4	# 51 - 12	0753000-13	27 - 30	1214062-5	54 - 9
0715049-2	50 - 24	0753010-1	74 - 2	1214098-1	54 - 16
0716124-9	10 - 15	0753011-1	74 - 1	1215073-11	53 - 57
0716136-1	88 - 20	0756005-1	88 -	1215073-11	54 - 99A
0716249-	11 - 23	0756005-2	88 - 18	1215073-11	55 - 36
0716623-2	87 - 40	0756008-1	88 - 3	1215073-11	56 - 29
0716624-1	87 - 43	0756009-1	88 - 9	1215073-18	53 - 58
0717000-12	51 - 17	0756009-8	88 - 10	1215073-18	54 - 99B
0717000-13	49 - 1	0756010-1	88 - 13	1215073-18	55 - 37
0717000-16	49 - 1	0756011-1	88 - 8	1215073-18	56 - 30
0717000-18	51 - 12	0756012-1	88 - 16	121615	68 - 75
0717011-1	# 45 - 60	0756014-1	88 - 11	1217046-3	45 - 27
0717011-2	# 46 - 46	0756014-2	88 - 15	1217046-4	46 - 27
0717011-2	# 47 - 60	0756015-1	88 - 5	1217046-4	47 - 27
0720005-3	5 - 29	0760011-2	13 - 27	1217046-5	45 - 29

~~C~~essna illustrated parts catalog

MODEL 172 & F172

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
1217046-5	46 - 29	1470089-18	102 - 15	1714001-20	56 - 5
1217046-5	47 - 29	1513189-9	59 - 18	1714001-22	56 - 5
1217046-6	45 - 30	1513839-3	58A-16	1714002-1	56 - 4
1217046-6	46 - 30	1513839-3	58A-23	1714005-1	56 - 15
1217046-6	47 - 30	1513839-3	58B- 3	1714033-1	56 - 16
1217050-3	45 - 34	1513839-3	58B- 5	1714036-1	56 - 18
1217050-4	46 - 34	1513839-4	58 - 21	1714061-1	54 - 81
1217050-4	47 - 34	1514119-3	54 - 70	1714067-5	54 - 75
1217053-2	45 - 58	1514223-28	53 - 52	1714074-13	54 - 31
1217053-2	46 - 44	153-15	43 - 5	1714074-14	54 - 32
1217053-2	47 - 58	153-8	39 - 2	1714074-6	54 - 33
1220112-4	2 - 9	154-13	43 - 6	1714095-1	56 - 21
1220112-4	58 - 958	154-6	39 - 3	1714100-1	54 - 16A
1220114-2	14 - 19	155-2	39 - 1	1714101-1	54 - 27
1221201-3	3 - 19	1552004-17	65 - 35	1714101-2	54 - 27
1221201-4	3 - 19	1552004-17	66 - 33	1714101-3	53 - 25A
1241156-12	39 -	1552004-17	67 - 39	1714101-4	53 - 25A
1243021-1	38 - 17	1552004-22	65 - 34	1716013-1	68 - 43
1243030-5	38 - 55	1552004-22	66 - 32	1717034-1	32 - 72
1243030-6	38 - 55	1552004-22	67 - 38	1741005-239	42 - 39
1243030-7	38 - 55	1552004-23	65 - 34	1741005-240	42 - 39
1243626-1	38 - 21	1552004-23	66 - 32	1741005-247	42 - 39
1250319-1	91 - 38	1552004-23	67 - 38	1741005-248	42 - 39
1250410-3	2 - 10	1552004-25	65 - 37	1750011-4	68 - 54
1250410-3	86 - 7	1552004-25	66 - 35	1750011-4	74 - 17
1253031-3	27 - 6	1552004-25	67 - 41	1752002-3	65 - 37
1253032-1	74 - 3	1552004-28	65 - 32	1752110-3	98 - 5
1253033-1	74 - 5	1552004-28	66 - 30	1752111-3	98 - 1
1253034-1	74 - 4	1552004-28	67 - 36	1752113-1	98 - 4
1253037-1	74 - 6	1552004-32	66 - 26	1752118-1	99 - 2
1253040-1	74 - 5	1552004-32	67 - 31	1752118-2	99 - 3
1253041-1	74 - 8	1552010-1	65 - 36	1752118-3	99 - 7
1260049-1	19 - 6	1552010-1	66 - 34	1752118-4	99 - 8
1260074-1	19 - 1	1552010-1	67 - 40	1752119-4	67 - 20
1260474-1	32 - 79	1570043-3	104 - 7	1752119-7	67 - 18
1270479-10	58B- 7	1570102-10	63A- 2	1754001-15	70 - 1
1270479-9	58B- 7	1570102-12	63A- 3	1754001-16	70 -
13836	43 - 3	1570102-14	63A- 4	1754007-1	70 - 10
13889	43 - 9	1570102-19	63A- 7	1754008-1	70 - 11
1411202-201	45 - 43	1570141-1	103 - 5	1754009-1	70 - 12
1411202-201	47 - 43	1570166-1	96 - 42	1754010-1	70 - 13
1414100-212	53 - 37	161-31	39 - 5	1755016-1	71 - 10
1414103-2	53 - 26	161-49	43 - 1	1756001-1	68 - 30
1414103-45	53 - 27	1613224-2	63 - 5	1760015-1	94 - 1
1414103-6	53 - 28	162-28	39 - 6	1760015-2	94 - 2
1414104-39	53 - 34	162-47	43 - 2	1777	17 - 23
1414104-4	53 - 3	1620075-3	96 - 40	183-1	43 - 27
1414104-4	55 - 27	164-40	43 - 11	2N3055	96 - 44
1414104-41	53 - 36	1700121-100	90 - 1	20H3P	96 - 8
1414104-42	53 - 36	1700121-101	90 - 3	2005012-3	2 - 22
1414104-54	54 - 95	1700121-94	90 - 9	2005012-4	2 - 23
1414104-61	53 - 35	1700121-95	90 - 6	2013131-1	61 - 26
1414104-8	53 - 47	1700121-96	87 - 68	2013142-1	84 - 31
1414107-1	53 - 56	1700127-1	52 - 1	2015009-5	51 - 25
1414107-1	55 - 11	1700127-1	52A- 1	2055008-1	71 - 70
1414107-1	56 - 27	1700127-10	52A- 6	212-12	72 - 5
1414107-2	55 - 11	1700127-14	52A- 7	21323	68 - 67
1414112-1	53 - 33	1700127-16	52A- 8	217-1	39 - 8
1414116-1	53 - 46	1700127-19	52A- 9	22FH632	77 - 10
1414116-1	54 - 79	1700127-3	52 - 2	22NA-3-054	35 - 16
1414211-22	55 - 21	1700127-3	52A- 2	2600-5W	72 - 2
1414223-34	53 - 54	1700127-4	52 - 3	2600SW2	72 - 2
1414230-1	53 - 12	1700127-4	52A- 3	3/32X.38TYPE3	19 - 8
1414230-2	55 - 35	1700127-6	52 - 4	3021	43 - 8
1414231-2	55 - 10	1700127-6	52A- 4	3022	43 - 7
145-10	43 - 29	1700127-9	52A- 5	3023	43 - 4
1450024-3	27 - 42	1713039-1	91 - 19	34003-55-3410	96 - 45
1460320-1	76 - 1	1713049-8	51 - 29	35060-0114	58 - 37
1460320-1	76 - 24	1713105-3	27 - 29	351-11-05-001	103 - 1
1460501-21	76 - 2	1713110-1	27 - 31	3680C	37 - 41
1460501-21	76 - 25	1714000-22	54 - 93	3680C	42 - 26
1460505-1	76 - 39	1714000-33	54 - 96	3690-1/2	1 - 46
1470089-14	102 - 6	1714000-41	54 - 94	3690-1/4	1 - 46
1470089-17	102 - 16	1714001-19	56 - 25	3690-1/8	1 - 46

PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.	PART NUMBER	FIGURE AND INDEX NO.
37-206	43 -27				
37570-0105	58 -44				
40-14	101 - 4				
4050	69 - 1				
4051	69 - 1				
40760-0104	58 -45				
40760-0104	58A-32				
40760-104	91 - 3				
41843	21 -10				
42320-0014	58A-35				
42540-3114	84 -46				
42540-3214	84 -46				
43-1761	96 - 8				
441346	58 -60				
441347	58 -53				
441410	58A-40				
441411	58A-41				
442792	58 -61				
442908	58A-42				
444678	58 -54				
444678	58A-43				
4509	99 - 5				
4522	98 - 3				
49330	21 - 8				
550	1 -13				
5579654	86 - 4				
576.1	1 - 5				
579.6	1 - 6				
6F20D	96 - 8				
60096	69 -11				
60232-1	58 -66				
60232-1	58A-74				
61-37	43 -15				
61098	69 -14				
6241M	37 -41				
6241M	42 -26				
6436635	86 - 3				
6436637	86 - 2				
6436916	86 - 5				
6436989	86 - 6				
6437520	86 - 9				
6439036	86 - 8				
66-30	43 -17				
66-30	43 -19				
66224	69 - 9				
68972	69 -16				
69-4	43 -24				
69116	69 -17				
700	1 -11				
71910	90 -13				
73-11	43 -18				
73820	69 - 2				
74-10	43 -16				
74068	69 -17				
75-67	43 -28				
75148	69 -10				
75380	69 - 6				
75906	69 -15				
76211	69 - 4				
76906	96 -32				
77743	69 - 3				
77745	69 - 3				
78728-M/S	69 - 8				
8-4VTX-S	87 -61				
800-001-6	77 -13				
8313	69 -13				
8406E	68 -22				
8409	103 -12				
8526250	68 -22				
91-44	43 -14				
92-17	43 -20				